

AXIS OS Knowledge base

AXIS OS Portal | AXIS OS Release Notes | AXIS OS YouTube playlist | AXIS OS Hardening Guide | Security Advisories | Get started with rules for events

About

Welcome to the AXIS OS Knowledge base, a comprehensive repository designed to be the go-to resource for technical information about *AXIS OS* – the Linux-based operating system used in most of your Axis network devices. *AXIS OS* is purpose-built to live up to the most important criteria for network devices: high standards for cybersecurity, ease of integration, quality, and long-term value.

Cybersecurity

Device hardening

For information on how to harden AXIS OS devices, visit *AXIS OS Hardening Guide*. The hardening guide is written for, and can be applied to, all AXIS OS devices running an AXIS OS LTS or active track. Legacy products running version 4.xx and 5.xx are also in scope.

Identity and access management

Summary

Identity and Access Management comprises policies for ensuring that individuals and applications have access to system resources in the right context. For example, individuals should only interact with applications, and only applications should access devices. IAM ensures integrity over time, for example, that passwords are not leaked, and that access is revoked when no longer needed.

We recommend using Axis' device management applications, *AXIS Device Manager* or *AXIS Device Manager Extend*, to set up and manage unique service accounts for applications accessing devices. The following sections detail Axis' recommendations for identity and access management in video surveillance systems.

Introduction

Identity and Access Management (IAM) systems are responsible for managing identities, permissions, and access control within an organization. IAM makes sure that the correct individuals and applications have the correct level of access to the correct system resources. This is a fundamental cybersecurity measure for preventing unauthorized access. One of the main challenges is maintaining integrity over time. This includes ensuring that passwords and other secrets are not leaked, and that individuals and applications that should no longer have access actually have their access revoked.

Identity and access management typically involves authentication, authorization, and privileges.

- **Authentication.** Verifying that an entity is who or what it claims to be.
- **Authorization.** Controlling which entities are allowed to perform specific functions.
- **Privileges.** Grouping of entities based on what they are authorized to do. Axis defines privileges as roles.

Throughout the document, the terms user account and service account are used. Both are registered and governed through IAM.



- **User account.** A user account is used by a person to access applications.
- **Service account.** A service account is a non-human account used by an application to access devices. Service accounts are used in machine-to-machine communication or when an application needs to access devices in a trusted and automated manner.

Best practices when working with service accounts

For maintaining integrity over time the following best practices of service account management are recommended.

- Use Axis' device management applications, *AXIS Device Manager* or *AXIS Device Manager Extend* for service account management.
- Set up unique service accounts for each application accessing devices, as recommended in the *AXIS OS Hardening Guide*.
- Select the appropriate privileges for each service account.
- Remove service accounts that are no longer in use.
- Avoid persons accessing devices directly (if absolutely necessary, use a unique and temporary service account), the web interface can be disabled, as recommended in the *AXIS OS Hardening Guide*.
- Ensure high password complexity to avoid account leakage – see recommendations from the *AXIS OS Hardening Guide*.

The diagrams below visualize the best practices of access management in the device.

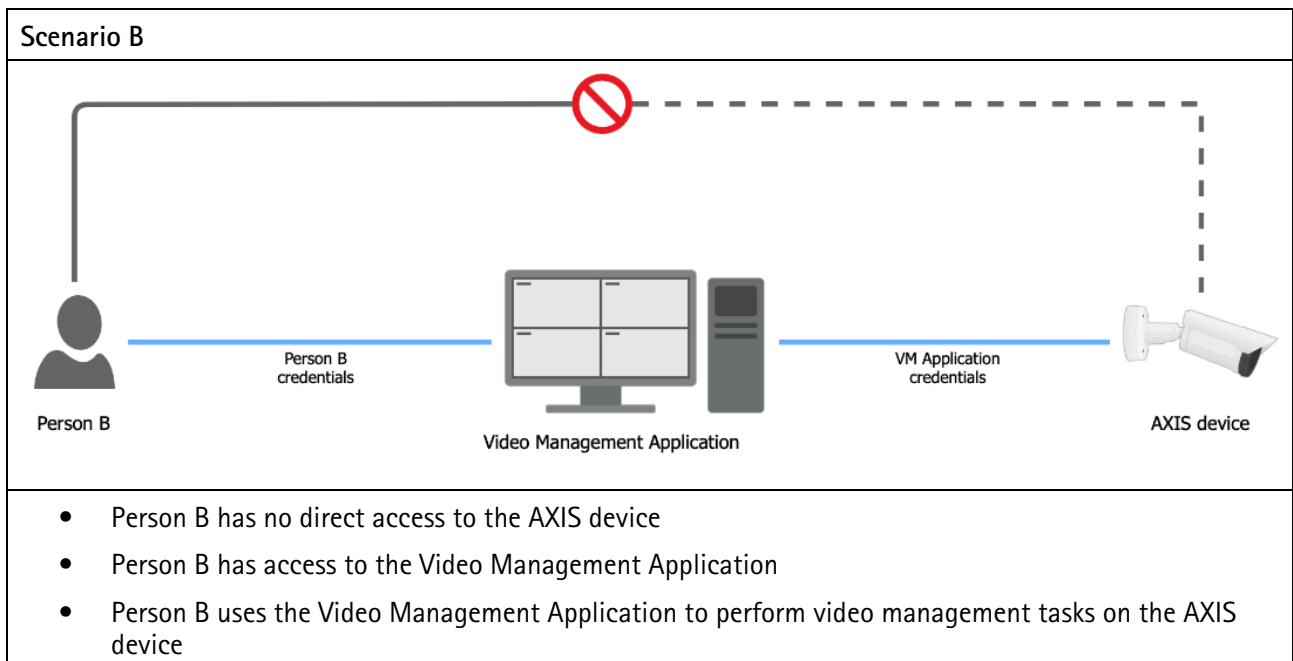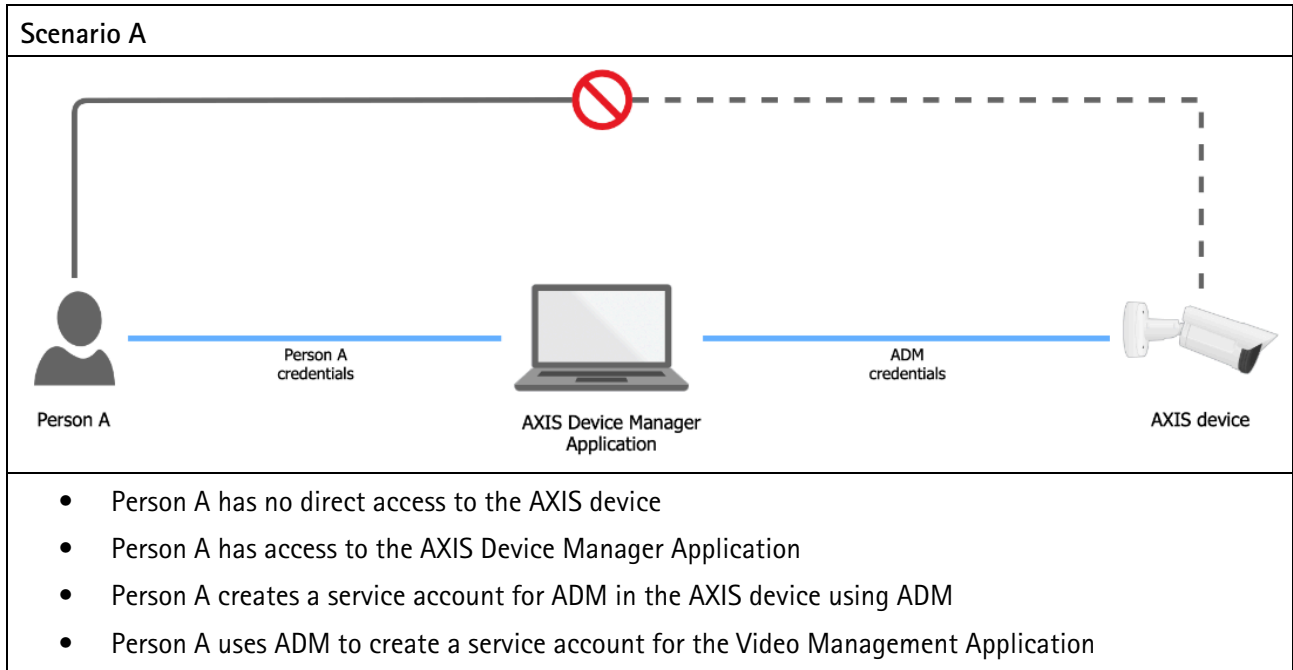

The device is exposed to the following risks when using user accounts in the device:

- Unauthorized personnel accessing devices
- Wrong level of authorization in different devices
- Re-use of user account credentials prevents audit traceability
- Poor scalability with increasing number of devices

Different sites and organizations can have different policies, including password policies, which the system should be set up to accommodate. Typically, each application should have its own credentials for devices. If the password is reused in devices, Axis recommends changing the password frequently.

Authorization and account privileges

Axis devices support the roles Administrator, Operator, and Viewer, with different authorization levels. Axis recommends setting up an administrator account for management applications that have access to the devices. This account should be unique for each application and should not be shared. Ideally, the password for this account should be generated by the management application itself and should remain unknown to individuals.

If direct access to devices is needed

Some configurations may not be natively supported by the application and may need to be done through the devices web interface. Axis recommends to access the Axis device web interface through the seamless access provided by Axis' device management applications.

If there are strong reasons for allowing direct access to devices, Axis recommends using temporary service account impersonalization with limited access. A new service account should be created on the device with the appropriate role for what needs to be done. Once direct access is no longer required, the service account should be deleted.

Device access

Legacy access procedure (default user with default password)

Historically, Axis devices in their factory default state have had their VAPIX and ONVIF interfaces activated for out-of-the-box access on the network for clients connecting to them. This meant that a client, such as an application or video management system, could access the Axis network device via anonymous ONVIF calls as well as the default VAPIX user "root" with the default password "pass", prior to having configured anything on the Axis network device itself.

Updated access procedure (default user with no default password)


The VAPIX and ONVIF interfaces have been disabled and the "root" VAPIX user password is no longer set in the factory default state. This means that it's no longer possible for a client to access or configure the device out-of-the-box without setting a password for the VAPIX user "root".

The update access procedure has been implemented in the following AXIS OS releases:

- Version 5.51.6
- Version 6.50.4 (2016 LTS)
- Version 8.40.3 (2018 LTS)
- Version 9.40.1 and higher

Furthermore, the updated procedure has been rolled out on individual product releases that are outside the scope of the above platform releases, such as:

- 1.65.x
- 1.8x.x
- 5.75.x
- 6.53.x
- 6.55.x
- 7.15.x

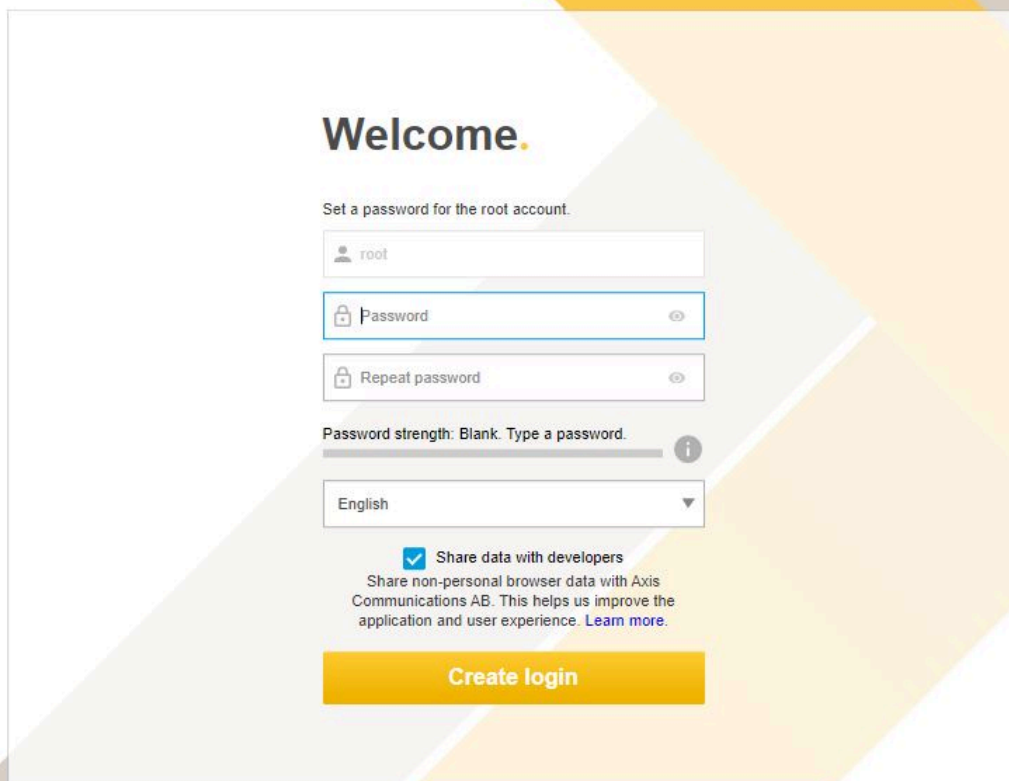

Welcome.

Set a password for the root account.

root

Password

Repeat password

Password strength: Blank. Type a password.

English

Share data with developers
Share non-personal browser data with Axis Communications AB. This helps us improve the application and user experience. [Learn more.](#)

Create login

Modern access procedure (no default user)

As of AXIS OS 11.6 and higher, the default VAPIX user "root" has been removed from the Axis device in its factory default state and it is now possible to instead create a custom VAPIX user in the factory default state.



AXIS P1375 Network Camera

Account

New password

Repeat password

I accept the [end user license agreement](#).

Share non-personal browser data with Axis Communications AB. This helps us improve the application and your user experience. [Learn more](#).

Add account



Anonymous interface calls

Interface calls that do not require authentication (=anonymous) are still allowed for device identification purposes. An Axis device can be identified in its factory default state by its HTTP response header which is set to "AXIS-Setup:vapix" when an VAPIX or ONVIF API call is made, as illustrated below:

```
HTTP/1.1 401
Unauthorized Date: Thu, 19 Sep 2019 18:15:20 GMT
Server: Apache/2.4.39 (Unix) OpenSSL/1.1.1c
Axis-Setup: vapix
```

Activate VAPIX and/or ONVIF interfaces

The VAPIX and/or ONVIF interfaces in the Axis device can be activated using the following methods:

- The VAPIX interface is activated when an initial VAPIX user password is set, either via VAPIX System Settings API, as described in the or by using the Axis device's web interface during the installation process.
- The ONVIF interface can only be activated after the VAPIX interface has been activated. After that, the ONVIF interface can be activated by creating an ONVIF user via the device's web interface.

AXIS OS version	Web interface configuration path
< 7.10	Setup > System Options > Security > ONVIF


≥ 7.10	Settings > System > ONVIF
≥ 10.9	System > ONVIF

- In addition, an ONVIF user can also be created using the . An example of the API call to create an ONVIF user is described below:

```
POST /vapix/services HTTP/1.1
<SOAP-ENV:Envelope xmlns:wscdl="http://schemas.xmlsoap.org/wsdl/"
xmlns:xs="http://www.w3.org/2001/XMLSchema"
xmlns:tds="http://www.onvif.org/ver10/device/wsdl"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xmlns:xsd="http://www.w3.org/2001/XMLSchema"
xmlns:onvif="http://www.onvif.org/ver10/schema"
xmlns:tt="http://www.onvif.org/ver10/schema"
xmlns:SOAP-ENV="http://www.w3.org/2003/05/soap-envelope">
<SOAP-ENV:Body>
<tds:CreateUsers xmlns="http://www.onvif.org/ver10/device/wsdl">
<User>
<tt:Username>admin</tt:Username>
<tt>Password>admin</tt>Password>
<tt>UserLevel>Administrator</tt>UserLevel>
</User>
</tds:CreateUsers>
</SOAP-ENV:Body></SOAP-ENV:Envelope>
```

Password strength indicator

Axis devices with AXIS OS 7.20 or higher include a password strength indicator, which is visible when creating or modifying a user account password through the web interface. It indicates if the strength of the chosen password is considered weak, medium or strong and also provides advice on how to strengthen it. The indicator follows the . More information about setting the device password is available in the *AXIS OS Hardening Guide*.

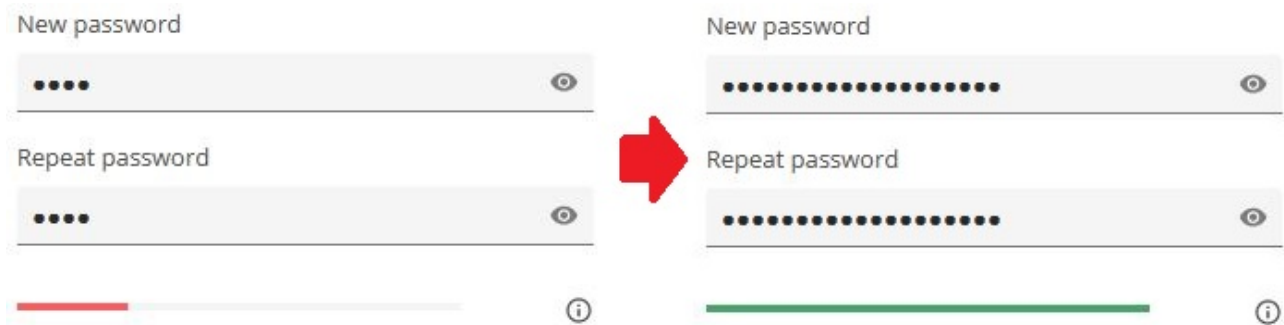

I forgot my password, what to do?

You cannot recover lost or forgotten access credentials to an Axis device. The device needs to be reset to its factory default settings in order to reconfigure it with new access credentials.

Device access logging

Successful and unsuccessful login attempts are logged in the Axis device's log system depending on the network protocol in use. At all times, it is recommend to configure a remote syslog server to which the Axis device can send its syslogs. This ensures that logs are retained for a specified period and don't get erased after e.g. a device reboot or factory default.

SSH

Successful	[INFO] sshd[17583]: Accepted password for root from 10.197.252.38 port 41988 ssh2
Unsuccessful	[INFO] sshd[17727]: Failed password for root from 10.197.252.38 port 41994 ssh2
After 5 failed attempts	[ERR] sshd[17727]: error: maximum authentication attempts exceeded for root from 10.197.252.38 port 41994 ssh2 [preauth] [INFO] sshd[17727]: Disconnecting authenticating user root 10.197.252.38 port 41994: Too many authentication failures [preauth]

FTP

Successful	[INFO] vftpd[18263]: Accepted request from 172.27.0.3 50333 [INFO] vftpd[18263]: User root logged in.
Unsuccessful	[INFO] vftpd[18163]: Accepted request from 172.27.0.3 64936 [INFO] vftpd[18163]: Incorrect username/password. User access from 172.27.0.3 denied. [INFO] vftpd[18163]: Client 172.27.0.3 disconnected.

RTSP protocol

Successful	[NOTICE] monolith: RTSP UNKNOWN session h4fIznyTZNy16tLt created from 172.25.155.83
Unsuccessful	[WARNING] monolith: Rtp login failed from 172.25.155.83

HTTP(S) protocol

Successful*	[NOTICE] httpd[22254]: root from 10.197.240.111 /axis-cgi/login.cgi GET 200
Unsuccessful**	[NOTICE] httpd[21459]: root from 10.197.240.111 failed to access /axis-cgi/usergroup.cgi.Password mismatch

*Requires the Access Log parameter to be enabled from Plain Config > System.

**Only login attempts using the correct username will be logged. This log message is only available from AXIS OS 10.4 and later.

IP filtering***

Unsuccessful	<pre>IP_FILTER: IN=eth0 OUT= MAC=ff:ff:ff:ff:30:9c:23:e2:48:b5:08:00 SRC=172.25.201.50 DST=172.25.201.255 LEN=78 TOS=0x00 PREC=0x00 TTL=128 ID=60428 PROTO=UDP SPT=137 DPT=137 LEN=58 IP_FILTER: IN=eth0 OUT= MAC=ff:ff:ff:ff:30:9c:23:e2:48:b5:08:00 SRC=172.25.201.50 DST=172.25.201.255 LEN=78 TOS=0x00 PREC=0x00 TTL=128 ID=60429 PROTO=UDP SPT=137 DPT=137 LEN=58</pre>
--------------	--

***IP filtering in Axis devices is network layer-2 Linux Kernel functionality that blocks network packages depending on the configured rules. No authentication is performed if an unsuited source IP address is trying to access the Axis device since the network transmission is blocked right at the layer-2 network while authentication is performed on higher level application layers. Corresponding logs of the IP filtering can be created when the VAPIX parameter is enabled in **Plain Config > Network** in the **IP Filtering** section.

PreventDosAttack****

Unsuccessful	AXIS OS 11.5 and lower	[WARNING] httpd[22254]: [evasive20:warn] [pid 22254:tid 1428104112] [client 172.25.201.116:42058] Blacklisting address 172.25.201.116: possible DoS attack.
Unsuccessful	AXIS OS 11.6 and higher	[WARNING] httpd[22254]: [evasive20:warn] [pid 22254:tid 1428104112] [client 172.25.201.116:42058] Blocklisting address 172.25.201.116: possible DoS attack.

****PreventDosAttack can be enabled from **Plain Config > System** and will only log unsuccessful login attempts and log when a source IP address is blocked.

User management configuration

As of AXIS OS 10.9, user configuration-related changes are logged and can be sent to a remote syslog server. In AXIS OS, VAPIX and ONVIF users are separated by having their own management interfaces and access rights. This table illustrates which log messages to expect when certain changes to the user management configuration are made:

API interface	Use case	Log message
VAPIX	Add user	VAPIX user andre from IP-address 10.197.240.104 created VAPIX user benjamin with role Administrator
VAPIX	Change access group	VAPIX user susanna from IP-address 10.197.240.104 changed VAPIX user linda role from Administrator to Operator
VAPIX	Change password	VAPIX user root from IP-address 10.197.240.104 changed VAPIX user thomas password

VAPIX	Delete user	VAPIX user root from IP-address 10.197.240.104 deleted VAPIX user sebastian with role Operator
ONVIF	Add user	VAPIX user root from IP-address 10.197.240.104 created ONVIF user andre with role Administrator
ONVIF	Change access group	ONVIF user andre from IP-address 10.197.240.104 changed ONVIF user susanna role from Administrator to Operator
ONVIF	Change password	ONVIF user thomas from IP-address 10.197.240.104 changed ONVIF user andre password
ONVIF	Delete user	ONVIF user pernilla from IP-address 10.197.240.104 deleted ONVIF user sebastian with role Operator

Audit log


Audit logs are used for cybersecurity-related purposes such as incident handling and helping to establish long-term monitoring of relevant events and actions. This feature requires AXIS OS 12.5 or later.

Important considerations and recommendations:

- Audit logging is enabled automatically and cannot be turned off.
- Audit logs cannot be removed, modified, or tampered with.
- Audit logs remain available after a reboot or power cycle.
- We recommend that you transfer audit logs to external systems for proper long-term storage, automated analysis, and notifications.
- Audit logs are always saved on the Axis device, regardless of whether an external system is used. This serves as a failover mechanism in worst-case scenarios.

System architecture

There are several options and scenarios for using and consuming audit logs. AXIS OS audit is designed to integrate easily with various applications and systems.

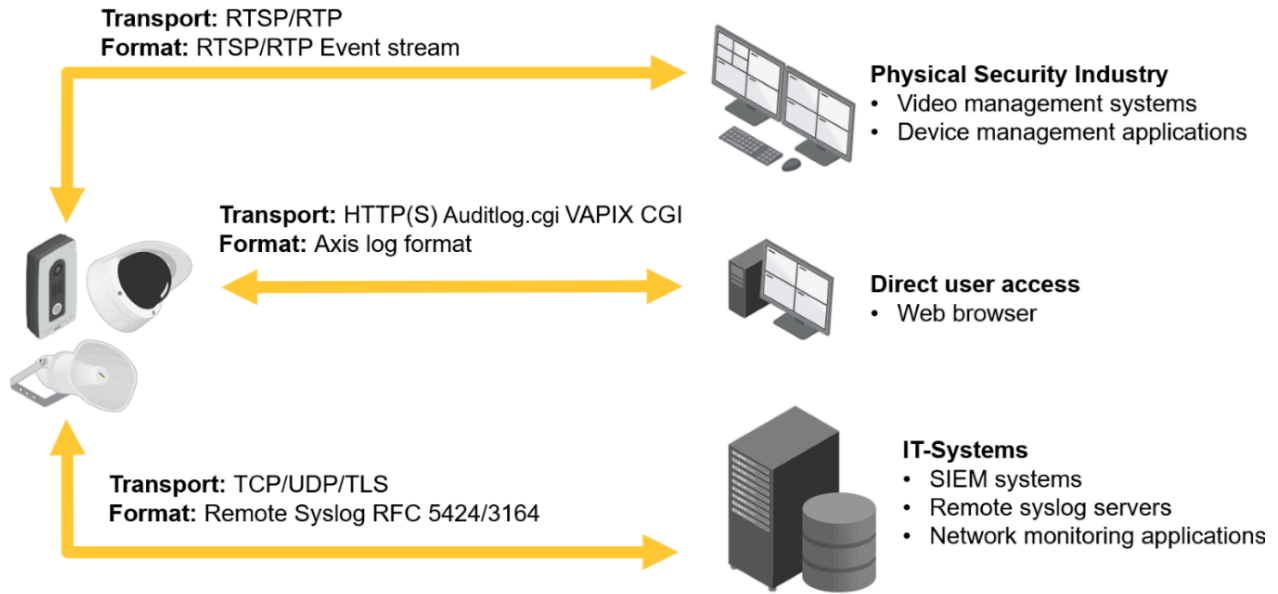

Direct user access

You can access the audit log through the Log section of the web interface, or by browsing to: <https://ip-address/axis-cgi/admin/auditlog.cgi>.

```


172.25.201.212/axis-cgi/admin/ x +
Inte säker 172.25.201.212/axis-cgi/admin/auditlog.cgi

2025-06-09T12:46:27.284+00:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[5159]: Account Change: anonymous@172.25.128.5 created account root (Administrator).
2025-06-09T14:47:55.513+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[5747]: API Activity: root@172.25.128.5 configured SSH service (enabled).
2025-06-09T14:49:49.921+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[6747]: Account Change: root@172.25.128.5 created user (SSH).
2025-06-10T08:16:56.343+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[41623]: Account Change: root@172.25.128.5 created account NewAdmin (Administrator).
2025-06-10T08:18:00.950+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[43258]: Account Change: root@172.25.128.5 created account AdminBenjamin (Administrator).
2025-06-10T08:18:36.434+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[43489]: Account Change: AdminBenjamin@172.25.128.5 created account Adminbingfeng (Administrator).
2025-06-10T08:19:00.648+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[43523]: Account Change: root@172.25.128.5 created bingfeng (SSH).
2025-06-10T08:20:31.022+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[45102]: Account Change: root@172.25.128.5 deleted account AdminBenjamin (Administrator).
2025-06-10T08:20:33.727+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[45111]: Account Change: root@172.25.128.5 deleted account NewAdmin (Administrator).
2025-06-10T08:20:36.952+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[45116]: Account Change: root@172.25.128.5 deleted bingfeng (SSH).
2025-06-10T08:20:39.625+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[45116]: Account Change: root@172.25.128.5 deleted user (SSH).
2025-06-10T08:20:40.583+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[45127]: API Activity: root@172.25.128.5 configured SSH service (disabled).
2025-06-10T08:20:55.701+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[45297]: Account Change: root@172.25.128.5 deleted account Adminbingfeng (Administrator).
2025-06-10T08:21:17.462+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[45472]: Account Change: root@172.25.128.5 created account benjamin (Administrator).
2025-06-10T08:21:44.820+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[45779]: API Activity: benjamin@172.25.128.5 configured SSH service (enabled).
2025-06-10T08:21:52.629+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[45773]: Account Change: benjamin@172.25.128.5 created benjamin (SSH).
2025-06-10T08:23:01.968+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[45850]: Account Change: root@172.25.128.5 deleted account benjamin (Administrator).
2025-06-10T08:23:13.391+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[46036]: Account Change: root@172.25.128.5 deleted benjamin (SSH).
2025-06-10T08:23:14.124+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[46054]: API Activity: root@172.25.128.5 configured SSH service (disabled).
2025-06-10T08:23:52.055+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[46141]: Account Change: root@172.25.128.5 created account benjamin (Administrator).
2025-06-10T08:24:07.291+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[46335]: API Activity: benjamin@172.25.128.5 configured SSH service (enabled).
2025-06-10T08:24:14.039+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[46327]: Account Change: benjamin@172.25.128.5 created benjamin (SSH).
2025-06-10T08:36:08.489+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[46928]: Account Change: root@172.25.128.5 deleted account benjamin (Administrator).
2025-06-10T08:36:11.234+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[46908]: Account Change: root@172.25.128.5 deleted benjamin (SSH).
2025-06-10T08:36:11.849+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[46935]: API Activity: root@172.25.128.5 configured SSH service (disabled).
2025-06-10T08:36:51.108+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[47169]: Account Change: root@172.25.128.5 created account benjamin (Administrator).
2025-06-10T08:37:07.303+02:00 axis-b8a44f568843 [ INFO ] ssh.cgi[47352]: API Activity: benjamin@172.25.128.5 configured SSH service (enabled).
2025-06-10T08:37:14.042+02:00 axis-b8a44f568843 [ INFO ] ssh-confd[47150]: Account Change: benjamin@172.25.128.5 created benjamin (SSH).
2025-06-11T07:58:39.417+02:00 axis-b8a44f568843 [ INFO ] pwdgrpcgi/user[92488]: Account Change: root@172.25.128.5 created account andre (Administrator).
    
```

Applications can also use the `auditlog.cgi` VAPIX CGI to download audit logs.


IT systems

Unlike regular device logs, audit logs are retained after the device is restarted. However, we recommend using the remote syslog functionality to enable centralized audit logging for monitoring and incident response based on relevant account activities and configuration changes on your Axis device. To enable audit logging through remote syslog, select **Audit** in the **Remote system log** settings

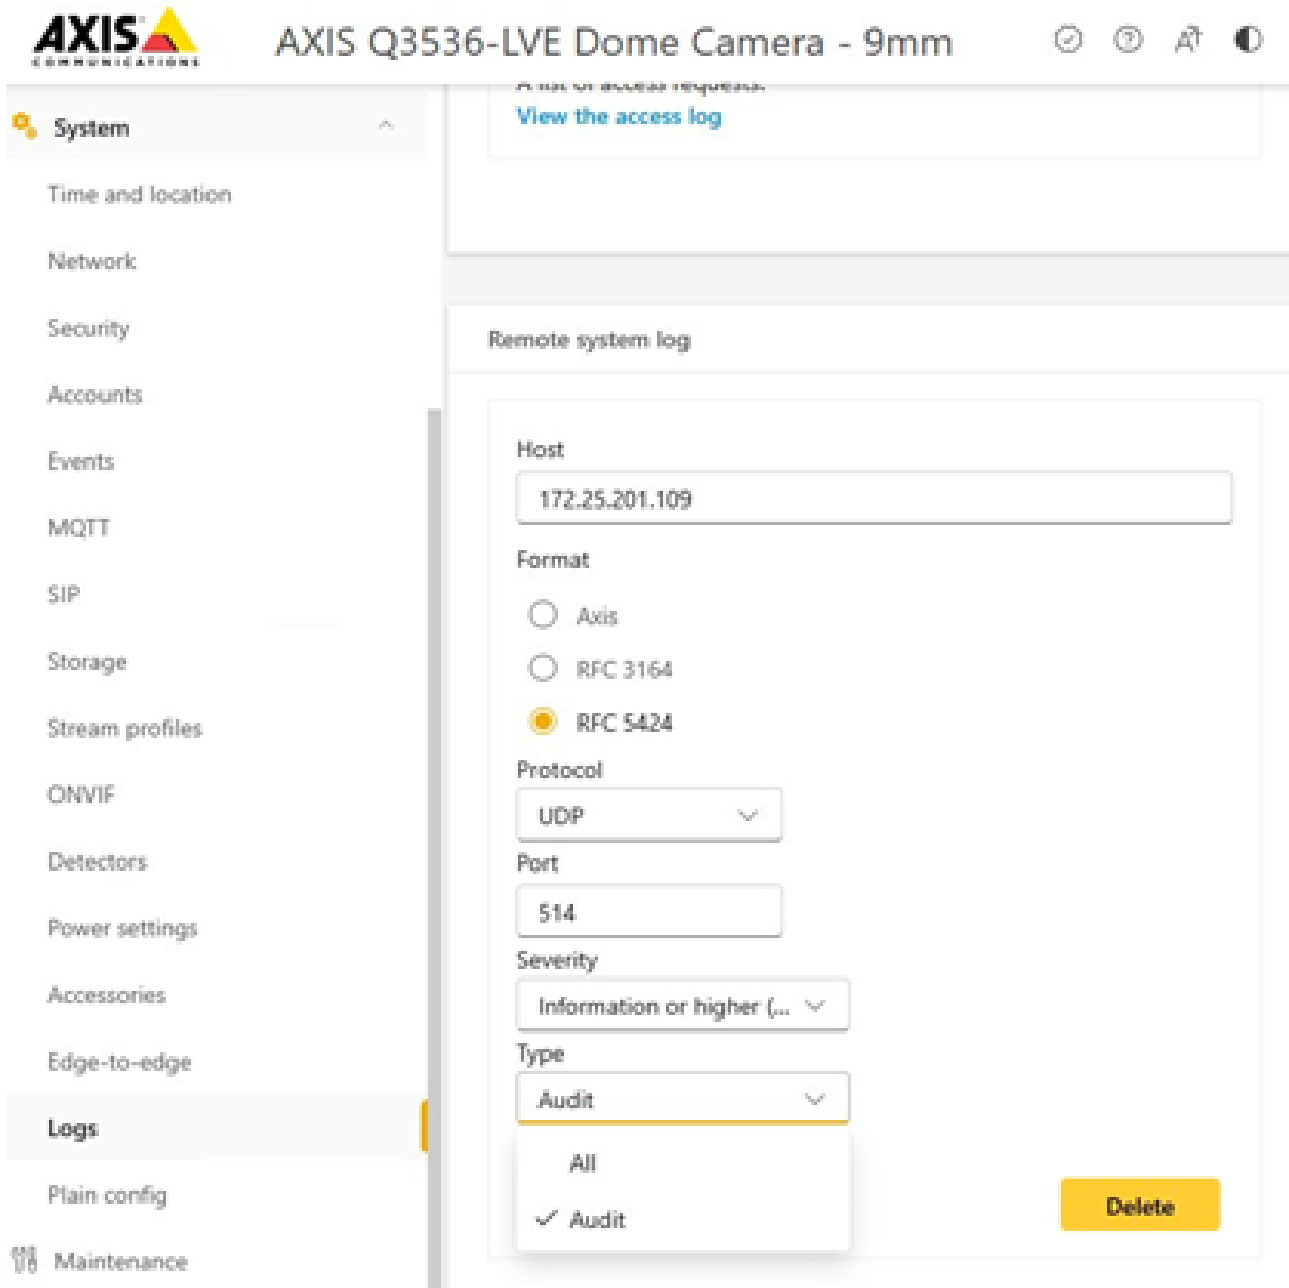

Audit log content

In general, the structure of most of our audit logs looks like this:

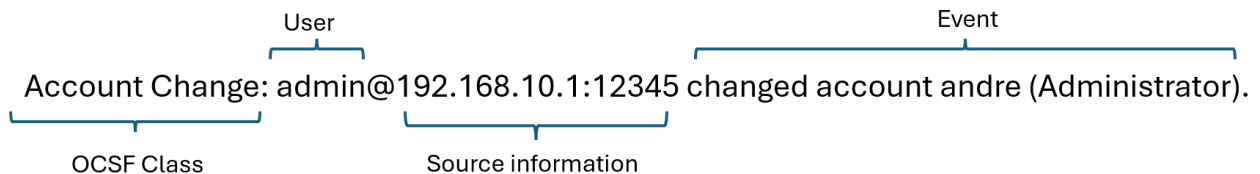

OCSF Class: The audit log is categorized using Open Cybersecurity Schema Framework (OCSF) classes. Each OCSF class represents a specific type of event or data. The next section shows some examples.

- User: who performed the action.
- Source information: where the event came from, the source IP address and the port.
- Event: what action was taken.

Note

Not all examples are implemented in AXIS OS 12.5. New log messages and classes will be added in future updates.

OCSF Class: Authentication

Use case: Logs successful and failed authentication attempts, as well as logout events.

- Authentication: admin@192.168.10.1:12345 Authentication failed (SSH).
- Authentication: admin Logged out (SSH).
- Authentication: admin@192.168.10.1:12345 Authentication successful (HTTP/S).
- Authentication: admin@192.168.10.1:12345 Logged out (HTTP/S).
- Authentication: admin@192.168.10.1:12345 Authentication successful (RTSP).

OCSF Class: Network Remediation Activity

Use case: Logs network security and firewall-related traffic information, primarily when incoming network connections are blocked.

- Network Remediation Activity: Firewall blocked 192.168.10.1:80 from B8:A4:4F:28:1D:B4 (Rule 5)

OCSF Class: API Activity

Use case: Logs configuration changes such as parameter updates, ACAP installations, and AXIS OS upgrades.

- API Activity: admin@192.168.10.1:12345 updated Network.DNSServer1 (192.168.0.110).
- API Activity: admin@192.168.10.1:12345 updated Image.I0.Appearance.Compression (40).
- API Activity: admin@192.168.10.1:12345 added ssh.v1.users ({"comment":"","password":"**Redacted**","username":"sshaccount"}).
- API Activity: admin@192.168.10.1:12345 started app: Axis Video Motion Detection 4 (vmd 4.5.14).
- API Activity: admin@192.168.10.1:12345 updated shuttergain.setGain ({"source": 0,"property": "max","value": 65}).

OCSF Class: Account Change

Use case: Logs account-related configuration changes.

- Account Change: admin@192.168.10.1:12345 changed account andre (Administrator).
- Account Change: admin@192.168.10.1:12345 changed account andre (Password Update).
- Account Change: admin@192.168.10.1:12345 created account test (SSH).

OCSF Class: Entity Management

Use case 1: Logs system-relevant events such as device restarts, factory resets, and similar actions.

- Entity Management: Audit Log started.
- Entity Management: Audit Log rotated (2025-09-10 11:09:15.981+02:00 - 2025-09-21 11:09:15.561 +02:00 has been removed).
- Entity Management: admin@192.168.10.1:12345 Upgrade started (12.31.32).
- Entity Management: Upgrade completed (12.31.32).
- Entity Management: admin@192.168.10.1:12345 Restart.
- Entity Management: admin@192.168.10.1:12345 Factory default (hard).Entity Management: admin@192.168.10.1:12345 Factory default (soft).
- Entity Management: admin@192.168.10.1:12345 Rollback (11.11.199).
- Entity Management: admin@192.168.10.1:12345 Installed custom firmware certificate (axis-unlock-acap-devmode).

Use case 2: Logs relevant storage and recording events.

- Entity Management: admin@192.168.10.1:1962 Exported recording (Recording_ID = 20251126_180156_770C_B8A44F28254E, After = 2025-11-26T17:02:54.171251Z, Before = 2025-11-26T17:10:38.000000Z, Disk_ID = Network share).
- Entity Management: admin@192.168.10.1:19994 Deleted recording (Recording_ID = 20251126_171103_C634_B8A44F28254E, After = 2025-11-26T16:11:03.765374Z, Before = 2025-11-26T16:14:27.699085Z, Disk_ID = Network share).
- Entity Management: admin@192.168.10.1:12345 Started recording (Recording_ID = 20250306_083730_4F14_B8A44F281DB4, Disk_ID = SD card).

OCSF Class: Network Activity

Use case: Logs video, audio, and metadata streaming events when clients connect to the device.

- Network Activity: admin@192.168.10.1:1147 Requested JPEG image (Proto:HTTP,UserAgent:mozilla/5.0 (windows nt 10.0; win64; x64) applewebkit/537.36 (KHTML, like Gecko) chrome/142.0.0.0 safari/537.36).
- Network Activity: admin@192.168.10.1:19526 Started streaming (Id:2,Proto:HTTP,Media:VIDEO, UserAgent:mozilla/5.0 (windows nt 10.0; win64; x64) applewebkit/537.36 (KHTML, like Gecko) chrome/142.0.0.0 safari/537.36).
- Network Activity: Number of current active streams (1).
- Network Activity: admin@192.168.10.1:19526 Stopped streaming (Id:2,Proto:HTTP,Media:VIDEO, UserAgent:mozilla/5.0 (windows nt 10.0; win64; x64) applewebkit/537.36 (KHTML, like Gecko) chrome/142.0.0.0 safari/537.36).
- Network Activity: Number of current active streams (0).
- Network Activity: Started streaming (Id:1,Proto:RTP/UDP,Media:VIDEO, Destination:239.241.34.89:50998).

OCSF Class: Base Event

Use case: Logs Remote Syslog audit test messages.

- Base Event: This is an audit test message.

AXIS OS audit log is designed to record at least the latest 1,000 audit log events and to retain them subsequent to a system reboot or power cycle, but they are not retained following a system restore or a reset to factory default. The internal audit log mechanism conducts periodic reviews of the log files at 30 minute intervals. If the file size exceeds 300 KB, a new file is generated, with only the three most recent audit log files being preserved. Typically, the Axis device allocates 1 MB storage capacity for audit logging purposes. As illustrated in the preceding examples, the size of audit log events may vary depending on the specific event. Consequently, the maximum number of events that can be retained is inversely proportional to the size of the individual log records.

A typical log event is approximately 300–400 bytes in size, thereby enabling the device to retain approximately 2,600–3,300 events. However, for certain DeCaf API change logs, the size of each event may range from 500 to 600 bytes, thus reducing the device's log retention capacity to approximately 1,600–2,000 events. We recommend using a remote Syslog server to ensure that audit logs are securely transmitted off the local device, to reduce the risk of data loss due to limited local storage or device failure.

Authentication schemes

AXIS OS 11.11 and later versions support multiple authentication scheme configuration through virtual hosts. This enables hybrid setups where Basic, Digest or OAuth 2.0 OpenID Connect authentication schemes can be used for centralized Identity and Access Management (IAM) with Active Directory Federation Services (ADFS) and other Identity Provider (IdP) solutions.


Axis devices support the following authentication schemes through HTTP/HTTPS:

- Basic
- Digest


- OAuth 2.0 OpenID Connect Authorization Code Flow
- OAuth 2.0 OpenID Connect Client Credentials Grant

As of AXIS OS 12.8 it is possible to disable basic and/or digest authentication and only allow OAuth 2.0 authentication schemes.


Legacy setup with HTTP(S) Basic/Digest only

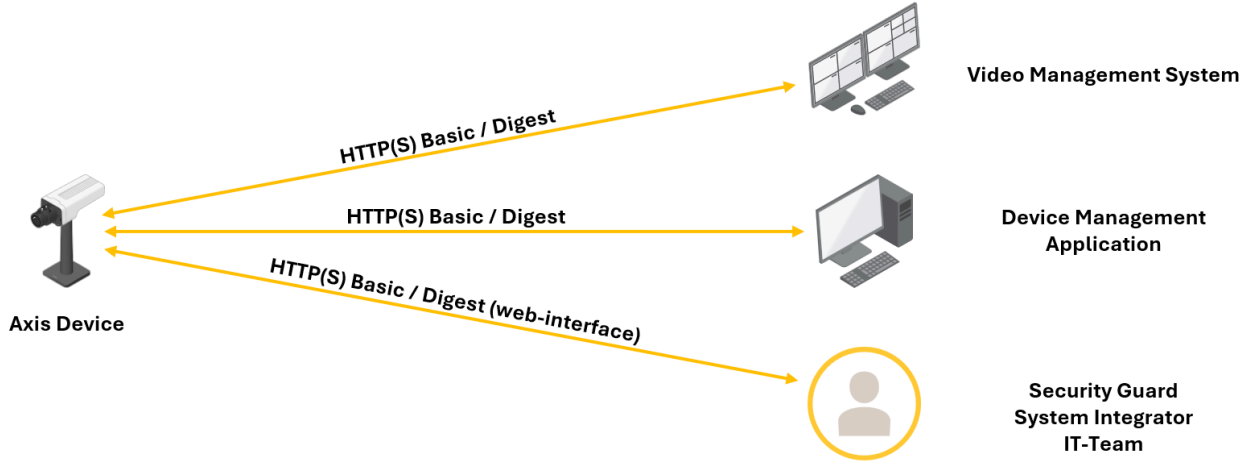

Hybrid setup with HTTP(S) Basic/Digest and OAuth 2.0 Authorization Code Flow

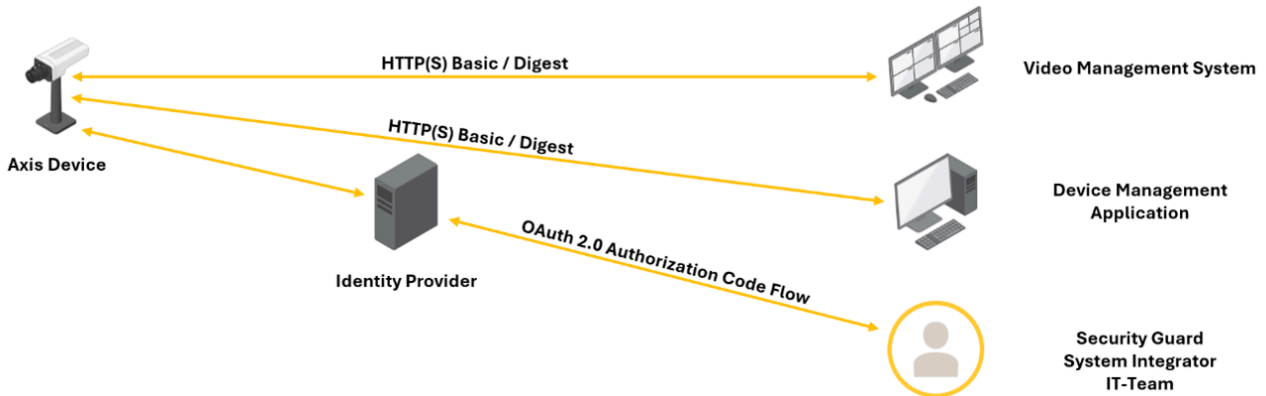

Fully adapted setup with OAuth 2.0 Client Credential Grant and OAuth 2.0 Authorization Code Flow

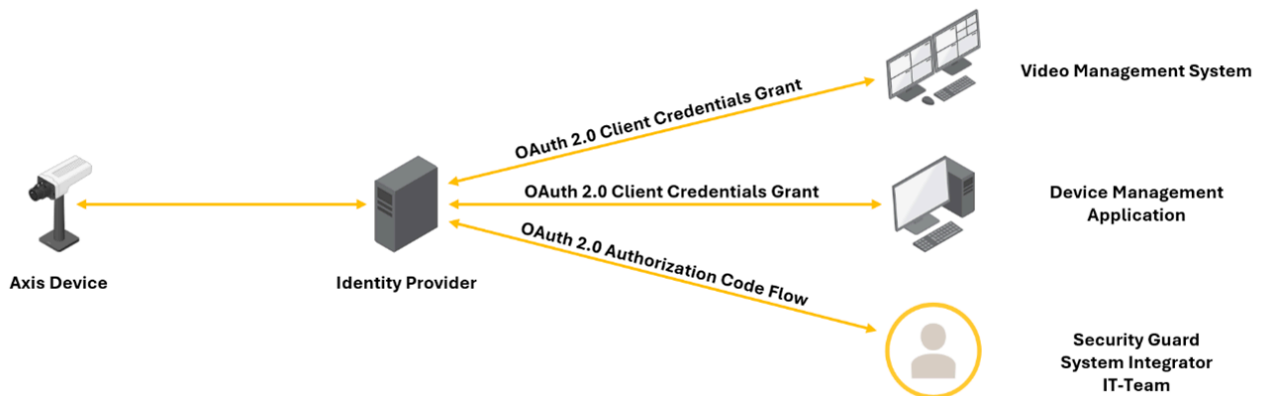

Configuration example with different authentication schemes on different ports

Server name	Default	Port	Type	HTTPS
default-http	Yes	80	Digest	No
default-https	Yes	443	Basic	Yes
axiscamera.r2d2.lab	No	8443	OpenID	Yes

Name	Port	Authentication scheme	Comment
default-http	80	HTTP Digest	Disabled in this example
default-https	443	HTTP Basic	
axiscamera.r2d2.lab	8443	OpenID	

The authentication scheme the device accepts differs depending on which of the ports you attempt to access the Axis device on.

Address	Authentication scheme
https://axiscamera.r2d2.lab:443	HTTPS Basic
https://axiscamera.r2d2.lab:8443	OAuth 2.0 OpenID Connect Authorization Code Flow

Configuration example with different authentication schemes on the same port


Server name	Default	Port	Type	HTTPS
default-http	Yes	80	Digest	No
default-https	Yes	443	Basic	Yes
axiscamera.r2d2.lab	No	443	OpenID	Yes
https.r2d2.lab	No	443	Basic	Yes

Name	Port	Authentication scheme	Comment
default-http	80	HTTP Digest	Disabled in this example
default-https	443	HTTPS Basic	Disabled in this example
axiscamera.r2d2.lab	443	OpenID	
https.r2d2.lab	443	HTTPS Basic	


Because of the way virtual hosts work, the configured name will be used as the hostname to differentiate between the above two authentication schemes. In this example, we've chosen https & OpenID. The authentication scheme the device accepts differs depending on which of the two hostnames you use to access the device.

Address	Authentication scheme
https://https.r2d2.lab:443	HTTPS Basic
https://axiscamera.r2d2.lab:443	OAuth 2.0 OpenID Connect Authorization Code Flow

Note that this setup might require updates in your DNS infrastructure to ensure that both hostnames are correctly accessible and resolved.

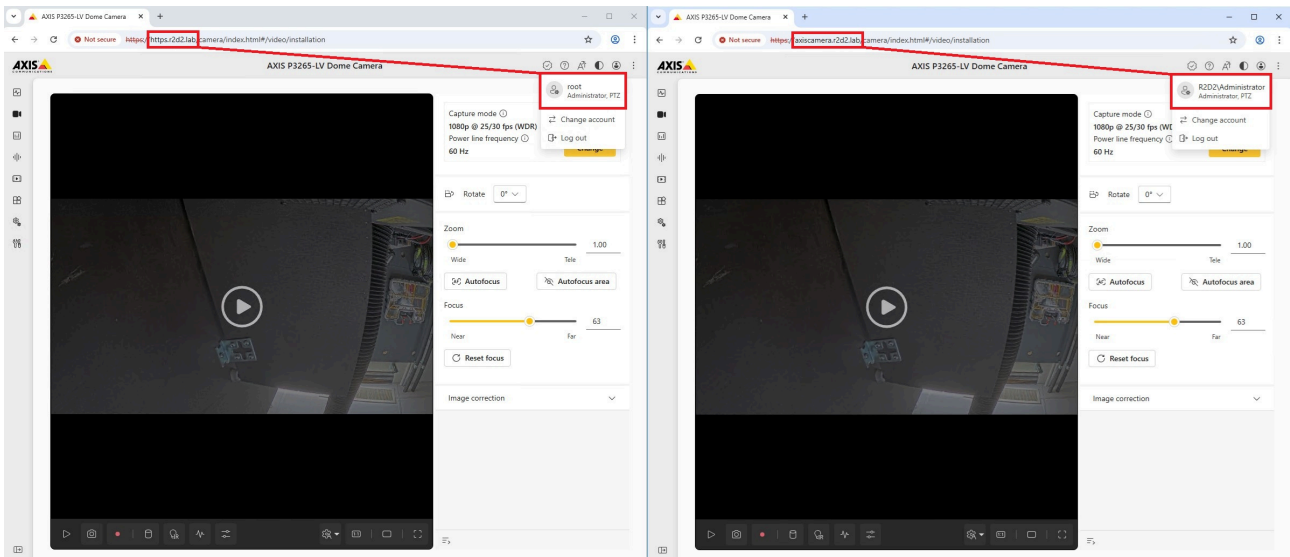

Configuration example with only the OpenID authentication scheme enabled

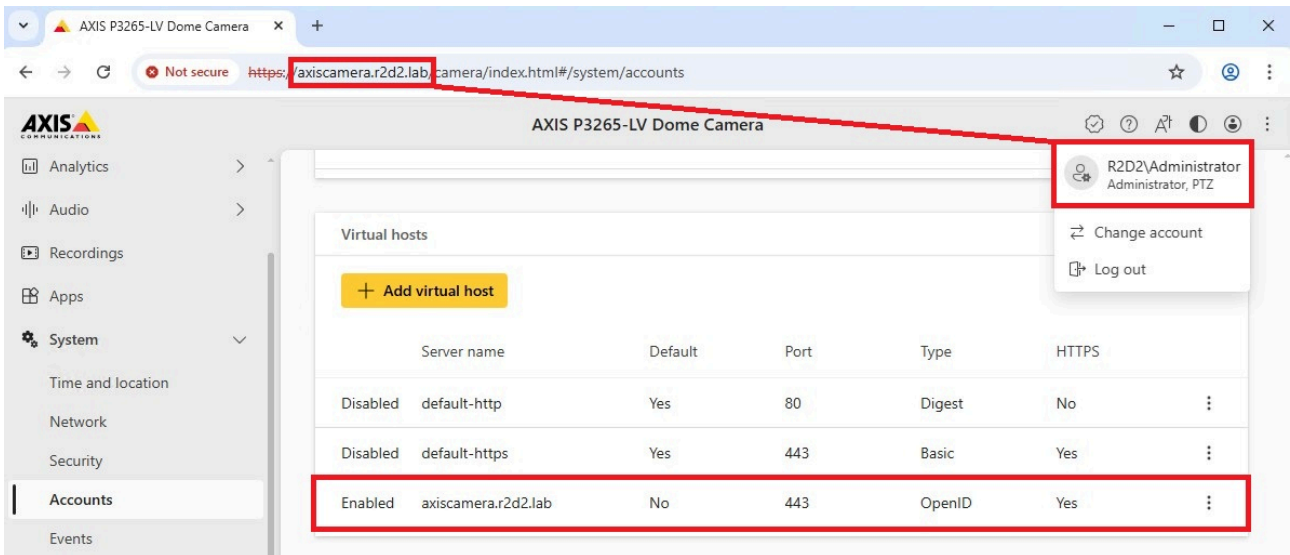

Name	Port	Authentication scheme	Comment
default-http	80	HTTP Digest	Disabled in this example
default-https	443	HTTPS Basic	Disabled in this example
axiscamera.r2d2.lab	443	OpenID	

Brute force delay protection

AXIS OS 7.30 or higher

Axis devices running AXIS OS 7.30 and higher can be configured to automatically block HTTP/HTTPS requests coming from a client in the network (IP address). For a certain amount of time, a defined number of authentications will fail. This feature can help protect the Axis device against brute-force attacks, or against network clients that unintentionally behave in a similar manner. The brute force delay protection can be configured in Plain config > System.

AXIS OS 11.5 or higher

With AXIS OS 11.5 or higher, brute force delay protection is enabled by default using configuration example 1 below.


Generally the lower the allowed page/site count is, the more secure the protection. Implementing brute force delay protection significantly increases the time required to guess a password, making brute-force attacks far less effective. Some indications can be found below. Note that configuring a strong password *is always recommend*.

Condition	Total brute force time without delay protection enabled – 720 requests/ sec*	Total brute force time configuration example 1	Total brute force time configuration example 2
4 characters with lower case letters only	+ - 11 minutes	+ - 6 hours	+ - 13 hours
4 characters with upper and lower case letters, 0 to 9	+ - 6 hours	+ - 205 hours	+ - 410 hours

5 characters with lower case letters only	+ - 5 hours	+ - 7 days	+ - 14 days
5 characters with upper and lower case letters, 0 to 9	+ - 14 days (+ - 2 weeks)	+ - 1.5 years	+ - 3 years

*Actual rate may vary and depends on product performance.

Trying to access the web interface from a network client previously identified as a threat would result in a HTTP 403 Forbidden response.

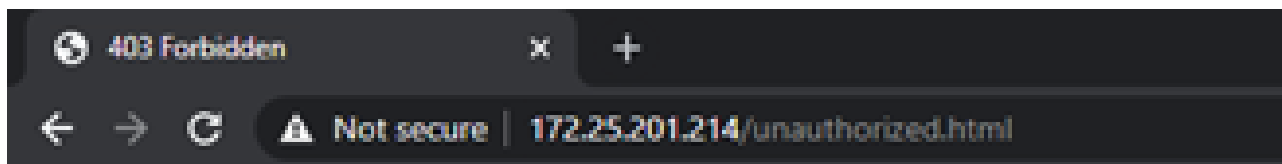

Forbidden

You don't have permission to access this resource.

If this happens, the Axis device will also log the following in the system log:

AXIS OS 11.5 and lower	2021-08-16T12:17:35.119+02:00 axis-acc8ed910b9 [WARNING] httpd[592]: [evasive20:warn] [client 172.25.201.116:41972] Blacklisting address 172.25.201.116: possible DoS attack.
AXIS OS 11.6 and higher	2021-08-16T12:17:35.119+02:00 axis-acc8ed910b9 [WARNING] httpd[592]: [evasive20:warn] [client 172.25.201.116:41972] Blocklisting address 172.25.201.116: possible DoS attack.

Parameter description

Parameter	Description
DOSBlockingPeriod	The blocking period is the amount of time (in seconds) a client will be blocked if added to the blocking list. During this period, all subsequent requests from the client will result in a 403 (Forbidden).
DOSPageCount	This is the threshold for the number of requests for the same page (or URI) per page interval. Once the threshold for that interval has been exceeded, the IP address of the

	client will be added to the blocking list. A page is considered to be, for example, http://ip-address/system/plainconfig.
DOSPageInterval	The interval for the page count threshold; defaults to 1 second intervals.
DOSSiteCount	This is the threshold for the total number of requests for any object by the same client on the same listener per site interval. Once the threshold for that interval has been exceeded, the IP address of the client will be added to the blocking list. A site is considered to be, for example, http://ip-address/
DOSSiteInterval	The interval for the site count threshold; defaults to 1 second intervals.

Configuration examples

- **Example 1:** After 20 failed login attempts within one second, the client IP address is blocked for 10 seconds. This is the default configuration and offers flexible security where – to some extent – failed login attempts from well-known authorized clients are taken into account.
- **Example 2:** After 10 failed login attempts within one second, the client IP address is blocked for 10 seconds. This configuration is recommended for very strict and high security systems where even a few failed login attempts will block a client.


Setting	Example 1	Example 2
Activate Password Throttling	On	On
DoS Blocking Period(sec)	10	10
DoS Page Count(req/ DoSPageInterval)	20	10
DoS Page Interval(sec)	1	1
DOS Site Count(req/ DoSSiteInterval)	20	10
DoS Site Interval(sec)	1	1

Host-based firewall


Axis devices running AXIS OS 11.9 and higher have the host-based firewall feature, which replaces the legacy IP Address Filter. The host-based firewall regulates network traffic to Axis devices, adding an additional security layer to protect against unauthorized access and attacks.

The firewall uses policies and rules to control incoming traffic, and defines which packets (or frames) can pass through and which should be blocked. Below is an overview of the specific criteria supported based on the AXIS OS version installed on your device:

Criteria	Available with version
IPv4/IPv6 address	11.9
TCP/UDP port	
IPv4/IPv6 address range	12.5
TCP/UDP port range	
MAC address	
Packet Type (unicast, multicast, broadcast)	

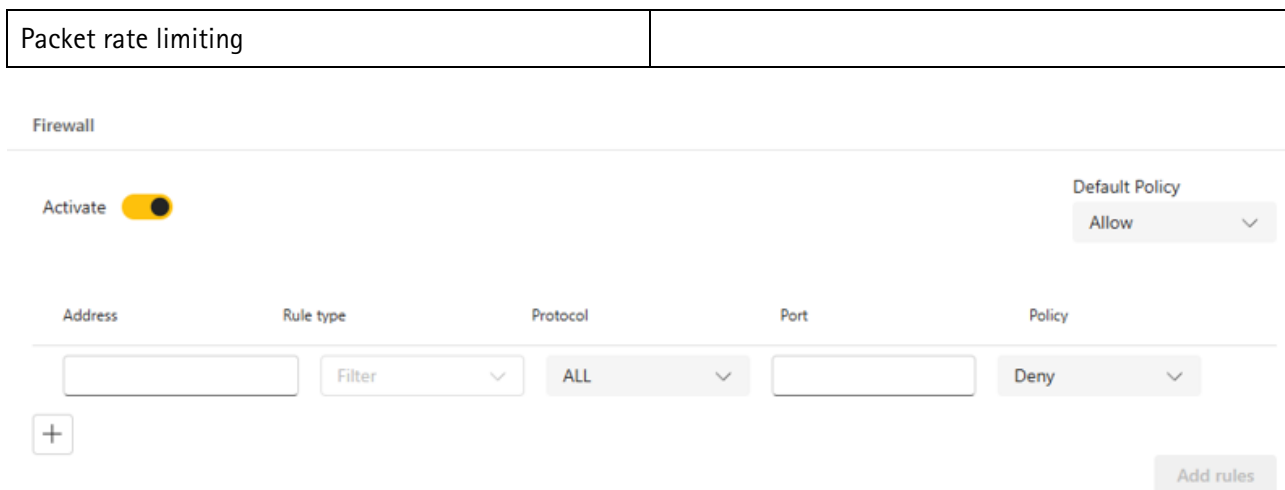

The firewall interface for devices running AXIS OS 11.9 to 12.4:

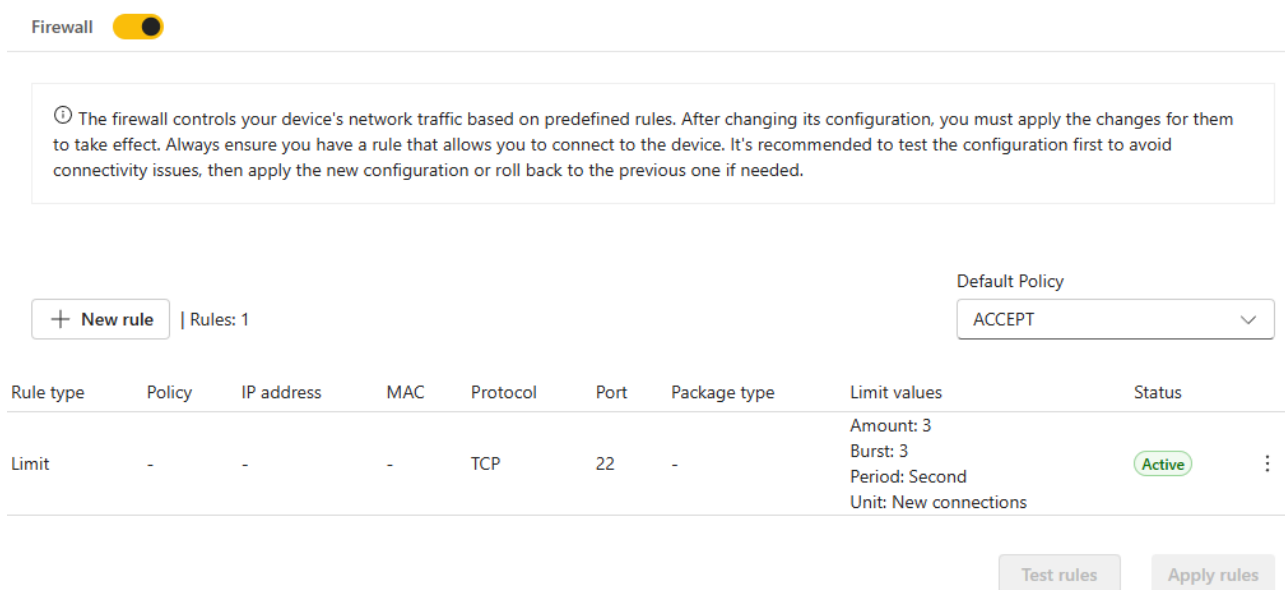

The firewall interface for devices running AXIS OS 12.5 and higher.

Policy: defines how the firewall should handle network traffic when it matches specific criteria in a rule:

- **Deny:** discards the packets.
- **Allow:** allows packets to pass through.

Default policy: defines how the firewall should handle packets that don't match any criteria specified by the user:

- **Deny:** discards all incoming traffic unless specifically allowed by a rule.
- **Allow:** allows all incoming traffic unless specifically blocked by a rule.

Firewall rules execute from top to bottom, so their order matters. For example, you may want to allow clients to connect to the device via ports 80 and 443, except, for example, client 192.168.0.200. However, if the rules are in the wrong order, 192.168.0.200 could still connect to the device via ports 80 or 443. To prevent this, move the last rule (denying client 192.168.0.200) to the top.

Active rules				
Address	Rule type	Protocol	Port	Policy
-	Filter	TCP	80	Allow
-	Filter	TCP	443	Allow
192.168.0.200	Filter	ALL	-	Deny

Plan your firewall rules carefully, as faulty configuration may block access to your devices. The host-based firewall includes a test feature that lets you test new rules for a set period before making them permanent.

In the example below, we've added two rules to block clients from connecting to the device via HTTP (TCP 80) and SSH (TCP 22).

Configuration example

From AXIS OS 11.9 to 12.4:

1. Add the rules.

Firewall

Activate

Default Policy
Allow ▼

Address	Rule type	Protocol	Port	Policy
<input type="text"/>	Filter ▼	TCP ▼	<input type="text" value="80"/>	Deny ▼
<input type="text"/>	Filter ▼	TCP ▼	<input type="text" value="22"/>	Deny ▼ 🗑️

+

Add rules

2. Set the timer to test the rules.

Once you have edited the rules, click **Add rule**. A new window appears, prompting you to test the new rules. You can set a time (x seconds) to test the rules. To activate the rules immediately, you can set the timer to 0 to skip the test process.

You are adding rules to the Firewall

Adding a poorly configured rule can cause a loss of connection to the device. In order to avoid this, we can make the rule active for a certain amount of time, then the last active rule will be set again.

Time in seconds

Cancel
Confirm rules

3. Test the rules during the timer period.

The two rules are now temporarily active during the timer period. Verify that the rules work as expected. Once the timer period ends, the rules will appear under **Pending rules**.

Active rules					
Time left for active rules test: 26s					
Address	Rule type	Protocol	Port	Policy	
-	Filter	TCP	80	Deny	
-	Filter	TCP	22	Deny	

Confirm rules

4. Confirm the rules.

If everything works as expected, click **Confirm rules** under **Pending rules** to activate them.

Pending rules					
Address	Rule type	Protocol	Port	Policy	
-	Filter	TCP	80	Deny	
-	Filter	TCP	22	Deny	

Confirm rules

Once confirmed, the rules will appear under **Active rules**.

Active rules					
Address	Rule type	Protocol	Port	Policy	
-	Filter	TCP	80	Deny	
-	Filter	TCP	22	Deny	

AXIS OS 12.5 and higher:

1. Add the rules.

New rule

Rule type

Policy *

IP range

IP address

Protocol

MAC

Port range

Port *

Package type

Cancel

Save

+ New rule | Rules: 2

Default Policy

Rule type	Policy	IP address	MAC	Protocol	Port	Package type	Limit values	Status
Filter	DROP	-	-	TCP	80	-	-	New
Filter	DROP	-	-	TCP	22	-	-	New

The firewall configuration has been updated. Choose to test or apply the changes.

Test rules

Apply rules

- Test the rules. Click **Test rules**. A new window appears, prompting you to test the new rules. You can set a time (x seconds) to test the rules. To activate the rules immediately, you can set the timer to 0 to skip the test process.

Test Firewall configuration

The firewall configuration can be tested for a specific duration to check for connectivity issues. If the test reveals no issues, you can apply the configuration or wait for the timer to run out before starting a new test.

Test time in seconds

10s..3600s

3. Apply the rules.

Once the test timer period ends, the rules' status will show as **Tested**. If everything works as expected, click **Apply rules**. Otherwise, click **Rollback** to return the firewall to its previous state before you tested the rules.

+ New rule | Rules: 2 Default Policy
ACCEPT

Rule type	Policy	IP address	MAC	Protocol	Port	Package type	Limit values	Status
Filter	DROP	-	-	TCP	80	-	-	Tested
Filter	DROP	-	-	TCP	22	-	-	Tested

In the screenshot below, the rules have been applied and their status has changed to **Active**.

+ New rule | Rules: 2 Default Policy
ACCEPT

Rule type	Policy	IP address	MAC	Protocol	Port	Package type	Limit values	Status
Filter	DROP	-	-	TCP	80	-	-	Active
Filter	DROP	-	-	TCP	22	-	-	Active

New connection rate limiting feature

The new connection rate limiting feature tracks new connections to the device and matches them at a limited rate using a token bucket filter. This feature is mainly used to avoid various denial-of-service attacks (DoS).

The rule type should be set to **LIMIT** to create a connection limit.

- **Amount:** Maximum average matching rate: specified as a number, with an optional '/second', '/minute', '/hour', or '/day' suffix. This specifies the rate at which the bucket refills with tokens. 3/second means 3 tokens every second.
- **Burst:** The maximum initial number of connections to match. This specifies the maximum number of tokens the bucket can hold. This number is refreshed based on the **Amount** value until the bucket reaches its upper limit.

There is also a user-configurable default rate limiting rule for new SSH connections.

Edit rule

Rule type

LIMIT

IP range

IP address

Protocol

TCP

MAC

XX:XX:XX:XX:XX:XX

Port range

Port *

22

Unit *

NEWCONNECTIONS

Period *

SECOND

Amount *

3

Burst *

3

Package type

Cancel

Save

In the above example, **Burst** is set to 3, and **Amount** is set to 3/second by default. The first 3 SSH connections will be accepted. After this happens, it will take around 333ms before a new SSH connection is accepted. Meanwhile, if no SSH connection is matched every 333ms, one burst will be added back to the initial bucket. If no SSH connection occurs for 1 second, the burst will be fully recharged.

Product-specific rules

When you connect certain accessories to a product, the device automatically creates firewall rules tailored to them. These accessories rely on specific ports to communicate with the device. If the firewall blocks these ports, the accessories might not function as expected. The product-specific rules will overrule the user-configured

rules. Note that these rules are not configurable by the user and cannot be seen through the device's web interface. You can only find these rules in the server report .

Limitations

The firewall doesn't currently support connection tracking. In the example NTP, the NTP client sends requests to servers on UDP port 123. The server then responds from source port 123 to a high ephemeral port on the client. Since the firewall doesn't support connection tracking or stateful tracking, it doesn't monitor the initial outgoing traffic from the device to the NTP server. As a result, the firewall drops the NTP server's response unless you explicitly allow the NTP server's IP address.

Signed OS

About signed OS

Signed OS is a feature that ensures that only verified and trusted device software is uploaded to and used in Axis devices. In this section you can read about technical details that will ensure that the correct update and downgrade paths are selected. For general information about the signed OS feature, see the *Cybersecurity features in Axis products* white paper.

Axis started to sign its device software as of AXIS OS 8.30.1. Until the release of AXIS OS 9.20.1, devices would still accept both unsigned and signed software, for backwards compatibility. As of AXIS OS 9.20.1, signed OS was fully activated and Axis devices would then only accept software signed by Axis. This means it is not possible to perform a rollback or downgrade to a version below AXIS OS 8.30.1, which is the version in which Axis initially started to sign device software.

- **Question:** Can I downgrade my device from AXIS OS 9.10.1 to AXIS OS 8.40 LTS? **Answer:** Yes, this will work.
- **Question:** My VMS requires me to maintain backwards compatibility. Can I downgrade my device from AXIS OS 9.20.1 to AXIS OS 8.20.1 or lower? **Answer:** This downgrade will fail. The device will reject the unsigned version and will continue to run AXIS 9.20.1. You can however, do this downgrade in two steps, using AXIS OS 8.30.1 as a gateway. First downgrade from 9.20.1 to 8.30.1, and then from 8.30.1 to 8.20.1 or lower. Note that Axis does not generally encourage downgrades to older, unsupported AXIS OS versions.

Signed OS key lifecycle

Signature key pairs are generated on a dedicated offline key generation device. After generation, the private key is encrypted with two different asymmetric keys. One for secure import into a cluster of Thales Luna HSMs, and another for long-term offline backup outside the HSM at two separate secure locations.

The private key is provisioned into the HSM using an administrative role of the HSM that requires M of N authentication. At no point is the private key exposed in plain text during the import.

When Axis signs an AXIS OS image with said key, the signing request is processed by an application server that guards access to the HSM and which audits any use of the signing key. The application server can only be accessed from inside the Axis network and requires a signing-authorized account.

Revocation of an AXIS OS signing key entails issuing a bootloader update for all Axis devices using that key. As part of the update, the device's anti-rollback mechanism is updated to block older bootloaders that still accept the revoked AXIS OS signing keys. Secure destruction of the signing keys requires physical destruction of the master backup key that exists in two copies.

Troubleshooting

How can you identify that an upgrade failed because of an unsigned OS? If a user tries to upload an unsigned version, one of the following messages is displayed in the device's log files:

```
[ERR] fwmgr: Unknown firmware domain
[ERR] fwmgr: Image has no signature.
[ERR] fwmgr: No custom firmware certificate for camera group 'xxx' .
```

Signed ACAP applications

Axis takes proactive steps to implement ACAP application signing, aligning with industry best practices for secure software delivery. Additionally, it anticipates potential future enforcement through legislation, including the E.U. Cybersecurity Resilience Act, E.U. Radio Equipment Directive, and Executive Order 14028. Therefore, starting from AXIS OS 12.0 customers will only be able to install signed ACAP applications on Axis devices by default. Installation of unsigned ACAP applications will be possible only and only if a device is actively configured to accept unsigned ACAP applications. Configuring a device to accept unsigned ACAP applications will lower the device's security, but it can be useful during development or if you develop and run your own ACAP application. Running unsigned ACAP applications is not recommended.

What are the benefits for end customers?

A signed ACAP indicates that Axis has a TIP-relationship with the partner who has developed the ACAP. By inspecting the ACAP, the end customer can see who the TIP-partner is. The partner name under the vendor tag is equivalent to the company name in Axis CRM records. Therefore, the signing process ensures the validation of the partner, traceability and accountability. This process enables the end customers to validate their ACAP applications.

What are the benefits in terms of cybersecurity?

The signing process ensures that the ACAP will only require Axis-approved access-rights and privileges when running on the Axis device. An ACAP that went through the signing process, will only run with limited, approved access rights on an Axis device. Furthermore, by signing the ACAP application, it is ensured that the content of the application is not tampered with from release to installation, hence it enables the secure software delivery.

Is Axis vetting the software quality, secure development practices or performing QA-testing on Signed ACAPs?

No, Axis does not take any responsibility for whether a TIP-partner ACAP that went through the signing process is QA-tested, or has been developed according to industry best-practices secure development processes. This responsibility lies entirely on the TIP-partner that is providing an ACAP application.

Who do we allow to have their ACAPs signed?

Only TIP partners are allowed to do so. This indicates that Axis has conducted a vetting process for its partners.

Will Axis provide ACAP signing capabilities for non-TIP partners as well?

For non-TIP partners that require signing capabilities, we will also perform a vetting process. Please use this [link](#) to request access.

How does the ACAP signing technically work?

During the ACAP application signing process, a cryptographic signature is added at the end of the application package. The signature is verified by the Axis device when installing the ACAP application as part of the overall secure software delivery architecture.

When will Axis enforce mandatory ACAP signing?

In alignment with secure software delivery practices, Axis will accept only and only Signed ACAP applications without the possibility to disable this security control on its devices. Axis aims to achieve this in the next generation of the AXIS OS operating system, which is planned to be *AXIS OS 13.0* in H2 2026 and onwards.

Cryptographic support

A secure keystore is generally referred to as a dedicated hardware crypto computing module that offers protection of cryptographic operations, certificates, and keys. Axis products that support *AXIS Edge Vault* feature up to two secure keystores with corresponding security certification, either Common Criteria CC EAL6+ and/or CC EAL4+ / FIPS 140-2 level 2 certification according to the Federal Information Processing Standard, which could be a regulatory requirement for certain customers and use cases. Both secure keystores offer the same level of protection in terms of cryptographic operations, certificates, and keys. Additionally, some system-on-chips include a so-called Trusted Execution Environment (TEE). Depending on the installation requirements, the TEE might be a good choice due to lower latency for cryptographic operations.

The table below provides an overview of the cryptographic features of keystores found in Axis devices.

Cryptographic feature	Trusted Platform Module 2.0 (CC EAL4+, FIPS 140-2 level 2)	Secure element (CC EAL6+, FIPS 140-3 level 3)	Trusted Execution Environment (SoC TEE)	Software ⁽¹⁾
Dedicated hardware protection of cryptographic operations, certificates and keys	✓	✓	✓	
Strongest security	✓	✓		
Fastest performance			✓	✓
Recommended for long-lived keys/certificate	✓	✓		
Recommended for short-lived keys/certificates			✓	✓
X.509 certificates in format .PEM, .DER, .CER and .CRT with PKCS#1 formatted private keys	✓	✓	✓	✓
PKCS#12 certificate/private key container in .p12 or .pfx format ⁽²⁾	✓	✓	✓	✓
RSA-cryptographic support	✓	✓	✓	✓
ECC-cryptographic support	✓ ⁽³⁾	✓ ⁽⁴⁾	✓ ⁽⁴⁾	✓ ⁽⁴⁾
Hash algorithms SHA-224/256/384/512	SHA-224/256	SHA-224/256/384/512	SHA-224/256/384/512	SHA-224/256/384/512
Max RSA-crypto private key size uploadable	2048	4096 ⁽⁵⁾	4096	4096
Max ECC-crypto private key size uploadable	ECC NIST P-256	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521

RSA-crypto private key size for self-signed certificate or certificate signing request ⁽⁶⁾	2048	4096	4096	4096
ECC-crypto private key size for self-signed certificate or certificate signing request ⁽⁷⁾	ECC NIST P-256	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521	ECC NIST P-256, ECC NIST P-384, ECC NIST P-521

1. Legacy for products without any hardware protected secure keystore.
2. Support from AXIS OS 5.50 and higher, Max size of .PFX and .P12 certificate/private key container are limited to 102400 bytes except for devices running AXIS OS 9.20 and lower where only a maximum file size of 10240 bytes is supported.
3. The support for ECC was added in AXIS OS 10.10 excluding the following products which need to receive an software update manually: HWID 79C: AXIS Q3527-LVE, HWID 7DA: AXIS Q6074, HWID 7D9: AXIS Q6074-E, HWID 7B1: AXIS Q6075, HWID 7B0: AXIS Q6075-E, HWID 7B2: AXIS Q6075-C, HWID 7B3: AXIS Q6075-S, HWID 7FA: AXIS Q6075-SE and HWID 7C7: AXIS Q9216-SLV.
4. ECC cryptography support for Axis devices without TPM module has been added from AXIS OS 10.1 and higher.
5. RSA 3072 key length is not supported.
6. Max key bit size of private key generated by the Axis device when creating a self-signed certificate (SSC) or issuing a certificate signing request (CSR). During the very first boot, the Axis device will generate a self-signed certificate automatically, which prior to AXIS OS 10.1 had a private key bit size of 1536-bit. Starting with AXIS OS 10.1 and higher, the size is 2048-bit.
7. Support from AXIS OS 11.6 or higher.

FIPS mode

The Federal Information Processing Standard (FIPS) Publication 140-2 is a U.S. government standard that defines security requirements for cryptographic modules in information technology products.

Starting with AXIS OS 12.4, you can select FIPS mode as a Crypto policy option, enabling the use of an OpenSSL-based certified cryptographic module (*Axis Cryptographic Module, #4621*). The FIPS mode ensures all cryptographic operations comply with FIPS 140-2 Level 1 standards. These operations encompass key generation, key exchange, digital signature authentication, encryption, and decryption.

Benefits

- Sets system-wide security to level 2
 - Older protocols like SSLv3, TLS 1.0, and TLS 1.1 are disallowed. Only TLS 1.2 and TLS 1.3 can be used.
 - RSA keys must be at least 2048 bits, and ECC keys must be at least 256 bits.
- AES with key lengths 128, 192, and 256 bits are allowed. The mode is limited to GCM.
- Enables strong ciphers that are allowed and needed by AXIS OS and the applications. For example, ciphers from the CHACHA20-POLY1305 family are removed as they are not FIPS-approved.
- SHA-1 is not allowed for signature generation.
- MD5 for digest authentication is not allowed.

Crypto policy for HTTPS server and 802.1x authentication

The following applications in AXIS OS are FIPS 140 compliant when FIPS mode is selected.

Application		Settings applied with FIPS mode selected
HTTPS server	TLS 1.2 ciphers	ECDHE-ECDSA-AES128-GCM-SHA256
		ECDHE-RSA-AES128-GCM-SHA256
	TLS 1.3 ciphers	TLS_AES_128_GCM_SHA256
		TLS_AES_256_GCM_SHA384
Key Exchange	Prime256v1	
Authentication	Basic	
802.1x Wired connection	Authentication mode	EAP-TLS/ MACsec (Dynamic CAK) Configured ciphers: <ul style="list-style-type: none"> • ECDHE-ECDSA-AES256-GCM-SHA384 • ECDHE-ECDSA-AES128-GCM-SHA256 • ECDHE-RSA-AES128-GCM-SHA256 • ECDHE-RSA-AES256-GCM-SHA384 • TLS_EMPTY_RENEGOTIATION_INFO_SCSV (RFC 5746 requirement)

Considerations

- FIPS mode is not activated by default, so even if a device can be FIPS compliant, it does not run FIPS mode by default.
- FIPS mode only applies to the applications listed above. However, it does not strictly enforce it. For example, in FIPS mode, selecting and using non-FIPS-compliant services such as "IEEE 802.1x PEAP-MSCHAPv2" for 802.1x authentication is still possible.
- It is recommended to thoroughly test FIPS mode with 3rd party systems to ensure sufficient compatibility and connectivity.
- When FIPS mode is enabled, installing certificates via a PKCS#12 (.pfx) file is not accepted. Please install certificates via a separate .pem certificate file and key file.
- IEEE 802.1ae MACsec (Static CAK/ Pre-shared Key) mode is FIPS compliant.
- CV25 chipset products are not currently supported

Before activating FIPS mode, ensure that the TLS certificates used by applications meet the following requirements:

- RSA key sizes must be at least 2048 bits.

- ECC key sizes must be at least 256 bits (for example, NIST P-256, P-384, P-521).

To activate the FIPS mode, go to **System > Security > Cryptographic policy** and select **FIPS- Policy to comply with FIPS 140-2**. The device must be restarted for the changes to take effect.

Certificate management

Default device certificate

Axis devices contain a certificate to allow for encrypted HTTPS and other secure connections in order to provide the possibility to access the device securely and proceed with the initial configuration of the device. Depending on the hardware capabilities of the Axis product and which AXIS OS version it is running, different default configuration applies.

Self-Signed Certificate

Axis products with support for TPM module or Software keystore only generate a self-signed certificate during first-boot up. Axis devices come with a pre-installed self-signed certificate in order to provide the possibility to access the device via encrypted HTTPS connection and proceed with the initial setup of the device. Since the first-boot certificate is self-signed by the device, it is not suitable for providing authentication or authenticity against networks and applications. Therefore, Axis recommends removing the self-signed certificate from the device and replace it with a server certificate that is trusted in your organization when HTTPS connection is the preferred type of connection to the device.

Axis device ID (IEEE 802.1AR)

Axis devices equipped with *Axis Edge Vault* are provisioned with an Axis device ID. The Axis device ID conforms with the IEEE 802.1AR standard and can be verified using the Axis device ID certificate chain. You can download and find more information about the Axis device ID certificate chain in our *Public Key Infrastructure Repository*. Remember to verify the downloaded certificates against the provided sha256 hash before using the Axis device ID CA certificates as a trust anchor.

Using Axis device ID in production

The IEEE 802.1AR standard for secure device identity is part of IEEE's efforts to improve security, particularly in network environments, by providing a way to uniquely identify devices. This standard enables the creation of device ID certificates, which serve as a means of authenticating network devices based on their distinct hardware characteristics. The Axis device ID complies with the IEEE 802.1AR standard.

Customers often ask whether to use the Axis device ID in production beyond the initial secure connection and onboarding. To help you make an informed decision, we've outlined the following benefits and drawbacks:

Benefits

- **Unique device identity:** Provides a secure, unique identifier for each Axis device that's tied to the device's serial number.
- **Device-based trust:** By binding a certificate to the hardware, the network inherently trusts the device rather than solely relying on other software-based identifiers.
- **Hard to spoof:** The Axis device identity is tied to the device's hardware keystore, which makes it highly resistant to tampering.
- **Out-of-box:** The Axis device ID certificate is created and signed by Axis during the manufacturing process.
- **Zero-trust-capable:** The Axis device ID certificate is pre-configured for HTTPS, IEEE 802.1X network authentication, and IEEE 802.1AE MACsec network encryption for secure device onboarding and zero-trust networking in the factory defaulted state.
- **Standardization:** The Axis device ID is an IDevID (Initial Device Identifier), as standardized in IEEE 802.1AR, which is widely used for device authentication.

Drawbacks

- **Long-term validity:** The Axis device ID certificate remains valid until the year 9999. The IEEE 802.1AR standard does not define how device ID certificate rotation should be handled.

- **Key usage:** The primary purpose of the Axis device ID certificate is to authenticate the device's identity. As there are no specific key usage restrictions defined in the certificate extension, it can be utilized for both client and server certificates interchangeably.
- **Not changeable:** The Axis device ID comes in certain cryptographies such as ECC-P256 and RSA-4096, which cannot be changed. Customers must accept these properties if they choose to use the Axis device ID in production.
- **Decommissioning:** The Axis device ID certificate remains after factory default, while other certificates provisioned by the customer are removed.
- **Issuance authority:** The Axis device ID is issued by *Axis Communications*, meaning that customers need to explicitly trust Axis Communications' Public Key Infrastructure (PKI).
- **Certificate revocation:** Currently, Axis doesn't maintain a publicly accessible Certification Revocation List (CRL).

The Axis device ID certificate is extremely helpful when your primary concern is device-level authentication in a trusted network environment. One of its key benefits is facilitating secure initial device onboarding. Following successful initial authentication, we strongly advise uploading customer-specific, production-grade certificates to the device to support IEEE 802.1X, HTTPS, and other applications, thereby enhancing overall security and compliance.

CA certificates

CA certificates are certificates used by the Axis device to validate/verify the authenticity of other servers in the network. This means that CA certificates that are going to be uploaded in the CA certificate section of the Axis device need to fulfill one of the following:

- X509v3 CA certificate with **basicConstraints** extension CA:TRUE*
- X509 v1 self-signed certificate
- The **keyUsage** attribute extension with bit **keyCertSign** set but without **basicConstraints**
- Netscape Certificate Type extension saying that it is CA certificate

*The CA:TRUE or CA:FALSE attribute also decides whether the CA certificate is allowed to sign other certificates.

Note

Installing a concatenate certificate file that contains the whole certificate chain is not currently supported. You should install the intermediate CA certificate and CA certificate separately.

Certificate signing request (CSR)


A certificate signing request (CSR) can be created from an already existing certificate in the Axis device. The certificate request in PEM format can be sent to a certificate authority (CA) for signing/verifying. After the signed certificate is returned from the CA, it needs to be uploaded on the Axis device and be compared/verified with the original certificate request. If all information is correct, the certificate upload will end successfully. However, if system changes occur between the time the CSR was issued and the certificate was uploaded, the process can be interrupted. Possible reasons why a certificate upload would fail are:

- The Axis device has been factory defaulted in the meantime
- The certificate used for the signing request has been removed or changed in the Axis device

Certificate browser warnings

Why do Axis products include self-signed certificates or IEEE 802.1AR identity certificates from factory?


IT-security and industry best practice is to provide secure, encrypted HTTPS communication in IoT devices from factory. Providing Axis devices with these certificates and having HTTPS enabled from the factory ensures that secure and encrypted communication can be used from the very first moment of communication, e.g. for HTTPS access.

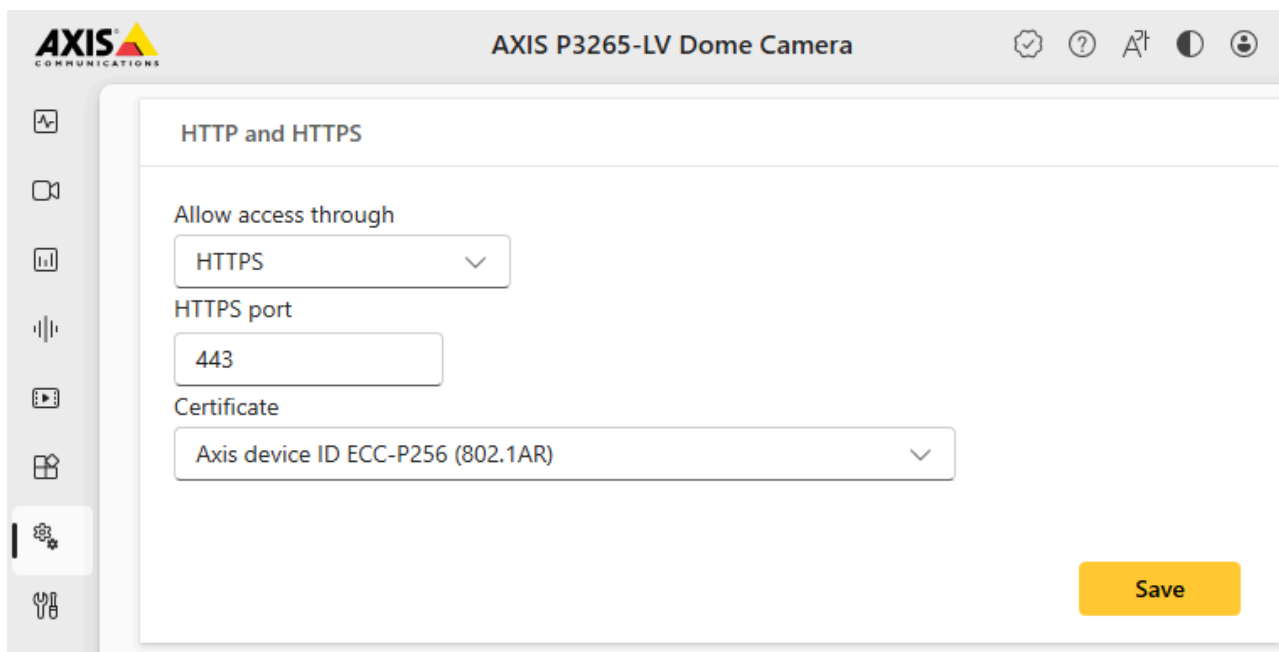

Why do modern browsers flag self-signed certificates and IEEE 802.1AR identity certificates as “Not Secure”?

Modern browsers verify HTTPS connections using certificates signed by trusted Certificate Authorities (CAs), as well as performing additional checks, such as on the expiry date, and a verification of the Common Name in the certificate to see if it matches the actual URL address.

Unfortunately, web browsers cannot verify a self-signed certificate generated during the first boot up by the Axis device, and the same applies to the IEEE 802.1AR Secure Device Identity certificate (Axis Device ID) loaded into the Axis device during production. This is why web browsers show warnings like “Your connection is not private.”

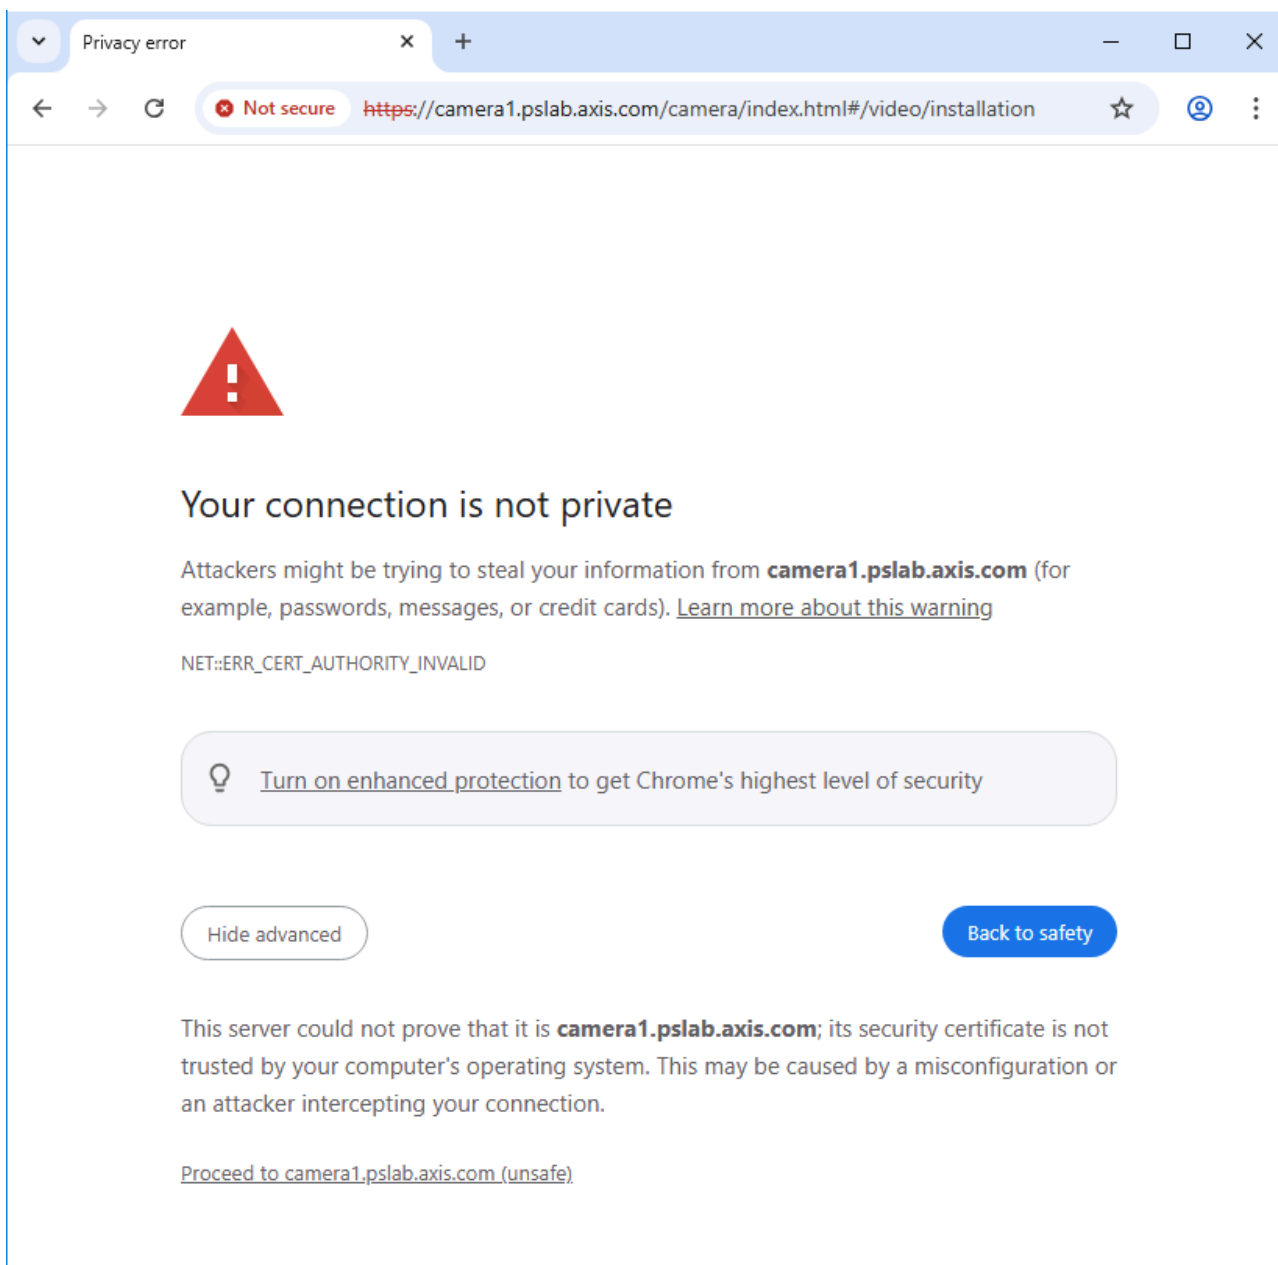

It is important to understand that the network connection is still encrypted and secure. The browser's warning simply implies that the certificate could not be completely verified, which is why most browsers offer an additional manual step, asking the user if they wish to continue with the network connection.

Why are these certificates not trusted?

A trusted HTTPS certificate must be issued by a recognized CA. Self-signed certificates are created by the device itself, meaning the browser cannot confirm the device's authenticity. Axis uses self-signed certificates solely for initial secure access when no PKI is available.

Most Axis products nowadays instead provide an IEEE 802.1AR-conformant secure device identity (Axis Device ID), which offers a verifiable certificate chain. The browser, however, will still show a warning, as other certificate verification steps cannot be completed successfully. For use in a production network, pre-loaded certificates should be replaced with a customer-selected, trusted CA-signed certificate.

What is the technical reason?

Even with a valid CA-signed certificate such as the Axis device ID, browsers will still reject it if the hostname/IP address used to access the device (browser URL) doesn't match the certificate's Common Name identity fields. Modern browsers require matching values in the Subject Alternative Name (SAN), not just the Common Name (CN). The reason behind this is that TLS certificates in the context of browser verification were designed to work

specifically for users accessing websites – IoT devices were never taken into consideration and no standardized solution for how browsers could more accurately verify IoT device certificates was planned.

For example, accessing an Axis device using: <https://camera01.axis.com> requires the certificate to include:

- SAN: camera01.axis.com (and any IP/DNS entries used)
- CN: camera01.axis.com

If the certificate contains a different name (e.g. axis-device.local) or if SAN entries are missing, the browser will show a warning for "Common name invalid". This is common for IoT devices because they often use a dynamic IP address, have multiple hostnames, or they might be accessed via an IP address that requires IP address SAN entries.

An IEEE 802.1AR-conformant secure device identity certificate that most Axis products use nowadays looks like this:

Certificate Viewer: axis-b8a44f28254e-eccp256-1

×

General
Details

Issued To

Common Name (CN)	axis-b8a44f28254e-eccp256-1
Organization (O)	Axis Communications AB
Organizational Unit (OU)	<Not Part Of Certificate>

Issued By

Common Name (CN)	Axis device ID Intermediate CA ECC 2
Organization (O)	Axis Communications AB
Organizational Unit (OU)	<Not Part Of Certificate>

Validity Period

Issued On	Monday, February 15, 2021 at 12:43:28 PM
Expires On	Saturday, January 1, 10000 at 12:59:59 AM

SHA-256 Fingerprints

Certificate	7d43e2fca482e86d6ec0a341e4bc202e808a257555394508876ac9610978811a
Public Key	1244d0412b44544812cc4e0a55c17cffffaad124b5f0a0a53082c6311750c5d65

Note the Common Name "axis-b8a44f281db4-eccp256-1". If the Axis device is configured to use that certificate for HTTPS connections and the device has the IP-address 192.168.0.101, this results in a mismatch in the used URL vs the Common Name (CN) in the certificate, which would result in the browser showing a warning message.

Apart from the Common Name (CN) verification, other certificate attributes are also checked and verified, which could also result in a browser warning when these are not correctly configured. To be considered valid, an IoT device certificate should have the following attributes/information correctly included in their certificate:

- A trusted certificate chain that can be verified by a CA


- A SAN entry matching the hostname or IP address used
- The validity period (certificate start and expiry date)
- Correct key usage (including Server Authentication)


Self-signed certificates typically fail the chain-of-trust check and often the hostname match, which leads to browser warnings.

AXIS IP Utility pre-installs the Axis Device ID certificate chain and allows users to access the device's web interface without additional browser warnings.

What is a good example of a customer-owned PKI?

The configuration below illustrates an Axis device using a sample customer-owned PKI certificate, along with the corresponding configuration, including a DNS-name configuration that passes all TLS/certificate verifications that a typical browser would perform. Important to note is that the IP address of the Axis device maps correctly to a configured DNS name used by the browser to access the device. Furthermore, this DNS name matches the Common Name (CN) and Subject Alternative Name (SAN) in the actual certificate presented by the Axis device.

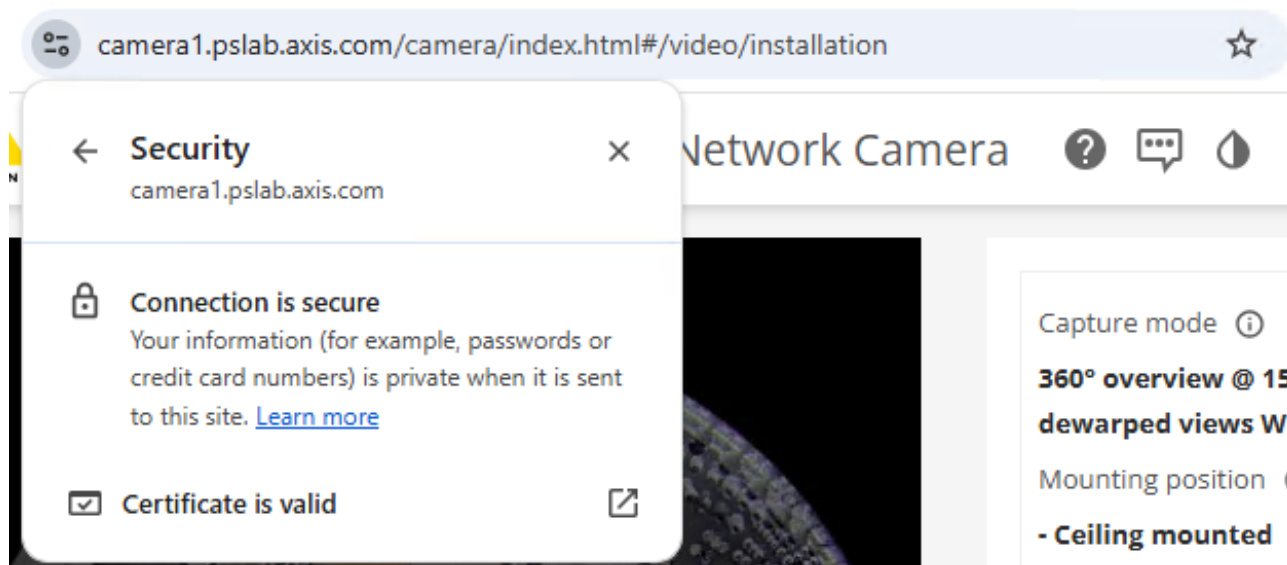

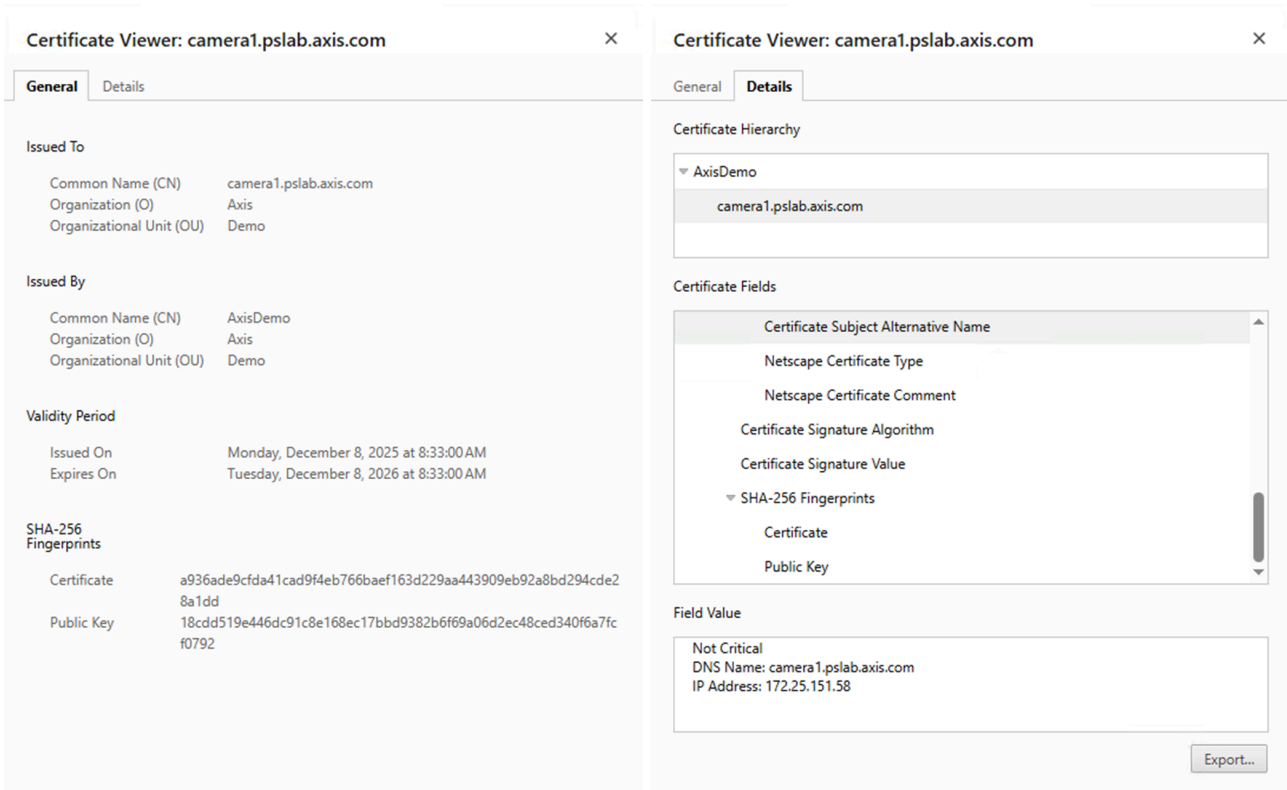

Default HTTP(S) headers

AXIS OS by default has the following most common security-related HTTP(S) headers enabled to increase overall minimum cybersecurity in factory defaulted state. The custom HTTP header VAPIX API can be used to configure further HTTP(S) headers. For more information, see the *Vapix Library*.

AXIS OS 10.1 and higher

With AXIS OS 10.1 or higher, the below default HTTP(S) headers have been introduced to increase overall minimum cybersecurity level:

Header	Values	Description
X-Frame-Options	SAMEORIGIN	This specifies that the page can only be embedded in a frame on the same domain as the page itself.
X-Content-Type-Options	nosniff	This value instructs the browser to not interpret files with an unknown MIME type as a different content type. For example, if a server sends an HTML file with a .jpg extension, the browser will not treat it as an image but instead will display it as text.
X-XSS-Protection	1; mode=block	This value instructs the browser to enable its built-in XSS protection feature.

AXIS OS 11.5 – 11.11

With AXIS OS 11.5 – 11.11, a Content-Security-Policy (CSP) HTTP(S) response header is added in addition to specify a policy that tells the browser which sources of content can be trusted for the Axis device. This header can be used to protect against various types of attacks, including cross-site scripting (XSS) and data injection attacks.

When a browser receives a web page, it checks the CSP header to determine which sources of content are allowed to be loaded for that page. If any content is attempted to be loaded from a source that is not on the list, the browser will block it.

Directive	Values	Description
default-src	'self'	This specifies the default sources from which resources are allowed to be loaded if not explicitly specified.
frame-ancestors	'self'	This specifies the sources from which frames or iframes can be loaded on the page.
connect-src	'self' https://*.google-analytics.com https://*.analytics.google.com https://*.googletagmanager.com https://*.axis.com mediastream: blob:	This specifies the sources to which the page can make network requests.
script-src	'self' 'unsafe-inline' 'unsafe-eval' https://www.googletagmanager.com https://*.google-analytics.com https://ssl.google-analytics.com https://*.axis.com	This specifies the sources from which JavaScript code can be loaded and executed on the page.
style-src	'self' 'unsafe-inline'	This specifies the sources from which styles can be loaded and applied on the page.
img-src	'self' https://*.analytics.google.com https://www.googletagmanager.com https://*.axis.com data: blob:	This directive guards the loading of images (for example using the HTML tag).

media-src	'self' mediastream: blob:	This specifies the sources from which audio and video can be loaded on the page
object-src	'none'	This specifies valid sources for the <object>, <embed>, and <applet> elements.

In addition to the CSP, a Referrer-Policy header is added. HTTP requests may include the optional Referrer header, which indicates the origin or web page URL the request was made from. The Referrer-Policy header defines what data is made available in the Referrer header.

Header	Values	Description
Referrer-Policy	strict-origin-when-cross-origin	With this policy, only the origin is sent i

AXIS OS 12.0 and higher

With AXIS OS 12.0 and higher, the default Content-Security-Policy (CSP) HTTP(S) response header has been updated.

Directive	Values	Description
default-src	'self'	This specifies the default sources from which resources are allowed to be loaded if not explicitly specified.
frame-ancestors	'self'	This specifies the sources from which frames or iframes can be loaded on the page.
connect-src	'self' https://*.google-analytics.com https://*.analytics.google.com https://*.googletagmanager.com https://*.axis.com mediastream: blob:	This specifies the sources to which the page can make network requests.
script-src	'self' https://www.googletagmanager.com https://*.google-analytics.com https://ssl.google-analytics.com https://*.axis.com	This specifies the sources from which JavaScript code can be loaded and executed on the page.

style-src	'self' 'unsafe-inline'	This specifies the sources from which styles can be loaded and applied on the page.
img-src	'self' https://*.analytics.google.com https://www.googletagmanager.com https://*.axis.com data: blob:	This directive guards the loading of images (for example using the HTML tag).
media-src	'self' mediastream: blob:	This specifies the sources from which audio and video can be loaded on the page
object-src	'none'	This specifies valid sources for the <object>, <embed>, and <applet> elements.

Decommissioning

When decommissioning an Axis device, a factory default should be performed. After the factory default, most data is erased by overwriting/sanitization. For more information, go to *AXIS OS Hardening Guide*.

Software Composition

Open source library support

AXIS OS-based network products use a variety of open source libraries. Therefore, it is critical that changes to these libraries are reflected in AXIS OS. Libraries are updated in the AXIS OS Active and LTS tracks in conjunction with the release. If there are no software restrictions, they are also updated in the PSS track.

If an open source library becomes end-of-life (EOL) by the upstream community, Axis aims to replace the library in a timely manner or provide support in a different way depending on its use within the AXIS OS-based network product. An example is listed below.

OpenSSL is used for cryptographic operations. The currently used OpenSSL 1.1.1 version is a long-term support (LTS) release which has reached its *EOL during September 2023* as announced by the OpenSSL foundation.

- From AXIS OS 11.6.89 and onwards, the newest OpenSSL 3.0 library (LTS) is supported in addition to the current OpenSSL 1.1.1, which will be deprecated but still usable.
- Axis plans to remove OpenSSL 1.1.1 support in AXIS OS 12 after LTS 2024.
- To support AXIS OS LTS tracks, Axis has a support contract agreement with the OpenSSL foundation for continued patching of OpenSSL 1.1.1.

ACAP related information

Starting from ACAP SDK version 4.14, we're integrating the latest openSSL Version 3 into the Native ACAP SDK. Please read more in the *release notes* and explore API examples on *GitHub* for details.

What needs to be done:

If any Axis-owned ACAP relies on the OpenSSL 1.1.1 runtime dependency provided by the platform, it requires refactoring and rebuilding with OpenSSL 3 libraries. We recommend utilizing the latest ACAP SDK (4.14) to ensure compatibility with the correct library version.

Software Bill of Materials

A Software Bill of Materials (SBOM) is an inventory of all components included in the software. It has become an increasingly important and common part of software development lifecycle and processes. It allows IT Operations and Security staff to determine which third-party or open-source software is packaged with your software. Having an SBOM is important when it comes to securing your IT systems and protecting user data.

Why do Axis publish an SBOM?

Axis works actively with the principles of openness and building trust through transparency, the SBOM is a valued addition to these principles. It provides our customers with the information necessary to know whether or not the products we have provided may be vulnerable to cyber attacks.

For which AXIS OS versions?

Axis will provide an SBOM for all AXIS OS releases on active track starting with release 11.2.

What is included?

The Axis SBOM contains information about Axis-Proprietary components and Opensource software used to assemble AXIS OS.

What is excluded and why?

Due to current licensing/legal limitations we cannot provide information about third-party proprietary software. Our aim is to cover all the third-party components as legally possible if third-party vendors agree. Furthermore, some components like the Linux Kernel needs to be enriched further for more granular sub-components.

Where can I find the SBOM?

The SBOM is located together with the AXIS OS version it is based on. AXIS OS can be found in the product support or at the [download page](#).

What format and why?

The Axis SBOM is produced in accordance with the CycloneDX SBOM specification. This format seems to be the most usable in other systems and strives to be a minimalist format easy to work with. Advantages of this format can be found [here](#).

What is the difference between a SBOM and the Third party software licenses document?

The Third party software licenses document is meant to list all legal agreements and licenses with third parties related to any intellectual property that allows us to use, market and incorporate this into our products.

What about SBOM for other AXIS software?

This is a start, and we are looking into how SBOM is applicable to other software from Axis.

Where can I find more information about SBOM in general?

The *National Telecommunications and Information Administration* provides more educational information about SBOM.

- [Framing Software Component Transparency; Establishing a Common Software Bill of Material \(SBOM\)](#)
- [Software Bill of Material FAQ](#)

How can I use the SBOM to analyze the software?

The Axis SBOM contains information about Axis-Proprietary and Opensource software used to assemble AXIS OS. The Axis SBOM can be used by third party vulnerability scanners to highlight known vulnerabilities in software packages. A vulnerability that applies to a certain module or feature in a software package needs to be

loaded and used by the Axis device. Vulnerabilities in modules that are not loaded are not relevant but may still be flagged by the vulnerability scanner or SBOM information. For more information on how to work with the result of a security scanner see: *AXIS OS Vulnerability Scanner Guide*.

Media streaming

Video streaming in Axis products

The purpose of this section is to encourage and enable partners, system integrators and end users to consider their individual setup when configuring general video streaming settings in Axis devices in order to ensure optimal performance and user experience.

General considerations

Axis video capable devices deliver a video stream according to the desired requirements of the system it is used in and according to the specifications of the Axis device itself. The following information provides a foundation and understanding of how video streaming in Axis devices works and what settings to consider.

About video streaming clients

The Axis device as such recognizes several types of clients that it encodes and distributes video streams to. The clients can be categorized as internal and external, and they are served with video streams as they are requested. See examples below for each category:

Internal clients

- Action rule for (S)FTP/HTTP(S) MJPEG image upload
- Action rule for (S)FTP/HTTP(S) video clip upload
- Action rule for recording videos to SD card and network share
- Continuous recording to SD card or network share
- (Analytics) ACAPs that request video stream or MJPEG images

External clients

- Viewing video in web interface
- Viewing video via secure remote access
- Live view and recording to AXIS Companion
- Live view and recording to AXIS Camera Station
- Live view and recording to 3rd party video management system

Unique encoded streams

The number of unique encoded streams tells us how many different video streams an Axis device is encoding. This information can be obtained in the server report of devices with version 5.70 or higher in the section **Snapshot of the current (caching) streams**. For devices with AXIS OS version 10.7 or higher, this information is available in the section **Snapshot of all running streams**. The number of unique encoded streams are affected by stream properties, as will be shown in the examples below. Note that the illustrations are taken from a graphical user interface to better illustrate the use case.

Example 1: In this example, the Axis device is encoding a total number of three unique encoded video streams. The video streams differ in one stream property - resolution - and since the resolution is different, the Axis device needs to encode each video stream separately.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1280x720	30	30	62	10	0
Stream 3: video/x-h264	800x600	30	30	62	10	0

Example 2: In this example, the Axis device is encoding a total number of two unique encoded video streams. The video streams differ in one stream property - frame rate (fps) - and since the frame rate is different, the Axis device needs to encode each video stream separately.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1920x1080	15	30	62	10	0

Conclusion: Axis devices need to encode video streams according to their stream properties. If stream properties, such as fps, compression, VideoKeyFrameInterval (GOP), etc. differ from one requested video stream to another, the Axis device is forced to encode separate video streams. This may have an impact on video streaming performance and generally it is recommended to optimize the setup towards the least amount of video streams possible.

Note: From AXIS OS 10.8 and onwards a single unique encoded video stream can be distributed to a maximum of eight physical network clients at the same time. If more physical network clients need to pull the same video stream, we suggest implementing multicast video streaming instead, or to have additional clients request another unique encoded video stream.


Distributed streams

The number of distributed video streams refers to the number of actual physical network clients in the network and the number of video streams that they are requesting. For example, it would be possible to video stream from AXIS Camera Station and from the web interface of the Axis device from the same physical network client.

This information can be obtained in the server report of devices with version 9.80 and higher in the section **Snapshots of the current outgoing RTP streams**. This section lists the number of distributed streams in relation to their destination IP address. The distributed stream is declared as a ratio of Number of video streams:Number of physical network clients.


Example 1: In this example, the number of distributed streams is 2:2 because the Axis device streams in total two video streams to two physical network clients.

ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:64322	172.25.201.201:50000	UDP	RTP	VIDEO	PLAYING	No	No
9	video/x-h264	172.25.201.154:62832	172.25.201.202:50002	UDP	RTP	VIDEO	PLAYING	No	No

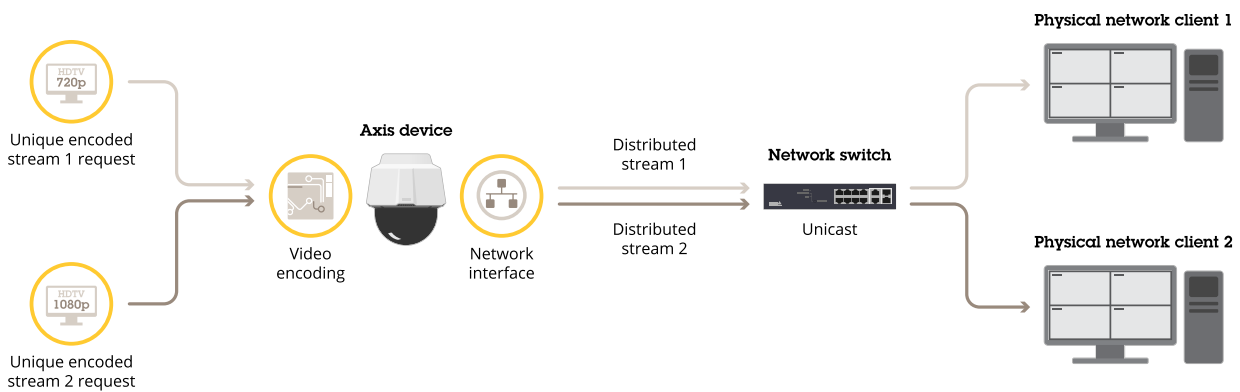

Example 2: In this example, the number of distributed streams is 3:2 because the Axis device streams in total three video streams to two physical network clients. Observe that the Physical network client 1 is requesting the Unique encoded stream 1 twice.

ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:64322	172.25.201.201:50000	UDP	RTP	VIDEO	PLAYING	No	No
9	video/x-h264	172.25.201.154:62832	172.25.201.202:50002	UDP	RTP	VIDEO	PLAYING	No	No
10	video/x-h264	172.25.201.154:54324	172.25.201.202:50004	UDP	RTP	VIDEO	PLAYING	No	No

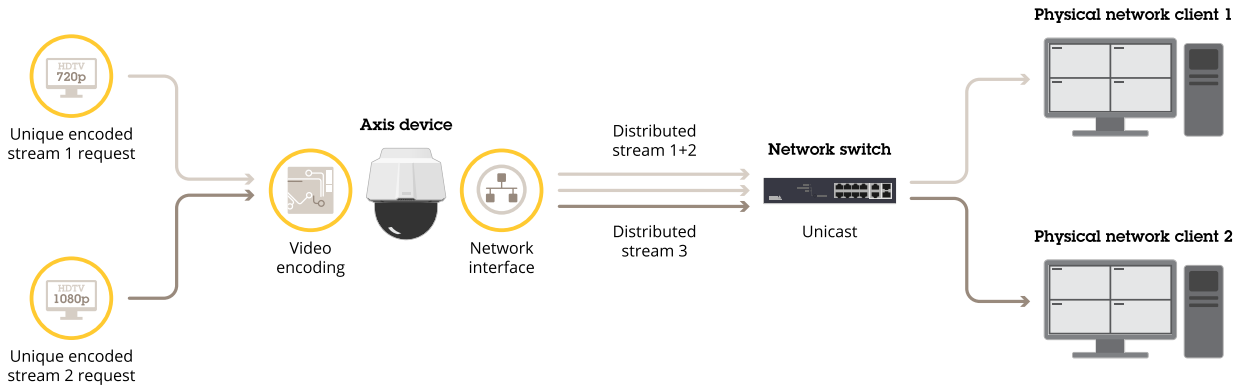

Conclusion: An Axis device can stream a single or many video streams to either the same or many physical network clients. A physical network client is defined by the number of video streams it is requesting and its destination IP address in the network.

Note: From AXIS OS 10.8 and onwards a single unique encoded video stream can be distributed to a maximum of eight physical network clients at the same time. If more physical network clients need to pull the same video stream, we suggest implementing multicast video streaming instead, or to have additional clients request another unique encoded video stream.


Unique encoded streams and distributed streams

With the information above, we can now explain the relation between the number of unique encoded streams in relation to the number of distributed streams to physical network clients.

Example 1: In this example, two physical network clients are requesting a unique encoded stream each. This results in a distributed stream to each physical network client.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1920x1080	15	30	62	10	0


ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:64322	172.25.201.201:50000	UDP	RTP	VIDEO	PLAYING	No	No
9	video/x-h264	172.25.201.154:62832	172.25.201.202:50002	UDP	RTP	VIDEO	PLAYING	No	No

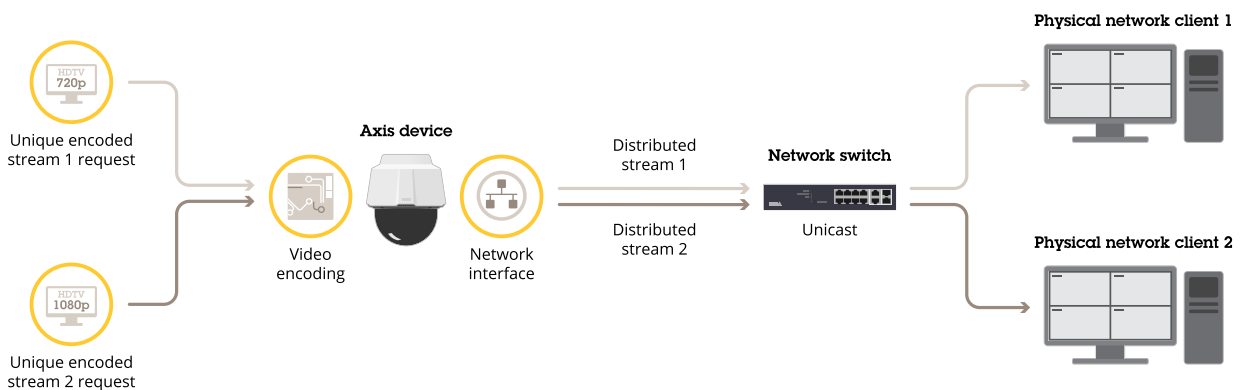

Example 2: In this example, the Axis device is encoding two unique streams and distributes them to three physical network clients.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1920x1080	15	30	62	10	0


ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:64322	172.25.201.201:50000	UDP	RTP	VIDEO	PLAYING	No	No
9	video/x-h264	172.25.201.154:62832	172.25.201.202:50002	UDP	RTP	VIDEO	PLAYING	No	No
10	video/x-h264	172.25.201.154:54324	172.25.201.203:50004	UDP	RTP	VIDEO	PLAYING	No	No

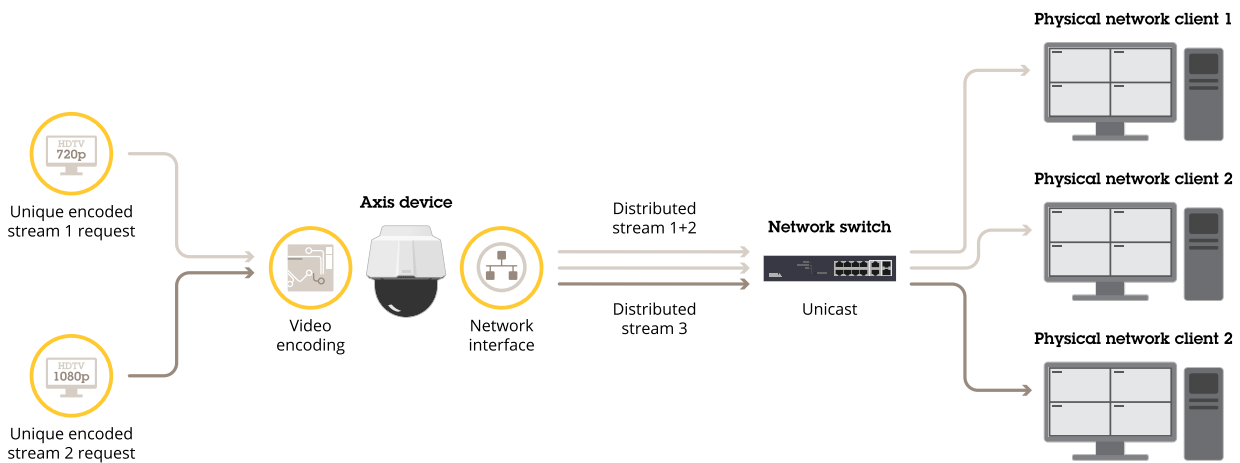

Example 3: In this example, the Axis device is encoding a single unique stream and distributes it to two physical network clients via multicast. Observe that this setup would result in a single distributed stream only as the two physical network clients will receive the stream from the multicast address. So, multicast has the advantage of consuming less network bandwidth compared to example 4 below.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0


ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:0	239.208.128.235:50000	UDP	RTP	VIDEO	PLAYING	No	Yes

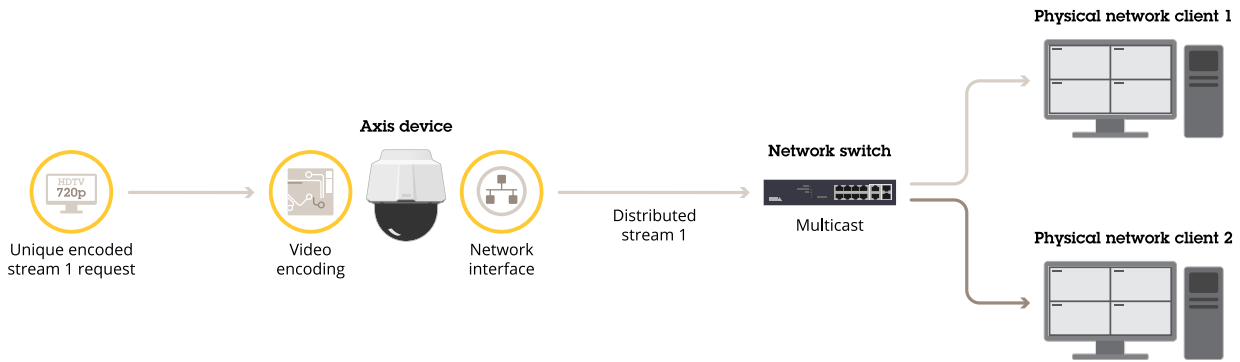

Example 4: In this example, the Axis device is encoding a single unique stream and distributes it to two physical network clients via unicast instead. Compared to example 3, this setup would require the Axis device to consume more network bandwidth as the unique stream has to be distributed twice.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0

ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
8	video/x-h264	172.25.201.154:64322	172.25.201.201:50000	UDP	RTP	VIDEO	PLAYING	No	No
9	video/x-h264	172.25.201.154:62832	172.25.201.202:50002	UDP	RTP	VIDEO	PLAYING	No	No

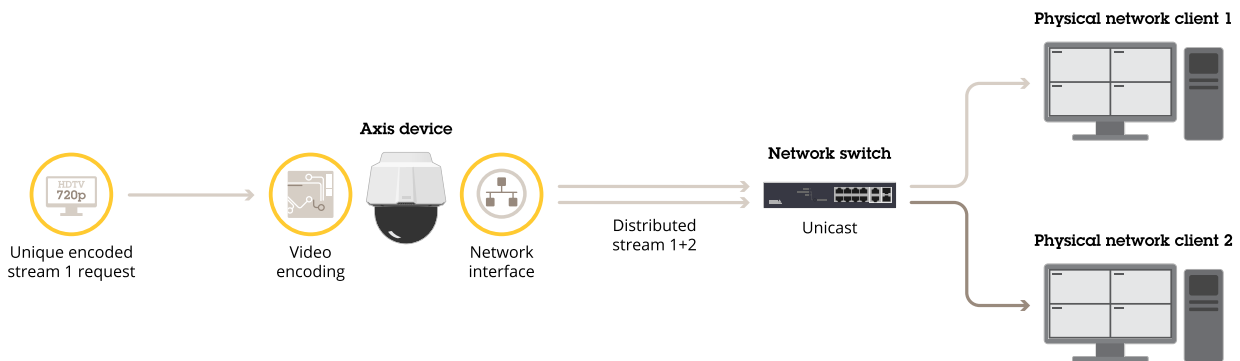

Maximum number of clients

Another important setting is the maximum number of clients (=viewers) that can receive a video stream. The number is set to 10 or 20 in all Axis devices and is depending on the configuration and performance capabilities of the device.

This means that either the Axis device is delivering a single video stream to 10 or 20 different physical clients in the network, or the Axis device is delivering 10 or 20 different video streams to one client in the network. The number of receiving video clients (physical and software instances) is the main limit. This configuration can be obtained by reading out the following VAPIX parameter: <https://ip-address/axis-cgi/param.cgi?action=list&group=Image.MaxViewers>

In practice, the maximum number should never be reached at any point. If an increasing number of clients need to access the video stream, it is recommended to make use of e.g. multicast.

Video, audio and metadata

In *Maximum number of clients, on page 51*, we learned that there is a limit to how many video streams a device can deliver as a maximum, and we explained this with the number of video streams. In addition to video streams, Axis devices can also deliver audio and metadata streams. While the purpose of video and audio streams is self-explanatory, the purpose of metadata might not be. With a metadata stream, an application or VMS can listen to the Axis device's event stream and both react on it and create its own events and actions in return.

Below is an example of an Axis device that is currently streaming one of each stream type to a single physical network client. Observe which stream type is streamed under **Media**.


ID	Mime	Source	Destination	Transport	Stream	Media	State	Encrypted	Multicast
24	video/x-h264	172.25.201.190:0	172.25.201.50:64959	TCP	RTP	VIDEO	PLAYING	No	No
25	audio/mpeg	172.25.201.190:0	172.25.201.50:64959	TCP	RTP	AUDIO	PLAYING	No	No
26	application/x-onvif-metadata+xml	172.25.201.190:0	172.25.201.50:64959	TCP	RTP	METADATA	PLAYING	No	No

To summarize, the maximum number of clients is applied to video, audio and metadata streams separately, meaning that if the parameter **MaxViewers** is configured to 20, the Axis device can deliver 20 x video, 20 x audio and 20 x metadata streams in total.

Performance considerations and maximum bitrate

Performance considerations

While it's possible for an Axis device to encode multiple video streams simultaneously, this will at some point have an impact on the performance if "too many" unique video streams are encoded. In the example illustration below, you can observe that the Axis device can deliver five unique video streams in full frame rate of 30 fps. In case a sixth unique video stream needs to be encoded, the performance of the product will be exceeded, causing the Axis device to deliver all of the requested video streams equally in reduced frame rate. In case of exceeding the performance of the product, the Axis device will not prioritize any of the video streams to be delivered in full fps, instead it will distribute the performance bottleneck across all video streams.

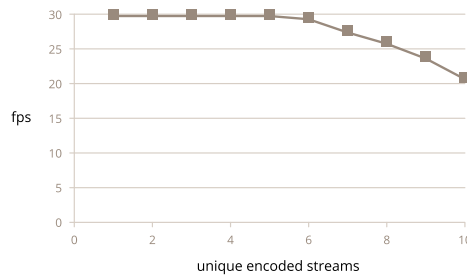

Note that the above example is an oversimplified illustration and the number of concurrent video streams an Axis device can deliver in full frame rate is heavily dependent on a lot of factors, such as requested frame rate, resolution, compression, bitrate and many more. It's recommended to test the device against the desired behavior in an environment that is exact, or close to, the environment the device is installed in.

Maximum video stream bitrate

A typical H.264 video stream in 1080p and 30 fps will have a bitrate of approximately 1 Mbit/s to 10 Mbit/s depending on scene, lighting conditions, movement and many other factors. In order to avoid network bottlenecks and congestion of the underlying network infrastructure which the Axis device is connected to, the maximum bitrate of a video stream is hard-capped and cannot exceed 50 Mbit/s per video stream in total.

Video source buffer configuration

In addition to the above information, the below listed Axis devices have additional video buffer configurations that must be considered. These devices have a limited number of statically configured so called video source buffers. The number of video source buffers depends on the device.

For single-sensor products the video source buffer can deliver at least one unique video stream, and for multi-sensor products the video source buffer can deliver at least four unique video streams. So, Axis devices containing video source buffer configurations are limited by the amount of unique video streams they can provide.

Products released before 2022

In Axis devices released before 2022, there are a maximum of four video source buffers.

- **Main source buffer:** The main source buffer is statically configured to the device's maximum default resolution and can only deliver a unique video stream in that specific resolution. This is indicated by the "fixed" term.
- **2nd source buffer:** The 2nd source buffer is a low resolution video buffer suitable for applications that rely on a lower sized resolution, such as (analytics) ACAP's or motion jpeg image. This buffer provides variations of possible resolutions.
- **3rd source buffer:** The 3rd source buffer is a high resolution video buffer providing either the device's maximum resolution, or a resolution close to it. In addition to that, HDMI capable devices allocate the 3rd source buffer HDMI video streaming when enabled. This buffer provides variations of possible resolutions.
- **4th source buffer:** The 4th source buffer is a high resolution buffer providing either the device's maximum resolution or a resolution close to it. This buffer provides variations of possible resolutions.

Products released in 2022 and onwards

In Axis devices released in 2022 and onwards, there are at least four video source buffers available for encoded video such as H26X and MJPEG. HDMI will not affect the available number of source buffers for encoded video. ACAPs (typically analytics applications) that fetches YUV will not affect the available number of source buffers for encoded video.

- **Fixed source buffer (Main):** The fixed source buffer is statically configured to the device's maximum default resolution and can only deliver a unique video stream in that specific resolution. This is indicated by the "fixed" term.
- **2nd source buffer:** The 2nd source buffer is a low resolution video buffer suitable for applications that rely on a lower sized resolution motion JPEG image. This buffer provides variations of possible resolutions.
- **Nth source buffer:** The Nth source buffer is a high resolution video buffer. This buffer provides variations of possible resolutions.

Example illustration

Axis device	Main source buffer	2nd source buffer	3rd source buffer	4th source buffer
AXIS Q6125-LE	Fixed 1920x1080	320x240 to 720x576	320x240 to 1920-x1080	320x240 to 1280-x960

In summary, this device can deliver 2 x unique video streams in max 1920x1080 resolution – one in max 1280x960 and one in 720x576. As described in *Unique encoded streams, on page 47*, the information in the server report can help identifying which of the video source buffers that are already used and saturated, and which are still available.

Example 1: In this example, the Axis device is delivering the following unique video streams which means the Main, 3rd and 4th video source buffers are in use. Requesting e.g. another unique video stream in 1920x1080 resolution with fps = 15 would fail because no video source buffer is available to deliver this request.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1280x720	30	30	62	10	0
Stream 3: video/x-h264	800x600	30	30	62	10	0

Example 2: In this example, the Axis device is delivering the following unique video streams which means the Main and 3rd video source buffer are in use. Requesting e.g. another unique video stream in 1920x1080 resolution with fps = 15 would fail because no video source buffer is available to deliver this request. Requesting a unique video stream buffer in 800x600 resolution can however be delivered by the 4th source buffer.

Type	Resolution	FPS	Compression	VideoKeyFrameInterval	VideoZStrength	Rotation
Stream 1: video/x-h264	1920x1080	30	30	62	10	0
Stream 2: video/x-h264	1920x1080	15	30	62	10	0

Axis device specifics

Below are all Axis devices and their video source buffer configurations listed:

Axis device	Main source buffer	2nd source buffer	3rd source buffer	4th source buffer
AXIS I8116-E	Fixed 2592x1944	320x240 to 640x480*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M1025 AXIS M3005-V AXIS M3025-VE	Fixed 1920x1080	320x240 to 720x576	320x240 to 1920-x1080	320x240 to 1280-x720
AXIS M1004-W AXIS M1014 AXIS M1034-W AXIS M3004-V AXIS M3024-LVE	Fixed 1280x800	320x240 to 720x576	320x240 to 1440-x900	320x240 to 1280-x720
AXIS M1013 AXIS M1033-W AXIS M1143-L	Fixed 800x600	320x240 to 720x576	320x240 to 800x600	320x240 to 800x600
AXIS M3046-V 2.4 mm	Fixed 2688x1520 Fixed 2560x1440	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x720
AXIS M1045-LW AXIS M1065-L/-LW AXIS M3045-V/-WV	Fixed 1920x1080	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x720
AXIS M3044-V/-WV	Fixed 1280x720	320x240 to 720x576	No HDMI 320x240 to 1280-x720	320x240 to 1280-x720
AXIS M2026-LE AXIS M2026-LE Mk II AXIS M3106-L/-LVE AXIS M3106-L/-LVE Mk II	Fixed 2688x1520	320x240 to 720x576	No HDMI 320x240 to 1920-x1080	320x240 to 1280-x960
AXIS M3046-V 1.8 mm	Fixed 2304x1296-(16:9) Fixed 2016x1512-(4:3)	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x960
AXIS M4206-V/-LV	Fixed 2048x1536	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x960
AXIS M4215-V/-LV	Fixed 1920x1080	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****

AXIS M4216-V/-LV	Fixed 2304x1728 (4:3)	320x240 to 640x480*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
	Fixed 2304x1296 (16:9)	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M3016 AXIS M3066-V AXIS M3206-LVE	Fixed 2304x1728 Fixed 2304x1296	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x960
AXIS M3015 AXIS M3065-V AXIS M3075-V AXIS M3205-LVE AXIS Q9216-SLVE	Fixed 1920x1080	320x240 to 720x576	HDMI: 1080p 320x240 to 1920-x1080	320x240 to 1280-x960
AXIS M3064-V	Fixed 1280x720	320x240 to 720x576	No HDMI 320x240 to 1280-x720	320x240 to 1280-x720
AXIS M3047-P*	Fixed 2048x2048	480x480 to 720x720	HDMI: 720p 480x480 to 2048-x2048	480x480 to 720x720
AXIS M3048-P*	Fixed 2880x2880	480x480 to 720x720	HDMI: 720p 480x480 to 2880-x2880	480x480 to 720x720
AXIS Q6125-LE	Fixed 1920x1080	320x240 to 720x576	320x240 to 1920-x1080	320x240 to 1280-x960
AXIS P1428-E** AXIS Q6128-E**	Fixed 3840x2160	240x135 to 640x480	480x270 to 1280-x720	240x135 to 1920-x1080
AXIS Q6010-E*** AXIS Q6100-E***	Fixed 2592x1944	320x240 to 1280-x960	320x240 to 1920-x1080	Not available
AXIS P3719-PLE****	Fixed 2560x1440	Fixed 640x360	640x360 to 1920-x1080	Fixed 2560x1440
AXIS M2035-LE	Fixed 1920x1080	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M2036-LE	Fixed 2304x1728 (4:3)	320x240 to 640x480*****	320x240 to 1600x1200*****	320x240 to 1600x1200*****
	Fixed 2688x1512 (16:9)	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M3085-V	Fixed 1920x1080	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M3086-V	Fixed 2688x1512 (16:9)	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
	Fixed 2304x1728 (4:3)	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M3088-V	Fixed 3840x2160	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M1055-L	Fixed 1920x1080	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****
AXIS M1075-L	Fixed 1920x1080	320x240 to 640x360*****	320x240 to 1920x1080*****	320x240 to 1920x1080*****

AXIS P3905-R Mk III	Fixed 1920x1080 Fixed 1280x720	320x240 to 720x576	320x240 to 1920x1080 320x240 to 1280x720	320x240 to 1280x960 320x240 to 1280x720
AXIS M3905-R	Fixed 1920x1080 Fixed 1280x720	320x240 to 720x576	320x240 to 1920x1080 320x240 to 1280x720	320x240 to 1280x960 320x240 to 1280x720

* The resolutions are only for fisheye overview and differ for other dewarped view modes. When pulling view area 1 & 2 with the same resolution on AXIS M3047-P and AXIS M3048-P, this will work either by using the highest resolution (1920x1440) or with lower resolutions like 640x480 and 480x360.

** Each source buffer can deliver two video streams in the corresponding resolution. Example: either 4x1080p in total with 2x1080p delivered from the main source buffer and 2x1080p delivered from the 4th source buffer, or 2x4K delivered from the main source buffer and 2x1080p delivered from the 4th source buffer.

*** The device is a multi-sensor device with 4 physical sensors, which translates to each buffer being able to deliver one video stream per physical sensor. Example: 1 x video stream in 2592x1944 resolution per sensor on AXIS Q6010-E makes it a total of 4 video streams on the main source buffer.

**** The 4th source buffer is allocated for quad-view only, so this means that the 4th source buffer cannot be utilized further even if quad-view is not used.

***** These video source buffers are capable of providing two unique video streams per buffer instead of just a single one.

Troubleshooting

You may refer to each device's release notes for all the supported resolutions. You will also notice the following line in the release notes for devices with hardware limitations: "5.40.5:L35026 Number of different configured video streams are limited by hardware".

A typical first hand indication that the Axis device cannot provide additional unique video streams as the video source buffers are already exceeded is the "503 Service Unavailable" error message in the web interface of the Axis device.

Other applications, like AXIS Companion or AXIS Camera Station, would show the user a "Camera error". The Server report and included log messages of Axis devices are an excellent tool to debug this kind of scenarios.

Below you can find a list of some common log messages that would appear in case the video source buffer is saturated and the Axis device is not being able to deliver a requested unique video stream

Troubleshooting example 1: In this example, requesting a unique video stream has failed due to there simply not being any video source buffer available to facilitate another unique 1024x768 video stream. The log messages indicate which source buffer is already occupied and which is still available to use at the time when the new unique video stream is requested.

```
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: Unable to find
available stream configuration for resolution 1024x768
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: buffer[0]: fixed
1920x1080, current 1920x1080
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: buffer[1]: max
720x576, current 0x0
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: buffer[2]: max
1920x1080, current 1280x960
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: buffer[3]: max
1280x720, current 0x0
<INFO> Jan 4 11:22:03 axis-00408cdc12b7 /usr/bin/ambad[960]: Failed to
allocate a source buffer
```

Troubleshooting example 2: Like in the example above, requesting a unique video stream has failed due to there not being any video source buffer available to facilitate another unique 800x600 video stream.

```
<INFO> Jan 4 11:22:03 axis-0040 /usr/bin/ambad[960]: Unable to find available
stream configuration for resolution 800x600
<INFO> Dec 30 21:15:36 axis408 /usr/bin/ambad[1051]: buffer[0]: fixed
800x600, current 800x600
<INFO> Dec 30 21:15:36 axis408 /usr/bin/ambad[1051]: buffer[1]: max 720x576,
current 0x0
<INFO> Dec 30 21:15:36 axis408 /usr/bin/ambad[1051]: buffer[2]: max 800x600,
current 800x600
<INFO> Dec 30 21:15:36 axis408 /usr/bin/ambad[1051]: buffer[3]: max 800x600,
current 800x600
<INFO> Dec 30 21:15:36 axis408 /usr/bin/ambad[1051]: Failed to allocate a
source buffer
```

Troubleshooting example 3: Axis devices with newer AXIS OS versions print their log message in a slightly different manner, as seen in this example.

```
[ INFO ] /usr/bin/ambad[1035]: Failed to allocate a source buffer (1280x720,
channel 1): No matching buffer available
[ INFO ] /usr/bin/ambad[1035]: stream[1]: encoding [ 1920x1080, 25/1 fps,
buffer_id 2, state active, channel 1 ]
[ INFO ] /usr/bin/ambad[1035]: stream[2]: encoding [ 640x480, 25/1 fps, buffer_
id 3, state active, channel 1 ]
[ INFO ] /usr/bin/ambad[1035]: stream[3]: encoding [ 320x240, 25/1 fps, buffer_
id 1, state active, channel 1 ]
[ WARNING ] monolith: Failed to allocate 1280x720 H264 stream on channel 1:
Failed to allocate stream resources: Failed to add stream
[ ERR ] monolith[925]: Could not set caching pipeline to playing.
```

Recommendations

The following general recommendations can be given to reduce complexity, configuration time and to optimize the video streaming setup of Axis devices:

- Make use of stream profiles to package streams and their configuration in a simple way to optimize stream and configuration handling
- Action rules that upload MJPEG images or video clips should utilize user-configured stream profiles
- Use the same stream settings (=stream profile) for live view and recording if possible
- Have in mind that action rules allocate a video source buffer once the action rule is activated. This means that even though the Axis device is supposed to send an image to an FTP server once a day, it will result in the video source buffer being allocated for the entire day
- Have in mind that (Analytics) ACAPs such as AXIS Video Motion Detection or 3rd party ACAPs may consume a low resolution buffer for detection, such as 320x240
- Have in mind that the "Adaptive Resolution/Streaming" feature enabled per default when accessing the Axis device's web interface will request a unique video stream tailored to the actual resolution size of the physical display of the user. This might consume a video source buffer by itself
- Avoid having anonymous viewers enabled. Besides the aspect of cybersecurity, having anonymous viewers enabled allows the uncontrolled access to an Axis device and may exceed the video source buffer configurations
- Avoid questionable setups such as requesting two unique video streams in the same resolution, framerate but with different compression, like 30 and 35. The difference in image quality is negligible compared to the cost of consuming a video source buffer

Digital PTZ limits with Ambarella

When using digital PTZ in a camera with an Ambarella chip, there are certain limitations that are good to be aware of.

The maximum width of a video stream that DPTZ can be used with depends on which Ambarella chip is used (see the product's datasheet for the chip specification).

- Ambarella CV25 - Max width 1920
- Ambarella CV75 - Max width 1920
- Ambarella S5L - Max width 1920
- Ambarella S6Lm - Max width 1280

Digital PTZ is related to view areas. The view area can be of any size, but if it is smaller than the full resolution of the sensor, it must be streamed with a width of 1920 pixels (1280 for S6Lm) or less. Streams with a greater width will show the full (uncropped) image. This also results in DPTZ not working with streams with higher resolutions.

A log message showing this limitation can look like this:

```
[ WARNING ] vdo[431]: Stream resolution 3840x2160 is too big to support DPTZ
```

Video latency

The time from an actual event happens until it's displayed on the client's screen is called latency. The latency includes processing of the image in the camera, transmission over the network, and decompression on the client. More information about latency can be found [here](#). In some circumstances, it is desired to keep this latency as low as possible. To reduce the processing time on the camera, there are a few possibilities. Note that these settings will affect all video streams.

- Choose a capture mode with higher frame rate. In high frame rate capture modes, the processing is usually performed faster than in low frame rate capture modes.
- Enable LowLatencyMode (**Settings > Plain config > Select group: ImageSource > ImageSource / IO / Sensor > Low latency mode: on**). In this mode, the amount of image processing is reduced to lower the latency. The drawback is that the images will become noisier, especially in low light conditions and around moving object. This will reduce the latency up to 30 - 200 milliseconds depending on camera model and settings. Depending on the Axis device, this feature is available on AXIS OS 9.80.1 or higher.

Multicast video streaming

Streaming video using multicast allows different video clients located in the network to access a single video stream which the Axis device distributes to a specific multicast address and port. One of the benefits of using multicast as a transport method for video streaming is that the Axis device keeps its system and resource consumption low by only sending a single or dual video stream to a specific address in the network. It is also an efficient way of using the network infrastructure since many different video clients can retrieve the video stream from the multicast address instead of each video client pulling a separate video stream from the Axis device. The way multicast is served, distributed and received in the network can actually minimize the bandwidth consumption of the network infrastructure and all its involved clients as such. Just imagine the difference this can make in a system with more than 5.000 Axis devices in operation.

Axis devices support a variety of ways to stream video in a multicast scenario. In the following sections we will go through multicast from a streaming perspective and not take into account the general mechanics of multicast and how it is routed through the network, or the basics of the different forms of multicast.

Any-source multicast (ASM)

Independently of the desired transport method – i.e. multicast or unicast – the initial RTSP protocol communication that is required to properly initialize the video client and Axis device is very similar, except that the video client in multicast-mode specifies this instead of the unicast scenario.

We will go through the details of a typical RTSP build-up step-by-step below. For more details, see the actual network traces in *Multicast in detail, on page 65*.

Step 1: video client

The video client initiates the RTSP DESCRIBE and signals to the Axis device to prepare video streaming with the specified streaming parameters given in the RTSP URL and to share its corresponding Session Description Protocol (SDP) file, which includes information about how to decode the video stream.

```
DESCRIBE rtsp://172.25.201.100:554/axis-media/media.amp?videocodec=h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=30 RTSP/1.0
CSeq: 2
User-Agent: OmnicastRTSPClient/1.0
Accept: application/sdp
Authorization: Digest username="root", realm="AXIS_ACC8ED910B9", nonce="00000450Y2804646c4d9f7d3175fa496417b9c4e7aa39a2", uri="rtsp://172.25.201.100:554/axis-media/media.amp?videocodec=h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=30", response="7a2e2dcad7618b36479ec76e252bc1c3"
```

Step 2: Axis device

The Axis device validates the request and shares the corresponding SDP file with the video client. Note that in any-source multicast mode, no multicast-specific network parameters are shared. In source-specific multicast mode (SSM), this is different.

```
RTSP/1.0 200 OK
CSeq: 2
Content-Type: application/sdp
Content-Base: rtsp://172.25.201.100:554/axis-media/media.amp/
Server: GStreamer RTSP server
Date: Thu, 11 Feb 2021 06:51:12 GMT
Content-Length: 1063

v=0
o=- 17136744296195211872 1 IN IP4 172.25.201.100
s=Session streamed with GStreamer
i=rtsp-server
t=0 0
a=tool:GStreamer
a=type:broadcast
a=range:npt=now-
a=control:rtsp://172.25.201.100:554/axis-media/media.amp?videocodec=h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=30
m=video 0 RTP/AVP 96
c=IN IP4 0.0.0.0
b=AS:50000
a=rtpmap:96 H265/90000
a=framerate:30
a=fmtp:96 sprop-vps=QAEMAF//AUAAAAMAgAAAAwAAAwCcEJAK;sprop-sps=QgEBAUAAAAMAgAAAAwAAAwCcoAPAgBEHy55CbKsg8quTgoKC8IAAAAAMAgAAAAwKE;sprop-pps=RAHANzwEbJA=
a=ts-refclk:local
a=mediaclk:sender
a=recvonly
a=control:rtsp://172.25.201.100:554/axis-media/media.amp/stream=0?videocodec=h265&audi=0&resolution=1920x1080&camera=1&compression=30&fps=30
a=
trans-
form:1.000000,0.000000,0.000000;0.000000,1.000000,0.000000;0.000000,0.000000,1.000000
```

Step 3: video client

The video client then goes ahead and defines the appropriate transport method as multicast, the multicast IP address, streaming ports and the TTL. This is the important step in the RTSP build-up where the video client actually can specify the desired transport method. Note that in order for the Axis device to accept video client-specific multicast network parameters, the VAPIX parameter **RTSP Allow Client Transport Settings in Plain Config > Network** has to be enabled. If this parameter is not set, the Axis device might ignore these parameters and offer their own configuration set in **Plain Config > Network > R0**.

```
SETUP rtsp://172.25.201.100:554/axis-media/media.amp/stream=0?videocodec=h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=30 RTSP/1.0
CSeq: 3
User-Agent: OmnicastRTSPClient/1.0
Transport: RTP/AVP;multicast;destination=224.16.17.51;port=47806-47807;ttl=64
```

```
Authorization: Digest username="root", realm="AXIS_ACC8ED910B9", nonce=
"00000450Y2804646c4d9f7d3175fa496417b9c4e7aa39a2", uri="rtsp://172.25.201.100:554/axis-
media/media.amp/stream=0?videocodec=h265&audio=0&resolution=1920x1080&camera=
1&compression=30&fps=30", response="48cf0f723aca20f6530e79ecb966ec0a"
```

Step 4: Axis device

The Axis device in return validates the request and if successful, it answers with the exact same network parameters back to the video client to prepare the upcoming session.

```
RTSP/1.0 200 OK
CSeq: 3
Transport: RTP/AVP;multicast;destination=224.16.17.51;ttl=64;port=47806-47807;mode="PLAY"
Server: GStreamer RTSP server
Session: f2imQtCHhuoH2FbW;timeout=60
Date: Thu, 11 Feb 2021 06:51:12 GMT
```

Step 5: video client

The video client then finally signals to the Axis device via RTSP PLAY to start video streaming as agreed based on the network and video streaming parameters that have been handshaked previously.

```
PLAY rtsp://172.25.201.100:554/axis-media/media.amp?videocodec=h265&audio=0&resolution=
1920x1080&camera=1&compression=30&fps=30 RTSP/1.0
CSeq: 4
Session: f2imQtCHhuoH2FbW
User-Agent: OmnicastRTSPClient/1.0
Range: npt=0.000-
Authorization: Digest username="root", realm="AXIS_ACC8ED910B9", nonce=
"00000450Y2804646c4d9f7d3175fa496417b9c4e7aa39a2", uri="rtsp://172.25.201.100:554/axis-
media/media.amp?videocodec=h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=
30", response="d015b378a8a1000c964d6c48d1883d1f"
```

Step 6: Axis device

The Axis device acknowledges the request by sending an RTSP OK and provides the video client with information about how the video stream will be momentarily available at the defined multicast network parameters. In order to signal the start of the video stream to the video client, the Axis device specifies the sequence number of the first RTP package and the initial RTP timestamp so that the client expects and processes the correct start of the video stream.

```
RTSP/1.0 200 OK
CSeq: 4
RTP-Info: url=rtsp://172.25.201.100:554/axis-media/media.amp/stream=0?videocodec=
h265&audio=0&resolution=1920x1080&camera=1&compression=30&fps=30; seq=24067;rtptime=
417717697
Range: npt=now-
Server: GStreamer RTSP server
Session: f2imQtCHhuoH2FbW;timeout=60
Date: Thu, 11 Feb 2021 06:51:12 GMT
```

Optional client transport setting handling

In case the video client would not specify all the necessary network transport parameters accordingly, the Axis device will fallback and offer the default multicast parameter set in **Plain Config > Network > R0** as illustrated in the following example. We can observe here that the video client's request for video streaming specifies multicast as transport method and the port to be used for multicast streaming, but misses to specify the multicast IP address. The Axis device treats this as a non-complete request and offers instead its configuration set in R0, which the video client either can agree on or simply close the connection. Another reason why the Axis device would disregard the video client's desired settings is when the VAPIX parameter **RTSP Allow Client Transport Settings** in **Plain Config > Network** is unchecked.

Step 3: video client

```
SETUP rtsp://172.25.201.100:554/axis-media/media.amp/stream=0 RTSP/1.0
CSeq: 5
Authorization: Digest username="root", realm="AXIS_ACC8ED910B9", nonce=
"0003628fY51859629beb31964cb09d13947338e39266e77", uri="rtsp://
172.25.201.100:554/axis-media/media.amp/", response=
"78be3d448c752bda36df4b82baf4ecf9"
User-Agent: LibVLC/3.0.11 (LIVE555 Streaming Media v2016.11.28)
Transport: RTP/AVP;multicast;port=55810-55811
```

Step 4: Axis device

```
RTSP/1.0 200 OK
CSeq: 5
Transport: RTP/AVP;multicast;destination=224.225.226.227;ttl=5;port=
50000-50001;mode="PLAY"
Server: GStreamer RTSP server
Session: xvIhEhZ3W5QpueEZ;timeout=60
Date: Thu, 11 Feb 2021 06:28:05 GMT
```

Source-specific multicast (SSM)

While in any-source multicast (ASM) the multicast network parameters are handshaked after sharing the Session Description Protocol (SDP) file during the initial RTSP build-up, this is not the case in the source-specific multicast mode. In SSM, the multicast network parameters are pre-configured in the Axis device and shared with the requesting video client when the SDP file is shared. The benefit of this is that the requesting video client can join a multicast group and only filter for the multicast traffic the video client is interested in. This can be done by applying a source-specific filter when joining the multicast group.

A typical scenario where SSM would be beneficial is when multiple Axis devices would stream video to the same multicast address but would use different ports. A video client connecting via any-source multicast would receive the multicast traffic from all streaming devices, while a video client requesting source-specific multicast would be able to filter out unwanted traffic. On top of that, SSM allows for reliable planning of multicast routing/path-forwarding since it is known how multicast is switched and routed through the network.

Source-specific multicast requires pre-configuration on the Axis device to configure the desired multicast network parameters. You can find information on how to configure an Axis device for source-specific multicast in *the VAPIX Library* but is also illustrated below. There is no specific setting to enable or disable source-specific multicast as such, but the source-specific multicast network parameters that need to be defined in advance can be configured from **Plain Config > Network** for each individual video source. Below is a typical example configuration:

R0

Always multicast audio

Always multicast profile

Always multicast video

Audio address

Audio port

TTL
 [1..255]

Video address

Video port

Step 1: video client

Compared to the any-source multicast mode, SSM mode requires a different streaming URL for signaling to the Axis device that source-specific multicast is wanted.

```
DESCRIBE rtsp://172.25.201.100:554/axis-media/ssm/media.amp?camera=1 RTSP/1.0
CSeq: 4
Authorization: Digest username="root", realm="AXIS_ACCC8ED910B9", nonce=
"000006c7Y356087c783187c3a95be0ca315f5fa0cd57ddc", uri="rtsp://172.25.201.100:554/axis-
media/ssm/media.amp?camera=1", response="3226806a8c988f0d473df291e8c7ffb8"
User-Agent: LibVLC/3.0.11 (LIVE555 Streaming Media v2016.11.28)
Accept: application/sdp
```

Step 2: Axis device

The SDP file that is shared between the Axis device and the requesting video client includes the source-specific multicast network parameters which the video client has to learn in order to join the multicast group accordingly and filter for the correct traffic.

```
RTSP/1.0 200 OK
CSeq: 4
Content-Type: application/sdp
Content-Base: rtsp://172.25.201.100:554/axis-media/ssm/media.amp/
Server: GStreamer RTSP server
Date: Thu, 11 Feb 2021 07:01:42 GMT
Content-Length: 749

v=0
o=- 9871677480407248934 1 IN IP4 172.25.201.100
s=Session streamed with GStreamer
i=rtsp-server
c=IN IP4 225.226.227.228/5
t=0 0
a=tool:GStreamer
a=type:broadcast
a=range:npt=now-
a=control:rtsp://172.25.201.100:554/axis-media/ssm/media.amp?camera=1
a=source-filter: incl IN IP4 225.226.227.228 172.25.201.100
m=video 60000 RTP/AVP 96
b=AS:50000
a=rtpmap:96 H264/90000
a=fmtp:96 packetization-mode=1;profile-level-id=640029;sprop-parameter-sets=
Z2QAka0AxSAeAIn5ZuAgIDSdxIio,a048sA==
a=ts-refclk:local
a=mediaclk:sender
```

```
a=recvonly
a=control:rtsp://172.25.201.100:554/axis-media/ssm/media.amp/stream=0?camera=1
a=framerate:30.000000
a=
trans-
form:1.000000,0.000000,0.000000;0.000000,1.000000,0.000000;0.000000,0.000000,1.000000
```

Step 3: video client

Since the video client knows the multicast network parameters that will be used in advance, the client can include them in the RTSP SETUP request.

```
SETUP rtsp://172.25.201.100:554/axis-media/ssm/media.amp/stream=0?camera=1 RTSP/1.0
CSeq: 5
Authorization: Digest username="root", realm="AXIS_ACCC8ED910B9", nonce=
"000006c7Y356087c783187c3a95be0ca315f5fa0cd57ddc", uri="rtsp://172.25.201.100:554/axis-
media/ssm/media.amp/", response="89e1cf3338144d096723df0b10864cab"
User-Agent: LibVLC/3.0.11 (LIVE555 Streaming Media v2016.11.28)
Transport: RTP/AVP;multicast;port=60000-60001
```

Step 4: Axis device

The Axis device validates and responds with the correct multicast network parameter according to the pre-configuration done in RO.

```
RTSP/1.0 200 OK
CSeq: 5
Transport: RTP/AVP;multicast;destination=225.226.227.228;ttl=5;port=60000-60001;mode=
"PLAY"
Server: GStreamer RTSP server
Session: 06yirClN7xQCtW8q;timeout=60
Date: Thu, 11 Feb 2021 07:01:42 GMT
```

Step 5: video client

The requesting video client then signals to the Axis device to start video streaming to the agreed streaming and network parameters.

```
PLAY rtsp://172.25.201.100:554/axis-media/ssm/media.amp?camera=1 RTSP/1.0
CSeq: 6
Authorization: Digest username="root", realm="AXIS_ACCC8ED910B9", nonce=
"000006c7Y356087c783187c3a95be0ca315f5fa0cd57ddc", uri="rtsp://172.25.201.100:554/axis-
media/ssm/media.amp/", response="c19526013f73f3db72cd4fca98ec1c40"
User-Agent: LibVLC/3.0.11 (LIVE555 Streaming Media v2016.11.28)
Session: 06yirClN7xQCtW8q
Range: npt=0.000-
```

Step 6: Axis device

The Axis device acknowledges the request by sending an RTSP OK and provides the video client with info on how the video stream will be momentarily available at the defined multicast network parameters. In order to signal the start of the video stream to the video client, the Axis device specifies the sequence number of the first RTP package and the initial rtp timestamp so that the client expects and processes the correct start of the video stream.

```
RTSP/1.0 200 OK
CSeq: 6
RTP-Info: url=rtsp://172.25.201.100:554/axis-media/ssm/media.amp/stream=0?camera=1; seq=
21707;rtptime=3563678630
Range: npt=now-
Server: GStreamer RTSP server
Session: 06yirClN7xQCtW8q;timeout=60
Date: Thu, 11 Feb 2021 07:01:42 GMT
```

Always multicast

Always multicast is not a network multicast mode but a specific adaption to video clients that are not capable of performing a proper RTSP and/or multicast setup in either of the ways described previously (i.e. via ASM or SSM). In always multicast mode, the Axis device is statically configured to stream video to a specific multicast address and port, and also to start streaming to it directly, regardless if there are video clients in the network that are actually requesting video from that particular Axis device or not. On top of that, RTSP is not used to connect, instead the requesting video client will make a HTTP call to retrieve the Session Description Protocol

(SDP) file in order to understand and make the connection to the multicast address and port where the video stream is connected. Always multicast can be configured in Axis devices in **Plain Config > Network** for each individual video source.

Example 1: The device will only stream video to the multicast address 224.225.226.227 and video port 50000. If video port 0 would be entered here, the Axis device would select the next possible port which has been defined in the **RTP > End Port and Start Port** configuration.

R0

Always multicast audio

Always multicast profile

Always multicast video

Audio address

Audio port

TTL
 [1..255]

Video address

Video port

Example 2: The device will stream video to the multicast address 224.225.226.227 to port 50000, and audio to multicast address 239.216.121.37 to port 51000. Observe that it is also possible to adjust the video streaming parameters in the always multicast profile. If other streaming parameters should be used, e.g. a framerate of 15 frames per second and compression of 15, then the field can be adjusted in the following way: `videocodec=h264&fps=15&compression=15`. Otherwise the current configured default stream settings will be used.

R0

Always multicast audio

Always multicast profile

Always multicast video

Audio address

Audio port

TTL
 [1..255]

Video address

Video port

Once the above settings are saved, the Axis device will start streaming to the configured multicast address and port immediately regardless if there are clients requesting the video stream or not. The client can access this

multicast stream via the SDP file, which determines the video stream settings so that the video client learns how to play the video. The SDP file can be accessed using `http://ip-address/axis-cgi/alwaysmulti.sdp?camera=1` where camera=1 is mapped to R0. An example of such an SDP file can be found via `alwaysmulti.sdp`. Below is a network trace example illustrating the procedure.

Step 1: video client

The video client has requested the SDP file from the Axis device. Observe that no streaming parameters or multicast network parameters are mentioned by the client, hence this configuration must be performed on the Axis device prior to making the request as described in the previous examples.

```
GET /axis-cgi/alwaysmulti.sdp?camera=1 HTTP/1.1
Host: 172.25.201.100
Accept: */*
Accept-Language: en_US
Authorization: Basic cm9vdDpwYXNz
User-Agent: VLC/3.0.11 LibVLC/3.0.11
Range: bytes=0-
```

Step 2: Axis device

The Axis device looks up the current configuration in R0 and then initializes and sends the SDP file to the requesting video client. This is done in order to pass on the required information so that the video client can access the already ongoing multicast stream at the pre-configured multicast address and port. No further unicast communication is exchanged at this point, the video client will switch over to the specified multicast network parameters in order to access the stream.

```
HTTP/1.1 200 OK
Date: Thu, 11 Feb 2021 06:14:25 GMT
Server: Apache/2.4.46 (Unix) OpenSSL/1.1.1g
Cache-Control: no-cache, no-store, max-age=0
Pragma: no-cache
Expires: Thu, 01 Dec 1994 16:00:00 GMT
X-Content-Type-Options: nosniff
X-Frame-Options: SAMEORIGIN
X-XSS-Protection: 1; mode=block
Transfer-Encoding: chunked
Content-Type: application/sdp

v=0
o=- 1188340656180883 1 IN IP4 172.25.201.100
s=Session streamed with GStreamer
i=rtsp-server
t=0 0
a=tool:GStreamer
a=type:broadcast
a=control:*
a=range:npt=now-
m=video 50000 RTP/AVP 96
c=IN IP4 224.225.226.227/5
b=AS:50000
a=rtptime:96 H264/90000
a=fmtp:96 packetization-mode=1;profile-level-id=640029;sprop-parameter-sets=
Z2QAka0AxSAeAIn5ZuAgIDSDxIio,a048sA==
a=control:stream=0
a=ts-refclk:local
a=mediaclk:sender
a=framerate:30.000000
a=
trans-
form:1.000000,0.000000,0.000000;0.000000,1.000000,0.000000;0.000000,0.000000,1.000000
```

Multicast in detail

Example network trace	Multicast address	Multicast port	Video client	Video client IP address	Axis device IP address
<code>FFMPEG_Any_Source_</code>	224.225.226.2-27	50000	FFMPEG	172.25.201.50	172.25.201.100

<i>Multicast.pcapng</i>					
<i>VLC_Any_Source_Multicast.pcapng</i>	224.225.226.2-27	50000	VLC*	172.25.201.50	172.25.201.100
<i>Genetec_Any_Source_Multicast.pcapng</i>	224.16.17.51	47806	Genetec	172.25.201.51	172.25.201.100
<i>Milestone_Any_Source_Multicast.pcapng</i>	224.16.17.51	47806	Milestone	172.25.201.52	172.25.201.100
<i>VLC_Source_Specific_Multicast.pcapng</i>	225.226.227.2-28	60000	VLC	172.25.201.50	172.25.201.100
<i>FFMPEG_Always_Multicast_Direct_SDP_File_Play.pcapng</i>	224.225.226.2-27	50000	FFMPEG**	172.25.201.50	172.25.201.100
<i>VLC_Always_Multicast_Direct_SDP_File_Play.pcapng</i>	224.225.226.2-27	50000	VLC**	172.25.201.50	172.25.201.100
<i>VLC_Always_Multicast_HTTP_SDP_Play.pcapng</i>	224.225.226.2-27	50000	VLC***	172.25.201.50	172.25.201.100

*In VLC, you may need to enable "Force multicast RTP via RTSP" in the RTP/RTSP/SDP demuxer settings under **Advanced Preferences**.


In order for FFMPEG and VLC to access and retrieve the SDP file via HTTP-authentication, the HTTP-basic authentication has to be configured in **Plain Config > Network > Authentication policy.

***These examples illustrate how a video client is capable of connecting to the multicast stream just by using the file SDP alone without making any further connection to the Axis device. Assuming that no configuration change is made on the Axis device, the user is only required to download the SDP file once and then one could use the SDP to start playing the video. VLC and FFMPEG are examples of clients that are capable of doing so.

Multicast network overview


A typical multicast scenario consists of three parts: the source, the multicast network infrastructure, and the receivers.

The Axis device is the source which sends out the streams to the multicast address. The multicast address is agreed between the clients and the device during the negotiation. The network infrastructure must be configured by network professionals. A multicast routing protocol (like PIM) needs to be running between the routers, and the IGMP protocol needs to be running between the last-hop router and the receiving clients. Additionally, IGMP snooping needs to be enabled on the layer 2 switches to avoid multicast traffic being flooded.

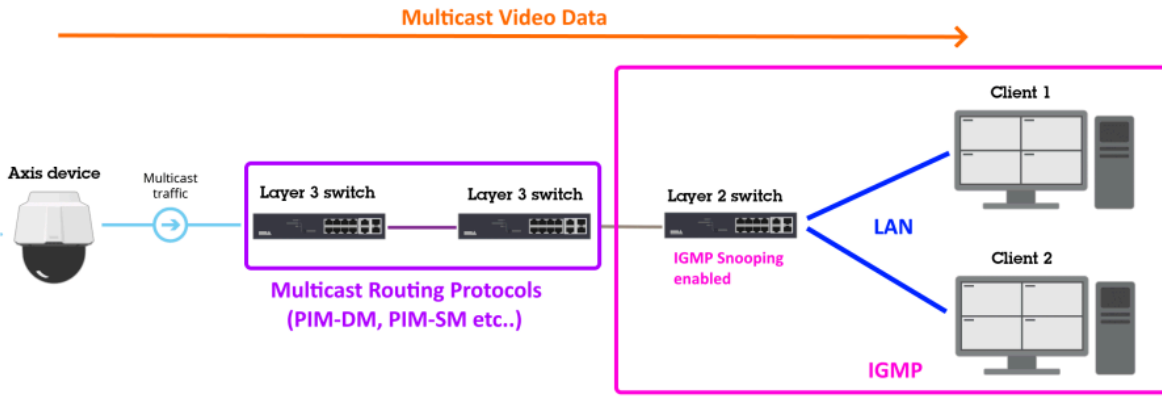

Multicast in a switched network

A network where traffic is served within a certain VLAN and IP address network is called a switched network since no layer-3 IP routing is needed. Let's start with the basic setup and assume that the network switches have not been configured properly for handling multicast traffic. What you would see is similar to the illustration below, a switched network consisting of a handful of switches with client computers and Axis devices. From all of the clients, only **Client 2** is interested and requests a multicast video stream from the Axis device. Since the network switches are not configured properly at this point, the multicast traffic, which is only supposed to flow from the Axis device over the traversing switches to **Client 2**, will be flooded to all switches and clients in the network, regardless if they are interested in receiving the traffic or not.

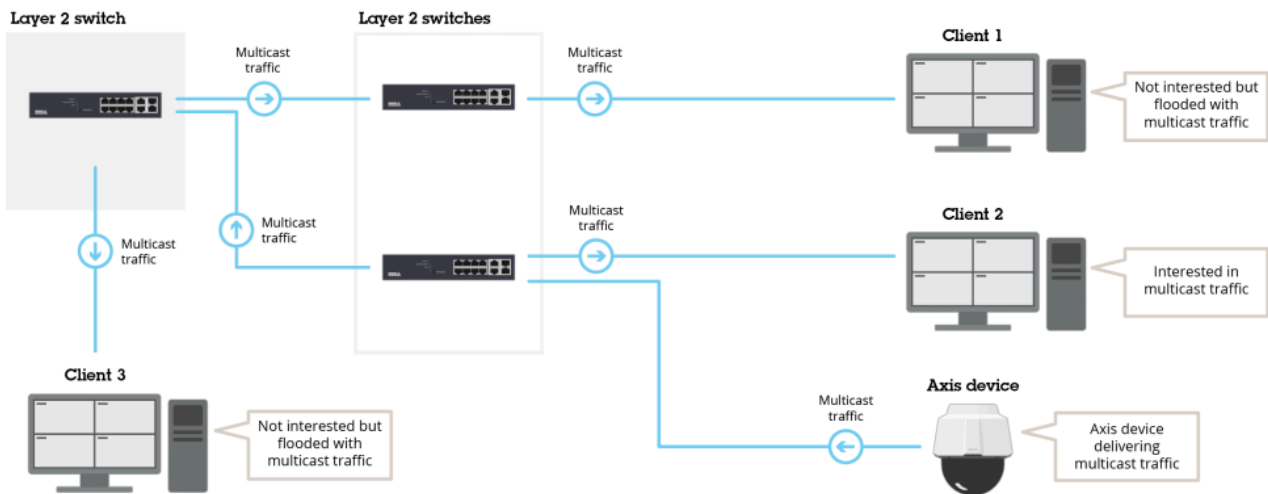


Let's look at the same network when properly configured with IGMP (Internet Group Management Protocol) enabled. IGMP is a protocol that helps the network infrastructure learn and understand who is delivering multicast traffic to which destination in order to avoid multicast flooding to non-interested clients. To configure the network to avoid multicast flooding, it is enough to configure the main switch - i.e. **Layer 2 switch** - for IGMP in the following example configuration:


Global configuration

```
ip igmp snooping querier address 172.25.201.10
ip igmp snooping querier query-interval 15
ip igmp snooping querier
```


By doing this, the **Layer 2 switch** will be sending out IGMP queries to the connected network devices in order to find out which ones are interested in receiving and sending multicast packages.

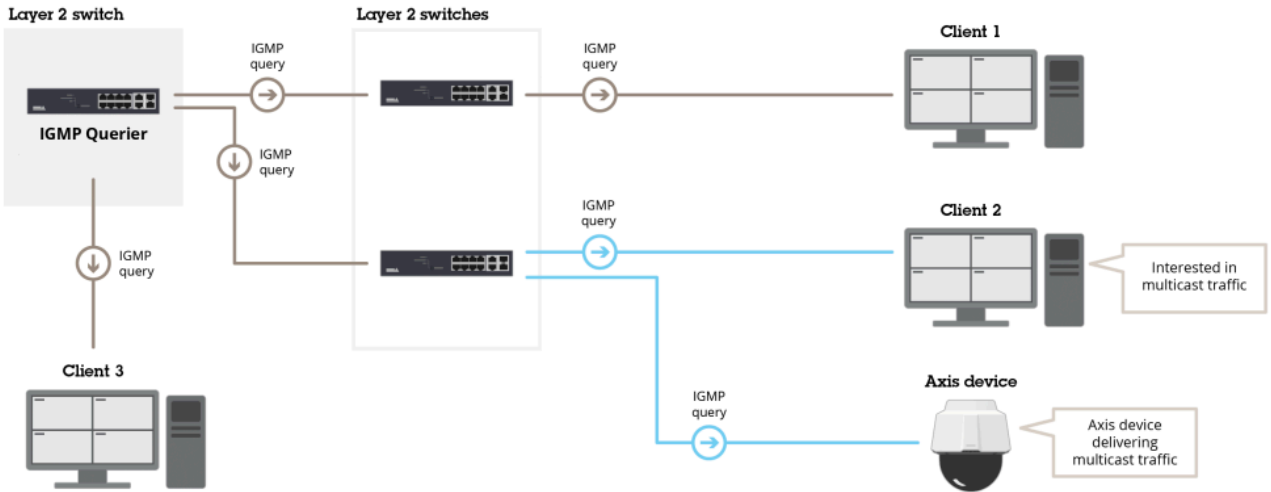


The network devices will respond with "join" messages in order to signal their participation in multicast-related traffic.

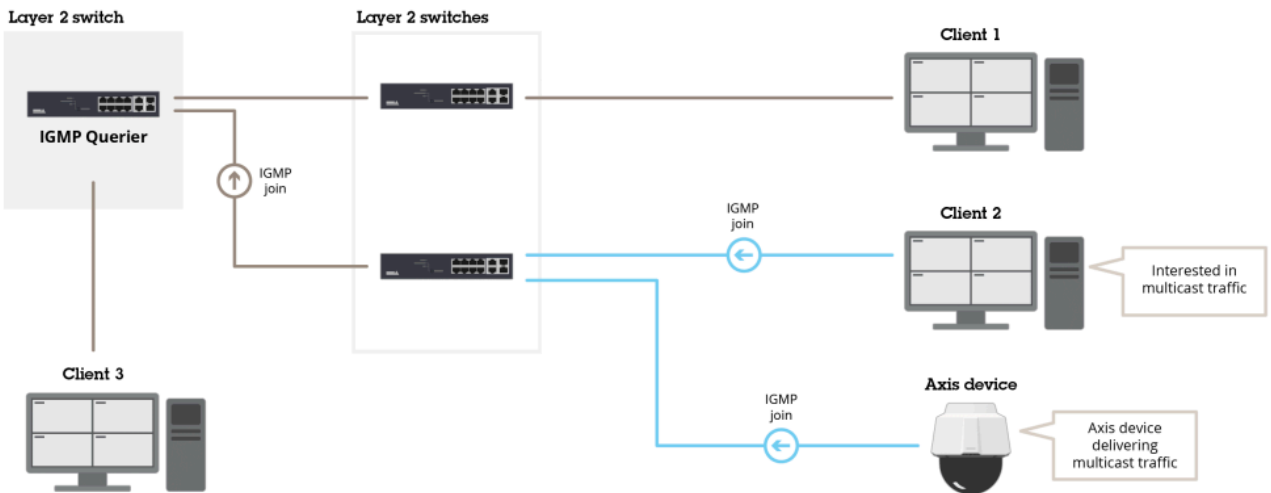

The network switches will listen and learn from this traffic in order to properly switch network packages to their appropriate destinations. In the illustration below, only Client 2 is requesting video from the Axis device via multicast.

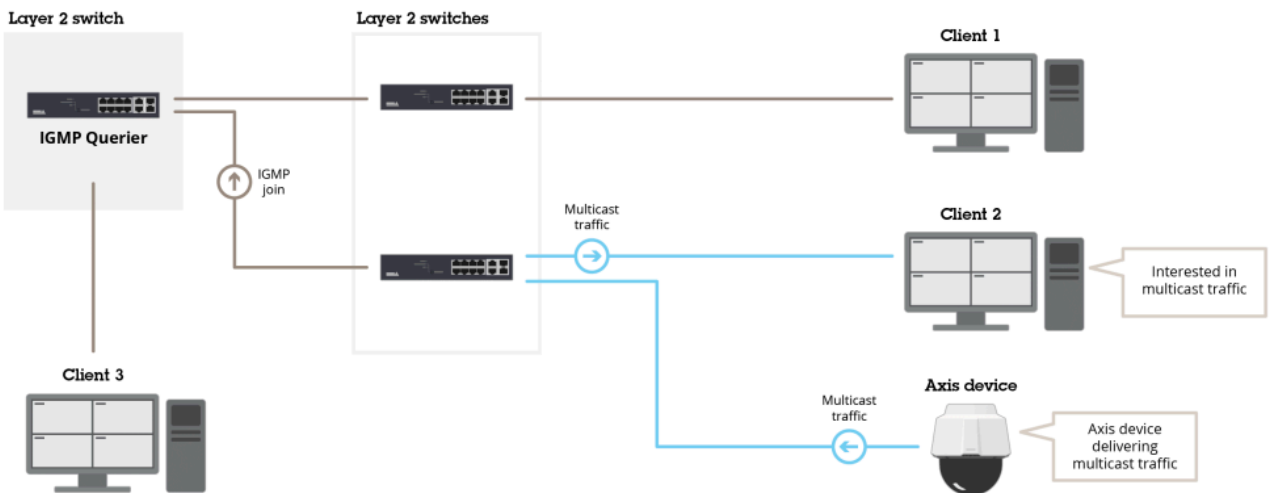

With the correct configuration in place, the network switches are now capable of switching packages as well across switches. In the illustration below, we have switched the clients, so that Client 1 requests a multicast video stream from the same Axis device that previously served Client 2. The result will be proper switched network traffic across the network to the correct destination.

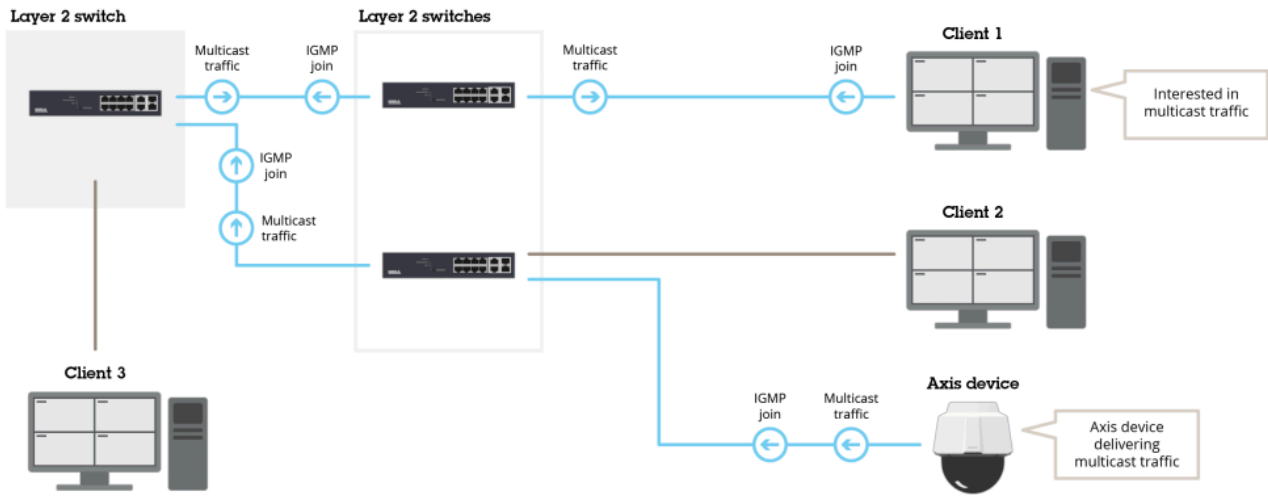


Multicast in a routed network

Multicast in a routed network does not differ essentially from a switched scenario in regards to how multicast traffic is handled. A network where clients exchange network traffic across different VLANs and IP networks is called a routed network since layer-3 IP routing techniques are needed to deliver the network traffic across. Let's re-use the same network topology as we did in the switched network scenario. The only - but important - difference is that Client 1 is placed in a different VLAN and IP address network compared to Client 2 and 3 as well as the Axis device. We assume that we have already performed the same IGMP configuration as mentioned earlier. For reference, see below:

Global configuration

```
ip igmp snooping querier address 172.25.201.10
ip igmp snooping querier query-interval 15
ip igmp snooping querier
```

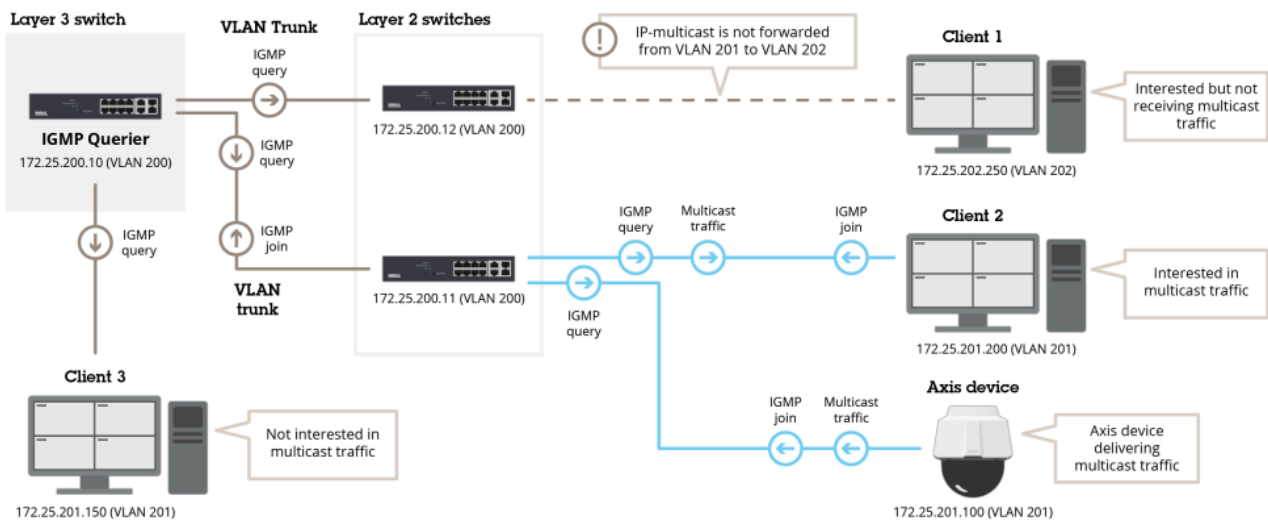

As you can see, Client 2 is already requesting video from the Axis device using multicast and since we have applied the correct IGMP configuration to the Layer 3 switch, this setup works flawlessly. But Client 1 from the

other IP network also wants to receive a video via multicast, which is not working since multicast is not routed across different IP networks by design. So in order to allow multicast traffic to be routed across layer-3 networks we have to enable IP-multicast routing and use a protocol such as Protocol Independent Multicast (PIM). The most basic and simple use case would be to make use of the passive mode of PIM, as illustrated below in the suggested configuration:

Global configuration

```
ip multicast-routing
```


Configuration VLAN 201

```
interface Vlan201
description LAN1 clients
ip address 172.25.201.10 255.255.255.0
ip pim passive
!
```

Configuration VLAN 202

```
interface Vlan202
description LAN2 clients
ip address 172.25.202.10 255.255.255.0
ip pim passive
!
```

With this configuration applied, multicast is properly routed across different networks. From the Axis device located in VLAN 201 to Client 1 that is located in VLAN 202.

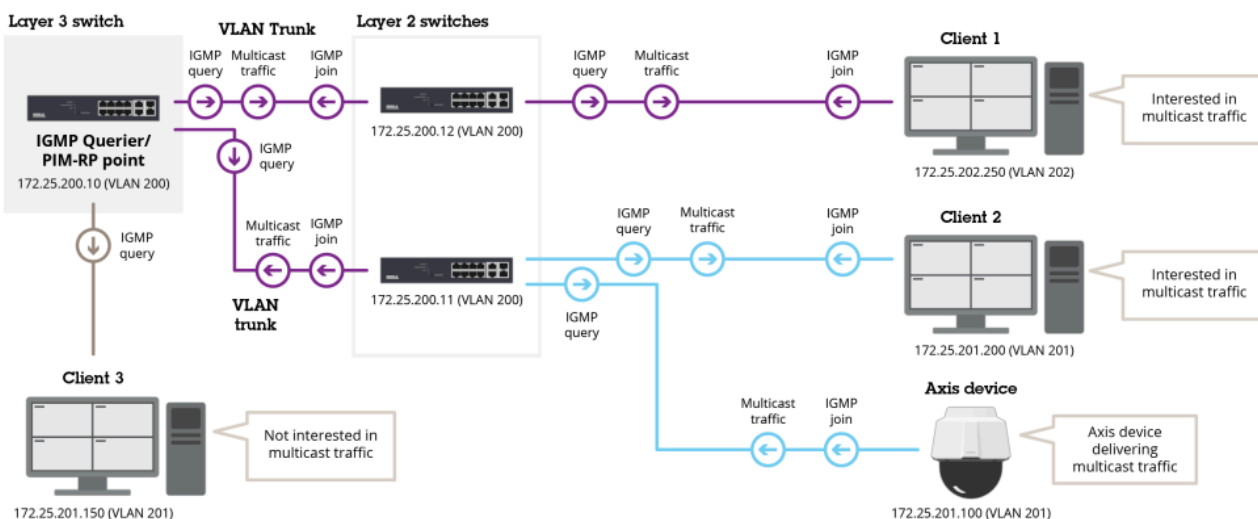

Video streaming rotation

In this section we will take a closer look at the VAPIX and ONVIF image rotation configuration when it comes to video streaming, which is handled differently depending on AXIS OS version.

AXIS OS 8.50 and higher

After support for ONVIF Profile T was added, the handling of image rotation in Axis devices has been completely separated between VAPIX and ONVIF. This means that both protocols have dedicated parameters for image rotation configuration, and that the image rotation parameter for one protocol does not affect the other and vice-versa. For VAPIX this is configured via the image rotation parameter `Image.IO.Appearance.Rotation`, either in the image settings in the web interface, or directly via VAPIX HTTP request. For ONVIF it's configured in the ONVIF media stream profiles in the web interface, or directly via the script editor for legacy devices in the configuration file: `/etc/ws/onvif/media/media.conf`.


Exception: The above is not true for Axis devices with support for `ImageSource.IO.SourceRotation=yes`. On these devices, the image rotation parameter is set globally via VAPIX and ONVIF will adapt to it accordingly.

AXIS OS 8.40 and lower


Configuring the image rotation parameter `Image.IO.Appearance.Rotation` via the image settings in the web interface or directly via VAPIX HTTP request will affect both VAPIX and ONVIF video streams. ONVIF video streams will adapt to the same image rotation configured via VAPIX, unless specified otherwise in the ONVIF stream profile settings.

Example configurations

VAPIX configuration of image rotation from the device web interface:

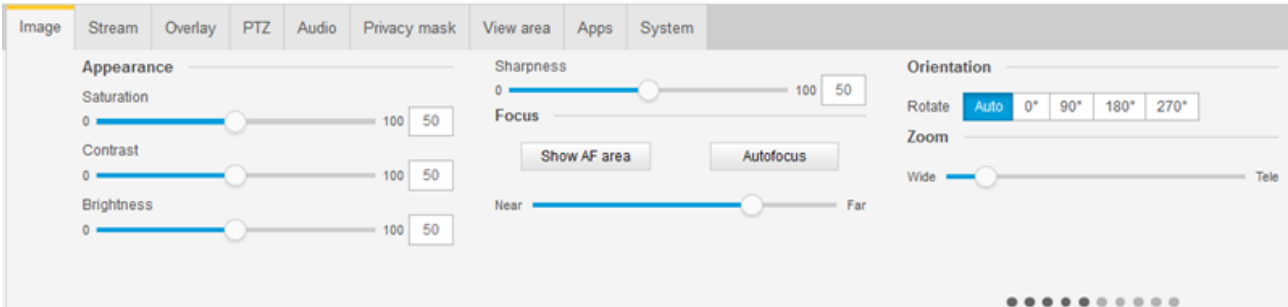

ONVIF configuration of image rotation from the device web interface:

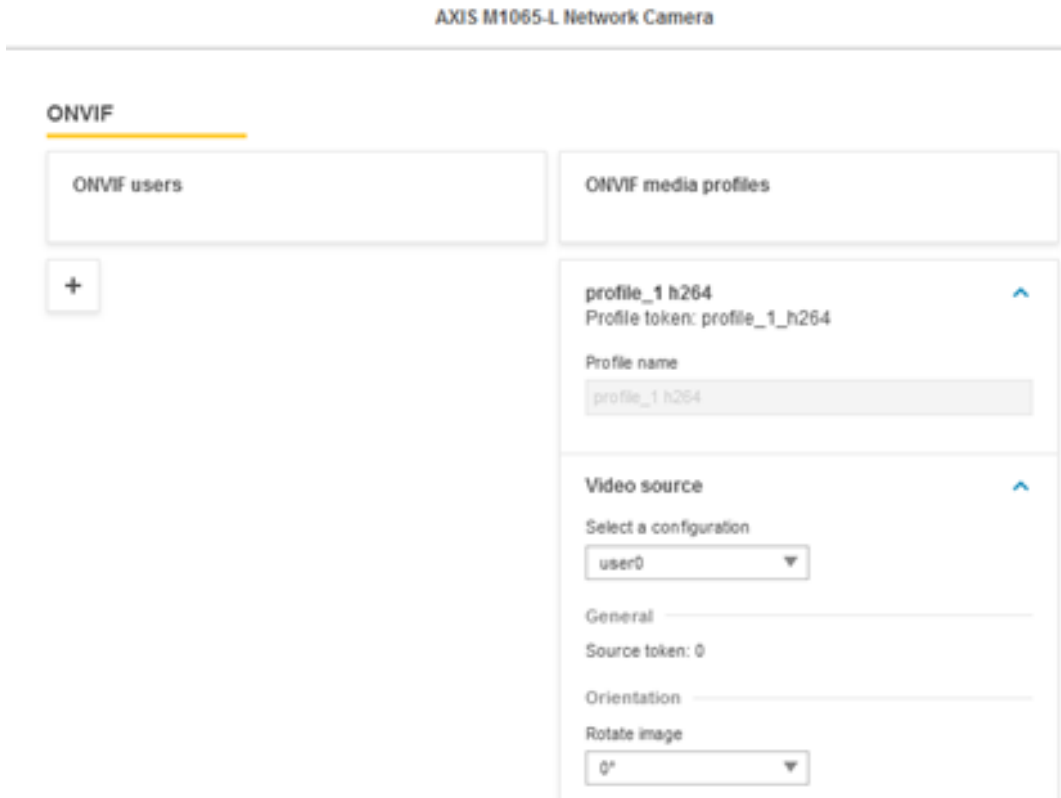

ONVIF configuration of the image rotation via script editor:



Streaming timestamps

In this section you can read about different ways to receive timestamp information when streaming video and downloading single images from Axis devices. This metadata information can be used for processing in business applications, e.g. when receiving metadata about how many persons in a store went through a certain area. It can also be used in other use cases where time-synchronisation towards 3rd party video clients is needed

H.264/MJPEG and RTP timestamps

The following *network trace* can be used for testing what is described below.

RTP timestamps can be found in the payload of RTP packages and function as a monotonic timestamp that can be used to identify a specific frame of the video stream. Based on the clock rate that is computed during the video stream build-up, the RTP timestamp is expected to increase incrementally from one frame to another.

The clock rate depends on the image frequency of the video stream. In this example, the video stream consists of 30 frames per second, which means the computed clock rate will be 3000. This in turn means that the monotonic RTP timestamp will increase by 3000 upon every new I-Frame or P-Frame as you can see in the following two screenshots.

The image shows a Wireshark capture of an RTP stream. The top pane displays the packet list, and the middle pane shows the session description protocol details. A red arrow points to the 'Media Attribute (a): rtptimebase=9000' field, with a text overlay stating 'Clockrate = 3000 (9000 / 30)'. The bottom pane shows the RTP stream data, with a red box highlighting the first four frames (I-Frame, P-Frame 1, P-Frame 2, P-Frame 3) and a text overlay stating 'The monotonic time is increasing by the defined clockrate (3000) upon every new I-Frame and P-Frame'. The packet list shows the following details:

No.	Time	Source	Destination	Protocol	Length	Type	Info
1	0.000000	192.168.1.100	192.168.1.100	554	66	TCP	554 → 554 [SYN] Seq=0 Win=64240 Len=0 MSS=1460 WS=256 SACK_PERM=1
2	0.000454	192.168.1.100	192.168.1.100	554	66	TCP	554 → 554 [ACK] Seq=1 Win=29200 Len=0 MSS=1460 SACK_PERM=1 WS=64
3	0.000458	192.168.1.100	192.168.1.100	554	54	TCP	554 → 554 [ACK] Seq=1 Win=210222 Len=0
4	0.011316	192.168.1.100	192.168.1.100	554	211	RTP	OPTION: rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
5	0.011829	192.168.1.100	192.168.1.100	554	60	TCP	554 → 554 [ACK] Seq=1 Ack=158 Win=30722 Len=0
6	0.012669	192.168.1.100	192.168.1.100	554	255	RTP	Reply: RTPSP/1.0 200 OK
7	0.012788	192.168.1.100	192.168.1.100	554	237	RTP	DESCRIBE rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
8	0.014258	192.168.1.100	192.168.1.100	554	282	RTP	Reply: RTPSP/1.0 401 Unauthorized
9	0.014304	192.168.1.100	192.168.1.100	554	471	RTP	DESCRIBE rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
10	0.014361	192.168.1.100	192.168.1.100	554	282	RTP	Reply: RTPSP/1.0 401 Unauthorized
11	0.016552	192.168.1.100	192.168.1.100	554	54	TCP	554 → 554 [ACK] Seq=758 Ack=658 Win=2181504 Len=0
12	1.629583	192.168.1.100	192.168.1.100	554	211	RTP	OPTION: rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
13	1.627111	192.168.1.100	192.168.1.100	554	255	RTP	Reply: RTPSP/1.0 200 OK
14	1.627179	192.168.1.100	192.168.1.100	554	237	RTP	DESCRIBE rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
15	1.628633	192.168.1.100	192.168.1.100	554	282	RTP	Reply: RTPSP/1.0 401 Unauthorized
16	1.628672	192.168.1.100	192.168.1.100	554	479	RTP	DESCRIBE rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
17	1.630137	192.168.1.100	192.168.1.100	554	69	TCP	554 → 554 [ACK] Seq=1087 Ack=1519 Win=35448 Len=0
18	1.632951	192.168.1.100	192.168.1.100	554	1008	RTP	Reply: RTPSP/1.0 200 OK
19	1.633588	192.168.1.100	192.168.1.100	554	874	RTP	SETUP rtpsp/172.25.201.100:554/axis-media/amp/stream/0/video/codec=h264 RTPSP/1.0
20	1.633754	192.168.1.100	192.168.1.100	554	69	TCP	554 → 554 [ACK] Seq=1123 Ack=1956 Win=26736 Len=0
21	1.633754	192.168.1.100	192.168.1.100	554	290	RTP	Reply: RTPSP/1.0 200 OK
22	1.137650	192.168.1.100	192.168.1.100	62990	46	RTP	Unknown RTP version 3
23	1.137653	192.168.1.100	192.168.1.100	62991	46	RTP	62991 → 50001 Len=4
24	1.137643	192.168.1.100	192.168.1.100	62990	46	RTP	Unknown RTP version 3
25	1.137650	192.168.1.100	192.168.1.100	62991	46	RTP	62991 → 50001 Len=4
26	1.137675	192.168.1.100	192.168.1.100	554	477	RTP	PLAY rtpsp/172.25.201.100:554/axis-media/amp/video/codec=h264 RTPSP/1.0
27	1.146718	192.168.1.100	192.168.1.100	554	69	TCP	554 → 554 [ACK] Seq=2100 Ack=3701 Win=107024 Len=0

The session description protocol details show the following attributes:

- Media Attribute (a): rtptimebase=9000
- Media Attribute (a): rtptimebase=3000
- Media Attribute (a): transform=1.000000,0.000000,0.000000,0.000000,0.000000,0.000000,0.000000,0.000000,0.000000,0.000000
- Media Attribute (a): x-sensor-transform=1.000000,0.000000,0.000000,-1.000000,0.000000,0.000000,0.000000,0.000000,0.000000,0.000000

The RTP stream data shows the following frames:

- I-Frame
- P-Frame 1
- P-Frame 2
- P-Frame 3
- P-Frame 4

The packet list shows the following details:

No.	Time	Source	Destination	Protocol	Length	Type	Info
9:00:48.745533	0.000120	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218764, Time=4244015126, Mark FU-A End
9:00:48.745414	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218765, Time=4244015126, Mark FU-A End
9:00:48.745531	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218766, Time=4244015126, Mark FU-A End
9:00:48.745508	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218767, Time=4244015126, Mark FU-A End
9:00:48.745770	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218768, Time=4244015126, Mark FU-A End
9:00:48.745935	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218769, Time=4244015126, Mark FU-A End
9:00:48.746043	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218770, Time=4244015126, Mark FU-A End
9:00:48.746173	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218771, Time=4244015126, Mark FU-A End
9:00:48.746313	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218772, Time=4244015126, Mark FU-A End
9:00:48.746473	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218773, Time=4244015126, Mark FU-A End
9:00:48.746713	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218774, Time=4244015126, Mark FU-A End
9:00:48.746943	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218775, Time=4244015126, Mark FU-A End
9:00:48.747179	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218776, Time=4244015126, Mark FU-A End
9:00:48.747379	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218777, Time=4244015126, Mark FU-A End
9:00:48.747579	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218778, Time=4244015126, Mark FU-A End
9:00:48.747779	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218779, Time=4244015126, Mark FU-A End
9:00:48.747979	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218780, Time=4244015126, Mark FU-A End
9:00:48.748179	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218781, Time=4244015126, Mark FU-A End
9:00:48.748379	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218782, Time=4244015126, Mark FU-A End
9:00:48.748579	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218783, Time=4244015126, Mark FU-A End
9:00:48.748779	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218784, Time=4244015126, Mark FU-A End
9:00:48.748979	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218785, Time=4244015126, Mark FU-A End
9:00:48.749179	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218786, Time=4244015126, Mark FU-A End
9:00:48.749379	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218787, Time=4244015126, Mark FU-A End
9:00:48.749579	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218788, Time=4244015126, Mark FU-A End
9:00:48.749779	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218789, Time=4244015126, Mark FU-A End
9:00:48.749979	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218790, Time=4244015126, Mark FU-A End
9:00:48.750179	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218791, Time=4244015126, Mark FU-A End
9:00:48.750379	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218792, Time=4244015126, Mark FU-A End
9:00:48.750579	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218793, Time=4244015126, Mark FU-A End
9:00:48.750779	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218794, Time=4244015126, Mark FU-A End
9:00:48.750979	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218795, Time=4244015126, Mark FU-A End
9:00:48.751179	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218796, Time=4244015126, Mark FU-A End
9:00:48.751379	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218797, Time=4244015126, Mark FU-A End
9:00:48.751579	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218798, Time=4244015126, Mark FU-A End
9:00:48.751779	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218799, Time=4244015126, Mark FU-A End
9:00:48.751979	0.000119	192.168.1.100	192.168.1.100	62990	H264	1442	Fra. PT-DynamicRTP-Type=96, SSRC=0xB1E69128, Seq=218800, Time=4244015126, Mark FU-A End

When the video stream starts, the Axis device will let the external video client know about the initial RTP timestamp of the first frame (I-Frame), as you can see below. This allows the receiving video client to identify e.g. missing frames and can be used for RTP timestamp drift measurement while the video stream is ongoing.

Network_Trace RTP_SLI_Timestamps.pcapng

No.	Time	UTC Time	Package Delta	Source MAC	Source	Source Port	Destination MAC	Destination	Destination Port	Protocol	Length	Type	Info
24	1.37643	19:08:48.423608	0.00010	Micro-St_e2:48:b5	172.25.201.50	62990	AxisCom_9c:6b:e7	172.25.201.100	50000	RTP	46	Unknown	RTP version 3
25	1.37658	19:08:48.423615	0.00007	Micro-St_e2:48:b5	172.25.201.50	62991	AxisCom_9c:6b:e7	172.25.201.100	50001	RTP	46	62991 = 50001 Len=4	
26	1.37675	19:08:48.423648	0.00005	Micro-St_e2:48:b5	172.25.201.50	55423	AxisCom_9c:6b:e7	172.25.201.100	554	RTP	477	FLV RTPSP/172.25.201.100:554/axis-media/media.amp?videocodec=h264	RTPS/I.0
27	1.38215	19:08:48.472180	0.84548	AxisCom_9c:6b:e7	172.25.201.100	554	Micro-St_e2:48:b5	172.25.201.50	55423	TCP	60	554 → 55423 [ACK] Seq=2359 Ack=2381 Win=37824 Len=0	
28	1.42826	19:08:48.716791	0.25611	AxisCom_9c:6b:e7	172.25.201.100	554	Micro-St_e2:48:b5	172.25.201.50	55423	RTP	521	Reply: RTPS/I.0.200 OK	
29	2.42455	19:08:48.716818	0.00127	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	104	Mal. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21615, Time=424401526 SEI	
30	2.42853	19:08:48.716858	0.00440	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21617, Time=424401526 FU-A Start:IDR-Slice	
31	2.42973	19:08:48.716908	0.00140	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21619, Time=424401526 FU-A	
32	2.42884	19:08:48.716888	0.00110	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21618, Time=424401526 FU-A	
33	2.42951	19:08:48.716916	0.00180	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21620, Time=424401526 FU-A	
34	2.42959	19:08:48.715024	0.00188	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21620, Time=424401526 FU-A	
35	2.42917	19:08:48.715137	0.00113	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21621, Time=424401526 FU-A	
36	2.42927	19:08:48.715232	0.00095	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21622, Time=424401526 FU-A	
37	2.42949	19:08:48.715378	0.00139	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21623, Time=424401526 FU-A	
38	2.42954	19:08:48.715489	0.00119	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21624, Time=424401526 FU-A	
39	2.42964	19:08:48.715609	0.00120	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21625, Time=424401526 FU-A	
40	2.42976	19:08:48.715734	0.00125	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21626, Time=424401526 FU-A	
41	2.42980	19:08:48.715825	0.00091	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21627, Time=424401526 FU-A	
42	2.43008	19:08:48.715973	0.00148	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21628, Time=424401526 FU-A	
43	2.43021	19:08:48.716066	0.00113	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21629, Time=424401526 FU-A	
44	2.43022	19:08:48.716227	0.00041	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21630, Time=424401526 FU-A	
45	2.43077	19:08:48.716342	0.00115	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21631, Time=424401526 FU-A	
46	2.43049	19:08:48.716463	0.00121	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21632, Time=424401526 FU-A	
47	2.43044	19:08:48.716564	0.00114	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21633, Time=424401526 FU-A	

Frame 28: 321 bytes on wire (2566 bits), 321 bytes captured (2568 bits) on interface VDeviceNPF_{Dcf558AC-8900-4A08-933C-62F211002ACA}, Id 0

Ethernet II, Src: AxisCom_9c:6b:e7 (acc:18:c9:6b:e7), Dst: Micro-St_e2:48:b5 (98:9c:23:e2:48:b5)

Internet Protocol Version 4, Src: 172.25.201.100, Dst: 172.25.201.50

Transmission Control Protocol, Src Port: 554, Dst Port: 5543, Seq: 2359, Ack: 2381, Len: 267

Real-Time Streaming Protocol

Response: RTPS/I.0.200 OK

CSeq: 0x1n

RTP-Info: urlRTPSP://172.25.201.100:554/axis-media/media.amp/stream?videocodec=h264;seq=21615;rtptime=244001526

Range: npt=now/n/n

Server: GStreamer RTPS server/n/n

Session: NonISFHNvFsaEjtimeout=60

Date: Thu, 18 Nov 2021 19:08:48 GMT/n/n

V/n

An I-Frame and/or P-Frame can consist of several RTP packages. As you can see, all packages that belong to the same I-Frame or P-Frame have the same unique timestamp, while each of the following P-Frames have their own timestamp corresponding to the clock rate. So for each unique I-Frame or P-Frame, the RTP timestamp increases incrementally.

Network_Trace RTP_SLI_Timestamps.pcapng

No.	Time	UTC Time	Package Delta	Source MAC	Source	Source Port	Destination MAC	Destination	Destination Port	Protocol	Length	Type	Info
24	1.37643	19:08:48.423608	0.00010	Micro-St_e2:48:b5	172.25.201.50	62990	AxisCom_9c:6b:e7	172.25.201.100	50000	RTP	46	Unknown	RTP version 3
25	1.37658	19:08:48.423615	0.00007	Micro-St_e2:48:b5	172.25.201.50	62991	AxisCom_9c:6b:e7	172.25.201.100	50001	RTP	46	62991 = 50001 Len=4	
26	1.37675	19:08:48.423648	0.00005	Micro-St_e2:48:b5	172.25.201.50	55423	AxisCom_9c:6b:e7	172.25.201.100	554	RTP	477	FLV RTPSP/172.25.201.100:554/axis-media/media.amp?videocodec=h264	RTPS/I.0
27	1.38215	19:08:48.472180	0.84548	AxisCom_9c:6b:e7	172.25.201.100	554	Micro-St_e2:48:b5	172.25.201.50	55423	TCP	60	554 → 55423 [ACK] Seq=2359 Ack=2381 Win=37824 Len=0	
28	1.42826	19:08:48.716791	0.25611	AxisCom_9c:6b:e7	172.25.201.100	554	Micro-St_e2:48:b5	172.25.201.50	55423	RTP	521	Reply: RTPS/I.0.200 OK	
29	2.42455	19:08:48.716818	0.00127	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	104	Mal. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21615, Time=424401526 SEI	
30	2.42853	19:08:48.716858	0.00440	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21617, Time=424401526 FU-A Start:IDR-Slice	
31	2.42973	19:08:48.716908	0.00140	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21619, Time=424401526 FU-A	
32	2.42884	19:08:48.716888	0.00110	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21618, Time=424401526 FU-A	
33	2.42951	19:08:48.716916	0.00180	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21620, Time=424401526 FU-A	
34	2.42959	19:08:48.715024	0.00188	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21620, Time=424401526 FU-A	
35	2.42917	19:08:48.715137	0.00113	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21621, Time=424401526 FU-A	
36	2.42927	19:08:48.715232	0.00095	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21622, Time=424401526 FU-A	
37	2.42949	19:08:48.715378	0.00138	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21623, Time=424401526 FU-A	
38	2.42954	19:08:48.715489	0.00119	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21624, Time=424401526 FU-A	
39	2.42964	19:08:48.715609	0.00120	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21625, Time=424401526 FU-A	
40	2.42976	19:08:48.715734	0.00125	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21626, Time=424401526 FU-A	
41	2.42980	19:08:48.715825	0.00091	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21627, Time=424401526 FU-A	
42	2.43008	19:08:48.715973	0.00148	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21628, Time=424401526 FU-A	
43	2.43021	19:08:48.716066	0.00113	AxisCom_9c:6b:e7	172.25.201.100	50000	Micro-St_e2:48:b5	172.25.201.50	62990	H264	1442	Fra. PT-DynamicRTP-Type-96, SSRC=0xb1669120, Seq=21629, Time=424401526 FU-A	

Frame 30: 1442 bytes on wire (11536 bits), 1442 bytes captured (11536 bits) on interface VDeviceNPF_{Dcf558AC-8900-4A08-933C-62F211002ACA}, Id 0

Ethernet II, Src: AxisCom_9c:6b:e7 (acc:18:c9:6b:e7), Dst: Micro-St_e2:48:b5 (98:9c:23:e2:48:b5)

Internet Protocol Version 4, Src: 172.25.201.100, Dst: 172.25.201.50

User Datagram Protocol, Src Port: 50000, Dst Port: 62990

Real-Time Transport Protocol

H.264

FU Identifier

- 0 = F bit: No bit errors or other syntax violations
- 11 = nal_ref_idc (NRI): 3
- ...1100 = Type: Fragmentation unit A (FU-A) (28)

FU Header

- 1 = Start bit: the first packet of FU-A picture
- 0 = End bit: Not the last packet of FU-A picture
- 0 = ForbidIdr bit: 0
- ...0 0101 = Nal_unit_type: Coded slice of an IDR picture (5)

H264 NAL Unit Payload

- 1 = First_mb_in_slice: 0
- ...011 = slice_type: I (I slice) (2)
- ...111 = pic_parameter_set_id: 0

[Not decoded yet]

[Expert Info (Warning/Undecoded): [Not decoded yet]]

[Severity level: Warning]

[Error: Undecoded]

The screenshot displays a Wireshark capture of network traffic. The top pane shows a list of packets with columns for Time, UTC Time, Package Delta, Source MAC, Source, Source Port, Destination MAC, Destination, Destination Port, Protocol, Length, Type, and Info. A red box highlights the 'Info' column for several packets, with a red arrow pointing to the text 'End of I-Frame'. The middle pane shows packet details for a selected packet, including Ethernet II, Internet Protocol Version 4, User Datagram Protocol, and Real-Time Transport Protocol. The bottom pane shows the raw packet data in hexadecimal and ASCII. A legend on the right side of the bottom pane identifies I-Frame, P-Frame 1, P-Frame 2, P-Frame 3, and P-Frame 4.

RTCP NTP timestamps

The following network trace can be used for testing what is described below.

If RTCP communication takes place between an Axis device and a video client, so called RTCP sender and receiver reports are exchanged. These reports include important information about the clock-synch within an ongoing RTSP/RTP stream. The Axis device, being the sender of the video, sends the RTCP sender report where the current RTP stream time and the current NTP timestamp in UTC are included.

The screenshot shows a network trace in Wireshark. The top pane displays a list of packets, with packet 9272 highlighted in red. The bottom pane shows the details of this packet, which is a Real-time Transport Control (RTCP) Sender Report. A red box highlights the following fields:

- RTCP timestamp: 426467817
- Sender's packet count: 9549
- Sender's octet count: 11381234
- Timestamp, MSN: 3846251355 (0xe412135b)
- Timestamp, LSN: 4178327345 (0xf8922531)
- [MSW and LSN as RTP timestamp: Nov 18, 2021 19:09:15.970979999 UTC]

A red arrow points from the text "Sender Report of the Axis device" to the highlighted box.

The receiving video client on the other hand exchanges the so called RTCP receiver report with the Axis device to reply to the information previously sent, and to allow for mutual time-synchronisation checks and compensation for time drift between the Axis device and the video client itself. RTCP sender and receiver reports are exchanged every couple of seconds of an ongoing video stream.

The screenshot shows a network trace in Wireshark. The top pane displays a list of packets, with packet 9273 highlighted in red. The bottom pane shows the details of this packet, which is a Real-time Transport Control (RTCP) Receiver Report. A red box highlights the following fields:

- Extended highest sequence number received: 95837
- Interarrival jitter: 34
- Last SR timestamp: 592939796 (0x235783f6)
- Delay since last SR timestamp: 150860 (2209 milliseconds)


A red arrow points from the text "Receiver report of the video client" to the highlighted box.

SEI timestamps

The following network trace can be used for testing what is described below.

The so called SEI frame is available when this VAPIX parameter is enabled: `Image.IO.MPEG.UserDataEnabled=yes`. Here `Image.IO` corresponds to the default video source, and if multiple video sources are available, the parameter needs to be enabled for each video source.

SEI frames are sent from the Axis device right before every I-Frame and include useful timestamp information. As described in the *VAPIX library*, SEI frames include timestamp information in Linux Epoch time down to 1/100ms accuracy in HEX format.

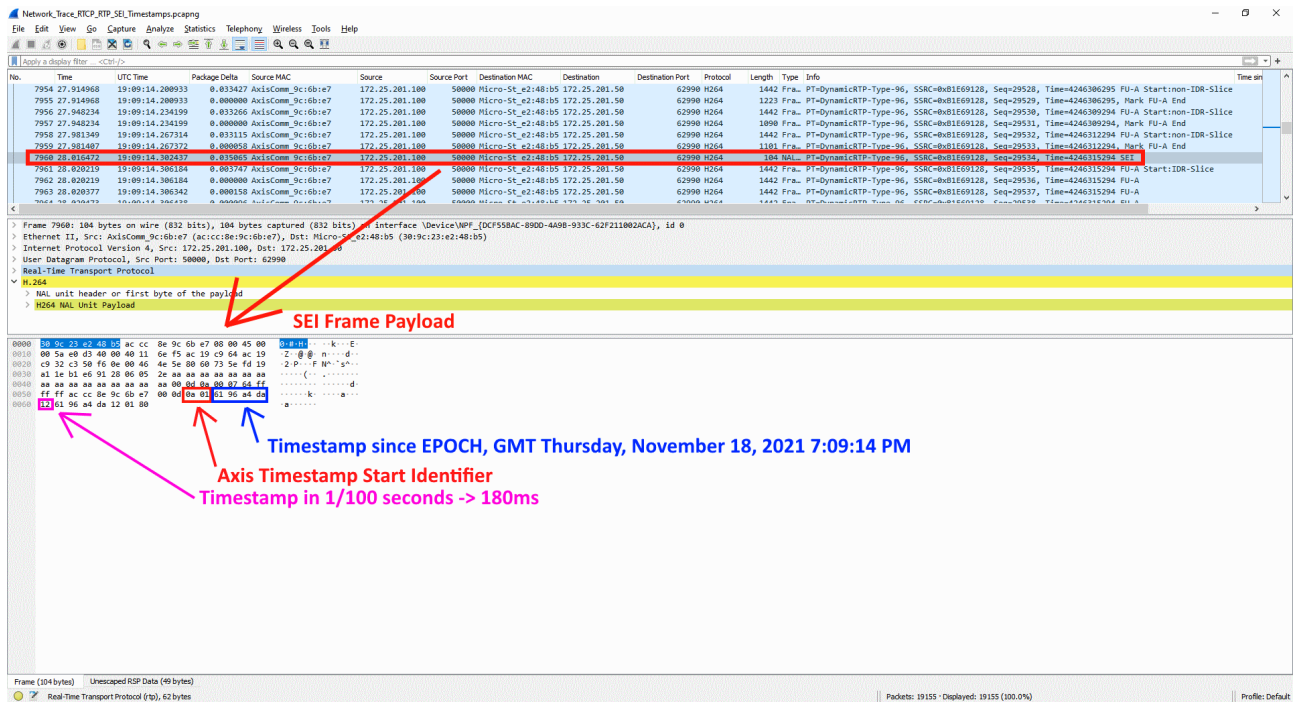

For debugging purposes we recommend using the following online converters:


- <https://www.epochconverter.com/hex>
- <https://www.rapidtables.com/convert/number/hex-to-decimal.html>

Image timestamps

A single image can be downloaded from the Axis device using the following VAPIX request: `http://ip-address/axis-cgi/jpg/image.cgi`. The received JPEG image from the Axis device provides valuable timestamp information from either the JPEG header itself or from the EXIF header data, depending on the AXIS OS version of the Axis device.


AXIS OS 8.40 and higher

From AXIS OS 8.40, the EXIF header data can be used to obtain timestamp information as you can see in the screenshot below. For debugging purposes, a simple windows application such as JPEGSnoop or EXIF in Linux OS can be used to obtain the information provided from the EXIF header. Go to the following source for more information about JPEG and EXIF timestamp header information: *Exif 2 specification*.

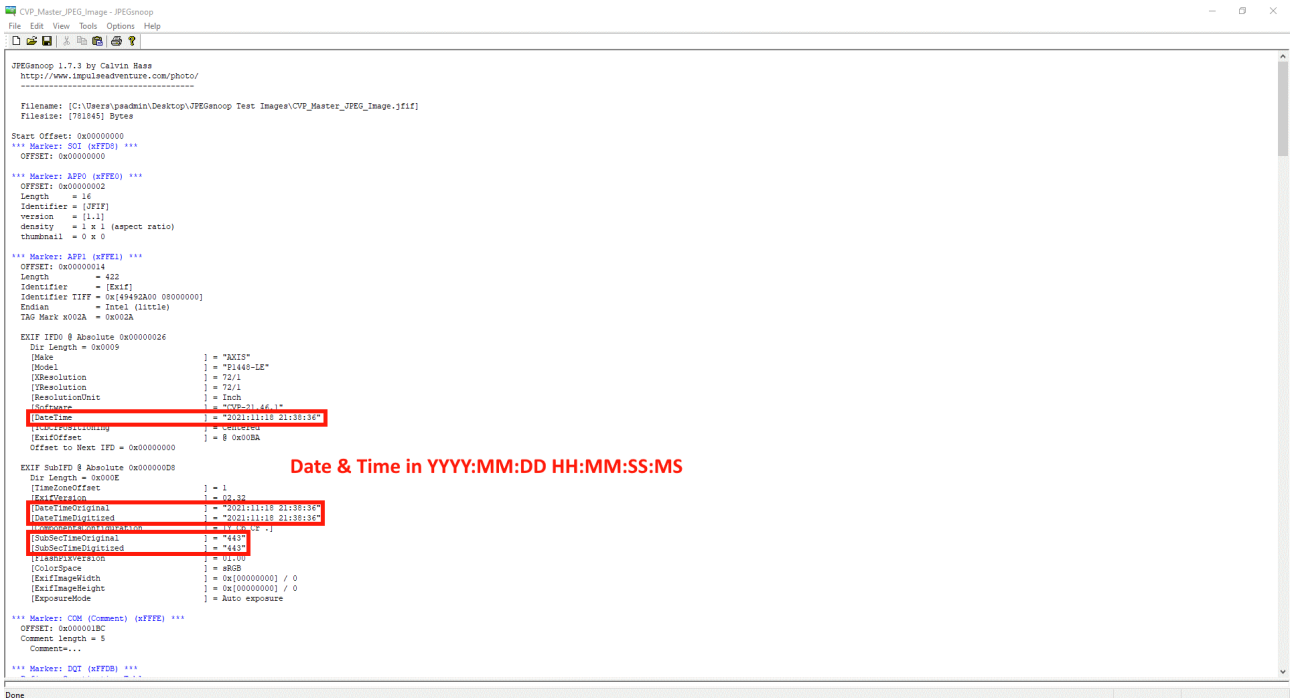

AXIS OS 6.50 and lower

Since the EXIF header data is not available in older AXIS OS versions, the plain JPEG comment header can be used to receive timestamp information. An application such as the HxD editor can be used to obtain the timestamp information in HEX-format, which in turn can be converted to human readable time format using a Linux EPOCH time converter, e.g. <https://www.epochconverter.com/hex>. For the 1/100 seconds information, a simple Hex to decimal converter can be used, e.g. <https://www.rapidtables.com/convert/number/hex-to-decimal.html>.

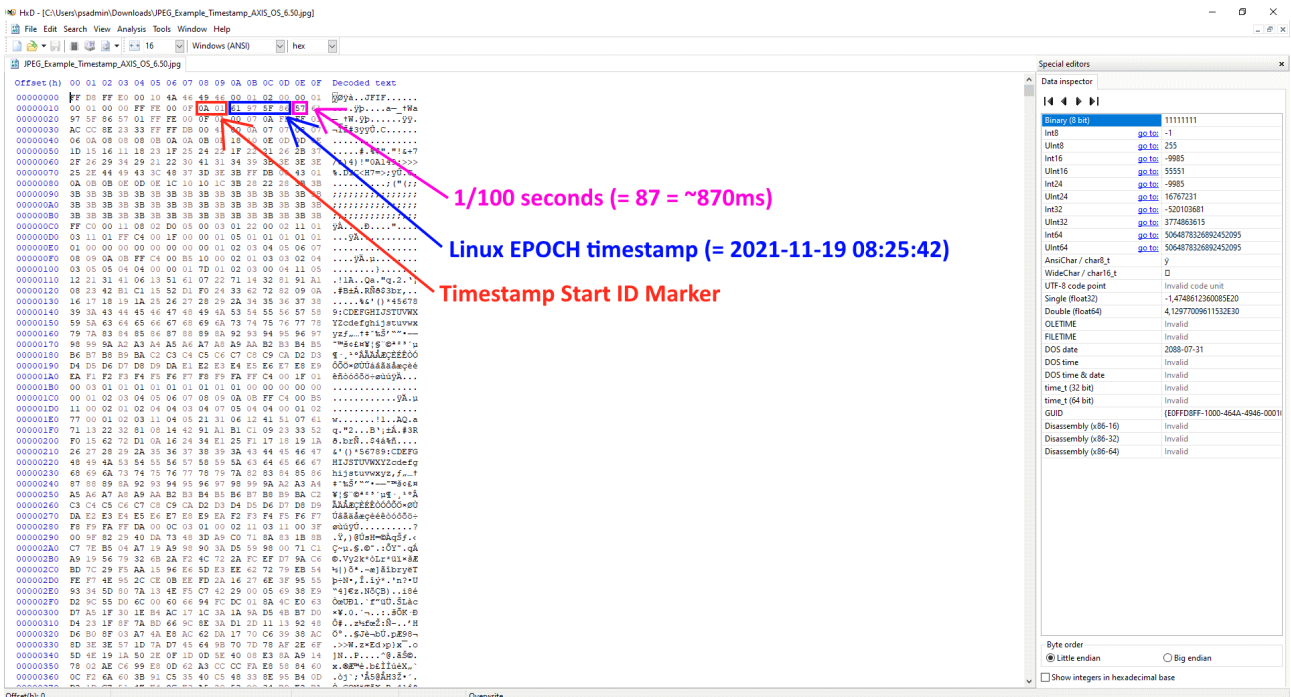

These sample images can be used for testing:





Metadata via RTSP

Generally speaking, metadata in Axis devices consists of three different types: event, PTZ, and analytics. The metadata is encapsulated in an RTP/TCP stream that can be requested from the Axis device. We discuss the different types of metadata in the sections below. See also the white paper *Unlocking the power of scene metadata*.


Event and PTZ metadata

As of AXIS OS 5.40, Axis devices have been capable of sending event and PTZ metadata to a receiving 3rd party application, such as a video management system. The event and PTZ metadata is sent only when the state of the Axis device changes, meaning that the data stream is not constant. Some common examples of event metadata are the manual trigger, virtual inputs, and storage-related triggers. For mechanical PTZ cameras, the metadata includes positioning data as well as information on when a PTZ preset is reached or when the device moves.

Analytics metadata

Analytics-related metadata has been available since AXIS OS 9.50. Unlike the event and PTZ metadata stream described above, analytics metadata is streamed constantly from the Axis device to receiving clients, even if nothing happens in the scene. Typical examples of analytics metadata are motion or object detection coming from Axis analytics applications (ACAPs) such as AXIS Video Motion Detection. As of AXIS OS 10.10, AXIS Object Analytics changed from using the Axis Object Analytics engine to AXIS Analytics Scene Description. For more information, click *here*. You can also find out more about AXIS Object Analytics *here*.

A sample network trace that illustrates how metadata information is transferred can be downloaded *here*. You can use Wireshark to search for specific metadata events within the RTP/TCP stream, as illustrated in the screenshot below.

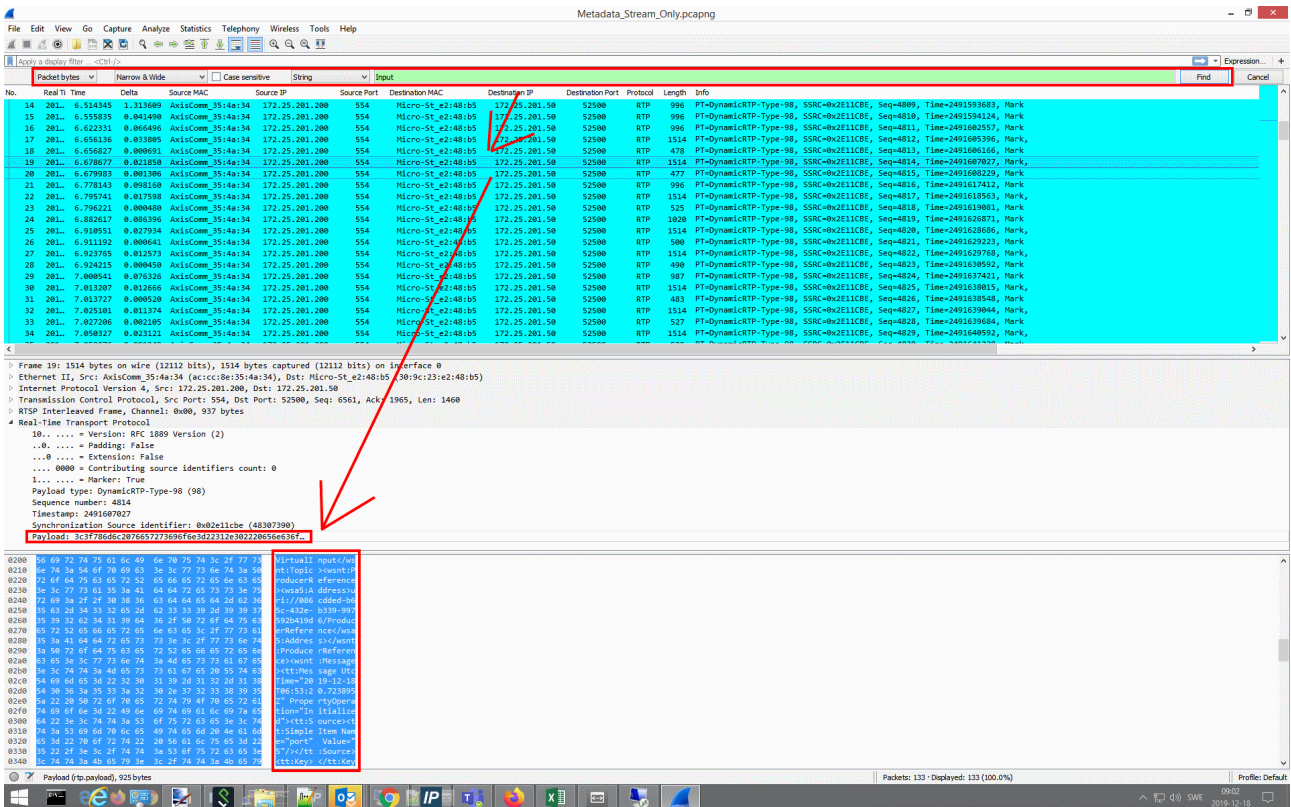

In the following sections you can read more about how to get started and perform further testing.

Receiving metadata via RTSP

Metadata information can be fetched from an Axis device by opening an RTSP stream that uses the TCP transport protocol. The AXIS Metadata Monitor can be used as a simple test tool to request metadata from an Axis device. You can download [AXIS Metadata Monitor](#) *here* and install it on a computer in order to connect to an Axis device in your network. Below is a sample list of RTSP requests for receiving metadata events from an Axis device.

RTSP request	Description
<code>rtsp://ip-address/axis-media/media.amp?event=on&video=0</code>	Event metadata excluding video stream.
<code>rtsp://ip-address/axis-media/media.amp?event=on&analytics=polygon&video=0</code>	Event and video analytics metadata excluding video stream.
<code>rtsp://ip-address/axis-media/media.amp?event=on&analytics=polygon&ptz=all&video=0</code>	Event, video analytics and PTZ metadata excluding video stream.
<code>rtsp://ip-address/axis-media/media.amp?event=on</code>	Event metadata including video stream.
<code>rtsp://ip-address/axis-media/media.amp?event=on&video=1&audio=1</code>	Event metadata including video and audio stream.
<code>rtsp://ip-address/axis-media/media.amp?event=on&video=0&audio=1</code>	Event metadata excluding video, but including audio stream.

RTSP request	Description
rtsp://ip-address/axis-media/media.amp?event=on&video=0&eventtopic=axis:CameraApplicationPlatform/VMD/Camera1ProfileANY	Event metadata excluding video and filtering only for AXIS Video Motion Detection (VMD) alarms.
rtsp://ip-address/axis-media/media.amp?event=on&video=0&eventtopic=onvif:Device/axis:IO/VirtualPort	Event metadata excluding video and filtering only for the manual trigger event.

Additional parameters such as camera=2 to camera=9 can be added to the above requests to e.g. receive metadata events from a different video channel. This is useful when the Axis device supports more than one video source or if different view areas are configured. In the example below we use AXIS Metadata Monitor to connect to an Axis device by using one of the RTSP requests above together with the IP address of the Axis device and its access credentials.

Seq#	Timestamp (UTC)	Category	Event Topic Tree	Info
121	12:07:08.282	Event	Device/IO/VirtualInput	[INIT] port = 40; active = 0;
122	12:07:07.426	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 1; Failed = 0;
123	12:07:13.773	Event	PTZController/ControlQueue	[INIT] PTZConfigurationToken = 1; queue_owner = ;
124	08:50:11.363	Event	VideoSource/LiveStreamAccessed	[INIT] accessed = 1;
125	12:07:12.015	Event	VideoSource/DayNightVision	[INIT] VideoSourceConfigurationToken = 1; day = 1;
126	12:07:08.041	Event	Device/IO/VirtualInput	[INIT] port = 17; active = 0;
127	12:07:08.290	Event	Device/IO/VirtualInput	[INIT] port = 52; active = 0;
128	12:07:07.428	Event	PTZController/PTZReady	[INIT] channel = 6; ready = 0;
129	12:07:07.815	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 6; Failed = 0;
130	12:07:58.406	Event	Device/Status/SystemReady	[INIT] ready = 1;
▶ 131	12:07:08.067	Event	Device/IO/VirtualInput	[INIT] port = 29; active = 0;
132	12:07:07.849	Event	Device/IO/VirtualInput	[INIT] port = 6; active = 0;
133	10:25:21.899	Event	Device/Status/Temperature/Below	[INIT] sensor_level = 0;
134	12:07:13.551	Event	PTZController/PTZReady	[INIT] channel = 1; ready = 1;
135	12:07:10.361	Event	MediaClip/Playing	[INIT] AudioOutput = 0; Playing = 0;
136	12:07:08.431	Event	Device/IO/VirtualInput	[INIT] port = 64; active = 0;
137	12:07:07.734	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 8; Failed = 0;
138	12:07:10.233	Event	Device/MQTT/ClientStatus	[INIT] active = 0; connected = 0;

```

-<tt:MetadataStream>
-<tt:Event>
-<wsnt:NotificationMessage>
  <wsnt:Topic Dialect="http://docs.oasis-open.org/wsn/t-1/TopicExpression/Simple">tns1:Device/tnsaxis:IO/VirtualInput</wsnt:Topic>
  <wsnt:ProducerReference>
    <wsa5:Address>uri://7c34806f-fcbe-4566-9f85-ca5478121fac/ProducerReference</wsa5:Address>
  </wsnt:ProducerReference>
-<wsnt:Message>
  <tt:Message UtcTime="2022-01-28T12:07:08.067482Z"PropertyOperation="Initialized">
    <tt:Source>
      <tt:SimpleItem Name="port"Value="29"/>
    </tt:Source>
    <tt:Key/>
  </tt:Message>
  <tt:Data>
    <tt:SimpleItem Name="active"Value="0"/>
  </tt:Data>
</tt:Message>
</wsnt:NotificationMessage>
</tt:Event>
</tt:MetadataStream>

```

As you can see, the Axis device is responding to the RTSP request with all its currently available metadata information and states. A simple way of testing incoming metadata events is to toggle the manual triggers in the web interface.

AXIS Metadata Monitor

File Edit View Capture Help

Address: <https://172.25.201.100/axis-media/media.amp?events=on&ptz=all&video=0>

Filter: Apply Clear Autoscroll

Seq#	Timestamp (UTC)	Category	Event Topic Tree	Info
125	12 07:12 015	Event	VideoSource/DayNightVision	[INIT] VideoSourceConfigurationToken = 1, day = 1;
126	12 07:08 041	Event	Device/IO/VirtualInput	[INIT] port = 17, active = 0;
127	12 07:08 290	Event	Device/IO/VirtualInput	[INIT] port = 52, active = 0;
128	12 07:07 428	Event	PTZController/PTZReady	[INIT] channel = 6, ready = 0;
129	12 07:07 815	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 6, Failed = 0;
130	12 07:58 406	Event	Device/Status/SystemReady	[INIT] ready = 1;
131	12 07:08 067	Event	Device/IO/VirtualInput	[INIT] port = 29, active = 0;
132	12 07:07 849	Event	Device/IO/VirtualInput	[INIT] port = 6, active = 0;
133	10 25:21 899	Event	Device/Status/Temperature/Below	[INIT] sensor_level = 0;
134	12 07:13 551	Event	PTZController/PTZReady	[INIT] channel = 1, ready = 1;
135	12 07:10 361	Event	MediaClip/Playing	[INIT] AudioOutput = 0, Playing = 0;
136	12 07:08 431	Event	Device/IO/VirtualInput	[INIT] port = 64, active = 0;
137	12 07:07 734	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 8, Failed = 0;
138	12 07:10 233	Event	Device/MQTT/ClientStatus	[INIT] active = 0, connected = 0;
139	10 26:09 876	Event	Device/IO/VirtualPort	port = 1, state = 1;
140	10 26:12 866	Event	Device/IO/VirtualPort	port = 1, state = 1;
141	10 26:13 041	Event	Device/IO/VirtualPort	port = 2, state = 1;
142	10 26:13 750	Event	Device/IO/VirtualPort	port = 2, state = 0;

```

<tt:MetadataStream>
<tt:Event>
<wsnt:NotificationMessage>
  <wsnt:Topic Dialect="http://docs.oasis-open.org/wsn/t-1/TopicExpression/Simple">tns1:Device/tnsaxis:IO/VirtualInput</wsnt:Topic>
  <wsnt:ProducerReference>
    <wsa5:Address>uri://7c34806f-fcbe-4566-9f85-ca5478121fac/ProducerReference</wsa5:Address>
  </wsnt:ProducerReference>
  <wsnt:Message>
    <tt:Message UtcTime="2022-01-28T12:07:08.067482Z"PropertyOperation="Initialized">
      <tt:Source>
        <tt:SimpleItem Name="port"Value="29"/>
      </tt:Source>
      <tt:Key/>
      <tt:Data>
        <tt:SimpleItem Name="active"Value="0"/>
      </tt:Data>
    </tt:Message>
  </wsnt:Message>
</wsnt:NotificationMessage>
</tt:Event>
</tt:MetadataStream>
  
```

AXIS P1375 Events

Device events MQTT events

Rules Schedules Recipients Manual triggers

Manual triggers

View area 1
Active/Inactive (On/Off)

View area 2
Active/Inactive (On/Off)

Image Stream Overlay PTZ Audio Privacy mask View area Apps System

Language Date and time Orientation Users ONVIF SNMP

TCP/IP OSC Security Storage IO ports MQTT

Another option would be to use one of the pre-installed Axis analytics applications (ACAPs), such as AXIS Video Motion Detection, to trigger a test alarm or motion in front of the Axis device in order to get motion detection/ analytics based metadata events.

AXIS Metadata Monitor

File Edit View Capture Help

Address: <https://172.25.201.100/axis-media/media.amp?events=on&ptz=all&video=0>

Filter: Apply Clear Autoscroll

Seq#	Timestamp (UTC)	Category	Event Topic Tree	Info
142	12 07:07 734	Event	Device/HardwareFailure/PowerSupplyFailure/PTZPowerFailure	[INIT] Token = 8, Failed = 0;
143	12 07:10 233	Event	Device/MQTT/ClientStatus	[INIT] active = 0, connected = 0;
144	11 25:55 627	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg>desc-</desc></svg>;
145	11 25:57 061	Event	CameraApplicationPlatform/VMD/Camera1Profile1	active = 1;
146	11 25:57 061	Event	CameraApplicationPlatform/VMD/Camera1ProfileANY	active = 1;
147	11 25:57 061	Event	RuleEngine/VMD3/vmd3_video_1	aread = 0, active = 1;
148	11 25:57 061	Event	VideoSource/MotionNam	Source = 0, State = 1;
149	11 25:57 061	Event	RuleEngine/MotionRegionDetector/Motion	VideoSource = 0, RuleName = Profile 1, State = 1;
150	11 25:57 061	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
151	11 25:57 261	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
152	11 25:57 461	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
153	11 25:57 661	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
154	11 25:57 861	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
155	11 25:58 061	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
156	11 25:58 261	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
157	11 25:58 461	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
158	11 25:58 661	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
159	11 25:58 861	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
160	11 25:59 061	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
161	11 25:59 261	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
162	11 25:59 462	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
163	11 25:59 662	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
164	11 25:59 862	Event	CameraApplicationPlatform/VMD/xinternal_data	sviframe = <svg xmlns="http://www.w3.org/2000/svg" version="1.1"></svg>
165	11 26:00 062	Event	CameraApplicationPlatform/VMD/Camera1Profile1	active = 0;
166	11 26:00 062	Event	CameraApplicationPlatform/VMD/Camera1ProfileANY	active = 0;
167	11 26:00 062	Event	RuleEngine/VMD3/vmd3_video_1	aread = 0, active = 0;
168	11 26:00 062	Event	VideoSource/MotionNam	Source = 0, State = 0;
169	11 26:00 062	Event	RuleEngine/MotionRegionDetector/Motion	VideoSource = 0, RuleName = Profile 1, State = 0;

```

<tt:MetadataStream>
<tt:Event>
<wsnt:NotificationMessage>
  <wsnt:Topic Dialect="http://docs.oasis-open.org/wsn/t-1/TopicExpression/Simple">tnsaxis:MediaClip/Playing</wsnt:Topic>
  <wsnt:ProducerReference>
    <wsa5:Address>uri://7c34806f-fcbe-4566-9f85-ca5478121fac/ProducerReference</wsa5:Address>
  </wsnt:ProducerReference>
  <wsnt:Message>
    <tt:Message UtcTime="2022-01-28T12:07:10.361345Z"PropertyOperation="Initialized">
      <tt:Source>
        <tt:SimpleItem Name="AudioOutput"Value="0"/>
      </tt:Source>
    </tt:Message>
  </wsnt:Message>
</wsnt:NotificationMessage>
</tt:Event>
</tt:MetadataStream>
  
```

AXIS Video Motion Detection 4

Profile 1

Profile properties

Include area

Exclude areas

Test alarm Visual confirmation

Trigger an alarm for the currently selected profile.

Examples of metadata events

Further down you will find a (non-complete) table of common metadata and device events available in Axis devices. The type and amount of events that are available depend on the hardware/software capabilities of the Axis device, some of which are:

- Mechanical and/or digital PTZ
- Mechanical and/or digital I/O
- Audio in and audio out capabilities

- Axis analytics applications (ACAPs) such as AXIS Video Motion Detection, AXIS Object Analytics etc.
- 3rd party applications

Metadata/event category	Topic	Possible states
PTZ	PTZController/PTZPresets/Channel1	on_preset=0/1
PTZ	PTZController/Move/Channel1	is_moving=0/1
PTZ	PTZController/PTZReady	ready=0/1
PTZ	PTZController/ControlQueue	queue_owner=userx
I/O	Device/IO/VirtualInput	active=0/1
I/O	Device/IO/Port	state=0/1
I/O	Device/Trigger/DigitalInput	state=0/1
Temperature	Device/Status/Temperature/Above	sensorlevel=0/1
Temperature	Device/Status/Temperature/Below	sensorlevel=0/1
Temperature	Device/Status/Temperature/Inside	sensorlevel=0/1
Temperature	Device/Status/Temperature/Above_and_Below	sensorlevel=0/1
Temperature	Device/Heater/Status	running=0/1
System	Device/Status/SystemReady	ready=0/1
Hardware	Device/Sensor/PIR	state=0/1
Audio	Device/RingPowerLimitExceeded	limit_exceeded=0/1
Hardware	Device/Network/Lost	lost=0/1
Hardware	Device/Network/BlockedIP	address = x.x.x.x
Hardware	Device/Casing/Open	open=0/1
Storage	Storage/Disruption	disruption=0/1
Storage	Storage/Recording	recording=0/1
Hardware	Device/HardwareFailure/StorageFailure	disruption=0/1
Hardware	Device/HardwareFailure/FanFailure	failure=0/1
Hardware	LightControl/LightStatusChanged/Status	state=off/on
Video	VideoSource/LiveStreamAccessed	day=0/1
Video	VideoSource/DayNightVision	accessed=0/1
Video	VideoSource/ABR	abr_error=0/1
Audio	AudioSource/TriggerLevel	triggered=0/1
Audio	AudioControl/DigitalSignalStatus	signal_status=signal/no signal
Video	VideoEncoder/Connections	connected=0/1


Metadata/event category	Topic	Possible states
Video	VideoSource/Connections	connected=0/1
Analytics	VideoAnalytics/Tampering	active=0/1
Analytics	VideoAnalytics/MotionDetection	motion=0/1
Analytics	CameraApplicationPlatform/VMD	active=0/1
Analytics	CameraApplicationPlatform/ MotionGuard	active=0/1
Analytics	CameraApplicationPlatform/ LoiteringGuard	active=0/1
Analytics	CameraApplicationPlatform/ FenceGuard	active=0/1

Axis analytics metadata configuration

From AXIS OS 10.11 and onwards, it's possible to choose dedicated analytics producers within the Axis device or to have multiple analytics metadata producers enabled simultaneously. In the backend, the Axis device can either be configured to produce analytics metadata by using the "Axis video motion tracker", which is the commonly known producer used since AXIS OS 9.50, or by using the newer "Axis object analytics" producer. The "Axis object analytics" producer offers some valuable extensions and more information with regards to analytics data, such as more detailed object classification (human faces, license plate numbers, etc.) that are useful in forensic search scenarios.



AXIS P1375 Network Camera

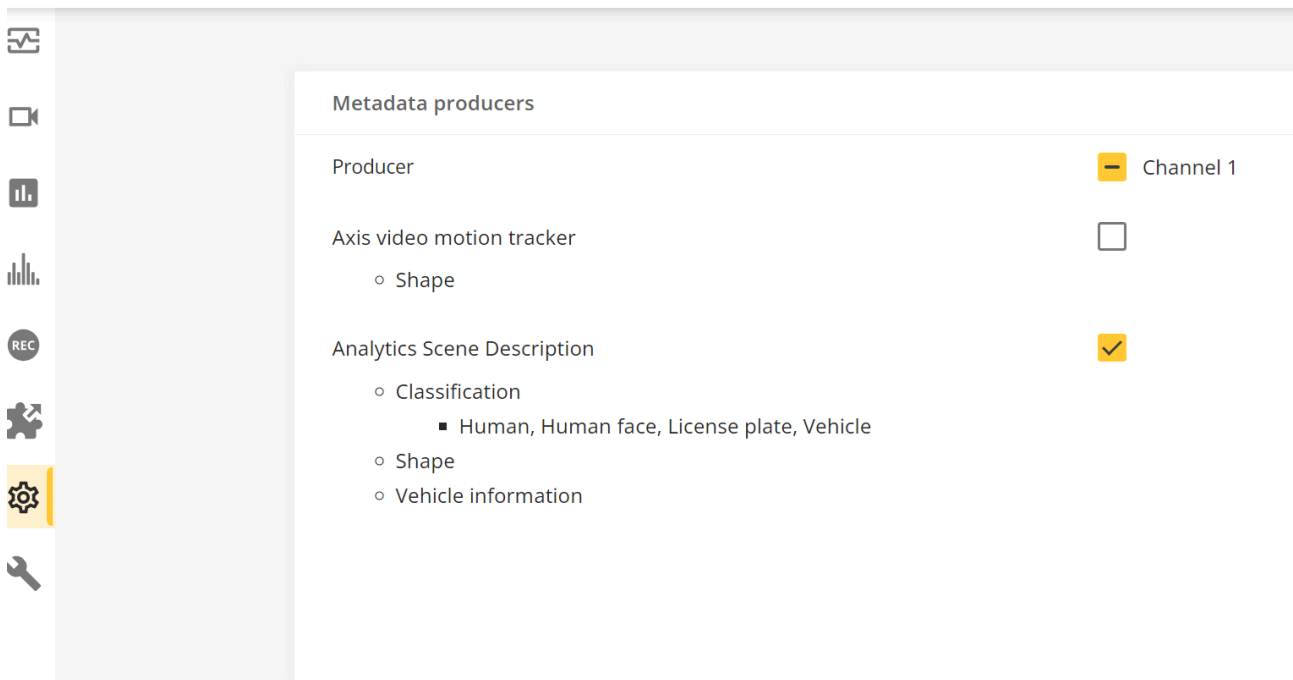

Metadata via WebSocket

From AXIS OS 10.11 and onwards it's possible to subscribe to the metadata stream using the (secure) WebSocket protocol. For more general information about Axis metadata streaming, see *Metadata via RTSP, on page 80*.


In the below example we're using the *WebSocket King extension* for the Google Chrome browser, however there are many other clients available supporting WebSocket communication.

Step 1: Login to your Axis device using the browser the extension has been installed to.

Step 2: In the WebSocket King extension, connect to:


- HTTP: `ws://IP/vapix/ws-data-stream?sources=events`
- HTTPS: `wss://IP/vapix/ws-data-stream?sources=events`

Note that if you're using HTTPS in step 1, you will need to use the same for the connection in the WebSocket King extension.

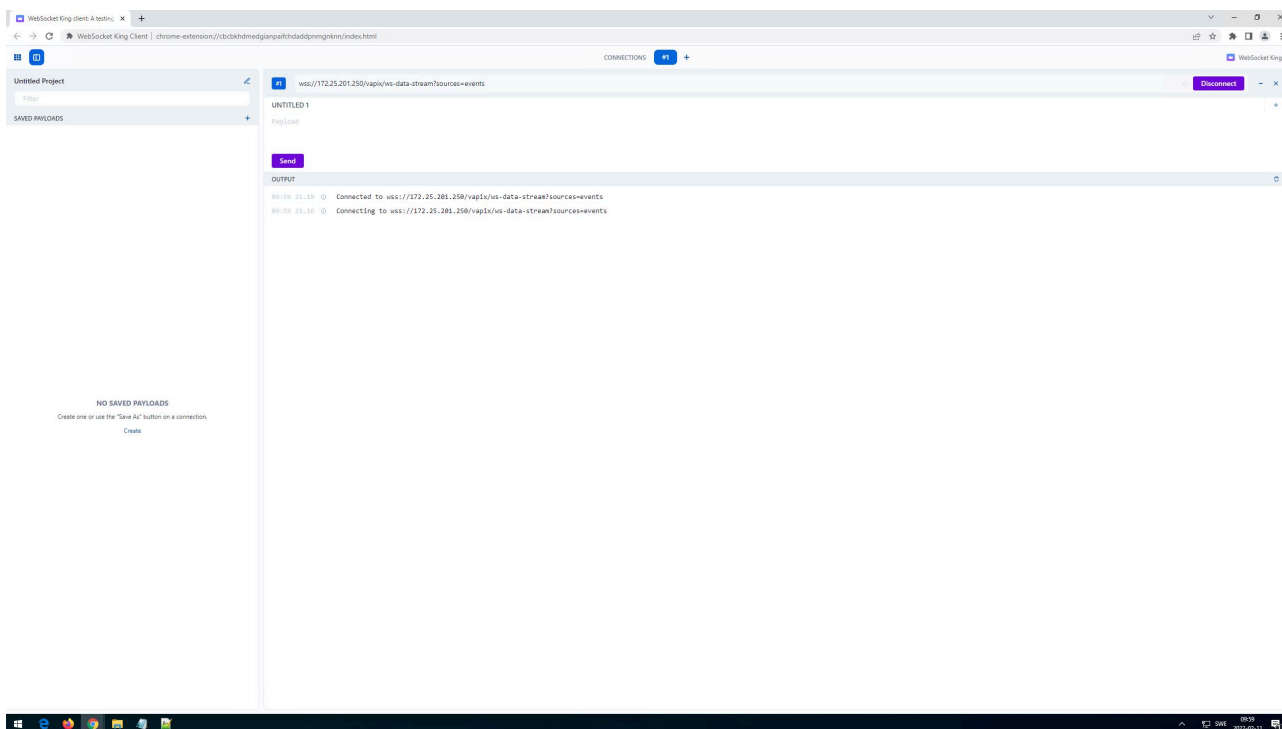

Step 3: Send the following request to receive all events:

```
{
  "apiVersion": "1.0",
  "method": "events:configure",
  "params": {
    "eventFilterList": [
      {
        "topicFilter": ""
      }
    ]
  }
}
```

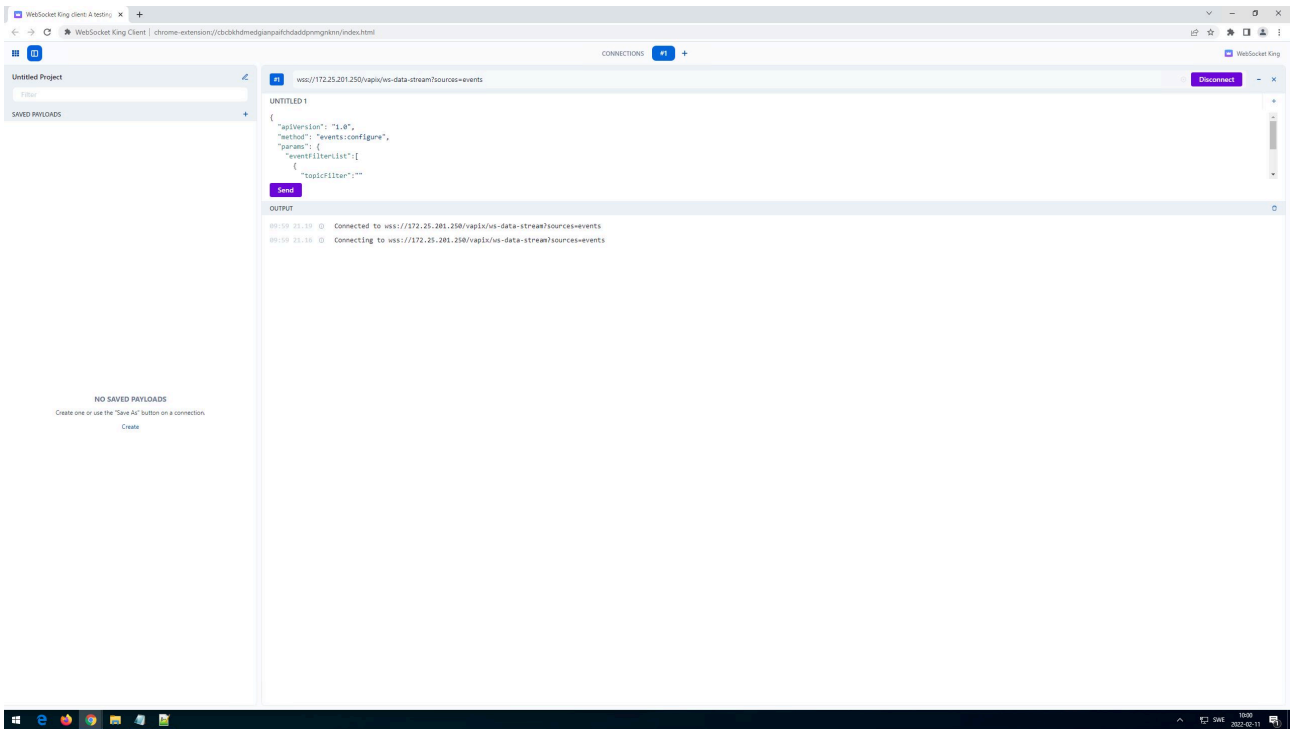


It's also possible to subscribe to a specific topicFilter, for example: "topicFilter": "tns1:Device/tnsaxis:IO/VirtualInput". Go to *Examples of metadata events, on page 83* for more topic examples. Furthermore it's possible to subscribe to a specific port. Below you can see an example of virtual input port 47.


```

{
  "apiVersion": "1.0",
  "method": "events:configure",
  "params": {
    "eventFilterList": [
      {
        "topicFilter": "tns1:Device/tnsaxis:IO/VirtualInput",
        "contentFilter": "boolean (//SimpleItem[@Name=\"port\" and @Value=\"47\"])"
      }
    ]
  }
}
    
```

Step 4: Events will start streaming based on the set filter.

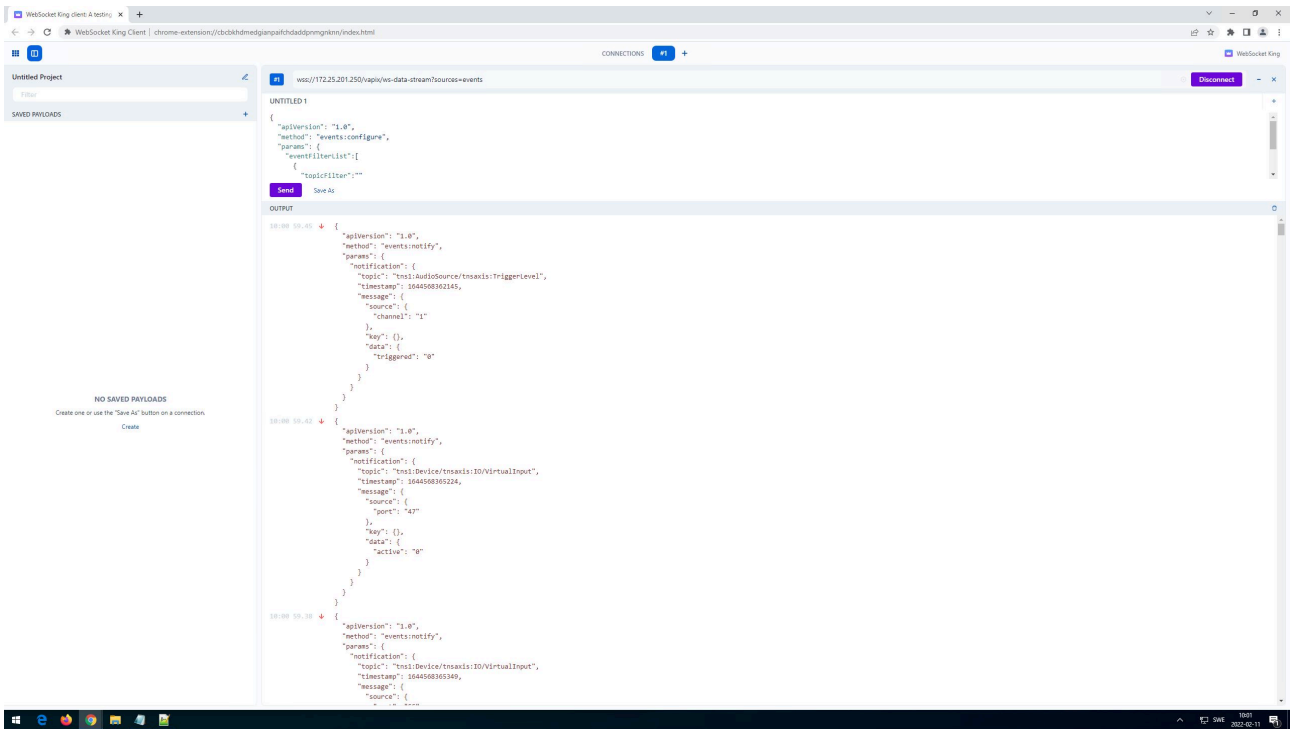

Step 5: Below is an example of toggling the manual trigger on the Axis device, which is reflected in the metadata stream.

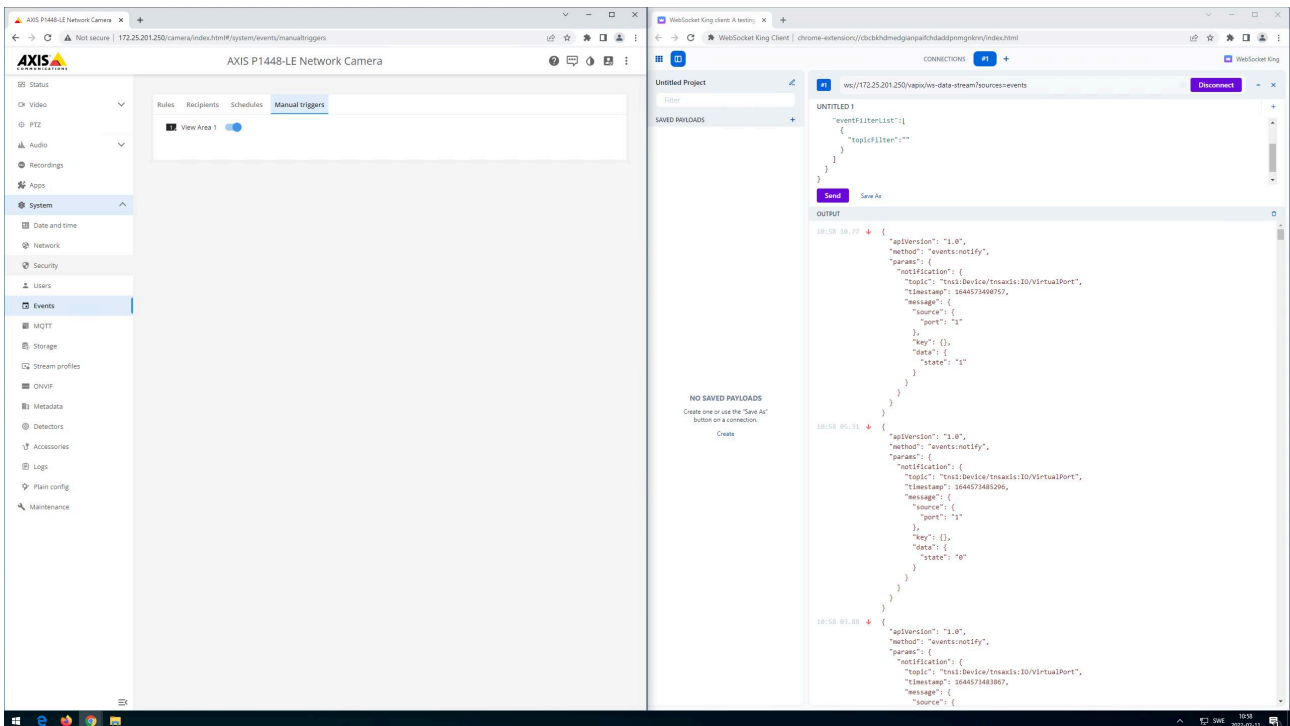

Network protocols

Commonly used network ports

In this section you can read about commonly used network ports used by an Axis device for different services over the network.

Enabled by default

Protocol	Port	Transport	Comments
802.1X	N/A**	EAP	IEEE 802.1X network authentication
Bonjour	5353	UDP	Used by 3rd party applications to discover the Axis device via mDNS discovery protocol (Bonjour)
CDP	N/A**	CDP	Used by network infrastructure to identify the Axis device or to provide PoE negotiation capabilities.
HTTP	80	TCP	General HTTP traffic such as web interface access, VAPIX and ONVIF API interface or <i>Edge-to-edge communication</i> .
HTTPS	443	TCP	General HTTPS traffic such as web interface access, VAPIX and ONVIF API interface or <i>Edge-to-edge communication</i> .
LLDP	N/A**	LLDP	Used by network infrastructure to identify the Axis device or to provide PoE negotiation capabilities.
RTP	Ephemeral port range*	UDP	Used by the Axis device for video/audio streaming
RTSP	554	UDP	Used by the Axis device for video/audio streaming
UPnP	49152	TCP	Used by 3rd party applications to discover the Axis device via UPnP discovery protocol

Protocol	Port	Transport	Comments
SSDP	1900	UDP	Used by 3rd party applications to discover the Axis device via SSDP (UPnP)
WS-Discovery	3702	UDP	Used by 3rd party applications to discover the Axis device via WS-Discovery protocol (ONVIF)

Configuration dependent

Protocol	Port	Transport	Comments
ICMP/PING	N/A**	ICMP	General OSI layer 3 communication
FTP	21	TCP	FTP access to Axis device
SSH	22	TCP	SSH access to Axis device
Telnet	23	TCP	Telnet access to Axis device
DNS	53	UDP	Used by the Axis device to resolve IP address to hostnames
NTP	123	UDP	Used by the Axis device to synchronize time
NTS	4460	TCP	Used by the Axis device to synchronize time. From AXIS OS 11.1
SNMP	161	UDP/TCP	Used by the Axis device to send SNMP communication
SNMP (Traps)	162	UDP/TCP	Used by the Axis device to send SNMP communication
Syslog	514	UDP	Used by the Axis device to send log messages to a remote syslog
Syslog	601	TCP	Used by the Axis device to send log messages to a remote syslog
Syslog	6514	TCP	Used by the Axis device to send log messages to a remote syslog via SSL/TLS
MQTT	1883	TCP	Used by the Axis device to send device events to a MQTT broker
MQTT	8883	TCP	Used by the Axis device to send device events to

			a MQTT broker via websockets
RTSPS	322	UDP	Used by the Axis device for encrypted video streaming (RTSPS/SRTP)
SMB	445	TCP	Used by the Axis device for edge recording to a remote network storage
O3C	3128	TCP	Used by the Axis device for O3C-related cloud communication
SOCKS	1080	TCP	Used by the Axis device for SOCKS-proxy network communication
SFTP	22	TCP	Used by the Axis device to send data via SFTP in an event rule
Action rule: email	Ephemeral port range*	TCP	Used by the Axis device to send images/videos via mail notification in an event rule
Action rule: TCP notification	Ephemeral port range*	TCP	Used by the Axis device to send notifications via TCP in an event rule
Action rule: image/video upload	Ephemeral port range*	TCP	Used by the Axis device to send images/videos via HTTP(S) in an event rule
SIP	5060	UDP/TCP	Used by the Axis device to send SIP communication
SIP	5061	UDP/TCP	Used by the Axis device to send SIP communication via TLS

*Allocated automatically within a predefined range of port numbers according to RFC 6056. More information can be found [here](#).

**There is no TCP or UDP port number associated with this network traffic as these are associated with the transport layer above.

***IEEE 802.1X is only enabled by default on Axis Device ID capable devices.

To find out which Axis product that support Axis Device ID, please go to *Axis product selector* and select *Axis device ID* under *Cybersecurity*.

NTP and NTS (Network Time Sync)

Network Time Protocol (NTP)

Network Time Protocol is used to synchronize computer clocks on the Internet or in local networks. Version 4 (NTPv4) is the current version and is described by RFC 5904. It's fully compatible with NTPv3 and all previous versions and is designed to support the IPv6 protocol and dynamic server discovery. NTP is utilizing UDP as a transport protocol via port 123, which means that package delivery cannot be guaranteed.

Axis devices use two implementations as their current platform, depending on the AXIS OS version.

AXIS OS	Implementation
< 11.0	OpenNTPD
≥ 11.0	Chrony

Chrony is a newer implementation of the Network Time Protocol compared with OpenNTPD. It can perform well in challenging situations where the network is congested or the network connection is intermittent. Chrony can synchronize the system faster and quickly adapt to sudden clock rate changes. Additionally, Chrony supports Network Time Security (NTS) (RFC 8915) so that the time the device gets comes from a trusted source. You can find more information about Chrony [here](#).

NTP uses a hierarchical structure where several NTP servers operating on different levels and accuracy (=stratum) are synced against each other to provide accurate time syncs to network devices. To do so, an NTP server in the network that provides time to local network devices should always sync to one or more NTP servers higher up in the hierarchy to avoid time-fluctuation and increased time accuracy. However, it's possible to operate an NTP server locally in a network in a standalone mode if no other NTP servers are available. More information about how the NTP protocol works can be obtained from public sources such as [Wikipedia](#).

Network Time Security (NTS)

Axis devices with AXIS OS 11.1 or higher support Network Time Security. NTS allows the devices to get time from a trusted source. NTS is a mechanism for using Transport Layer Security (TLS) and Authenticated Encryption with Associated Data (AEAD) to provide cryptographic security for the client-server mode of the NTP.

NTS consists of 2 protocols:

1. NTS Key Exchange (KE): Exchange the necessary keys between the NTP client and server via Transport Layer Security (TLS). Once key exchanges are done, the TLS channel will be closed. The NTP client also knows which NTP server to query.
2. NTP Authentication: The NTP client queries the time to the NTP server. Both parties authenticate NTP time synchronization packets using the results of the TLS handshake.

More public information about NTS can be found [here](#).

Sync process

OpenNTPD

The following sections illustrate the steps taken during a complete NTP synchronization while using OpenNTPD. *This network trace* can be used as a reference for below steps and shows a complete NTP synchronization from the first phase until the Axis device is in full NTP sync with the configured NTP server.

- **Phase 1:** It starts with the initial time query. The very first time-sync from an Axis device to an NTP server is a "universal sync" which means that any time provided by the NTP server will be taken by the Axis device as system time. Phase 1 is usually initiated when configuring the Axis device to sync against an NTP server (enable NTP), when the Axis device is restarted or when an upgrade is initiated that also results in a restart of the Axis device.
- **Phase 2:** After phase 1 follows a consolidation phase, where a number of time-sync requests from the Axis device against the NTP server are performed in between a 6 s – 60 s interval + 10 % randomization apart in order to align further with the NTP server to assure a close time-sync. The number of time-syncs vary depending on accuracy and trust according to the NTP protocol, but 5-15 time-syncs are usually needed.

NTP sync

NTP servers: 172.25.201.104

Synced: No

Due for next sync: 6 sec

Time offset: -

Refresh information

NTP sync

NTP servers: 172.25.201.104

Synced: No

Due for next sync: 33 sec

Time offset: -

Refresh information

- Phase 3: Phase 3 is considered the usual operation mode. The query interval will stabilize after phase 2 between 30 - 1500 s + 10 % randomization apart. In case the time difference increases during normal operation mode, the device will shorten the interval to sync more often in order to compensate for this. And if the time drift is very small, the intervals between two syncs will be larger. Note that the sync state is changing to "Yes", which indicates that the Axis device is in good time-sync with the configured NTP server.

NTP sync

NTP servers: 172.25.201.104

Synced: Yes

Due for next sync: 32 sec

Time offset: 0.002 ms

Refresh information

NTP sync

NTP servers:	172.25.201.104
Synced:	Yes
Due for next sync:	1328 sec
Time offset:	0.026 ms

Refresh information

Chrony

The following sections illustrate the steps taken during a complete NTP synchronization while using Chrony.

- Phase 1:** Phase 1 starts with the initial time query. Chrony will begin with a burst of 4-8 requests to make the clock's first update sooner. Once it gets the reply from the NTP server, it calculates the time difference between the current system time against the timestamp from the NTP server. In our implementation, we set the Chrony to step the system clock if the adjustment is larger than 0.1 seconds, but only in the first clock update since chrony was started. If the time difference is less than 0.1s, the Chrony will enter slew mode. The max rate that Chrony allowed to slew the time is set to 83333.333ppm (1/12s). Once the time is synchronized, you will see "yes" on the webpage.

Time sync status

```
Time servers 172.25.201.104
Synchronized Yes
Next sync:   59 sec
Time offset: 0.001 ms
```

- Phase 2:** Phase 2 is considered the usual operation mode. Once the time is synchronized, the general query polling interval to the NTP server is set to 64 seconds. Most of the Axis devices have a built-in real-time clock (RTC). The system will copy the clock from the RTC on the boot. To maintain the accuracy of the RTC, we enabled chronyd to copy the system time to the RTC every 11 minutes. Please be aware that chronyd will not track RTC drift. One of the main activities of the chronyd program is to work out the rate at which the system clock gains or loses time relative to real time. Whenever chronyd computes a new value of the gain or loss rate, it will record the value at `/var/lib/chrony/drift`. This can also help stabilize the initial synchronization on the next start.

NTS Sync process

To configure NTS, go to System > Date and time, and select Automatic date and time (manual NTS KE servers). You can either input the IP address of the NTP KE servers or the hostname (make sure the DNS server is properly configured). Here is an example of successful time sync via NTS:

Synchronization

- Automatic date and time (manual NTS KE servers) ⓘ
- Automatic date and time (NTP servers using DHCP)
- Automatic date and time (manual NTP servers)
- Custom date and time

Manual NTS KE servers

sth1.nts.netnod.se

sth2.nts.netnod.se

Time zone

Europe/Stockholm

Time sync status

```

Time servers  sth1.nts.netnod.se, sth2.nts.netnod.se
Synchronized  Yes
Next sync:    60 sec
Time offset:  0.262 ms
    
```

The behaviors of the time sync process are almost identical to those we mentioned in the above Chrony sync process. Here we mainly focus on the key exchange and secure part.

- **Phase 1**The Chrony client starts communicating with the KE server by establishing a TLS channel. That follows the key exchange. In the key exchange process, the client receives secret keys and cookies to be used later. The cookies contain secret keys only understood by the NTP server. The KE server also notifies the client which NTP server to query. Once the exchange is done, the TLS channel will be terminated.
- **Phase 2**The Chrony client directly contacts the NTP server. It encrypts the query by the key it gets from phase 1. In that query, a cookie is also included. Once the server receives the query, it knows how to read the query. The server will respond to the client with a signed query. The client validates the signature in the incoming packet and then sets the time knowing it was sent from the correct server.

Common log messages

The following common log messages from Axis devices can be seen during NTP/NTS time-sync operations as well as during certain error conditions, e.g. if the NTP/NTS server is not operating correctly or cannot be reached. The log messages and their explanations provide a great detail of information on how the NTP/NTS protocol is working in practice. Plus, it's good to get an understanding of the log messages when troubleshooting NTP/NTS protocol related issues.

Situation	Clock	NTP log message	Explanation
Sync	NTPd Linux system clock	ntpd[21696]: reply from 192.168.255.29: offset -0.879648 delay 0.000313, next query 32s	<p>This is a common log message indicating the offset, delay and when the next time-sync is going to be performed.</p> <ul style="list-style-type: none"> • The delay in an NTP server describes the round-trip delay or latency of a timing message passed from client to server and back again. The delay is important so that network delays can be calculated and accounted for by the NTPd process of the Axis device. • The offset in ms indicates the actual time difference between the NTPd process of the Axis device and the NTP server time it's syncing to. • The next query is the time it takes for the Axis device's NTPd process to sync again to the NTP Server. When the "clock is in sync state" (more information below), the query interval is set to larger sync-intervals instead of shorter sync-intervalls that can be seen during the initial time-sync. • The jitter associated with a timing reference indicates the

			<p>magnitude of variance, or dispersion, of the signal. Different timing references have different amounts of jitter. The more accurate a timing reference, the lower the jitter value.</p>
No reply	NTPd Linux system clock	ntpd[21696]: no reply from 192.168.255.29 received in time, next query 30s	The Axis device's NTPd process could not reach the NTP server on the network layer 2 and/or 3.
No reply	NTPd Linux system clock	ntpd[21696]: no reply from 192.168.255.29 received in time, retransmit query 32s	The Axis device's NTPd process could not reach the NTP server on the network layer 2 and/or 3.
Negative delay	NTPd Linux system clock	ntpd[21696]: reply from 192.168.255.29: negative delay -0.000471s, next query 3213s	A state where the Axis device's NTPd process considers the NTP server in an erroneous state. Most likely the time has drifted significantly between the two network interfaces of the Axis device and the NTP server under a very short period of time and the "delay" can no longer be calculated correctly. No sync will take place for a longer period of time.
NTP server denies sync	NTPd Linux system clock	ntpd[21696]: reply from 192.168.255.29: not synced (alarm), next query 3196s	The log message indicates that the NTP server itself denies to synchronize the NTPd process of the Axis device because it considers itself not synchronized to its (lower stratum) NTP server. It's a message that is sent from the NTP server. No sync will take place for a longer period of time.
System clock synced	NTPd Linux system clock	ntpd[21696]: clock is now synced	The log message means that the NTPd process of the Axis device considers itself synced to the NTP server. This will cause the time-sync interval to be set to larger sync intervals since less syncs

			are needed. Directly after the sync state is reached, the RTC clock of the Axis device can be updated by the NTPd process.
System clock unsynced	NTPd Linux system clock	ntpd[21696]: clock is now unsynced	The log message means that the NTPd process of the Axis device is not considering itself in sync with the NTP server. This state should not last long. When in this state, no RTC clock updates can be performed. If the logs indicate that the camera is in an unsynced state for many hours or days, it means that the NTP server is drifting faster than the Axis device's NTPd process can account and compensate for.
NTP server reachable	NTPd Linux system clock	ntpd[21696]: peer 172.27.0.41 now valid	The log message indicates that the NTPd process of the Axis device could successfully verify the NTP server(s) integrity it's supposed to sync to.
NTPd drift file	NTPd Linux system clock	1323.2313	This value is in ppm (=microseconds) and indicates the amount of drift of the Linux system time that needs to be considered and compensated for by the Axis device's NTPd process. Note that this has nothing to do with the time drift that can occur on the RTC clock. Can be obtained via <code>/var/lib/openntpd/db/ntpd.drift</code> .
RTC clock is set	RTC clock	ntpd[21696]: set local clock to Tue May 29 08:34:21 CEST 2018 (offset 0.000168s)	The log message indicates that the NTPd process of the Axis device is updating the RTC clock for the first time after it considered itself in good NTP sync towards the NTP server.
RTC clock is updated	RTC clock	ntpd[21696]: adjusting local clock. The current	When the NTPd process of the Axis device is in "Clock is now in sync"

		time diff is now -76.421369s	state, the RTC clock receives updates. The "current time diff" represents the time difference between NTPd Linux system clock and RTC clock.
Sync	Chronyd Linux system clock	chronyd[19610]: chronyd version 4.2 starting (+CMDMON +NTP +REFCLOCK +RTC +PRIVDROP -SCFILTER -SIGND +ASYNCDNS +NTS -SECHASH +IPV6 +DEBUG)	The log message indicates that the chronyd process of the Axis device is up and running. This log can be seen when you set the devices to sync the time with NTP server.
Sync	Chronyd Linux system clock	chronyd[19610]: Selected source 194.58.207.79 (sth1.nts.netnod.se) chronyd[18836]: Selected source 172.20.45.119	The log message means that the chronyd process of the Axis device successfully verifies the NTP server and selects the NTP server as the time source.
Sync	Chronyd Linux system clock	chronyd[17156]: System clock wrong by 250.930199 seconds chronyd[17156]: System clock was stepped by 250.930199 seconds scheduled[900]: Time was manipulated!	This log can be seen when the chronyd process of the Axis device gets the time from the NTP server and adjust its time to the correct one.
Chronyd drift file	Chronyd Linux system clock	chronyd[19610]: Frequency 1.637 +/- 13.841 ppm read from /var/lib/chrony/drift	The log message can be seen when chronyd process just started. When chronyd computes a new value of the rate at which the system clock gains or loses time relative to real time, it records it here /var/lib/chrony/drift. This allows chronyd to begin compensating the system clock at that rate whenever it is restarted. The first is the rate at which the system clock gains or loses time, expressed in parts per million, with gains positive. The second is an estimate of the error bound around the first value in which the true rate actually lies.

System clock unsynced	Chronyd Linux system clock	chronyd[2235]: Can't synchronise: no selectable sources	This log can be seen when the chronyd process of the Axis device gets a new update from the NTP server. However, the time varies too much and therefore the Axis device decide not to trust it. In the device's webpage, you will see the "Synchronized" status becomes No.
System clock unsynced	Chronyd Linux system clock	time-service: No request received, starting termination process systemd[1]: systemd-timedated.service: Deactivated successfully. systemd[1]: time.service: Deactivated successfully.	This log will show when the chronyd process of the Axis device doesn't get a reply from the NTP server.
NTS	Chronyd Linux system clock	Source 194.58.207.69 changed to 194.58.207.79 (sth1.nts.netnod.se)	This log will show when the chronyd process of the Axis device is redirecting itself from a KE server to an NTP server.
NTS Key Exchange	Chronyd Linux system clock	chronyd[7694]: TLS handshake with 194.58.207.69:4460 (sth1.nts.netnod.se) failed : Error in the certificate verification. The certificate is NOT trusted. The certificate issuer is unknown.	This log will show when using NTS. The system doesn't trust the KE Server. Please ensure the KE server's CA certificate is uploaded into the Axis device.
NTS Key Exchange	Chronyd Linux system clock	chronyd[29971]: NTS-KE session with 194.58.207.10:4460 (194.58.207.10) timed out	This log indicates that the chronyd process of the Axis device cannot establish an NTS-KE session with the servers. Please check the configuration and network settings to see if anything is blocked.

NTS Key Exchange	Chronyd Linux system clock	ntpconfd: No NTS servers available!	This log indicates that the NTS server is not set correctly in the device webpage.
Stop NTP	Chronyd Linux system clock	systemd[1]: Stopping NTP client/server... systemd [1]: Started Time & Date Service. chronyd[12200]: chronyd exiting systemd [1]: chronyd.service: Deactivated successfully. systemd[1]: Stopped NTP client/server.	This log will be shown when you switch to manual date and time instead of NTP.

Multiple time servers

With AXIS OS 9.40.1 or higher it's possible to configure a secondary NTP server in the web interface as well as up to five NTP servers via the VAPIX Time API. The device tries to synchronize with all servers that are configured. With the VAPIX Time API it's possible to configure up to 5 NTP server URLs. Additionally, one NTP server URL can resolve to many addresses, but only one "valid" server per URL is used for synchronization. So if you configure...

pool.ntp.axis.com AND *0.ntp.com* where *pool.ntp.axis.com* resolves as three addresses [146.76.54.5, 146.76.54.56, 146.76.54.5] and *0.ntp.com* resolves to 45.32.76.99

...the actual NTP servers that will be used are ONE valid and reachable address of the first URL and ONE valid and reachable address of the second URL:

(146.76.54.5 OR 146.76.54.56 OR 146.76.54.5) AND 45.32.76.99

The NTP algorithm determines which NTP server to use from the first pool.

With AXIS OS 11.0 or higher, when setting multiple NTP sources, Chrony tries to select the most accurate and stable sources for the synchronization of the system clock. This also applies when setting multiple NTS servers.

External time servers

Axis public NTP server

Axis public NTP server is *ntp.axis.com*, to which cameras connected to the internet can sync its time.

Meinberg NTP server

Meinberg has its own standalone NTP server software that can be installed on Microsoft Windows OS with the possibility to sync against other NTP servers. It also has a standalone operation mode, ideal and simple for standalone environments without network connection to the outside.

Netnod NTS server

Netnod's NTP service, funded by the PTS, is available for free to anyone. Netnod currently provides the following NTS servers.

- nts.netnod.se
- sth1.nts.netnod.se
- sth2.nts.netnod.se

Windows NTP server

By following *these steps*, it's possible to configure your local Windows system as an NTP server.

Note that Windows by default will have a lower NTP time accuracy as well as larger sync intervals, which may not be optimal for good time accuracy.

For Chrony, a common issue with Windows NTP servers is that they report a very large root dispersion (e.g., three seconds or more), which causes chronyd to ignore the server for being too inaccurate.

It's recommended to configure the Windows NTP server with more strict and accurate time accuracy and sync intervals. See the following guides for more information on this:

- [Windows high accuracy time](#)
- [Windows high accuracy time configuration guide](#)

If you use Windows as the NTP server for an offline installation, the Windows NTP server may use the local CMOS clock time. By default, it will report a root dispersion of 10 seconds. See the following guides for more information on how to change this value:

[LocalClockDispersion Entry](#)

[Windows Time service tools and settings](#)

Troubleshooting

Peer clock stratum unspecified or invalid (0)

Implementation	Explanation
OpenNTPD	The Axis device will not accept timestamps if the local NTP server is not synced with high layer NTP servers (<i>Higher NTP hierarchy</i>) as no reliable timestamps are provided.
Chrony	The chronyd process of the Axis device will only synchronize with an NTP server at Stratum 15 or above.

What time is the Axis device sending?

While debugging NTP-related network issues, it can be observed that the Axis device is transmitting a random 64-bit time to the NTP server in order to mitigate the risk of cybersecurity attacks. This does not have any impact on the performance or quality of the NTP time sync itself since the NTP server will still respond with a valid time stamp which the Axis device will apply to its time.

Maximum time difference

Implementation	Explanation
OpenNTPD	Time differences between the Axis device and the NTP server that are larger than 2.145 s (35.75 min / 0.5 h) will result in there being no more time syncs. The reason is that the Axis device will assume that the time coming from the NTP server has changed too drastically and therefore considers the NTP server unreliable. It's recommended to check if the NTP server is functioning correctly and to reconfigure the Axis device to sync with the NTP server again to initiate a new time sync procedure.

Counteract clock drifting

If the system clock has a significant drift, the Axis device's clock will never achieve a close enough offset to the NTP server. However, the system clock should not drift at a rate of that magnitude.

Implementation	Explanation
OpenNTPD	The NTP client can adjust the system clock to 500 ppm (part per million) at most. It can counteract a clock drift of 1.8 seconds per hour.
Chrony	The Chrony client can adjust the system clock to 83333.333 ppm (part per million) at most. In theory, it can, counteract a clock drift of 300 seconds per hour.

Precision Time Protocol

Precision Time Protocol (PTP) is a network protocol that ensures highly accurate time synchronization between devices (clocks) connected over Ethernet or IP networks. While NTP can achieve millisecond-level accuracy, PTP can achieve nanosecond accuracy.

PTP uses master-client architecture, where the master lock is the time source, and the client clock syncs its time to the master clock.

There are four types of clocks defined by PTP:

- An **Ordinary Clock** has a single interface that runs PTP. This clock can act as either master or client. The end-device is usually an ordinary clock.
- A **Boundary Clock** has two or more interfaces running PTP. This clock synchronizes time with an upstream master, and distributes the time to downstream clients.
- A **Transparent Clock** doesn't act as either master or client, but simply forwards PTP messages.
- A **Grandmaster Clock** is the most accurate clock in the network, to which all others will synchronize.

PTP relies on TAI (International Atomic Time) for synchronization, ensuring high precision and continuity, as TAI is unaffected by leap seconds. Meanwhile, the Linux kernel's System Time operates on UTC (Coordinated Universal Time), which the system converts to the user's local time based on the configured time zone for display and application purposes. TAI currently leads UTC by 37 seconds.

We added support for PTP as of AXIS OS 12.7 Our implementation leverages the IEEE 1588 PTPv2 default profile with hardware time-stamping, which requires a compatible Network Interface Card (NIC) that handles the timestamp information directly, with no software processing. This makes for much higher accuracy. At the time of writing, PTP is only supported on devices with ARTPEC-8, ARTPEC-9, 8M-MINI, 8M-NANO, and 6SX chipsets.

The Best Master Clock Algorithm (BMCA) determines the best clock to act as the Grandmaster in a PTP network. It does so by examining several parameters such as priority, Clock Class, Clock Accuracy, and Clock Identity. Axis devices can act as both master and client. By default, both priority1 and priority2 are set to 248, allowing other devices in the network to be the master clock.

By default, the Axis device still uses NTP. To switch to PTP, log into the device, go to System > Time and location, and select "Automatic date and time (PTP)" under Synchronization. Note that running both NTP and PTP simultaneously is not supported. The current PTP implementation does not support software mode.

QoS (Quality of Service)


QoS provides the means to guarantee a certain level of a specified resource to selected traffic on a network. Quality can be defined as e.g. a maintained level of bandwidth, low latency, no packet losses, etc. The main benefits of a QoS aware network can be summarized as:

- The ability to prioritize traffic and thus allow critical flows to be served before flows with lesser priority
- Greater reliability in the network, thanks to the control of the amount of bandwidth an application may use, and thus control over bandwidth races between applications

To use QoS in a network with Axis video products the following requirements need to be met:


- All network switches and routers must include support for QoS. This is important to achieve end-to-end QoS functionality
- The Axis video products used must be QoS enabled

Imagine that the network in the first illustration below is an ordinary (non-QoS aware) network. In this scenario, PC1 is watching video streams from Camera 1 and Camera 2, with each streaming at 25 Mbps. Suddenly, PC3 starts a file transfer from PC3. In this scenario the file transfer will try to use the full 100 Mbps capacity between Router 1 and Router 2, whilst the video streams will try to maintain their total of 50 Mbps. We can no longer guarantee the amount of bandwidth given to the surveillance system and the video frame rate will probably be reduced. At worst, the FTP traffic will consume all the available bandwidth.

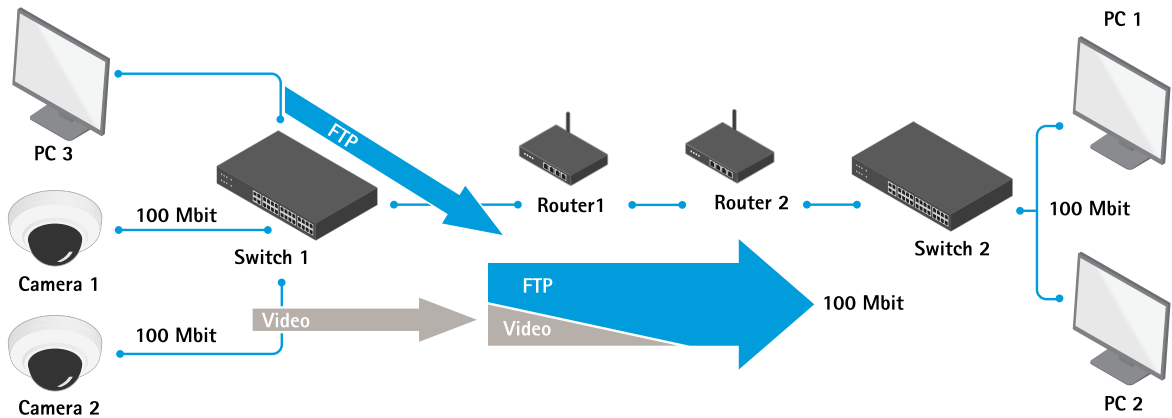

A non-QoS network

In the next illustration, the network is QoS-aware and uses the DiffServ model (see the section on QoS models). Router 1 has been configured to reserve up to 50 Mbps of the available 100 Mbps for streaming video. FTP traffic is allowed to use 20 Mbps, and HTTP and all other traffic can use a maximum of 30 Mbps. Using this division, video streams will always have the necessary bandwidth available. File transfers are considered less important and get less bandwidth, but there will still be bandwidth available for web browsing and other traffic. Note that these maximums only apply when there is congestion on the network – if there is unused bandwidth available, this can be used by any type of traffic. By using QoS we allow the network applications to co-exist on the same network, without consuming each other's bandwidth.

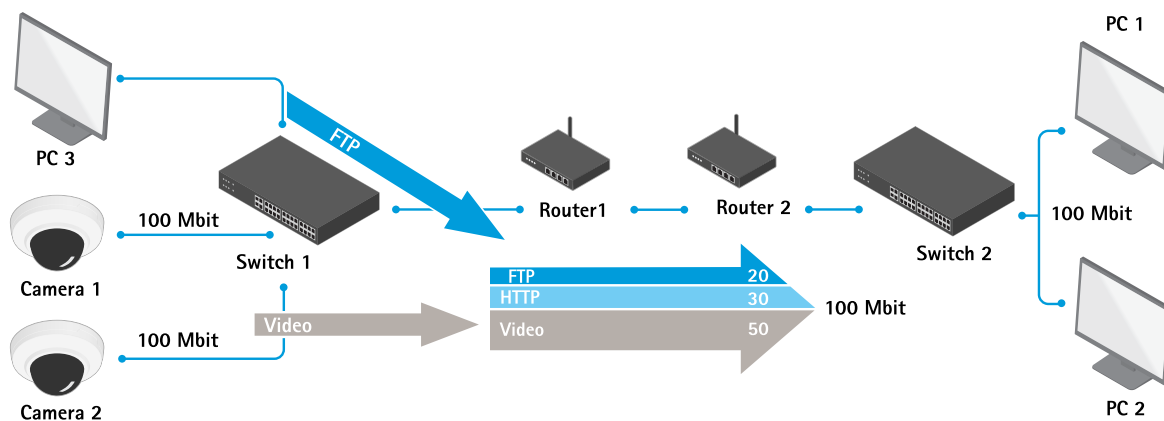

A QoS-aware network

Further reading

For further reading and more detailed documentation about the Quality of Service standard, see the following links:

- [RFC 2475 – An Architecture for Differentiated Services](#)
- [RFC 2597 – Assured Forwarding PHB Group](#)
- [RFC 2598 – An Expedited Forwarding PHB](#)
- [RFC 3168 – The Addition of Explicit Congestion Notification \(ECN\) to IP](#)
- [RFC 1633 – Integrated Services in the Internet Architecture: an Overview](#)

QoS models

There are several different ways (models) of implementing QoS. Axis products use the DiffServ model, for greater scalability and flexibility. See below for more information.

The IntServ model

The IntServ model, or Integrated Services model uses a protocol called RSVP (Reservation Setup Protocol), which is used to reserve a certain traffic quality in the network. Prior to use, each application in an IntServ QoS network reserves its own resources and the router either grants or denies the request. When a reservation request is received, the routers need to find a path that can support the IntServ request and also the route that offers the best services. The major problem with this model is scalability. As the network increases in size, the connections database will grow to enormous proportions and it will be both difficult and ineffective to keep track of all reservations. Another drawback is the model's inflexibility – the maximum amount of the resource in question that each type of traffic will ever receive is the maximum specified in the model, even if there are other unused resources available.

The DiffServ model

The Differentiated Services (DiffServ) model was introduced in 1998. It is based on two major components:

- Packet marking
- Router queuing disciplines

The applications in a DiffServ network mark their traffic so the router knows which service to apply to the packet. The marking is done in the IP header, by setting a field called the DSCP (Differentiated Services Codepoint). This is a 6-bit field that provides 64 different class IDs. Each DSCP value represents a QoS class, also

known as a behavior aggregate. Thus, different applications can mark their own traffic with the same DSCP value. The intelligence of a DiffServ network is setup in the routers, where a particular DSCP value is mapped to a particular routing behavior. This behavior is referred to as a Per-Hop Behavior (PHB) and is implemented in the router using different queuing disciplines.

The DiffServ model abandons the concept of states as used in IntServ, and routers operate in a connectionless mode. This adds scalability to the system, since each router works independently, unaware of the network size and complexity. This model is also more flexible, as the classes of service are not strictly defined. Resources over and above the value specified as the maximum when resources are limited can be freely exploited whenever available. The main benefit of using this model in Axis products is that the products mark their own traffic, instead of letting the boundary nodes of the DiffServ domain do so. The conditioning algorithms in the boundary node cannot, for example, distinguish video over HTTP from audio over HTTP – they will only see HTTP, and probably provide a much lower level of service than actually required. To allow a node outside the DS domain to classify its own traffic:

- The boundary router must be correctly configured
- The camera must be set up as a trusted node

Per-Hop Behaviors (PHBs) define the router's forwarding treatment for a certain class of traffic. Classes of traffic are also known as Behavior Aggregates (BA). Members of the BA are marked with the same DSCP value. There are four recommended PHBs defined, each mapped to one or more DSCP value.

The Default PHB: The default PHB provides the traditional best-effort service. It is represented by DSCP value 000000 (NOTE: 6-bits set to 0) and it must be available at any DiffServ router. This is the forwarding treatment applied to all non-DiffServ aware applications.

The Class-Selector PHB: To preserve backward compatibility with the old TOS field definition, the class-selector PHB defines a DSCP value of the form xxx000. The three bits represent the IP Precedence defined by a Type of Service aware network. The Class-Selector PHB ensures that DiffServ compliant nodes can coexist with IP Precedence-based nodes.

Expedited Forwarding: The Expedited Forwarding (EF) PHB provides a low loss, low latency, low jitter and guaranteed bandwidth service and can be considered the top priority behavior. Applications such as VoIP require this kind of robust service. The recommended DSCP value for EF is 101110.

Assured Forwarding: With Assured Forwarding (AF) traffic can be divided into four different classes. Each class is usually assigned a specific amount of bandwidth.

Within each class it is possible to specify three different drop precedence values. This value denotes the order in which packets will be dropped when there is congestion. A packet with a higher drop precedence will be dropped first. This gives us an AF matrix, and hence AF is often denoted AF_{xy}, where x is the class number and y is the drop precedence. The table below shows the DSCP values recommended for the AF PHB. This gives us an AF matrix, and hence AF is often denoted AF_{xy}, where x is the class number and y is the drop precedence. Table 1.1 shows the DSCP values recommended for the AF PHB.

Drop precedence	Class 1	Class 2	Class 3	Class 4
Low dP (1)	001010	010010	011010	100010
Medium dP (2)	001100	010100	011100	100100
High dP (3)	001110	010110	011110	100110

Table 1

DiffServ domain

A DiffServ domain (DS-domain) is a network that has been set up according to a particular DiffServ specification, and which has a set of DSCP values mapped to certain PHBs. As each router in a DiffServ domain forwards traffic based on DSCP value mapping, we can only guarantee that we get the correct forwarding treatment within our own DS-domain. As soon as a packet leaves the domain we can no longer guarantee how other routers will map our DSCP values. The same goes for incoming traffic – we must reclassify incoming traffic to match our rules. This means we must mark the traffic with a DSCP value valid in our domain. This is usually

done by looking at the packet header and setting a new DSCP value based on the source address, port numbers, etc. The marking process is called traffic conditioning and is done at the boundary nodes of the DS domain.

VLAN 802.1P model

IEEE 802.1P defines a QoS model at OSI Layer 2 (L2, Data Link). This is called CoS, Class of Service, and adds an extra 3-bit field (called user-priority) to the VLAN MAC header. This splits traffic into 8 different classes. Priority is set up in the switches, which then use different queuing disciplines to forward the packets correctly. Although the 802.1P CoS works well, it lacks scalability and cannot provide end-to-end guarantees. We cannot assume the L2 protocol to be constant on a larger network or on the Internet. Therefore, most of today's high-end switches implement mapping from L3 (IP DSCP) QoS to L2 CoS.

Routers

The DiffServ implementation in routers

Routers handle the forwarding of network traffic from one network to another. All packets entering from one network (see Figure 3) are queued before being processed, to determine which network they should be forwarded to. The DiffServ implementation in routers is a way of providing forwarding treatment based on the DSCP of an incoming packet. This is done by using queuing disciplines and prioritizing of packets. Note that router configuration is brand dependent and is not covered by this document.

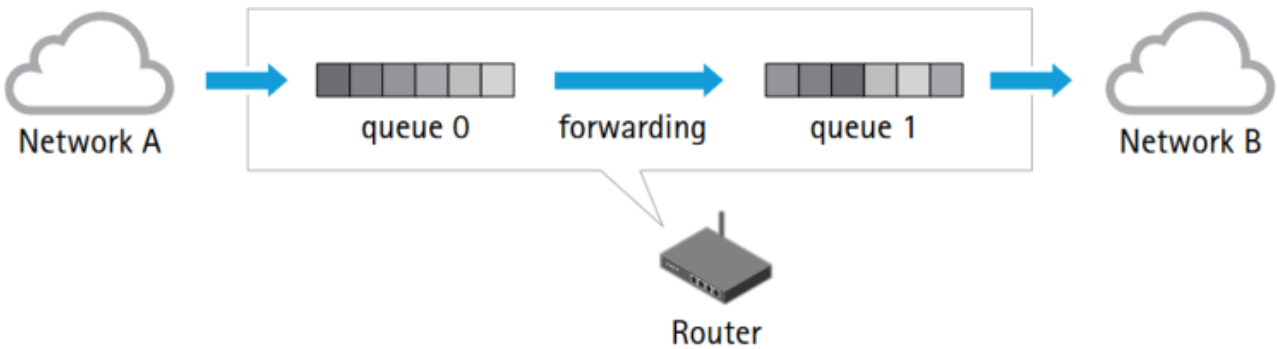


Figure 3

Queue disciplines

To be able to provide the mechanism desired by DiffServ the routers implement different ways of handling its queues. These different techniques are known as queuing disciplines and are algorithms designed to provide different service guarantees. To exemplify the use of different queuing disciplines we will briefly explain FIFO queues and priority queues.

FIFO is the simplest queuing discipline and is usually the default setting in network routers. FIFO describes the simple First-In-First-Out behavior of the queue. The below image shows a FIFO queue where packets enter from the left and exit to the right. The first packet entering will be the first packet sent out on the port. Other packets will be placed at the end of the queue and must wait their turn. This discipline is too basic to provide any QoS service.

FIFO queue

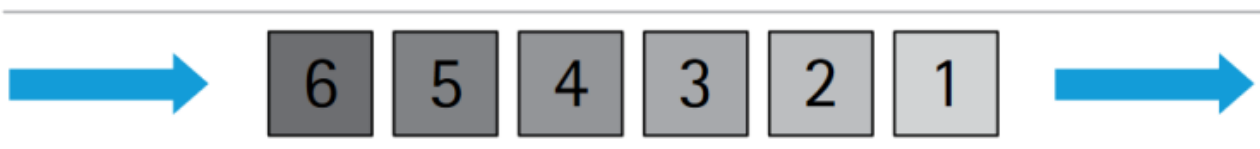


Figure 4

Priority queuing

Priority queuing is a relatively simple way of implementing differentiated service classes in a router. Instead of using one FIFO queue only, several are used, and each is assigned a different priority. A classifier determines which queue to put the incoming packet in, and the scheduler puts the packets out onto the network. The classifier parses the header of incoming packets and decides which priority queue to put the packet in. In a DiffServ network this decision is based on the DSCP value of the incoming packet. The scheduler ensures that the high priority queue gets served first, the medium priority queue next, and so on. This discipline allows the traffic to be prioritized.

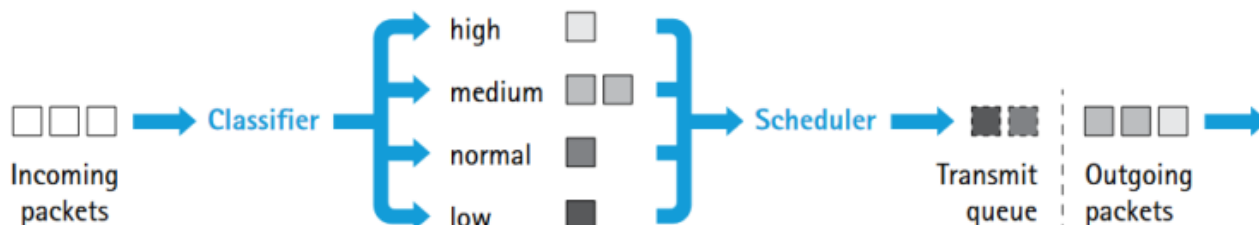


Figure 5

AXIS OS

Axis has opted to use the DiffServ model, to provide greater scalability and flexibility. This is implemented by:

- Marking network traffic
- Classifying network applications in QoS classes
- Providing a user interface

AXIS OS QoS classes

AXIS OS uses four QoS classes. The members of a class all mark their traffic with the same DSCP value and thus receive the same forwarding treatment from routers:

- Live video - This class consists of applications that stream Motion JPEG video streams over HTTP, and MPEG-4 video streams over RTP, RTP/RTSP and RTP/RTSP/HTTP.
- Live audio - This class consists of applications that generate audio flows, and is only present in products that support audio.
- Event/Alarm - This class consists of applications that generate event and alarm traffic. The class handles FTP, HTTP, SMTP and TCP events.
- Management - This class consists of applications that generate management traffic. The class can handle FTP, HTTP, HTTPS and SNMP management traffic.

AXIS OS QoS configuration

The image below shows an example of a screenshot of the HTTP user interface for QoS in Axis devices using AXIS OS 6.5X and lower. It shows the different QoS classes supported by the product and lets the user specify the DSCP (DiffServ Codepoint) value for each class. The default DSCP value is 0, which is the same as the default PHB and which can be interpreted as QoS disabled.

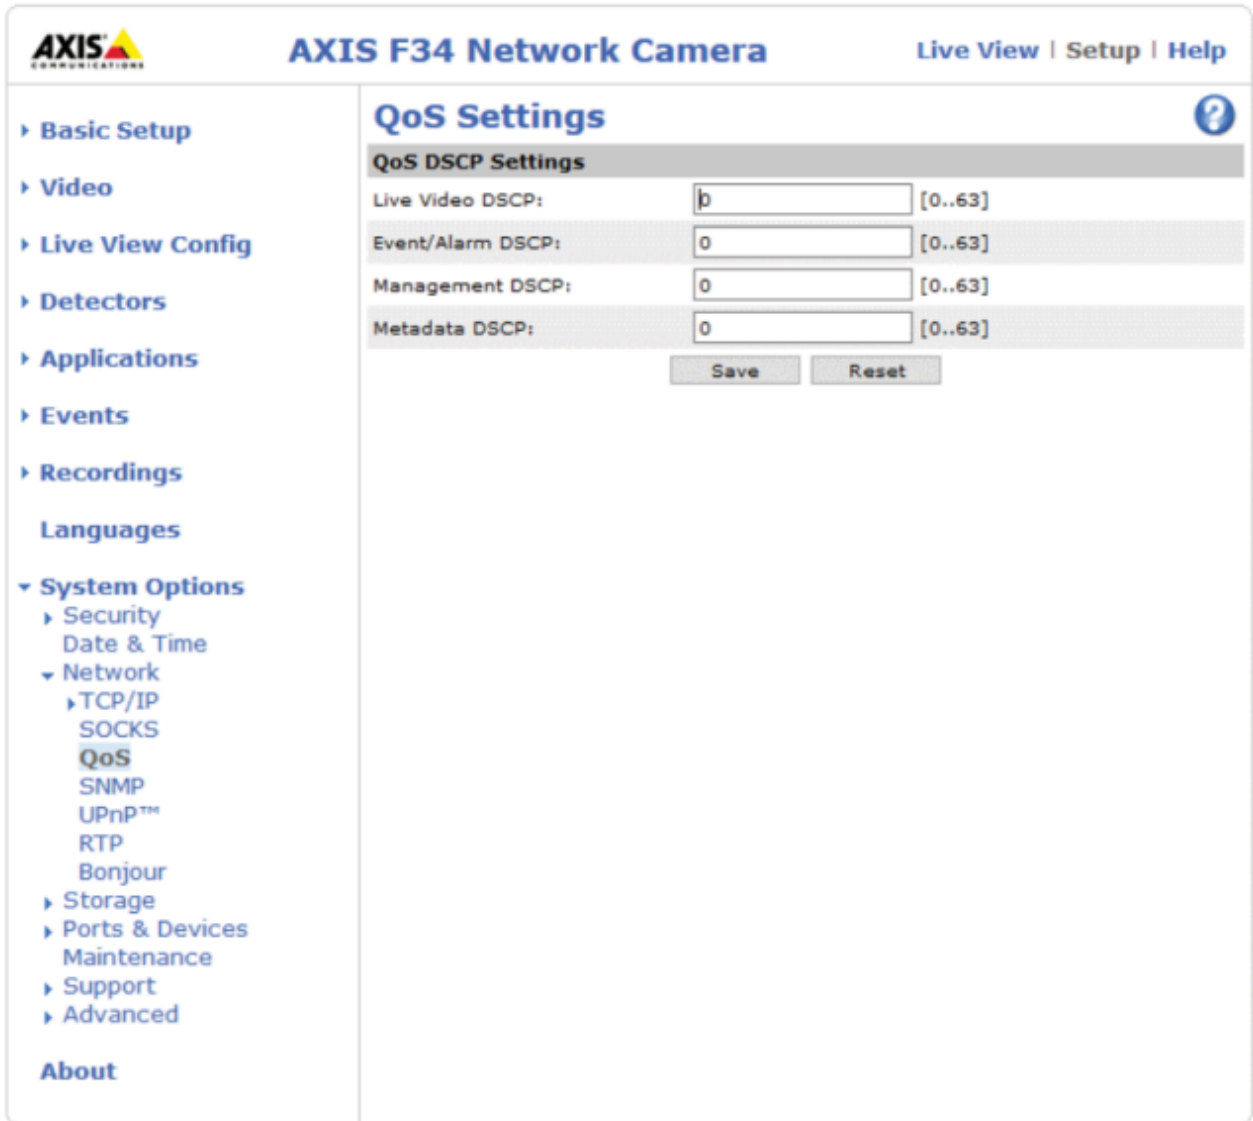


Figure 6

In Axis devices running AXIS OS 7.10 and higher the Plain Config in Settings > System > Plain Config > Network is used to perform QoS related configuration.

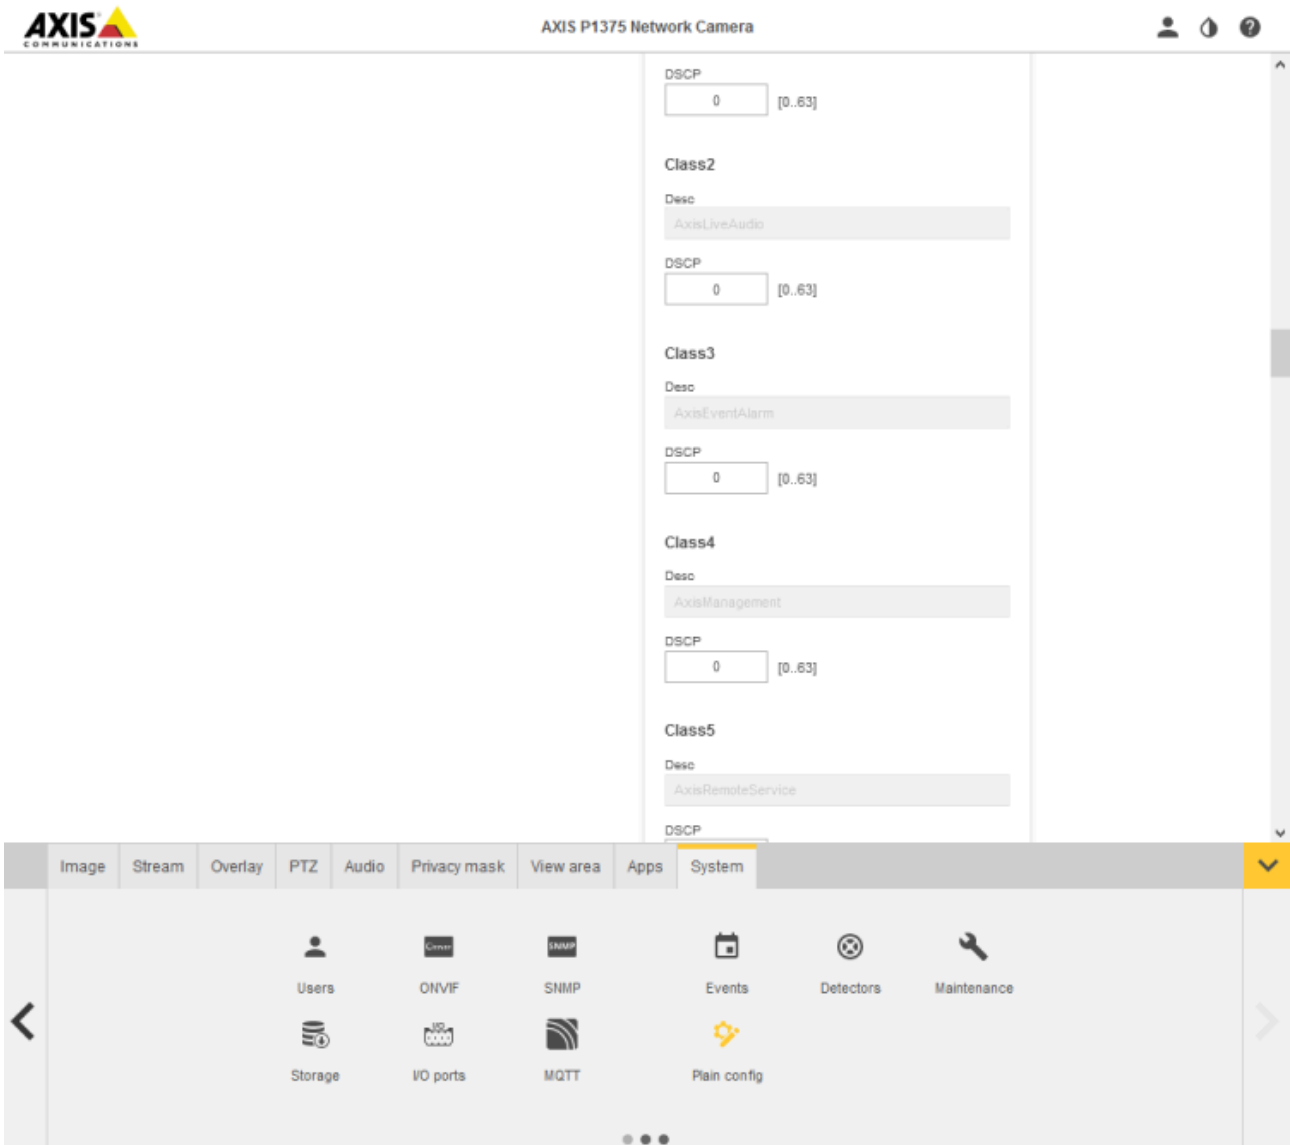


Figure 7

Performance improvements

The graph below illustrates a possible scenario in which performance is maintained/improved on a QoS enabled network.

- Video is first streamed over a quiet, non-QoS network, where the frame rate can be assumed to be approximately 30 frames per second. This is illustrated by line A.
- Network congestion is then simulated by, e.g., adding a non-responsive UDP stream. The frame rate drops sharply, to a practically unusable level, as shown by line B.
- Video is then streamed over a DiffServ-enabled network, with the same congestion also added here. The video traffic is unaffected by the congestion and the frame rate is maintained, as shown by line C.

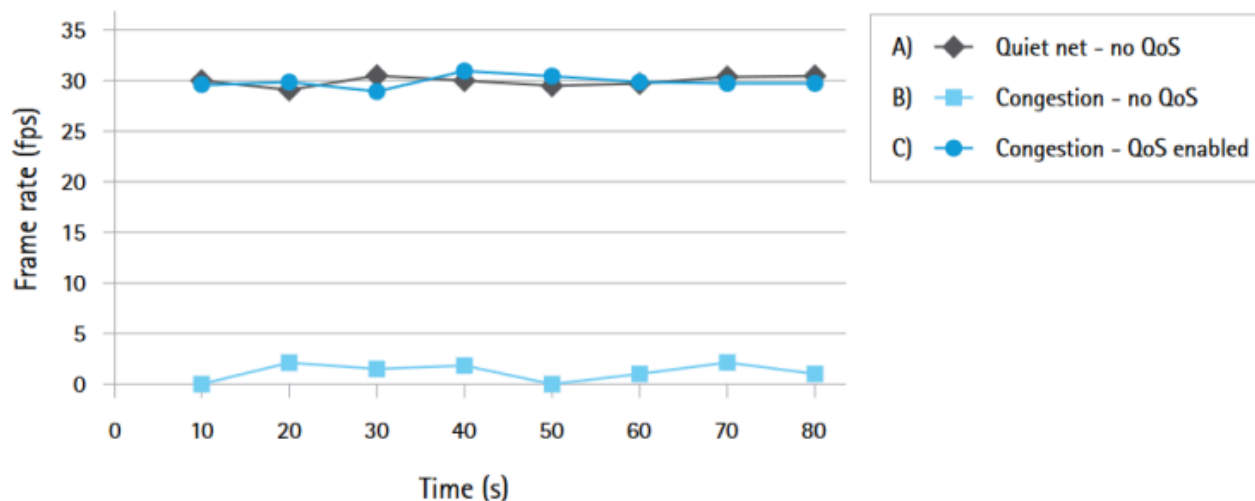


Figure 8

TCP ECN

ECN is an acronym for Explicit Congestion Notification and is an improvement of the congestion control in TCP. The basic idea is for TCP to report that congestion is about to occur, before the queue actually overflows. The router does this by marking a field in the IP header called CE (Congestion Experienced). When the sender receives this signal the flow is slowed down. The traditional method of indicating congestion is for routers to drop packets that lead to the re-transmission of packets.

The ECN model will only be used when both communication end-points support it. This is achieved by negotiating at TCP connection initialization time. By introducing ECN support re-transmission over the network is minimized, which leads to higher throughput and less delay. TCP ECN is enabled by default in Axis video products and can be disabled in **Plain Config > Network > TCP ECN**.

IPv6

IPv6 (Internet Protocol version 6) was initially designed by the IETF to replace the current IP version 4 (IPv4). The most likely scenario now is that IPv4 will remain even after IPv6 enters the arena. One of the main reasons for the introduction of IPv6 is the growing shortage of IPv4 addresses. Additionally, IPv6 also adds improvements in areas such as routing and network auto-configuration. Some general information about IPv6 addresses and configuration is provided in the following sections, and the complete IPv6 specifications can be found in the *RFC 2460 specifications*.

IPv6 addresses

The IPv6 address is written in hexadecimal form, and consists of eight double-bytes separated by colons. To make the address representation as short as possible, a number of consecutive zeros may be abbreviated to a double colon, which is allowed once in any single IPv6 address. Instead of using a subnet mask as in IPv4, IPv6 simply uses a network prefix length. The prefix length is appended to the address.

Example: fe80::250:daff:fe4d:7592/64

The prefix length specifies how many bits of the address will be considered part of the prefix. In the example above, the first 64 bits specify the network address, while the final 64 bits specify the host address. IPv6 addresses can be assigned in different ways:

- A link-local IPv6 address is automatically configured.
- A DHCPv6 server can be used to assign IPv6 addresses.
- Router advertisements can be used to assign auto-configured addresses.

Auto-configured link-local address

A device that supports IPv6 will get an auto-configured link-local address that starts with fe80. The remainder of the address is usually built on a so-called EUI64 address. The EUI64 address is constructed by taking the

Ethernet MAC address of the network interface, and filling it with two specific bytes (fffe) in the middle, to get a 64-bit address (see the example address in the previous section.)

Auto-configuration using router advertisements

In an IPv6 network, network devices may be auto-configured by listening to advertisements sent by routers in the network. These advertisements will then define how the network devices should be configured in order to be able to be routable. A routable IPv6 address can be derived by using the information in the router advertisements. This auto-configured address is derived using the EUI64 address, together with the address of the router and the network prefix. The router advertisements may instruct the network device to use DHCPv6, and if so, at which level.

DHCPv6 configuration

Just as an IPv4 network may use a DHCP server to assign IP configuration, an IPv6 network may use a DHCPv6 server. DHCPv6 can be used at different levels:

- In stateless mode the DHCPv6 server will designate the network servers to use, e.g., DNS servers and NTP servers, but it will not assign IPv6 addresses for network devices. This must be done using some other method.
- In stateful mode, the DHCPv6 server will also assign IPv6 addresses to the network devices, as well as assigning the network servers as in stateless mode.

Accessing IPv6 devices

Most programs accept host names and will automatically look up the IPv6 address. This is the preferred way of passing addresses to programs. If the name maps to an IPv4 address, IPv4 will be used. If the name maps to an IPv6 address, IPv6 will be used. If there are both IPv4 and IPv6 mappings, the operating system will decide which to try first. To pass IPv6 literal addresses to a program, there are a few points to consider. When passing an URL, brackets must be used. To pass IPv6 literal addresses to a program, there are a few points to consider. When passing an URL, brackets must be used. For example:

Example	Comment
http://[2001:5c0:84d9:2:240:8cff:fe6b:3cb9]	Accessing an Axis device using http
http://[2001:5c0:84d9:2:240:8cff:fe6b:3cb9]:8080	Accessing an Axis device using http and custom httpport
https://[2001:5c0:84d9:2:240:8cff:fe6b:3cb9]	Accessing an Axis device using https
http://root:pass@[2001:5c0:84d9:2:240:8cff:fe6b:3cb9]	Accessing an Axis device using http and pre-entered access credentials
http://[fe80::2:240:8cff:fe6b:3cb9%eth0]	Accessing an Axis device using the link-local address. Note that the network interface is specified after the IPv6 address. This is because the link-local prefix fe80::/10 has multi-path routes, i.e., one route per interface. The routing system has no way of knowing which interface the device you are trying to contact is located on.

Most programs (e.g., FTP, Telnet, etc) will accept the IPv6 address in its literal form such as ftp 2001:5c0:84d9:2:240:8cff:fe6b:3cb9 or ftp fe80::2:240:8cff:fe6b:3cb9%4. Some programs may take the interface identifier in a non-standard way. An example of this is the ping6 tool usually distributed with linux. It expects to be run like this ping6 -I eth1 fe80::2:240:8cff:fe6b:3cb9. On Windows you can see the identifier of each adapter by running 'ipconfig' and finding the IPv6 link-local address of that interface. It may look something like this:

```
Windows IP Configuration
Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix . : testnetwork.com
    IP Address:                       192.168.2.22
    Subnet Mask:                       255.255.255.0
    IP Address:                         fe80::204:75ff:fec2:3a79%4
    Default Gateway:                   192.168.2.1
                                        fe80::213:20ff:fe11:d2ee%4
```

```
Running ping6 on Windows:
ping6 fe80::2:240:8cff:fe6b:3cb9%4
```


Common IPv6 addresses and ranges

IPv6 address	Explanation
0:0:0:0:0:0:0:0	Equals IPv4 0.0.0.0 and is the source address of a host before it receives an IP address from DHCP
0:0:0:0:0:0:0:1	Equals ::1 and is the equivalent of IPv4 127.0.0.1
0:0:0:0:0:0:192.168.100.1	This is how an IPv4 address would be written in a dual-stack mixed IPv4-IPv6 environment
2000:::/3	The global unicast address range
FC00::/7	The unique local unicast range
FE80::/10	The link-local unicast range
FF00::/8	The multicast range
3FFF:FFFF::/32	Reserved for examples and documentation
2001:0DB8::/32	Reserved for examples and documentation
2002::/16	Used for IPv6 to IPv4 tunneling and used as a transition system which allows IPv6 packets to be transported over an IPv4 network without the need to configure an explicit tunnel.

IPv6: AXIS OS configuration

Web interface

The IP configuration of the Axis video product is usually made from the TCP/IP settings (see section 2.1) pages in the embedded web interface. In addition to this, you can list the parameters directly in the **Plain Config** page. From here you can customize the IPv6 configuration, by changing parameters that are not available from the TCP/IP settings page. On the TCP/IP settings page, it is possible to enable or disable the use of IPv4 and/or IPv6.

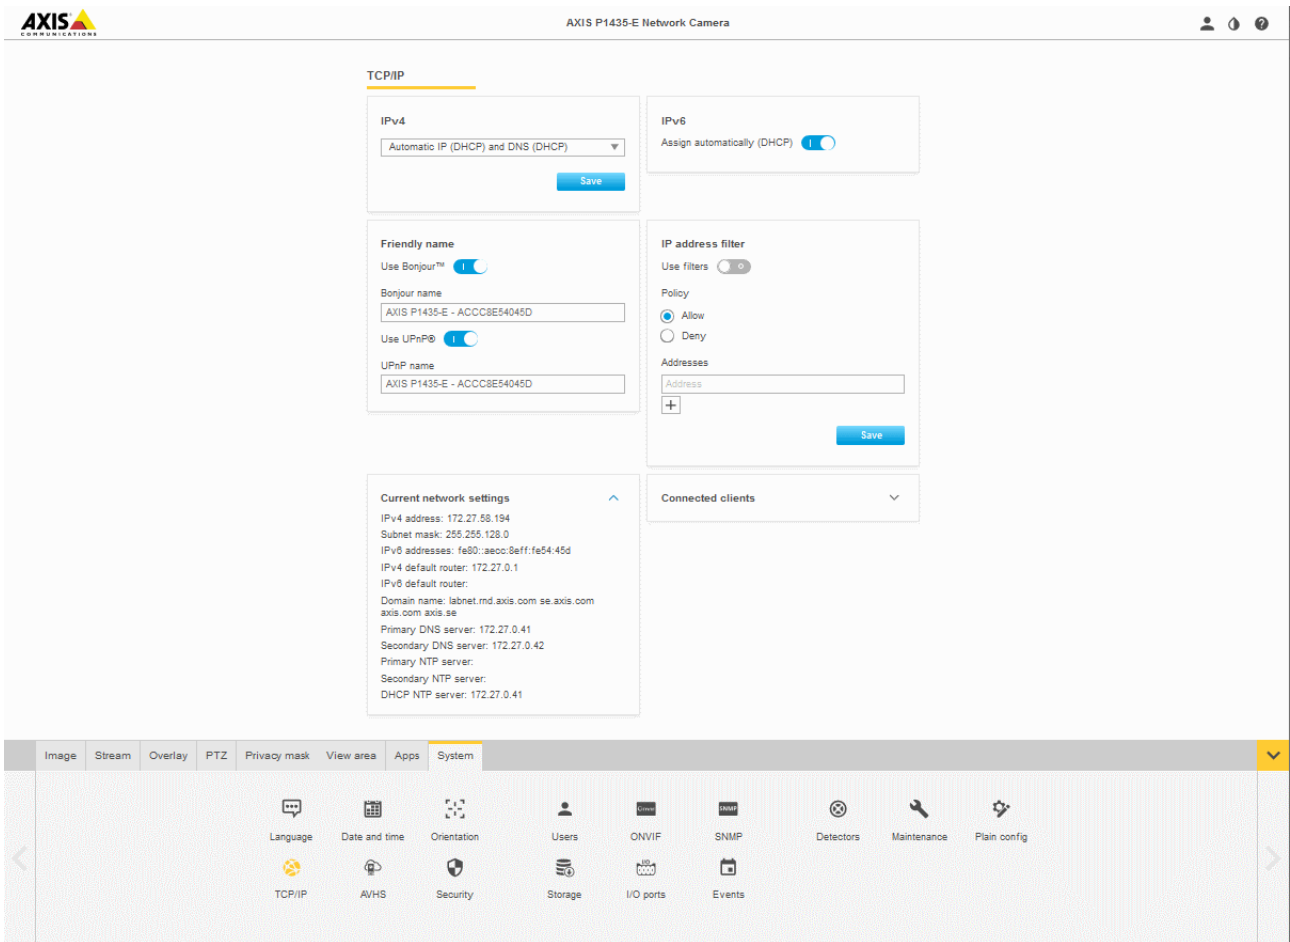

The user is prohibited from disabling both IPv4 and IPv6, since this will render the Axis device inaccessible. It is however, still possible to disable both IPv4 and IPv6 from the Plain Config page. If this happens, the Axis device will override the configuration and start IPv4 according to the IPv4 configuration.

Use of IPv4 is enabled by default. When IPv4 is disabled no IPv4 configuration will be made on the device. The device will then only be accessible via IPv6. Note that when IPv4 is disabled, a link-local IPv4 address will not be assigned, even if the use of a link-local IPv4 address is enabled on the Advanced TCP/IP Settings page.

Use of IPv6 is disabled by default. When IPv6 is enabled, the Axis device will assign a link-local IPv6 address. By default, the device will also listen to router advertisements and assign IPv6 addresses accordingly. It is possible to change the IPv6 configuration behavior using the plain configuration interface found in the Advanced System Options menu. For further descriptions of the advanced IPv6 settings.

Plain Config

The IPv6 configuration is by default set to accept router advertisements and to use DHCPv6 according to the router advertisements. In different environments it may be necessary to change the IPv6 configuration. To do this, go to the Plain Config page and select the Network parameter group. By altering the parameters in the Network.IPv6 parameter group, the behavior of the IPv6 configuration is changed. The group consists of five parameters:

Parameter	Comment
Network.IPv6.Enabled	This parameter is used to enable or disable IPv6 network configuration.
Network.IPv6.AcceptRA	The Accept router advertisements parameter is used to enable or disable the said functionality. If this parameter is set to yes, the Axis device will listen to router advertisements on the network and perform IPv6 configuration according to it.

Network.IPv6.DHCPv6	<p>This parameter is used to configure either of the four DHCPv6 client settings</p> <ul style="list-style-type: none"> • auto – The use of DHCPv6 is determined by the router advertisements • stateless – DHCPv6 is used to set DNS servers and NTP servers etc, but not to set IPv6 addresses • stateful – DHCPv6 is used to set IPv6 addresses as well as DNS servers, etc. • off – DHCPv6 is disabled
Network.IPv6.IPAddress	<p>The IP Address parameter is used to manually set an IPv6 address. This address will be used in parallel with other IPv6 addresses that may be set by DHCPv6 or by router advertisements. If a specific prefix length is requested the prefix length is defined last in the address, like this: 2001:5c0:84d9:2::1:3b/128. If no prefix length is defined, the default length 64 will be used.</p>
Network.IPv6.DefaultRouter	<p>The Default router parameter is used to manually set an IPv6 default router. This address will be set in parallel with other IPv6 addresses that may be set by DHCPv6 or by router advertisements.</p>
Additional Information	<p>The IPv6 addresses currently in use are read from the IP address parameter In the Network.<interface>.IPv6 group, where <interface> is the name of the interface (e.g. eth0, eth1 etc.). This parameter lists all IPv6 addresses, separated by space characters.</p>

IPv6

Accept router advertisements

Default router

DHCPv6

IPv6 Enabled

IP address

IEEE 802.1X

There are different levels of security for a network's infrastructure and the devices connected to it. The first level is authentication and authorization. The user or device identifies itself to the network and the remote end by a username and password, which are then verified before the device is allowed into the system. Added security can be achieved by encrypting the data to prevent others from using or reading the data. Common methods are HTTPS (also known as SSL/ TLS), VPN, and WEP or WPA in wireless networks. IEEE 802.1X is an authentication and authorization technique. Axis network video products support IEEE 802.1X as a security feature. This section presents the background of IEEE 802.1X, as well as its working principle. It also describes how IEEE 802.1X should be used in Axis devices, and how the RADIUS (remote authentication dial-in user service) servers and switches need to be configured. The intended audience of this document is technical personnel and system integrators.



IEEE 802.1X is an IEEE standard for port-based network access control ("port" means the physical connection to the LAN infrastructure). It is part of the IEEE 802.1 group of networking protocols and provides an authentication mechanism for devices to connect to a LAN, either establishing a connection or preventing the connection if authentication fails. IEEE 802.1X prevents what is called "port hi-jacking", that is, when an unauthorized computer gets access to a network through a network jack inside or outside a building. IEEE 802.1X is useful in network video applications since their devices are often located in public spaces where a network jack can pose a security risk. In modern enterprise networks, IEEE 802.1X is becoming a basic requirement for anything that is connected to a network.

Working principle

There are three basic terms in IEEE 802.1X. The user or client that wants to be authenticated is called a supplicant. The actual server doing the authentication, typically a RADIUS server, is called the authentication server. And the device in between, such as a switch, is called the authenticator. The protocol used in IEEE 802.1X is EAPOL (Extensible authentication protocol encapsulation over LANs). There are several modes of operation, but the most common case is described here:

- The authenticator sends an "EAP-Request/Identity" packet to the supplicant as soon as it detects that the network link is active (this could be because the supplicant, for example a specific Axis device in a network video system, is connected to the switch).
- The supplicant sends an "EAP-Response/Identity" packet to the authenticator.
- The "EAP-Response/Identity" packet is then passed on to the authentication (RADIUS) server by the authenticator.
- The authentication server sends back a challenge to the authenticator, such as with a token password system.
- The authenticator unpacks this from IP and repackages it into EAPOL and sends it to the supplicant. Different authentication methods will vary this message and the total number of messages. EAP supports client-only authentication and strong mutual authentication.
- The supplicant responds to the challenge by the authenticator.
- The authenticator passes the response to the challenge onto the authentication server.
- If the supplicant provides proper identity, the authentication server responds with a success message to the authenticator.

The success message is then passed onto the supplicant by the authenticator. The authenticator now allows access of the supplicant to the LAN, possibly restricted based on attributes that came back from the authentication server. For example, the authenticator might switch the supplicant to a particular virtual LAN or install a set of firewall rules.

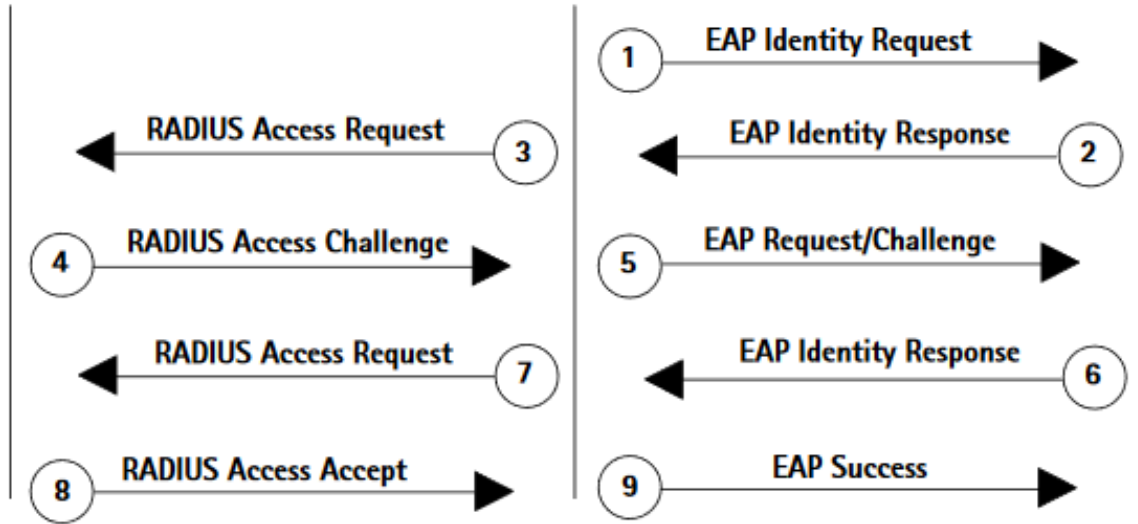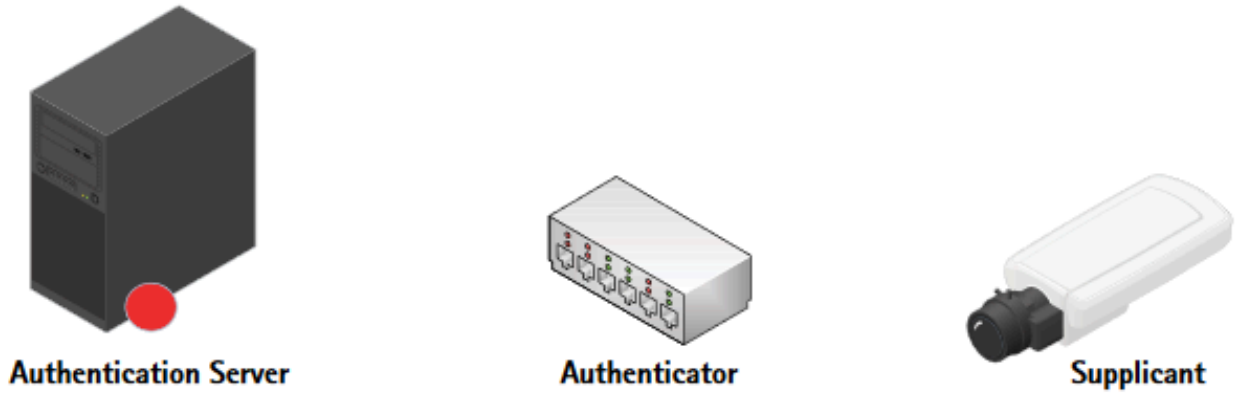

It should be noted that setting up and configuring IEEE 802.1X is a fairly complex procedure, and it is important that RADIUS servers, switches, and clients (such as Axis devices) are set up correctly.

IEEE 802.1X: AXIS OS configuration

Web interface

To gain access to a protected network, the Axis device must have a CA certificate, a client certificate, and a client private key. These should be created by the servers and uploaded via a web interface. When the Axis device is connected to the network switch, the device will present its certificate to the switch. If the certificate is approved, the switch allows the device access on a preconfigured port. As pointed out previously, in order to use port-based authentication, the network must be equipped with a RADIUS server and a network switch with support for IEEE 802.1X. You may also need to contact your network administrator for information on certificates, user IDs and passwords depending on the type of RADIUS server that is used.

The settings here enable the Axis device to access a network protected by IEEE 802.1X/EAPOL (Extensible Authentication Protocol over LAN). There are many EAP methods available to gain access to a network. Before AXIS OS 11.6, the protocol used by Axis is EAP-TLS (EAP-Transport Layer Security) for wired and wireless IEEE 802.1X network authentication, as well as EAP-PEAP/MSCHAPv2 for wireless IEEE 802.1 network authentication.

The screenshot shows the IEEE 802.1X configuration page. It includes a title 'IEEE 802.1x', a 'Client certificate' dropdown menu set to 'none', a 'CA certificate' dropdown menu set to 'none', and an empty 'EAP Identity' text field. Below these is the 'EAPOL Version' section with radio buttons for '1' (selected) and '2'. At the bottom left is a checkbox for 'Use IEEE 802.1x' which is unchecked, and at the bottom right is a blue 'Save' button.

Excerpt of the web interface of AXIS M1065-LW with wired IEEE 802.1X settings

The screenshot shows the 'Wireless' settings page. At the top is the 'Wireless networks' section with a dropdown arrow and the text 'No network selected'. Below this is the 'Add another network' section with an upward arrow. It contains an 'SSID name' text field, a 'Use WPA™' toggle switch (turned off), and a 'Use Enterprise' toggle switch (turned on). Underneath is the 'WPA-Enterprise protocol' section with radio buttons for 'EAP-TLS' (selected) and 'EAP-PEAP/MSCHAPv2'. There is also an 'Identity' text field, an 'EAPOL version' dropdown menu set to '1', a 'CA certificate' dropdown menu set to 'None', and a 'Client certificate' dropdown menu set to 'None'. A blue 'Save' button is located at the bottom right.

Excerpt of the web interface of AXIS M1065-LW with wireless IEEE 802.1X settings (System tab > Wireless).

The client and the RADIUS server authenticate each other using digital certificates provided by a PKI (public key infrastructure) signed by a certification authority. Note that to ensure successful certificate validation, time synchronization should be performed on all clients and servers prior to configuration. Further configuration of Axis devices should be performed on a safe network to avoid MITM (man in the middle) attacks. Terms used in the web interface are described as follows:

- **CA certificate** - The CA certificate is created by the certification authority for the purpose of validating itself and the Axis device needs it to check the server's identity. Select the correct certificate that was uploaded previously in the security tab under CA certificates. From AXIS OS 10.1 and onwards, selecting no CA certificate (none) means the Axis device will skip doing any validation of the server's identity.
- **Client certificate** - The Axis device must also authenticate itself using a client certificate. Select the correct certificate that was uploaded previously in the security tab under client certificates.
- **EAPOL version** - Select the EAPOL version (1 or 2) used in your network switch.
- **EAP identity** - Enter the user identity associated with your certificate. A maximum of 16 characters can be used.

With AXIS OS 11.6 and later, we added support for EAP-PEAP/MSCHAv2 for wired connection. With AXIS OS 11.8 and later, customers can configure EAP-PEAP/MSCHAPv2 through the web interface.

IEEE 802.1x

Authorized

Authentication method

EAP-PEAP/MSCHAPv2 ▼

Client certificate (i)

Axis device ID ECC-P256 (802.1AR) ▼

CA certificates (i)

r2d2 X X ▼

EAP Identity

dotxmschap

EAPOL Version

1 2 3

Password

Peap version

PEAPv0 PEAPv1

Label

1 2

Use IEEE 802.1x

- Client certificate - This is not needed for this authentication mode.

- **CA certificate** - Optional. The CA certificate is created by the certification authority for the purpose of validating the server's identity by the Axis devices. No CA certificate (none) means the Axis device will skip doing any validation of the server's identity.
- **EAP identity** - The username for MSCHAPv2 authentication.
- **EAPOL version** - Select version 2.
- **Password** - The password for MSCHAPv2 authentication.
- **Peap version** - Select PEAPv0.
- **Label** - Select 1.

IEEE 802.1AE


With AXIS OS 11.8 and later, IEEE 802.1AE MACsec capabilities were added to AXIS OS-based devices.

IEEE 802.1AE MACsec (Media Access Control Security) is a well-defined network protocol that cryptographically secures point-to-point ethernet links on network layer 2 ensuring the confidentiality and integrity of data transmissions between two hosts.


OSI Layer	Unencrypted Network Protocols	Encrypted Network Protocols
Layer 7 – Application*	UPnP, DHCP, DNS, HTTP, SNMPv1/v2, FTP, NTP, RTP, RTSP, SMTP, MQTT, Syslog, SIP	HTTPS, SNMPv3, NTS, SSH, SRTP
Layer 6 – Presentation*		TLS/SSL
Layer 5 – Session*	RTCP, SMB	
Layer 4 – Transport*	TCP/UDP	
Layer 3 – Network*	IP, ICMP, ARP, IGMP	
Layer 2 – Data Link*	CDP, LLDP	802.1X EAP-TLS, 802.1AE MACsec
Layer 1 – Physical*		

* List of example network protocols used by Axis devices that are protected by IEEE 802.1AE MACsec. MACsec adds protection to network protocols without native security capabilities and adds an additional layer of protection as well to network protocols with built-in security.


Unlike protocols such as IPsec which operates at Layer 3 as an end-to-end technology, MACsec encrypts each frame that leaves the Ethernet LAN and decrypts the frames as it enters the Ethernet LAN. In order to achieve end-to-end network encryption using MACsec, all links/hops in between source and destination need to have MACsec enabled to ensure traffic traversing across a network is MACsec protected.

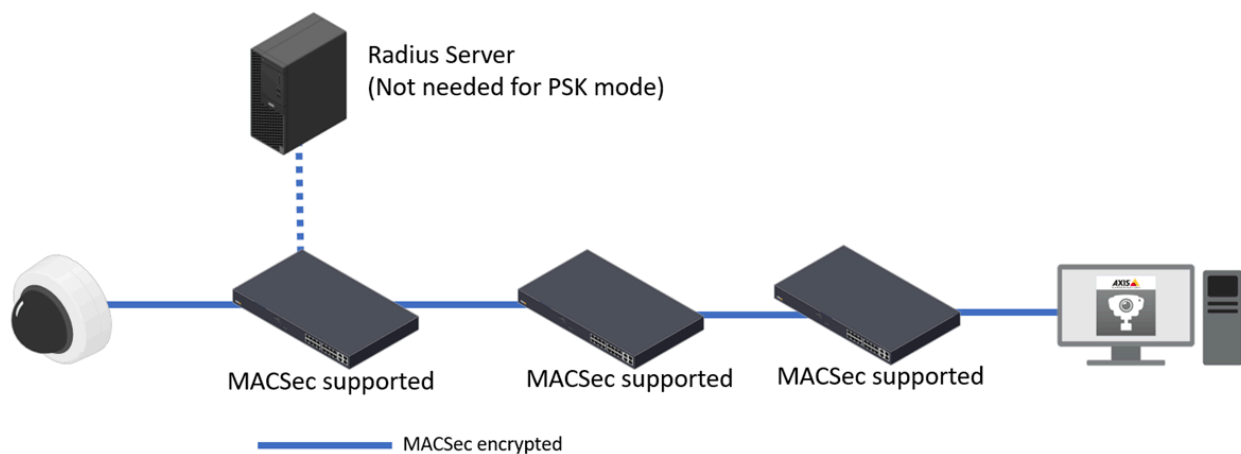

A single link/hop that does not support MACsec will therefore leave network traffic unencrypted from that link/hop to the next.

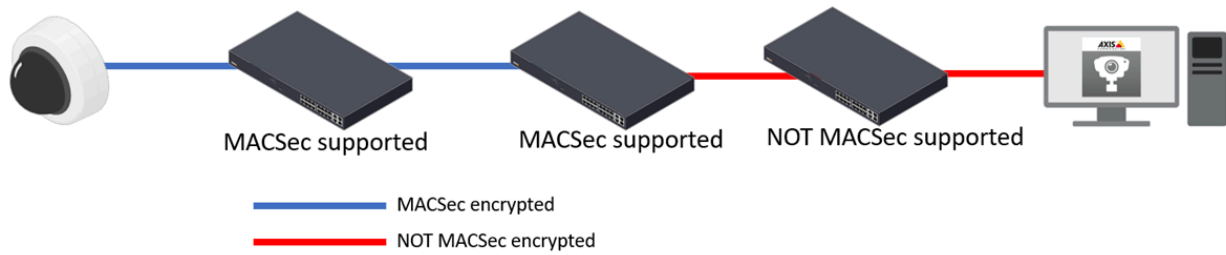

Not only does MACsec prevent unauthorized access to network data streams through strong encryption but also prevents man-in-the-middle attack scenarios. Because MACsec operates at the low layer 2 of the network stack, it adds an additional layer of security to network protocols that do not offer native encryption capabilities (ARP, NTP, DHCP, LLDP, CDP...) as well as ones that do offer it alike (HTTPS, TLS). The illustration below outlines the MACsec frame.

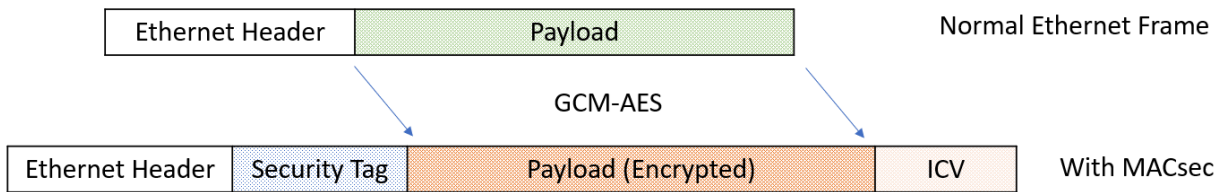


A Security Tag (SecTAG) containing MACsec parameters is inserted immediately after the source mac address in the Ethernet Header. The Integrity Check Value(ICV) is calculated via an agreed algorithm by the sender and attached to the frame. When the receiver receives the frame, it will use the same algorithm to calculate the ICV again and compare it with the one attached to the packet. The integrity is confirmed if the two ICV values are identical which means the packet is not tampered.

Terminologies

Acronym	Terminology	Description
CA	secure Connectivity Association	A security relationship, established a comprises a fully connected subset of single Local Area Network (LAN) tha
CAK	Connectivity Association Key	This key is used to derive the actual specified or derived via 802.1x auth
CKN	Connectivity Association Key Name	The name of the CAK.
MKA	MACsec Key Agreement	The protocol used to negotiate the k
SC	Secure Chanel	A security relationship used to provi member of a Connectivity Associatio
SAK	Secure Association Key	It is derived from a CAK using a spec SC.

The MACsec Key Agreement (MKA)

When implementing MACsec between two devices, the MACsec Key Agreement(MKA) protocol provides and manages the session keys. The MKA protocol relies on the EAP framework to establish the communication. The two devices establish a unique connectivity association. Within the CA, there are two secure channels, one for inbound traffic, and the other one for outbound traffic. The two devices use the same cipher suite for data encryption.

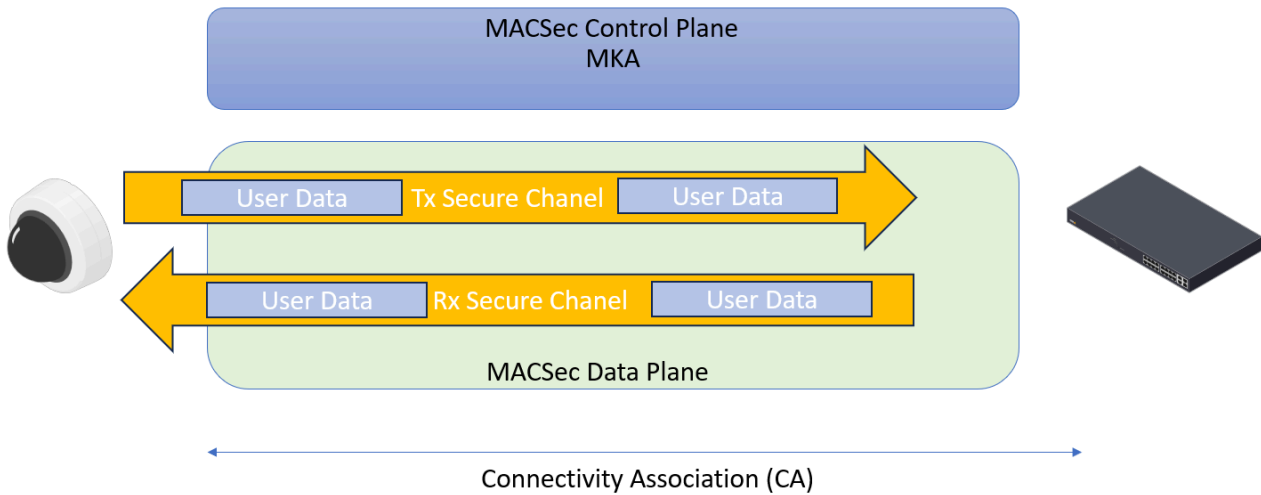

MACsec Ciphers

To protect the confidentiality of the data traveling through the MACsec Secure Channel, the packets are encrypted by the industrial standard GCM-AES-128 or GCM-AES-256 cipher suites. There are another two cipher suites GCM-AES-XPB-128 and GCM-AES-XPB-256. XPB standards for Extended Packet Numbering, these two ciphers are generally used on high-speed links.


In the current implementation, AXIS OS supports GCM-AES-128 cipher suite only. Additional cipher suites can be added on demand.

MACsec modes

The IEEE 802.1AE MACsec standard describes two modes of operation, a manually configurable Pre-Shared Key (PSK)/Static CAK mode and an automatic Master Session/Dynamic CAK mode using IEEE 802.1X EAP-TLS sessions. The Pre-Shared Key mode is recommended to be used when the connecting network switch is not capable of supporting auto-negotiation through IEEE 802.1X EAP TLS.

Since IEEE 802.1X EAP-TLS is enabled by default and through that, MACsec Master Session/Dynamic CAK mode is also automatically enabled. When plugging in a factory defaulted Axis device, IEEE 802.1X network authentication will be tried and when successful, MACsec Dynamic CAK mode will be tried as well. If the connected switch does not support IEEE 802.1X EAP TLS and/or MACsec Dynamic CAK, then the Axis device will simply connect anyway without further enforced security mechanisms.


Pre-shared Keys (PSK), Static CAK mode

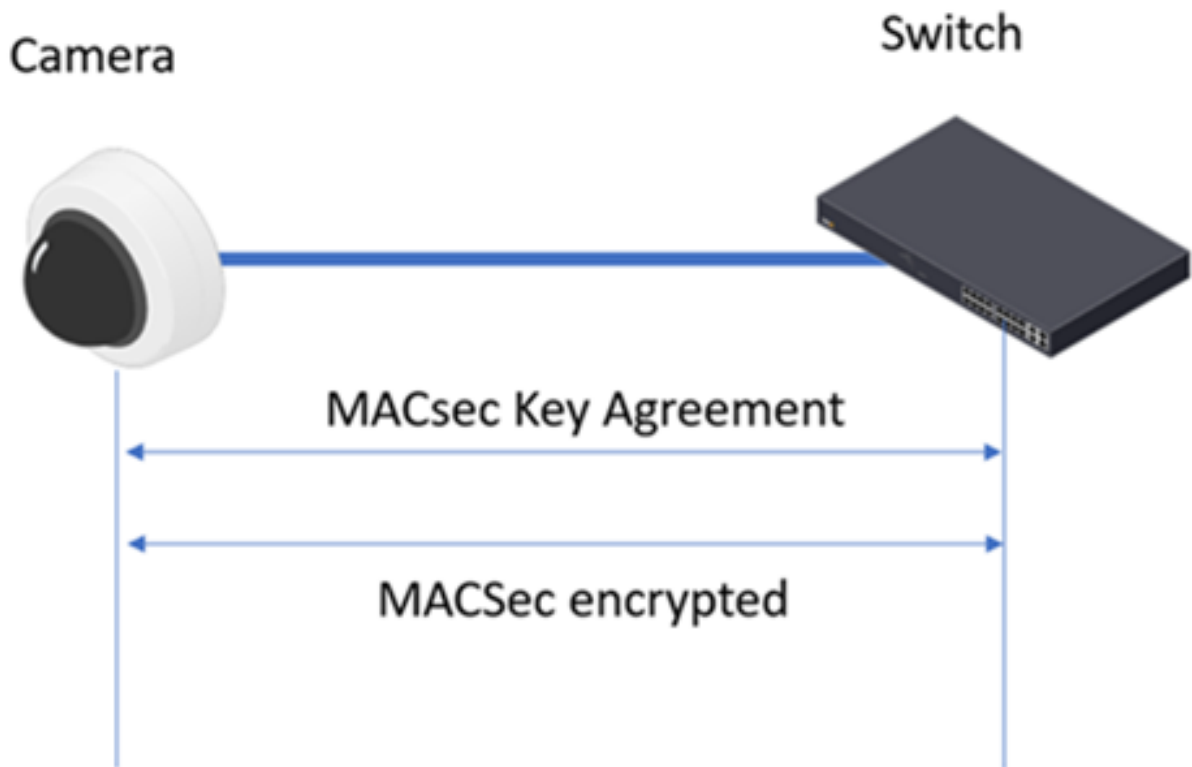

In pre-shared key(PSK) mode, also known as static CAK mode, the MACsec implementation is comprised of three phases: PSK configuration, MKA key negotiation and MACsec data encryption and decryption.

This mode requires the user to configure the to-be-used pre-shared key on both devices, the Axis device and the network switch. Every PSK consists of two fields: a connectivity association key name (CKN) and a connectivity association key (CAK). The CKN and CAK must match on both ends of the ethernet link.

Once the pre-shared key is verified, the MKA protocol is enabled to maintain the MACsec session on the link. One participant on the link will be elected as the key server and its primary responsibility is to generate, distribute and refresh the Secure Association Key(SAK). The SAK is the actual key used for encrypting the data. The MKA protocol limits the number of frames that can be protected with a single SAK. When the Packet Numbers (PNs) in an SA are exhausted, the corresponding SAK will be refreshed.

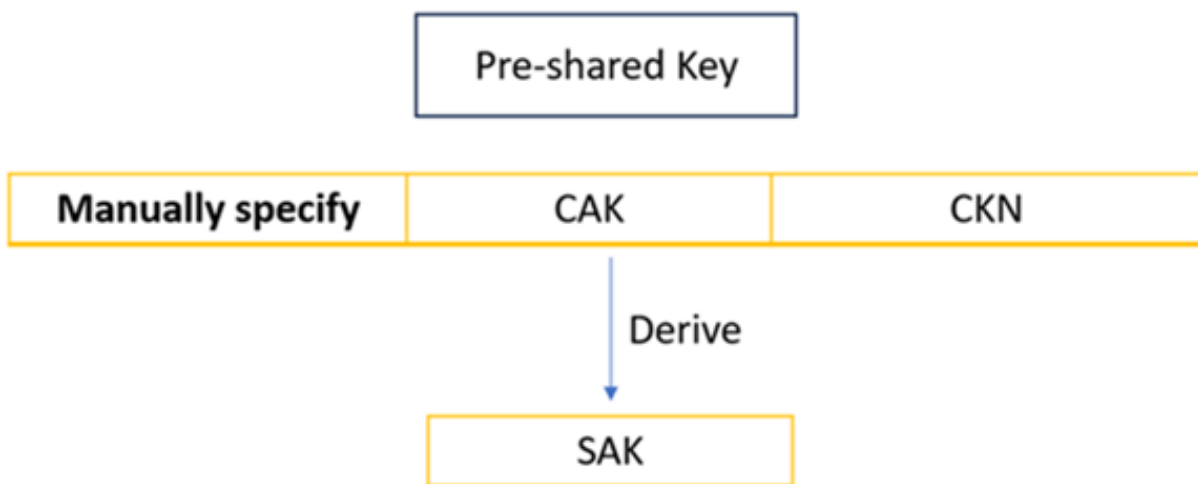

Axis device configuration

To configure the MACsec PSK in AXIS OS devices, go to System > Security > IEEE 802.1ae MACsec > Mode, select "Static CAK / Pre-Shared Key(PSK)" mode.

IEEE 802.1ae MACsec

● Secured

Mode

Static CAK / Pre-Shared Key (PSK)

Key agreement connectivity association key name

00112233445566771111111111111111

Key agreement connectivity association key

The CAK must be either 16 bytes (32 hexadecimal characters) or 32 bytes (64 hexadecimal characters). The CKN must be 1 to 32 bytes (2 to 64 and divisible by 2) hexadecimal characters.

At the time of writing this article, please also check the box to enable IEEE 802.1x before saving the configuration. When MACsec is secured, the status of IEEE 802.1x will show "authorized". We are in the process of optimize this as MACsec PSK mode doesn't work in conjunction with 802.1x.

Switch configuration

The below configuration example is outlined using the Aruba CX switch series.

1. Configure the MACsec policy

```
switch(config)# macsec policy axis_ms_policy
switch(config-macsec-policy)# cipher-suite gcm-aes-128
switch(config-macsec-policy)# replay-protection window-size 100
switch(config-macsec-policy)# exit
switch(config)#
```


2. Configure the MKA policy

```
switch(config)# mka policy axis_mka_policy
switch(config-mka-policy)# pre-shared-key ckn 00112233445566771111111111111111
switch(config-mka-policy)# cak plaintext 00112233445566771111111111111111
switch(config-mka-policy)# key-server-priority 5
switch(config-mka-policy)# exit
switch(config)#
```

3. Apply the MAC on the switch port


```
switch(config)# interface 1/1/28
switch(config-if)# apply macsec policy axis_ms_policy
switch(config-if)# apply mka policy axis_ms_policy
switch(config-if)# exit
switch(config)#
```

Master Session Key (802.1x,EAP-TLS), Dynamic CAK mode

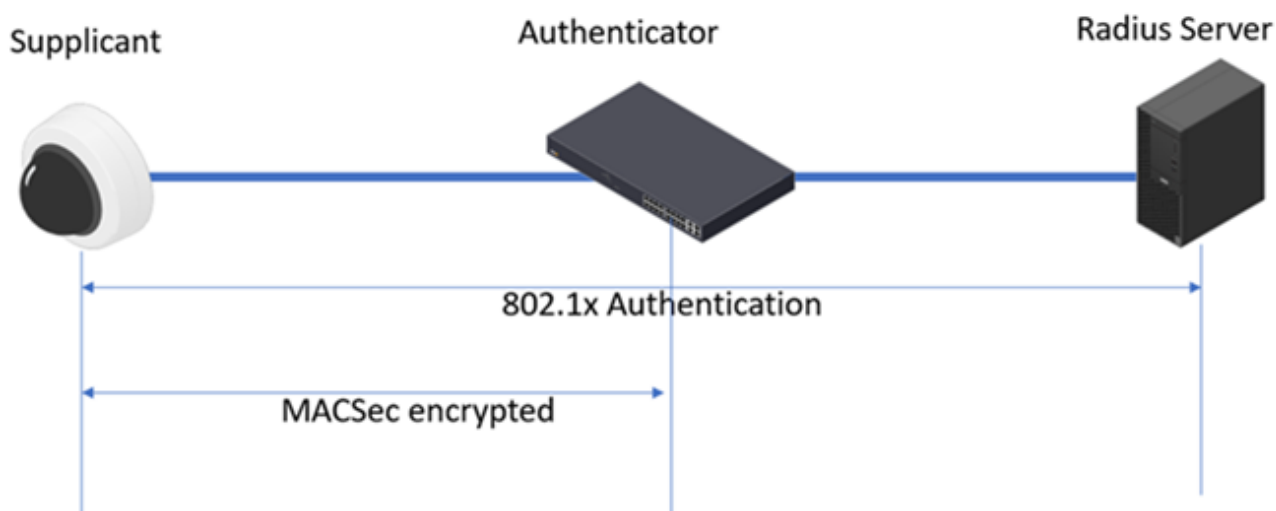

When implementing MACsec in conjunction with EAP-TLS, the Authenticator or the access switch performs the 802.1x authentication against the devices first. Once authentication is successful, the Radius server sends the master session key (MSK) to the switch and the device. The CAK and CKN will be derived from the MSK by both parties.

Following that, the MKA protocol is enabled on both parties on the link to start the MACsec session. Same as the PSK mode, one of the parties will be elected as the key server to manage the SAK keys. Once the SAK key is exchanged between the parties, the MACsec encryption and decryption starts.

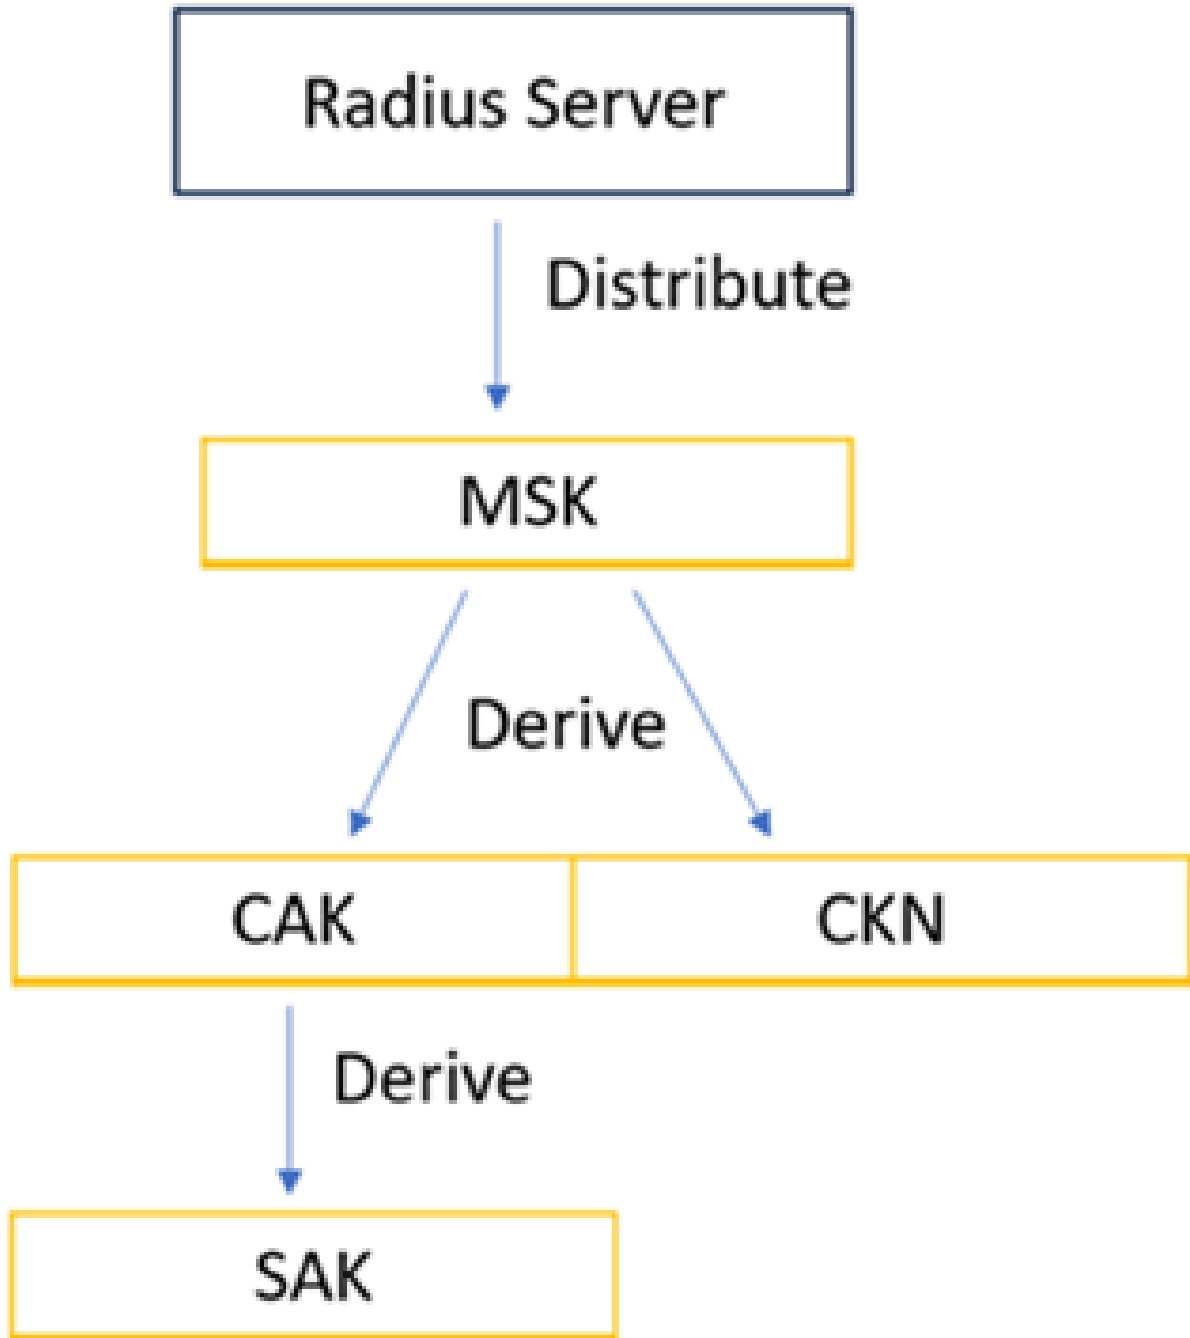

Axis device configuration

Since AXIS OS 10.1 (September 2020), IEEE 802.1X is enabled in the factory default state using the IEEE 802.1AR-compliant Axis device ID certificate. The Axis device will automatically try to authenticate against an IEEE 802.1X-enabled network. For manual IEEE 802.1X configuration, please refer to the *AXIS OS Knowledge base*. To use 802.1x port-based authentication, the network must be equipped with a RADIUS server and a network switch with support for IEEE 802.1X and IEEE 802.1AE MACsec. You may also need to contact your network administrator for information on certificates and further configuration of the RADIUS server.

Once the 802.1x authentication is done, if the switch supports MACsec, the MACsec talk will happen accordingly.

Freeradius Server configuration

Once the Freeradius server is up and running, there is just one additional step needed to enable the usage of MACsec through the Freeradius server side. The FreeRADIUS server in this case needs to send the EAP-KEY-NAME attribute for the switch to derive the Session-ID used in creating the CKN and CAK for MKA.

To enable FreeRADIUS to send the EAP-Session-ID in Access-Accept frames, please uncomment the following lines inside:

`/etc/freeradius/sites-enabled/default` for FreeRADIUS 2.x

or

`/etc/freeradius/3.0/sites-enabled/default` in case of FreeRADIUS 3.x

```

# MacSEC requires the use of EAP-Key-Name. However, we don't
# want to send it for all EAP sessions. Therefore, the EAP
# modules put required data into the EAP-Session-Id attribute.
# This attribute is never put into a request or reply packet.
#
# Uncomment the next few lines to copy the required data into
# the EAP-Key-Name attribute
# if (&reply:EAP-Session-Id) {
#     update reply {
#         EAP-Key-Name := &reply:EAP-Session-Id
#     }
# }

```

In this document, we are using the Aruba CX switch series that requires a User-Role after the 802.1x authentication to trigger the MACsec. The "Aruba-User-Role" is a vendor-specific-value sent from the FreeRadius server to the Aruba switch based on the EAP-identity configured in the AXIS OS devices. To do that, please add below to the file `/etc/freeradius/3.0/users`.

```
#steve ClearText-Password := "testing"
# Service-Type = Framed-User,
# Framed-Protocol = PPP,
# Framed-IP-Address = 172.16.3.33,
# Framed-IP-Netmask = 255.255.255.0,
# Framed-Routing = Broadcast-Listen,
# Framed-Filter-Id = "std.ppp",
# Framed-MTU = 1500,
# Framed-Compression = Van-Jacobson-TCP-IP
```

```
psadmin
  Aruba-User-Role := "axiscamera"
```

Aruba ClearPass Policy Manager configuration

Please follow the instructions [here](#) to securely onboard the Axis devices into Aruba networks. The integration guide outlines example configurations in great detail using IEEE 802.1AR and 802.AE MACsec for secure zero trust network integration of Axis devices into Aruba networks. The "Aruba-user-Role" attribute must also be dispatched from the ClearPass Policy Manager to the switch.

Aruba switch configuration

1. Configure the MACsec policy

```
switch(config)# macsec policy macsec-eapswitch(config-macsec-policy)# cipher-suite gcm-aes-128switch(config-macsec-policy)# replay-protection window-size 100switch(config-macsec-policy)# exitswitch(config)#
```

2. Configure the port-access role

```
switch(config)# port-access role axiscameraswitch(config-pa-role)# associate macsec-policy macsec-eapswitch(config-pa-role)# auth-mode client-mode
```

3. enable MACsec on the port

```
switch(config-if)# aaa authentication port-access dot1x authenticatorswitch(config-if-dot1x-auth)# macsecswitch(config-if-dot1x-auth)# mka cak-length 16
```

The cak-length should be configured to 16 bytes for the dot1x authentication mode in our current implementation.

Verify the MACsec status on the AXIS OS devices:

IEEE 802.1x

● Authorized

Authentication method

EAP-TLS

Client certificate ⓘ

Axis device ID RSA-2048 (802.1AR)

CA certificates ⓘ

No CA certificate selected

EAP Identity

axis-b8a44f0d8672

EAPOL Version

1 2 3

Use IEEE 802.1x

IEEE 802.1ae MACsec

● Secured

Mode

Dynamic CAK / EAP-TLS

Save

Below is what the MACsec frames look like when doing a packet trace from the camera directly. Go to System > Logs > Network trace.

No.	Time	Source	Destination	Protocol	Length	Info
115802	2023-10-05 15:04:04,371476	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115804	2023-10-05 15:04:04,371604	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115806	2023-10-05 15:04:04,371710	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115808	2023-10-05 15:04:04,371836	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115810	2023-10-05 15:04:04,371943	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115812	2023-10-05 15:04:04,372239	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115814	2023-10-05 15:04:04,372283	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115816	2023-10-05 15:04:04,372323	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115818	2023-10-05 15:04:04,372456	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115820	2023-10-05 15:04:04,372585	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115822	2023-10-05 15:04:04,372695	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame
115824	2023-10-05 15:04:04,372838	AxisComm_d9:c8:5f	IntelCor_6f:bc:6a	MACSEC	1514	MACsec frame


```

> Frame 116116: 1514 bytes on wire (12112 bits), 1536 bytes captured (12288 bits)
  Ethernet II, Src: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f), Dst: IntelCor_6f:bc:6a (b0:3c:dc:6f:bc:6a)
    > Destination: IntelCor_6f:bc:6a (b0:3c:dc:6f:bc:6a)
    > Source: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f)
      Type: 802.1AE (MACsec) (0x88e5)
  802.1AE Security tag
    > 0010 11.. = TCI: 0x0b, VER: 0x0, SC, E, C
      .... ..00 = AN: 0x0
      Short length: 0
      Packet number: 143677
      System Identifier: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f)
      Port Identifier: 1
      ICV: 6f637465742d73747265616d0d0a436f
  Data (1492 bytes)
    Data: 49f1b6b80b76e611131f8d083199bbc3ee4c7caa68f258eff88bb30a644ea076b74097d1...
    [Length: 1492]
    
```

Verify the MACsec status on the Aruba Switch:

```
switch# show macsec status
MACsec Protocol Status Interface Port ID Policy Protection Status
State _____ 1/1/27 1
macsec-eap IC, Conf, Offset 0 Up Retire 1/1/28 1 axis_ms_policy IC, Conf, Offset 0 Up Retire
```

```
SW23# show mka policy
MKA Policy Details===== Policy Name: MKA_Auth_1/1/27_
b8a44f4645E4
Mode : EAP-TLS CKN : b0d80475242fbc5c97ece50670e4dfe CAK (encrypted) : AQBapQh5tkM/
wWCQLE4jpoG/Iu6IfO+QutBMu8gFBKf... Key-server Priority : 0 Transmit Interval : 2 seconds
```

Policy Name: axis-mka_policy

Mode : Pre-shared

```
key CKN : 00112233445566771111111111111111 CAK (encrypted) :
AQBapcO5rGnurI1zhrDB3JVwhbLmJhcgQkiRWgiJtFK... Key-server Priority : 5 Transmit Interval : 2
seconds
```

Axis device-to-device secure networking

Important

- The feature is configured as "Not required" in the factory default state and during a standard AXIS OS upgrade to versions 12.6.85, 12.6.90 and 12.6.104.
- The feature is configured as "Disabled" in the factory default state with AXIS OS 12.6.108 and later versions.
- When upgrading from any version earlier than 12.6 to 12.6.108 and later, the feature remains "Disabled". However, when upgrading from 12.6, the existing configurations are preserved.
- We recommend that you connect only one device directly to the S3008 and S3008 MK II PoE port if you want to utilize the 802.1x authentication or MACsec security feature.

Securing interconnected Axis devices is essential to ensure safe onboarding and interconnection on the physical network. The best way to achieve this is by using the Axis device ID through IEEE 802.1X port-based authentication and IEEE 802.1AE MACsec.

As of AXIS OS 12.6, we introduced zero-touch secure networking for the S3008 and S3008 MK II recorders, featuring 802.1x authentication and MACsec support.

When you connect an Axis device with an Axis device ID and MACsec enabled, the S3008 performs 802.1x EAP-TLS authentication by verifying the device ID certificate. After successful authentication, MACsec negotiates to protect the layer 2 network traffic.

The following table shows three devices:

Model	AXIS OS version	Axis device ID	MACsec	S30 port
M2026-LE Mk II	9.80.95	No	No	Port 1
P3265-LVE	10.12.289	Yes	No	Port 2
P3268-LVE	12.5.73	Yes	Yes	Port 3

When AXIS S3008 is running AXIS OS 12.6, the port security is set to "Not required" by default, allowing the S3008 to accept any connected devices. The following is a summary of the different security types:

- **Disabled:** security check is off
- **Not required:** 802.1x authentication is optional
- **Authentication required:** 802.1x authentication is mandatory
- **MACsec secured required:** both 802.1x and MACsec are mandatory

When you connect cameras to the devices, the port information changes as follows:



Port	PoE	Network	Security	Status	Friendly name	Power consumption
Network ports						
Port 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Not required	Device connected (PoE)	AXIS M2026-LE Mk II - ACCC8E90DE7E	2.1 W out of 15.5 W
Port 2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Authentication requ...	Device connected (PoE)	AXIS P3265-LVE - B8A44F285522	2.2 W out of 15.5 W
Port 3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MACSec secured re...	Device connected (PoE)	AXIS P3268-LVE - E82725116B5E	3.7 W out of 15.5 W
Port 4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Not required	No device connected		

- Port 1: **Not required**. As the device lacks an Axis device ID, the 802.1x authentication process fails.
- Port 2: **Authentication required**. The P3265 has an Axis device ID, enabling successful 802.1x authentication. However, MACsec remains unsecured because the device is running AXIS OS LTS 10.12, which does not support MACsec.
- Port 3: **MACsec secured required**. The P3268 has an Axis device ID, which enables successful 802.1x authentication. With MACsec enabled, a secure connection is also established.

When the port is set to **Not required** and you connect a device without a device ID to the S30 port, the S30 will attempt to authenticate the device up to three times. After that, 802.1x will be temporarily disabled, but the port will remain open, allowing the device to continue running.

The next time there's a link state change on the port (for example, if the port goes down), the S30 will re-initiate the 802.1x authentication process. Devices with a valid device ID will then be authenticated and secured with MACsec (if enabled).

Once the security of a port is changed to either **Authentication required** or **MACsec secured required**, it automatically enforces 802.1x authorization or MACsec for subsequent connections. Any unauthorized attempts to access the port will be unsuccessful, as the S30 ports exclusively permit connections that are properly authenticated and MACsec-secured.

If you initially connect an 802.1x or MACsec-capable device to a port on the S30 and subsequently attempt to connect a non-MACsec or non-802.1x device, the connection will be blocked. In this case, you must manually adjust the security settings through the S30's web interface.

This feature is not available for S3016. MACsec PSK mode is not supported. The S3008 only supports authentication of the Axis device ID certificate. Customer-issued certificates from third-party certificate authorities are not supported.

WS-Discovery (Web Services Dynamic Discovery Protocol)

The Web Services Dynamic Discovery protocol utilizes UDP Port 3702 and defines itself as a multicast discovery protocol that is used to detect other devices and services on the network. ONVIF is relying on this protocol in order to detect other capable devices, so Axis devices support WS-Discovery for initial on-boarding and configuration. It's recommended to disable the WS-Discovery after usage since it is vulnerable to attacks as described in this *security advisory*. See instructions below on how to disable WS-Discovery.

AXIS OS > 9.70

Disable the service by disabling the parameter **Enable WS-Discovery discoverable mode** in **Settings > System > Plain config > WebService > DiscoveryMode > Enable WS-Discovery**. For multiple device configuration in AXIS Device Manager, the corresponding VAPIX parameter is called **DiscoveryMode.Discoverable**.

AXIS OS 5.70 – 9.60

- Enable SSH in **Plain config > Network > SSH** and connect to the Axis device via Putty
- Type the following commands, each followed by pressing ENTER
 - `systemctl mask wsdd`
 - `systemctl mask wsd`
 - `systemctl mask wsd.socket`
 - `systemctl stop wsdd`
- Disable SSH again from Plain Config and restart the device

AXIS OS 5.60

- Enable SSH in **Plain Config > Network > SSH** and connect to the Axis device via Putty
- Type the following commands, each followed by pressing ENTER
 - `rm /etc/rc3.d/S92wsdd`
 - `/etc/init.d/wsdd stop`
- Disable SSH again from Plain Config and restart the device

AXIS OS < 5.50

- Enable Telnet and connect to the Axis device via command-line tool. Go to *Telnet access, on page 341*.
- Type the following commands, each followed by pressing ENTER
 - `rm /etc/rc3.d/S92wsdd`
 - `/etc/init.d/wsdd stop`
- Disable Telnet again and restart the device

Bonjour

Bonjour is Apple's implementation for zero-configuration networking. A method that helps the users to find services on a local network. By using mDNS and DNS-SD protocols, Bonjour covers three major areas:

1. Addressing Bonjour self-assigns a link-local address if no DHCP server is present in the network. For IPv4, randomly selected from 169.254.0.0/16. For IPv6, the address is assigned from fe80::/10.
2. Hostname to IP address translation Bonjour uses multicast DNS (mDNS) in the local network to resolve a hostname.
3. Service Discovery Bonjour discovers the available services in the local network via DNS service records.

The mDNS protocol resolves the hostname to the IP address without relying on a conventional unicast-based DNS server in a local network. The mDNS messages are sent through multicast (IPv4: 224.0.0.251 or IPv6: ff02::fb) to UDP port 5353. The Axis device will select a domain name with the prefix ".local", which only works with mDNS within the local network. An example domain name is "AXIS P1375.local".

To discover a service and use that service in the network by a client, several DNS records are used in the process:

Type	Name	Purpose	Convention
A	A Record	Resolve a hostname to an IPv4 address	
AAAA	AAAA Record	Resolve a hostname to an IPv6 address	
SRV	Service Record	Maps the service instance to the hostname and port number	<Instance Name>. <Service Type>. <Domain>
PTR	Pointer Record	Maps the service type to the specific instance of that service	<Service Type>. <Domain>
TXT	Text Record	The text field normally describes additional information about the service	Key=value

Axis Bonjour implementation

Prior to AXIS OS 11.4, AXIS OS products used Bonjour to announce their presence in the network. Starting from AXIS OS 11.4, we added new service names – vapix-http and vapix-https – to simplify the discovery of Axis

devices and better comply with the RFC 6763 specification. In the table below, you can see some examples of service names used on AXIS OS devices.

Service name	Default instance name		Transport protocol	Port (default port number)	TXT	Remark
	< 11.4	≥ 11.4				
axis-video	AXIS <model> - mac/serial number**		TCP	http port If http (and http re-direct) is disabled, it will not be advertised.	macaddress	Camera and audio products
axis-bwsc			TCP		macaddress	Body Worn SCU
axis-nvr			TCP		macaddress	Recorders
http	AXIS <model> - mac/serial number**		TCP	80		
https			TCP	443		
rtsp			TCP	554	path, camera	
vapix-http* vapix-https*	N/A	AXIS <model>***	TCP	The HTTP or HTTPS port of the service. By default 80 or 443.	<ul style="list-style-type: none"> • sn= <serial number> • txtvers=1 • ep= param, apidisc, decaf**** • tags= ***** 	Added from AXIS OS 11.4.

*VAPIX is Axis own open API (Application Programming Interface) to our products, using standard protocols that enable integration into a wide range of solutions on different platforms.

** Example: AXIS P1375 - B8A44F42B4C6

*** Example: AXIS P1375. If you add a second device of the same model, the second one will be named AXIS P1375 (2) and so on.

**** param stands for param.cgi, apidisc stands for apidisc, and decaf stands for device configuration framework. Decaf was added in AXIS OS 11.11 and is included in all subsequent versions.

***** This field is used by services to indicate temporary roles.

AXIS OS < 11.4

In the below example, an Axis P1375 camera is running on the AXIS OS version earlier than 11.4. We use *AXIS IP Utility* to discover an Axis device. *AXIS IP Utility* sends a query message including PTR record. Querying a service instance called "_axis-video._tcp.local".

```

8066 2022-12-30 11:04:39,046881 192.168.0.4 224.0.0.251 MDNS 82 Standard query 0x0000 PTR _axis-video._tcp.local, "QM" question
> Frame 8066: 82 bytes on wire (656 bits), 82 bytes captured (656 bits) on interface \Device\NPF_{F98F2C85-C9CD-400E-AE88-D374F6472ADC}, id 0
> Ethernet II, Src: HP_c6:a1:f1 (84:69:93:c6:a1:f1), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
> Internet Protocol Version 4, Src: 192.168.0.4, Dst: 224.0.0.251
> User Datagram Protocol, Src Port: 5353, Dst Port: 5353
> Multicast Domain Name System (query)
  Transaction ID: 0x0000
  > Flags: 0x0000 Standard query
  Questions: 1
  Answer RRs: 0
  Authority RRs: 0
  Additional RRs: 0
  > Queries
    > _axis-video._tcp.local: type PTR, class IN, "QM" question
  
```

Once the Axis device receives the query message, it will respond with a mDNS query response containing the PTR record and additional records.

```

8072 2022-12-30 11:04:39,117633 192.168.0.3 224.0.0.251 MDNS 260 Standard query response 0x0000 PTR AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local TXT,
Frame 8072: 260 bytes on wire (2080 bits), 260 bytes captured (2080 bits) on interface \Device\NPF_{F98F2C85-C9CD-400E-AE88-D374F6472ADC}, id 0
Ethernet II, Src: AxisComm_42:b4:c6 (b8:a4:4f:42:b4:c6), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
Internet Protocol Version 4, Src: 192.168.0.3, Dst: 224.0.0.251
User Datagram Protocol, Src Port: 5353, Dst Port: 5353
Multicast Domain Name System (response)
  Transaction ID: 0x0000
  > Flags: 0x8400 Standard query response, No error
  Questions: 0
  Answer RRs: 1
  Authority RRs: 0
  Additional RRs: 6
  > Answers
    > _axis-video._tcp.local: type PTR, class IN, AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local PTR
      Name: _axis-video._tcp.local
      Type: PTR (domain name Pointer) (12)
      .000 0000 0000 0001 = Class: IN (0x0001)
      0... .. = Cache flush: False
      Time to live: 4500 (1 hour, 15 minutes)
      Data length: 28
      Domain Name: AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local
    > Additional records
      > AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local: type TXT, class IN, cache flush TXT
        Name: AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local
        Type: TXT (Text strings) (16)
        .000 0000 0000 0001 = Class: IN (0x0001)
        1... .. = Cache flush: True
        Time to live: 4500 (1 hour, 15 minutes)
        Data length: 24
        TXT Length: 23
        TXT: macaddress=B8A44F42B4C6 TXT contains information about the mac address
      > axis-b8a44f42b4c6.local: type A, class IN, cache flush, addr 192.168.0.3
        Name: axis-b8a44f42b4c6.local
        Type: A (Host Address) (1)
        .000 0000 0000 0001 = Class: IN (0x0001)
        1... .. = Cache flush: True
        Time to live: 120 (2 minutes)
        Data length: 4
        Address: 192.168.0.3 The IP address fo the device
      > axis-b8a44f42b4c6.local: type A, class IN, cache flush, addr 169.254.168.20
      > AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 80, target axis-b8a44f42b4c6.local SRV
        Service: AXIS P1375 - B8A44F42B4C6
        Protocol: _axis-video
        Name: _tcp.local
        Type: SRV (Server Selection) (33)
        .000 0000 0000 0001 = Class: IN (0x0001)
        1... .. = Cache flush: True
        Time to live: 120 (2 minutes)
        Data length: 8
        Priority: 0
        Weight: 0
        Port: 80
        Target: axis-b8a44f42b4c6.local
      > AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local: type NSEC, class IN, cache flush, next domain name AXIS P1375 - B8A44F42B4C6._axis-video._tcp.local
      > axis-b8a44f42b4c6.local: type NSEC, class IN, cache flush, next domain name axis-b8a44f42b4c6.local
  
```

"AXIS P1375 - B8A44F42B4C6" is the service instance name. "_axis-video._tcp" is the service type that identifies what the service does and its transport protocol. In this example, the Axis device announces itself by providing the "_axis-video" service through TCP. The TXT record contains the mac address information of the Axis device.

AXIS OS ≥ 11.4

Below is another example that the same Axis P1375 camera running on version 11.4. The camera announces the service instance as "AXIS P1375._vapix-http(s)._tcp.local". In the TXT records, additional information has been included there.

Source	Destination	Protocol	Length	Info
192.168.0.4	224.0.0.251	MDNS	370	Standard query response 0x0000 SRV, cache flush 0 0 554 axis-acc8ed9c85f.local SRV,
192.168.0.4	224.0.0.251	MDNS	1489	Standard query response 0x0000 TXT, cache flush PTR _http_tcp.local PTR AXIS P1375_
192.168.0.4	224.0.0.251	MDNS	370	Standard query response 0x0000 SRV, cache flush 0 0 554 axis-acc8ed9c85f.local SRV,


```

    v AXIS P1375._vapix-http_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 80, target axis-acc8ed9c85f.local
      Service: AXIS P1375
      Protocol: _vapix-http
      Name: _tcp.local
      Type: SRV (Server Selection) (33)
      .000 0000 0000 0001 = Class: IN (0x0001)
      1... .... .... .... = Cache flush: True
      Time to live: 120 (2 minutes)
      Data length: 8
      Priority: 0
      Weight: 0
      Port: 80
      Target: axis-acc8ed9c85f.local
    v AXIS P1375._vapix-https_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 443, target axis-acc8ed9c85f.local
      Service: AXIS P1375
      Protocol: _vapix-https
      Name: _tcp.local
      Type: SRV (Server Selection) (33)
      .000 0000 0000 0001 = Class: IN (0x0001)
      1... .... .... .... = Cache flush: True
      Time to live: 120 (2 minutes)
      Data length: 8
      Priority: 0
      Weight: 0
      Port: 443
      Target: axis-acc8ed9c85f.local
  
```

new service names announced by the camera

Source	Destination	Protocol	Length	Info
192.168.0.4	224.0.0.251	MDNS	370	Standard query response 0x0000 SRV, cache flush 0 0 554 axis-ac
192.168.0.4	224.0.0.251	MDNS	1489	Standard query response 0x0000 TXT, cache flush PTR _http_tcp.


```

    v AXIS P1375._vapix-http_tcp.local: type TXT, class IN, cache flush
      Name: AXIS P1375._vapix-http_tcp.local
      Type: TXT (Text strings) (16)
      .000 0000 0000 0001 = Class: IN (0x0001)
      1... .... .... .... = Cache flush: True
      Time to live: 4500 (1 hour, 15 minutes)
      Data length: 49
      TXT Length: 9
      TXT: txtvers=1
      TXT Length: 15
      TXT: sn=ACC8ED9C85F
      TXT Length: 16
      TXT: ep=param,apidisc
      TXT Length: 5
      TXT: tags=
  
```

Information included in the TXT record

The devices are still announcing all the previous service names at the same time for the time being. So the VMSs and other clients should still be able to discover the Axis Devices, see below.

```

mDNS
No.    Time                Source                Destination          Protocol Length  Info
-----
129    2023-02-15 17:47:44,154001  192.168.0.4         224.0.0.251         mDNS      1489    Standard query response 0x0000 TXT, cache flush PTR _http_tcp.local PTR AXIS P1375._http_tcp.local
> Frame 129: 1489 bytes on wire (11912 bits), 1489 bytes captured (11912 bits) on interface \Device\NPF_{F98F2C85-C9CD-400E-AE88-D374F6472ADC}, id 0
> Ethernet II, Src: AxisComm_d9:c8:5f (acc:c8:e:d9:c8:5f), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
> Internet Protocol Version 4, Src: 192.168.0.4, Dst: 224.0.0.251
> User Datagram Protocol, Src Port: 5353, Dst Port: 5353
v Multicast Domain Name System (response)
  > Transaction ID: 0x0000
  > Flags: 0x8400 Standard query response, No error
  Questions: 0
  Answer RRs: 40
  Authority RRs: 0
  Additional RRs: 0
  Answers
    > AXIS P1375._http_tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _http_tcp.local
    > _http_tcp.local: type PTR, class IN, AXIS P1375._http_tcp.local
    > AXIS P1375._https_tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _https_tcp.local
    > _https_tcp.local: type PTR, class IN, AXIS P1375._https_tcp.local
    > AXIS P1375 - ACC8ED9C85F._axis-video._tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _axis-video._tcp.local
    > _axis-video._tcp.local: type PTR, class IN, AXIS P1375 - ACC8ED9C85F._axis-video._tcp.local
    > AXIS P1375 H.264 1._rtsp_tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _rtsp_tcp.local
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 1._rtsp_tcp.local
    > AXIS P1375 H.264 2._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 2._rtsp_tcp.local
    > AXIS P1375 H.264 3._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 3._rtsp_tcp.local
    > AXIS P1375 H.264 4._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 4._rtsp_tcp.local
    > AXIS P1375 H.264 5._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 5._rtsp_tcp.local
    > AXIS P1375 H.264 6._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 6._rtsp_tcp.local
    > AXIS P1375 H.264 7._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 7._rtsp_tcp.local
    > AXIS P1375 H.264 8._rtsp_tcp.local: type TXT, class IN, cache flush
    > _rtsp_tcp.local: type PTR, class IN, AXIS P1375 H.264 8._rtsp_tcp.local
    > AXIS P1375._vapix-http._tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _vapix-http._tcp.local
    > _vapix-http._tcp.local: type PTR, class IN, AXIS P1375._vapix-http._tcp.local
    > AXIS P1375._vapix-https._tcp.local: type TXT, class IN, cache flush
    > _services_dns-sd._udp.local: type PTR, class IN, _vapix-https._tcp.local
    > _vapix-https._tcp.local: type PTR, class IN, AXIS P1375._vapix-https._tcp.local
    > AXIS P1375._http_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 80, target axis-acc8ed9c85f.local
    > axis-acc8ed9c85f.local: type A, class IN, cache flush, addr 192.168.0.4
    > axis-acc8ed9c85f.local: type A, class IN, cache flush, addr 169.254.72.129
    > AXIS P1375._https_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 443, target axis-acc8ed9c85f.local
    > AXIS P1375 - ACC8ED9C85F._axis-video._tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 80, target axis-acc8ed9c85f.local
    > AXIS P1375 H.264 1._rtsp_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 554, target axis-acc8ed9c85f.local
    > AXIS P1375 H.264 2._rtsp_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 554, target axis-acc8ed9c85f.local
    > AXIS P1375 H.264 3._rtsp_tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 554, target axis-acc8ed9c85f.local
  
```

The default instance name (in the webpage, we call "Bonjour name" or "Friendly name") can be changed when needed:

AXIS OS version	Web interface configuration path
< 7.10	Setup > System Options > Network > Bonjour
≥ 7.10	Settings > System > TCP/IP > Friendly name
≥ 10.9	System > Network > Network discovery proto

After changing the friendly name, it will apply to all services.

SNMP (Simple Network Management Protocol)

This section describes how to use Axis Video SNMP MIB. It's assumed that you are familiar with the Simple Network Management Protocol (SNMP) already.

SNMP/MIBs allow network management operators to use standard SNMP tools to monitor the status of Axis products. The Axis Management Information Base (MIB) for video hardware enables monitoring of hardware-related issues that may need administrative attention. This applies to devices with AXIS OS 5.60 and higher. Note that new functionality may be added in later releases. For detailed information, read the MIB file.

Some products will not have all the hardware as specified below and there will only be one MIB defined for all hardware. In case the agent requests the status of hardware that is not included in the product, the device will return "noSuchObject". Which hardware is supported is handled at run time, meaning there is no need for product specific configuration. All Axis devices support the Axis Video MIB from AXIS OS 5.60 and higher except for AXIS Companion Line devices, however it's recommended to update to the latest version. These MIBs are required to use Axis Video MIB:

- SNMPv2-TC
- SNMPv2-SMI

- SNMPv2-CONF
- AXIS-ROOT-MIB
- AXIS-VIDEO-MIB

Enable SNMP

To use this functionality, SNMP must be enabled in the cameras and encoders on the network. SNMP in Axis devices can be enabled as below:

AXIS OS 6.5X and lower

SNMP can be enabled from the web interface using **Setup > System Options > Network > SNMP**.

AXIS OS 7.10 and higher

SNMP can be enabled from the web interface using **Settings > System > SNMP**.

To use SNMPv3, HTTPS has to be enabled. For information about how to enable HTTPS, see the user manual for the device.

You can use AXIS Device Manager to enable SNMP on multiple devices. AXIS Device Manager is available for download from www.axis.com.

SNMPv3 access

To enable SNMPv3 in Axis devices, a password must be set in the web interface for the default SNMP user initial. Once SNMPv3 is enabled, the following default privacy and authentication modes are pre-configured:

AXIS OS	Privacy	Authentication
> 11.0	AES-128	SHA-256
≥ 10.7	AES-128	SHA-1
< 10.6	DES	MD5

Note that it's currently not possible for the user to change the default privacy and authentication modes in an easy way.

SNMP trap configuration

All Axis devices support the default SNMP MIB-II traps (Cold start, Warm start, Link up, Authentication failed). In addition, Axis devices support a number of feature and product specific traps that are included in Axis Video MIB (described in *Axis Video MIB traps, on page 139*). Depending on your SNMP version, different configurations are required/available for using SNMP traps.

SNMPv1/v2c trap configuration

When SNMPv1 and SNMPv2c are used, all Axis Video MIB traps documented in *Axis Video MIB traps, on page 139* will be enabled and sent when SNMP traps are enabled. The default MIB-II SNMP traps can be configured and enabled/disabled individually:

- **Cold start** – sent when SNMP has been started and the configuration and MIB have changed
- **Warm start** – sent when SNMP has been started and the configuration has changed, but not the MIB
- **Link up** – sent when the network link changed from down to up
- **Authentication failed** – sent when snmp-authentication attempt failed

SNMPv3 trap configuration

For SNMPv3, both the default MIB-II SNMP traps as well as the Axis Video MIB traps need to be configured and enabled manually. This is done using the SNMP-TARGET-MIB and SNMP-NOTIFICATION-MIB modules, defined in RFC 3413. So in order to configure the Axis device to send out SNMP traps, the following tables need to be configured accordingly:

- snmpNotifyTable
- snmpTargetAddrTable
- snmpTargetParamsTable
- snmpNotifyFilterProfileTable
- snmpNotifyFilterTable

Axis Video MIB

Axis Video MIB (Message Information Base) extends the way to monitor Axis devices over SNMP. The Video MIB enables network administrators to monitor status information and a number of new notifications. To make use of the Axis Video MIB, download the MIB files [here](#) and import them in your SNMP network monitoring application. The Axis Video MIB is supported by Axis network devices from AXIS OS 5.60 and higher.

Axis Video MIB traps

There are only three kinds of traps that can be generated by a video product. These three kinds are defined in the Axis Video MIB and they should cover all the future needs of traps and thus they are defined in general terms. The trap types are described below:

- alarmNew – This trap is sent to warn about a status change. Additional parameters include a unique trap ID (alarmID), a text string identifying the event (alarmName) and an additional string (alarmText) that specifies more detailed information about the event, for instance the unique identifier of the hardware or its status. This new state is valid until it is cleared by an alarmCleared trap. In general the state can be obtained through an SNMP get command as well.
- alarmCleared – This trap is sent to indicate that some hardware has gone back to its normal state. The alarmID specifies the ID of a previous alarmNew trap that is cleared by this trap. Additional parameters include the same alarmName and alarmText that was sent by the alarmNew trap.
- alarmSingle – This trap is sent to warn about a certain event. Additional parameters include a unique trap ID (alarmID), a text string identifying the event (alarmName) and an additional string (alarmText) that specifies more detailed information about the event, for instance the unique identifier of the hardware or its status. The difference from the alarmNew trap is that this trap refers to a stateless event. For this reason there is no alarmCleared and hence several traps indicating the same event might follow each other. Since this is a stateless event it is impossible to get any related information through SNMP get command.

Trap name/use case	Trap type	Alarm name	Alarm cleared event*	Supported products
(Multiple) Power Supply Failure	alarmNew	powerSupplyAlert	✓	AXIS Q7900 Rack and AXIS Q7920 Video Encoder Chassis
(Multiple) Fan Failure	alarmNew	fanAlert	✓	AXIS Q7900 Rack and AXIS Q7920 Video Encoder Chassis
(High or Low) Temperature Limit Reached Alert	alarmNew	temperatureAlert	✓	All Axis devices
(Multiple) Analog Video Signal Lost	alarmNew	videoSignalAlert	✓	Axis video encoders, with AXIS OS 5.60 – 6.50
(Multiple) Audio Input Signal Lost	alarmNew	audioSignalAlert	✓	All Axis audio-capable devices

				with external audio input
Product Casing Opened Alert	alarmNew	openCasingAlert	✓	All Axis devices connected with AXIS T93F door switch / intrusion alarm
Mechanical PTZ Error Alert	alarmSingle	PTZAlert	✓	All Axis mechanical PTZ devices
Edge Storage Alert	alarmNew	storageMediaAlert	✓	All Axis devices featuring SD cards and mounted network share
Camera Tampering Alert	alarmSingle	tamperingAlert		All Axis tampering-capable devices (does not apply to AXIS Image Health Analytics)
General Trap	alarmNew or alarmSingle**	Custom AlarmText		All Axis devices

*The alarm cleared event is sent automatically. E.g. if the Axis device detects an issue with the storage devices, it will send out an alarm, and if the issue resolved itself, it will send another alarm notifying that the issue is resolved.

**Depending on whether the event is stateless or stateful the trap is of type alarmNew or alarmSingle


Axis Video MIB OIDs

The status operations that are available in the AXIS SNMP MIB are listed below. All statuses are read-only objects. If a set operation is requested on the OID it will return 17, notWritable (or 2,nosuchName, for protocol version 1). A status operation can have one or more OIDs depending on the product. As an example, .1.3.6.1.4.1.368.4.1.1.1.3.x can be .1.3.6.1.4.1.368.4.1.1.1.3.1 Temperature Sensor 1, .1.3.6.1.4.1.368.4.1.1.1.3.2 Temperature Sensor 2, .1.3.6.1.4.1.368.4.1.1.1.3.3 Temperature Sensor 3, and so on.

OID Name	OID	Possible OID States	Supported products
Get Power Supply Status	.1.3.6.1.4.1.368.4.1.1.1.3.x	OK;Failure	AXIS Q7900 Rack and AXIS Q7920 Video Encoder Chassis
Get Fan Status	.1.3.6.1.4.1.368.4.1.2.1.3.-1.x	OK;Failure	AXIS Q7900 Rack and AXIS Q7920 Video Encoder Chassis
Get Temperature Sensor Value	.1.3.6.1.4.1.368.4.1.3.1.4.-1.x	Temperature in degree celsius	All Axis devices
Get Temperature Sensor Status	.1.3.6.1.4.1.368.4.1.3.1.3.-1.x	OK;Failure; OutOfBoundary	All Axis devices
Get Video Signal Status	.1.3.6.1.4.1.368.4.1.4.1.2.x	SignalOK;NoSignal	All Axis video encoders
Get Audio Signal Status	.1.3.6.1.4.1.368.4.1.5.1.2.x	SignalOK;NoSignal	All Axis audio-capable devices


Get Casing Status	.1.3.6.1.4.1.368.4.1.6.1.3. x	Open;Closed	All Axis devices connected with AXIS T93F door switch / intrusion alarm
Get Storage Disruption Status	.1.3.6.1.4.1.368.4.1.8.1.3. x	Yes;No	All Axis devices

Axis Video MIB Tree

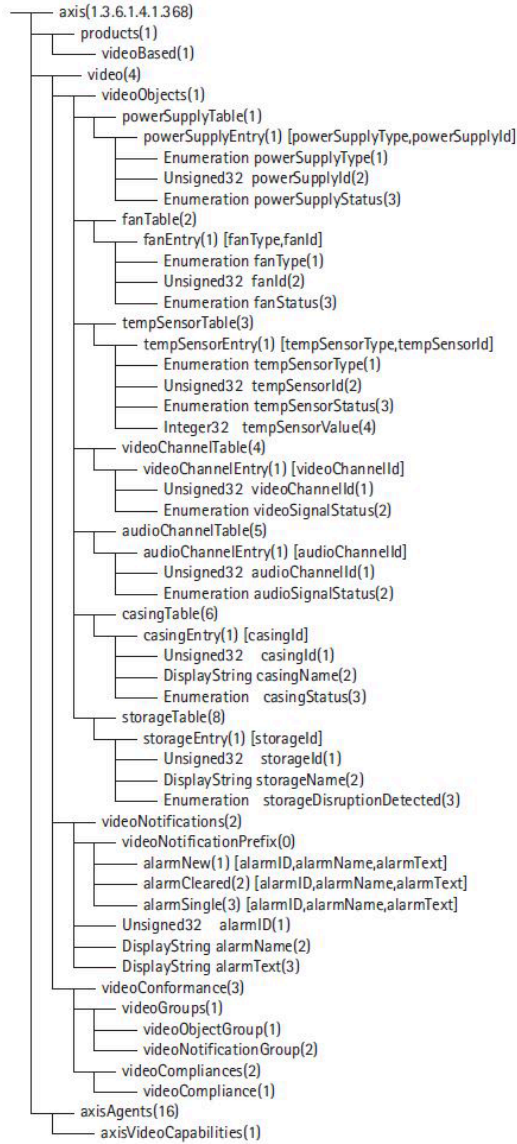

Import Axis Video MIB files using iReasoning MIB Browser


The screenshots below illustrates how to import *Axis Video MIB, on page 139* files into the iReasoning MIB Browser.

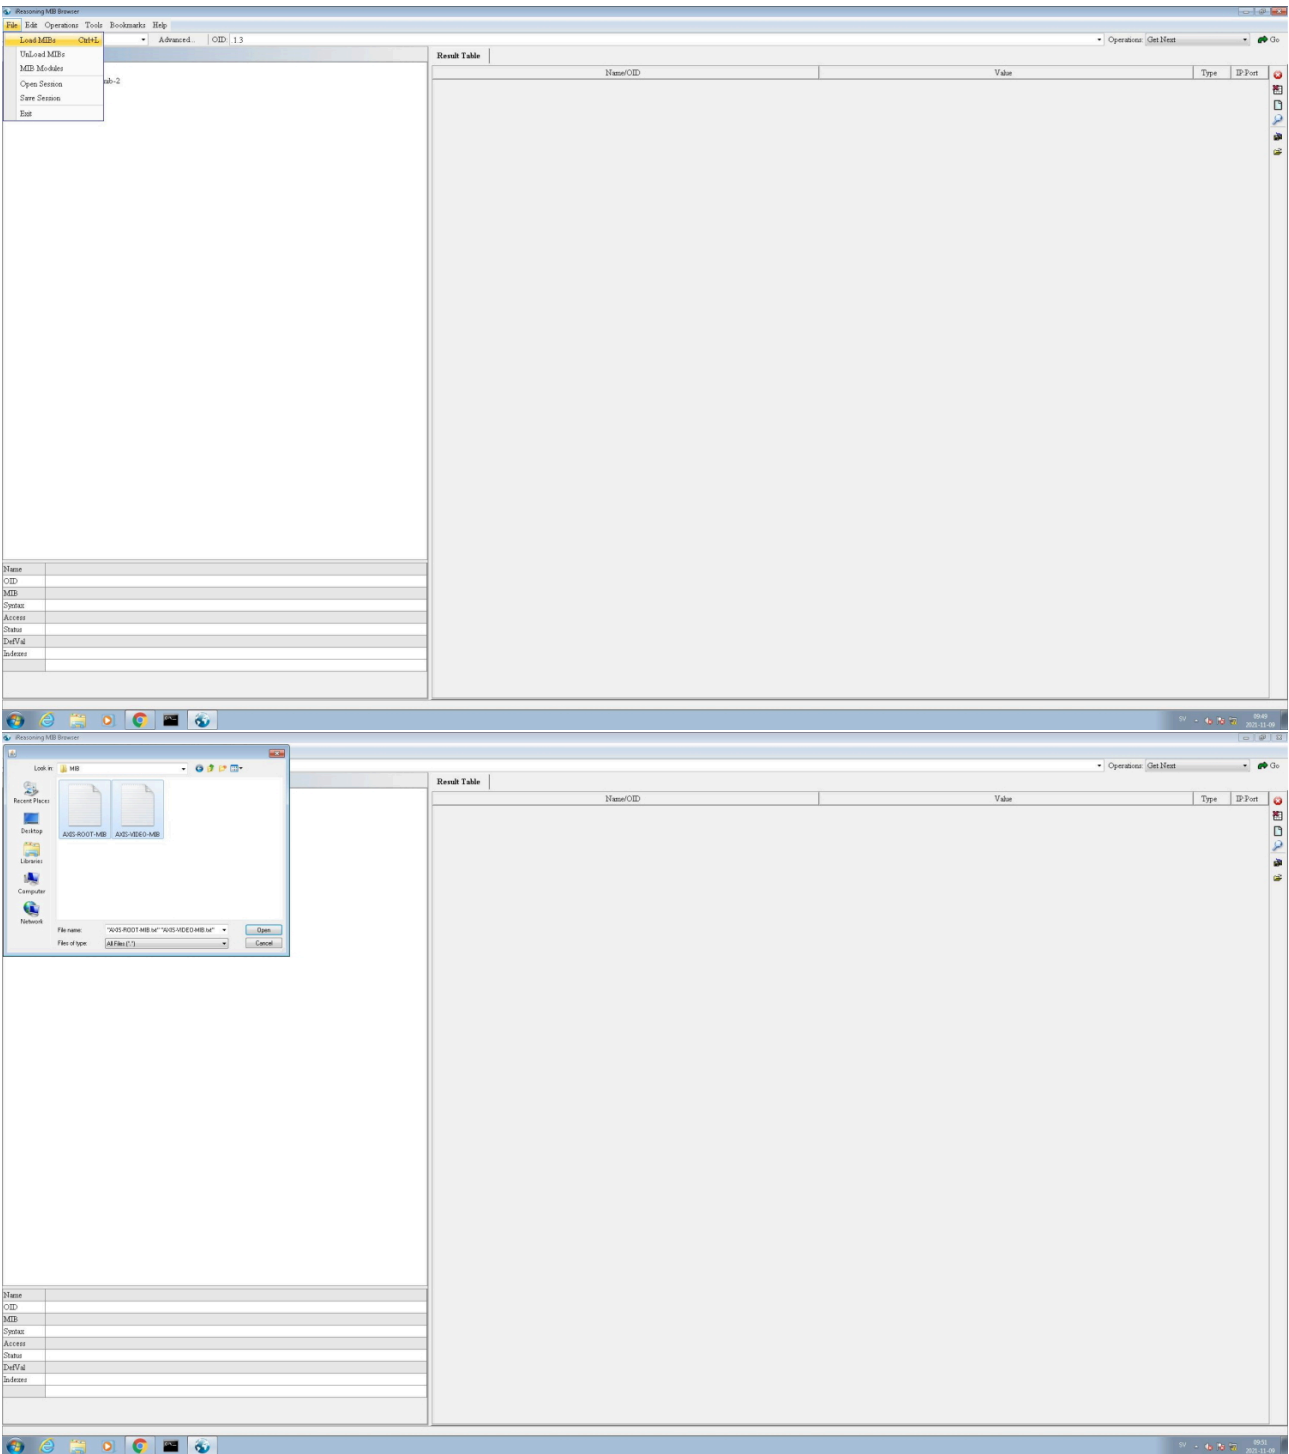


SNMP walk using iReasoning MIB Browser

The screenshots below illustrate how to do an SNMP walk on an Axis device. Note that SNMP needs to be *enabled*.

SNMPv1/2


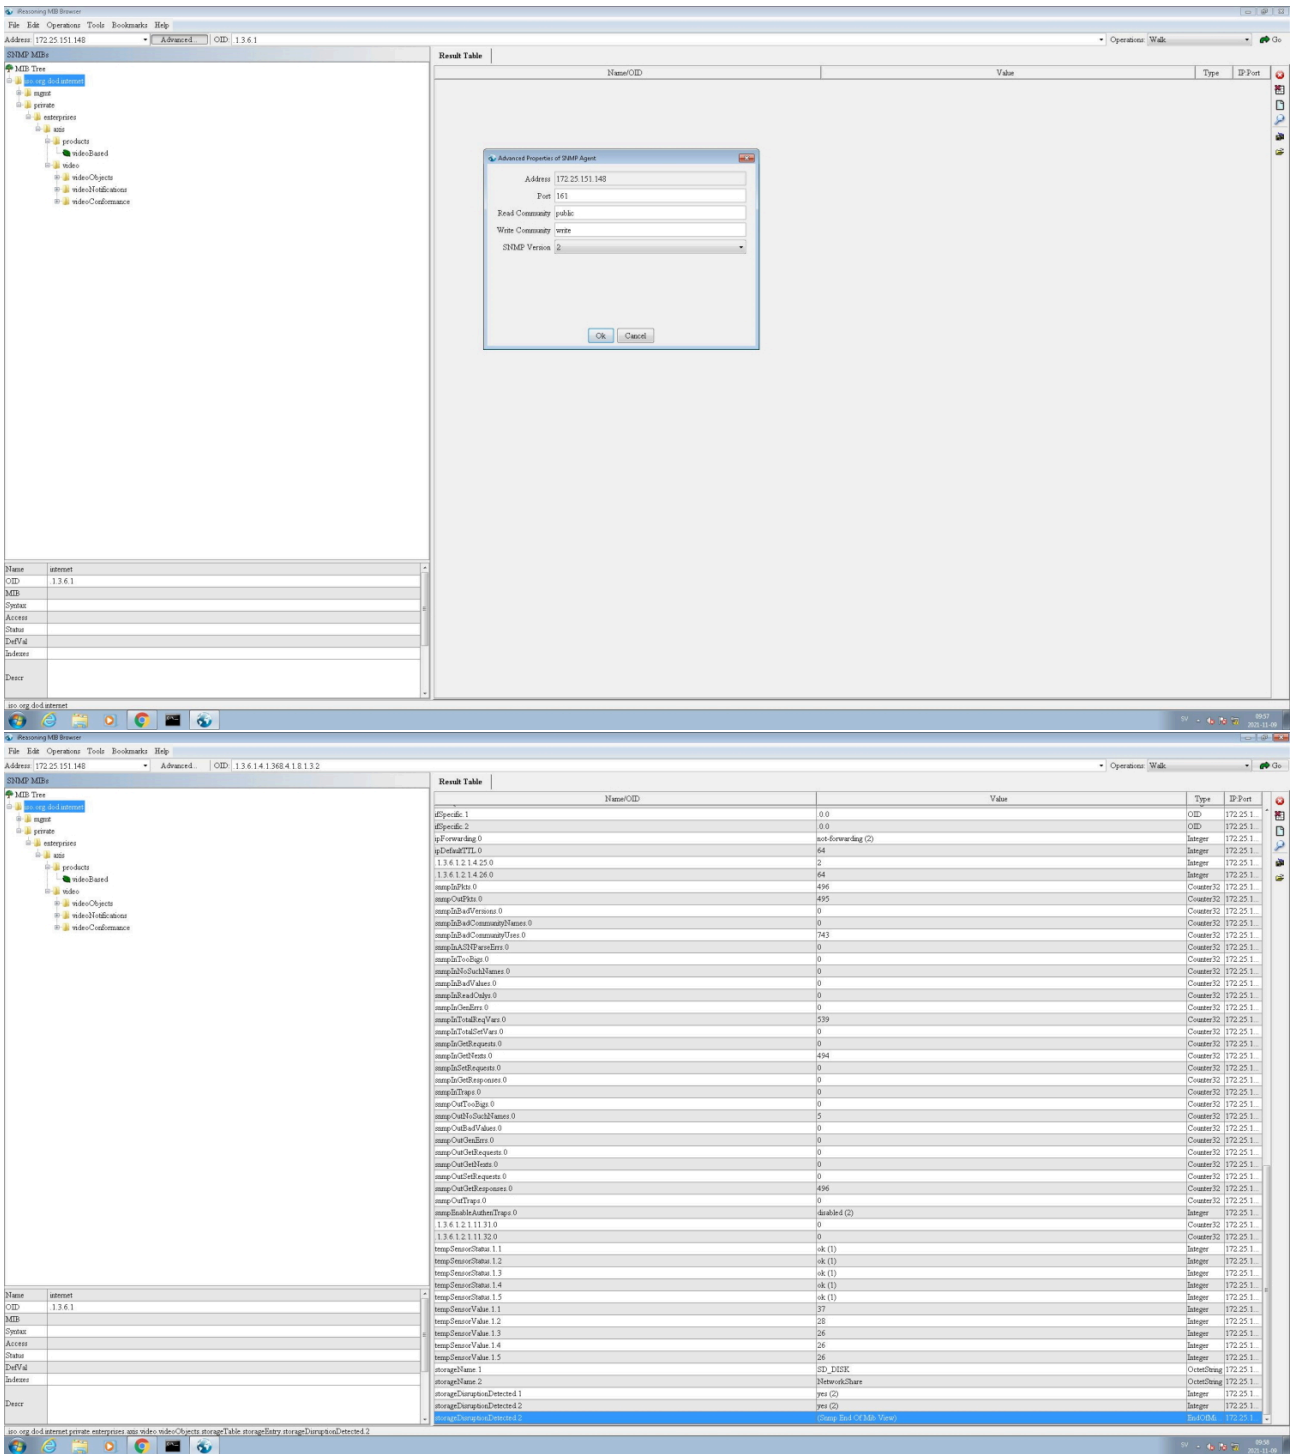



SNMPv3

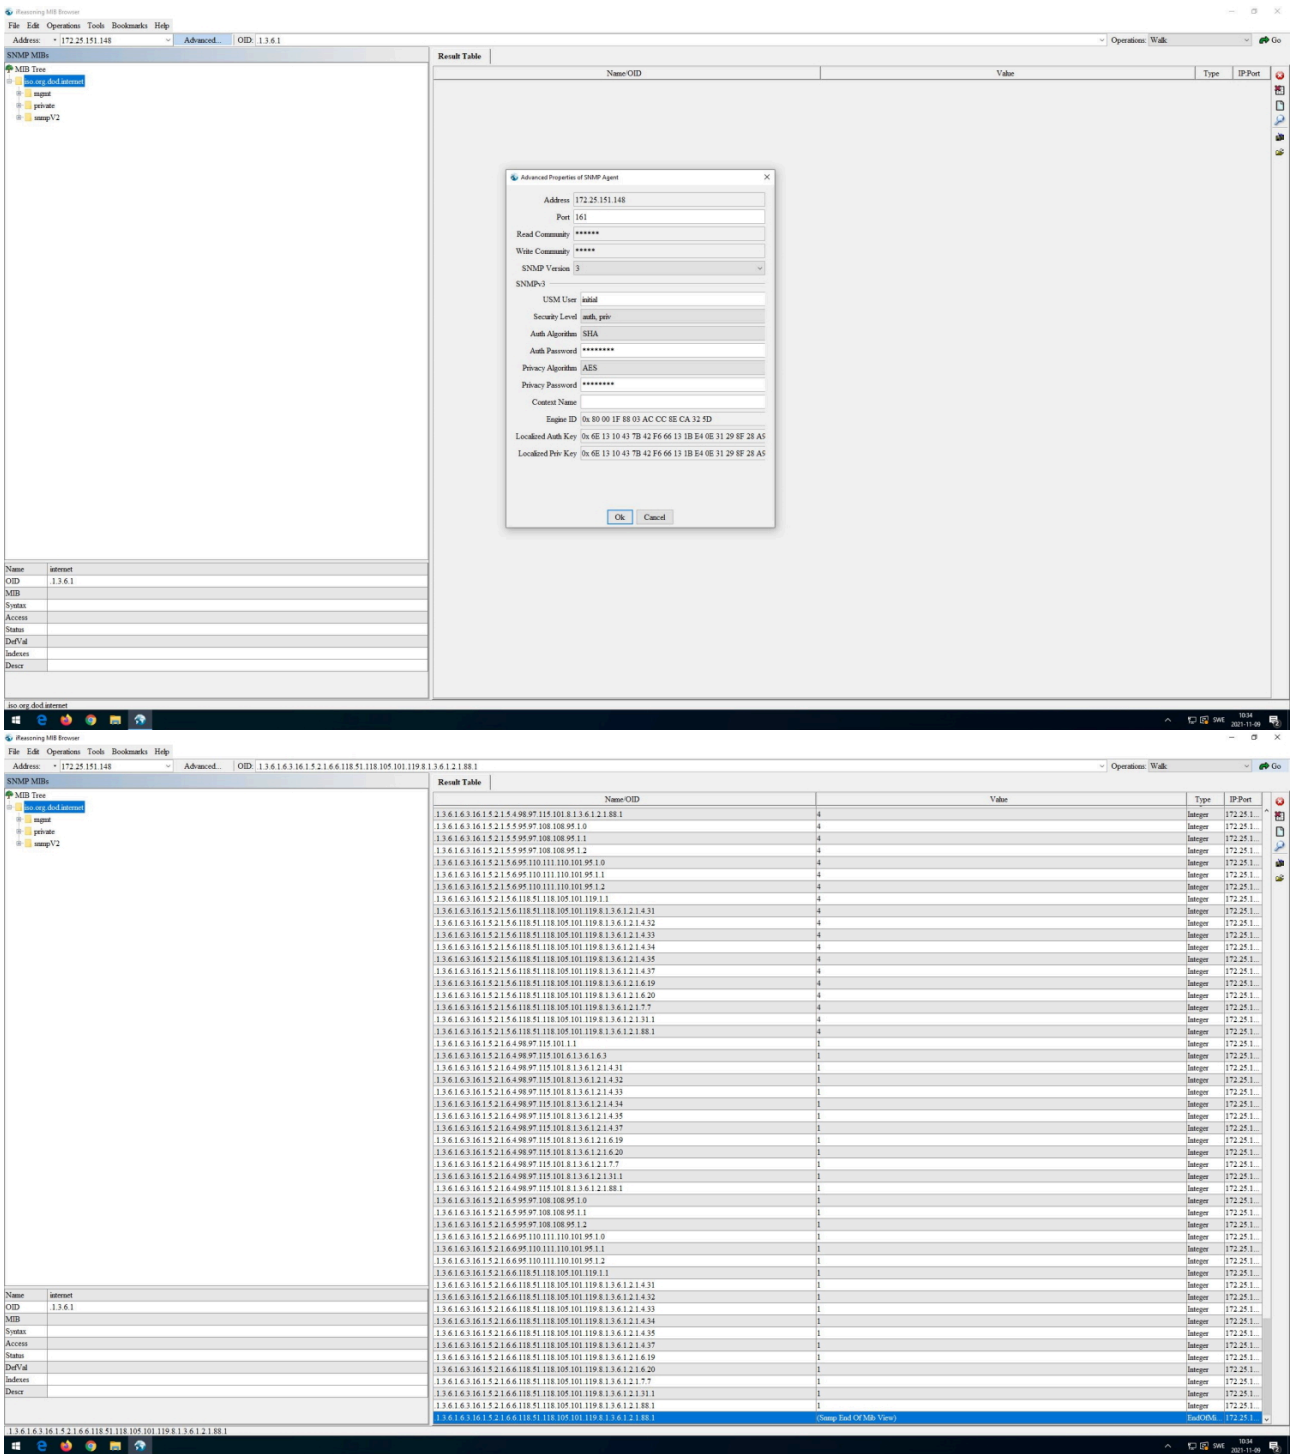

Receiving SNMP traps using iReasoning MIB Browser

The screenshots below illustrate how to receive an SNMP trap from an Axis device. Note that SNMP traps need to be *enabled*.

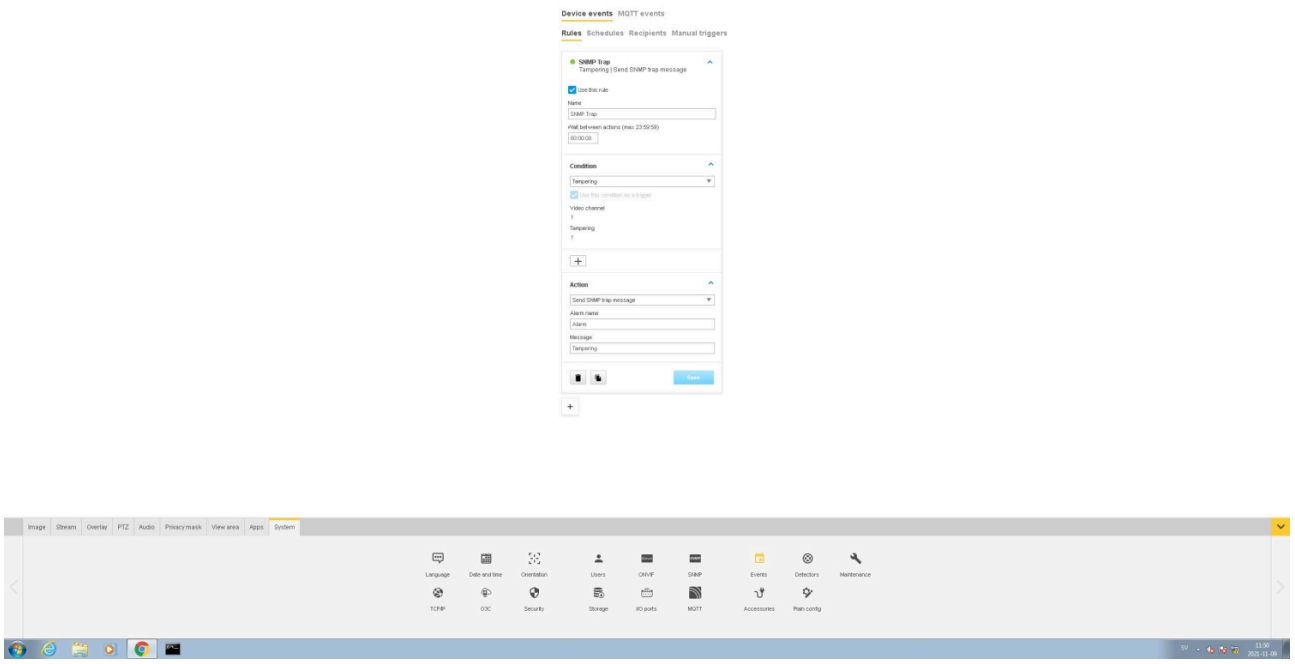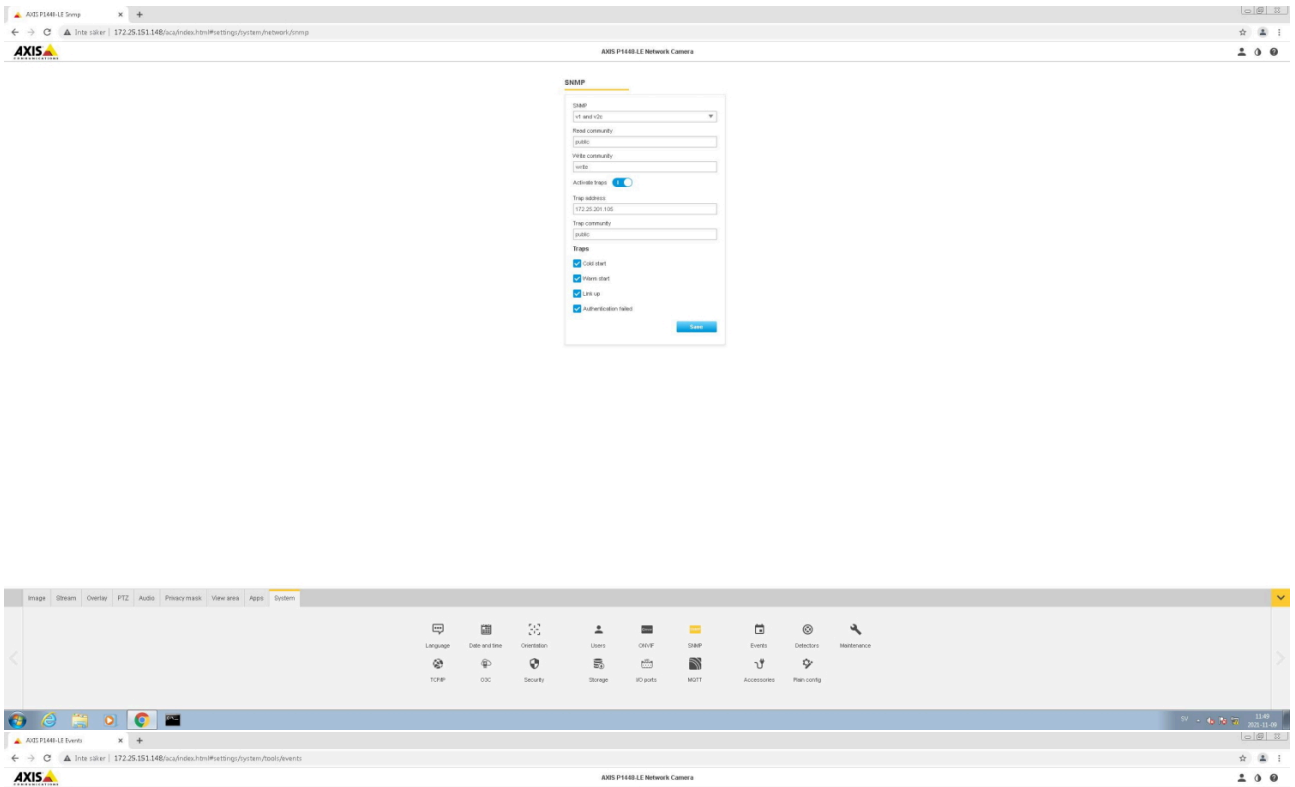

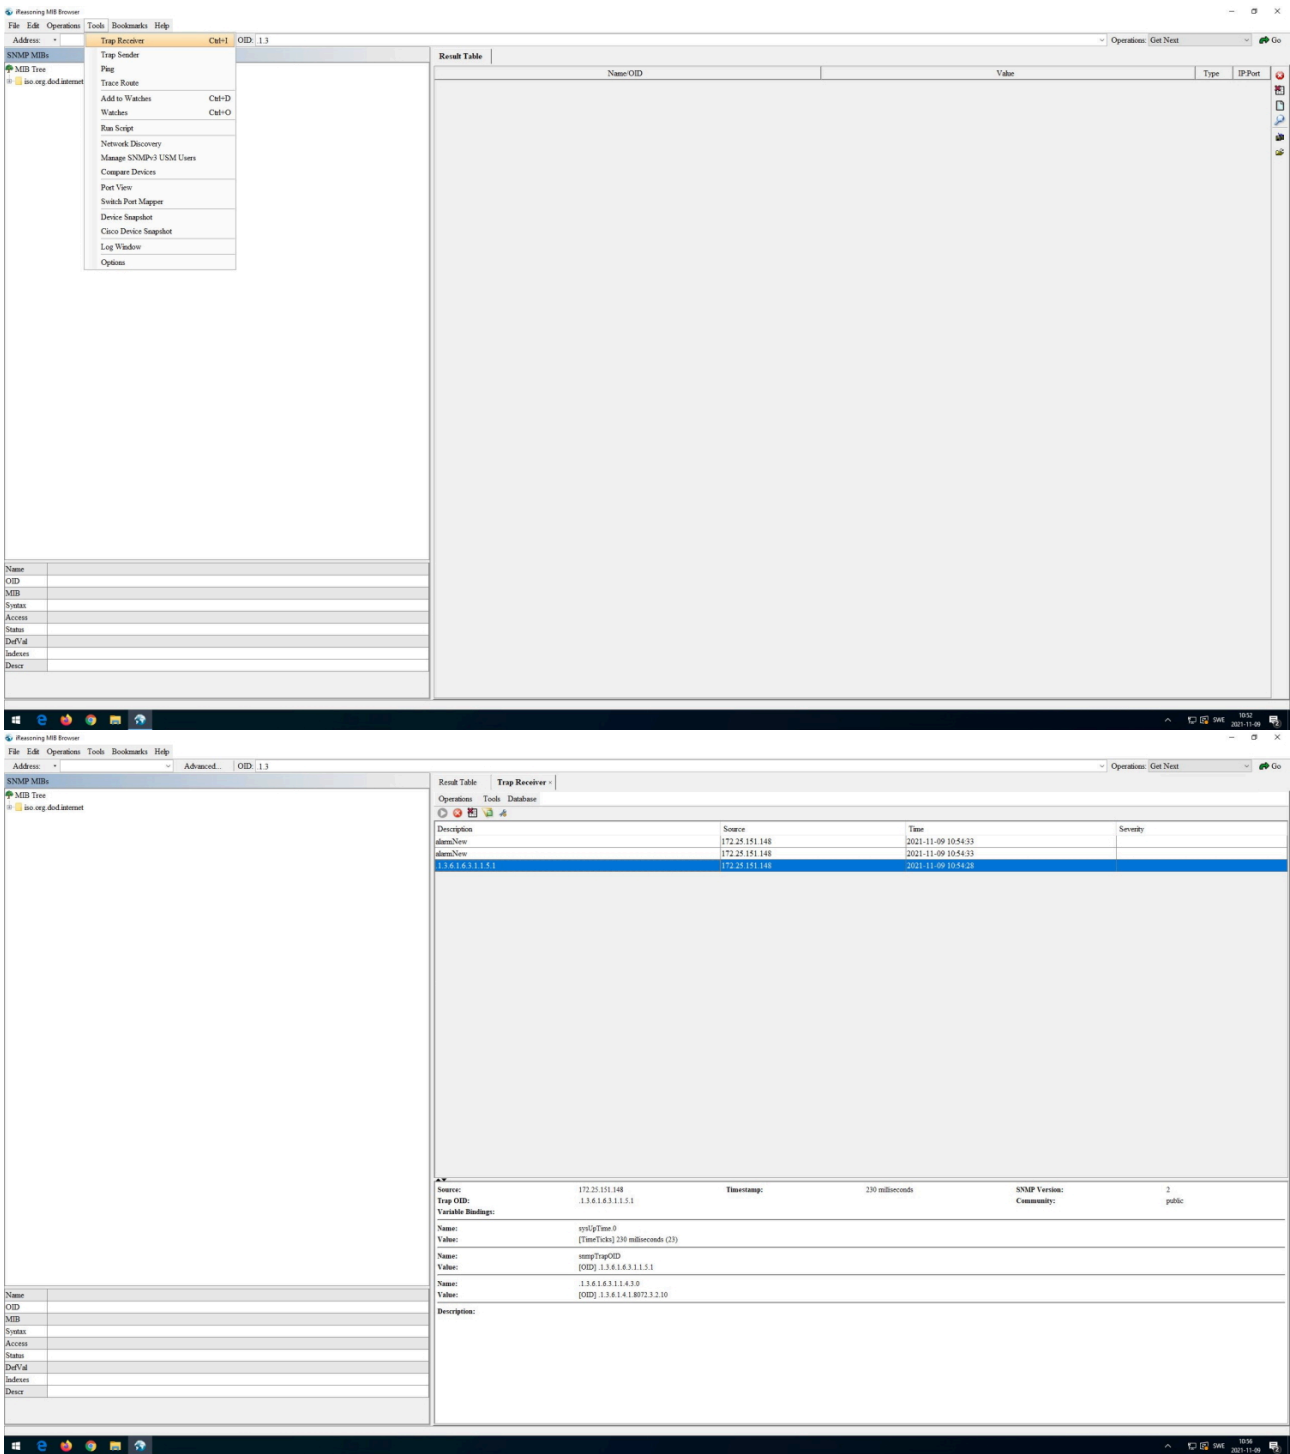

LLDP (Link Layer Discovery Protocol)

All Axis devices with AXIS OS 7.10 and higher are utilizing LLDP (Link Layer Discovery Protocol) to neighbor-announce their identity and capabilities information using the TLV-encoding scheme (Type-Length-Value) in the network. When sending out LLDP announcements, it is possible to configure certain information such as system description and name of the device. In order to configure specific LLDP settings, you can access the device via SSH, SSH is disabled per default and can be enabled in **Settings > System > Plain config > Network**. Once SSH access is established, type "lldpcli". See the *following instructions* for further commands that can be used in the LLDPCLI.

In addition to neighbor announcements, LLDP can also be used for software-based PoE negotiation. IEEE 802.3at (30 W PoE+) capable devices support software-based PoE negotiations, and IEEE 802.3af (15.4 W) capable devices running AXIS OS 9.20 and higher support the LLDP allocation of max-power towards the connected PoE-

switch. When enabled, the Axis device will notify the PoE-switch about its max PoE consumption so that the PoE-switch can perform a better PoE-management and allocate less PoE to the network port. LLDP allocation for max-power can be enabled in **Settings > System > Plain config > Network > LLDP POE > LLDP Send Max PoE**. Both methods utilize the LLDP Dot3 PoE-MDI TLV.

When LLDP allocation for max-power is enabled in the Axis device, and the network switch is configured properly in regards to LLDP- and PoE-mode according to vendor documentation, the network switch should be able to reserve the exact amount of max PoE wattage that the Axis device would need. The example below illustrates the behavior of LLDP allocation for max-power being enabled and disabled in an Axis device.

```
sw03#show power inline gigabitEthernet 1/0/1 detail
Interface: Gi1/0/1
Inline Power Mode: auto
Operational status: on
Device Detected: yes
Device Type: Ieee PD
IEEE Class: 3
Discovery mechanism used/configured: Unknown
Police: off

Power Allocated
Admin Value: 15.4
Power drawn from the source: 15.4
Power available to the device: 15.4

Actual consumption
Measured at the port: 4.0
Maximum Power drawn by the device since powered on: 4.5

Absent Counter: 0
Over Current Counter: 0
Short Current Counter: 0
Invalid Signature Counter: 0
Power Denied Counter: 0

Power Negotiation Used: None
LLDP Power Negotiation --Sent to PD--      --Rcvd from PD--
Power Type:          -                      -
Power Source:        -                      -
Power Priority:       -                      -
Requested Power (W) : -                      -
Allocated Power (W) : -                      -
```

Disabled

```

sw03#show power inline gigabitEthernet 1/0/2 detail
Interface: Gi1/0/2
Inline Power Mode: auto
Operational status: on
Device Detected: yes
Device Type: Ieee PD
IEEE Class: 3
Discovery mechanism used/configured: Unknown
Police: off

Power Allocated
Admin Value: 15.4
Power drawn from the source: 11.3
Power available to the device: 11.3

Actual consumption
Measured at the port: 4.0
Maximum Power drawn by the device since powered on: 4.7

Absent Counter: 0
Over Current Counter: 0
Short Current Counter: 1
Invalid Signature Counter: 0
Power Denied Counter: 0

Power Negotiation Used: IEEE 802.3at LLDP
LLDP Power Negotiation --Sent to PD--      --Rcvd from PD--
  Power Type:          Type 2 PSE          Type 1 PD
  Power Source:        Primary             PSE
  Power Priority:       low                 high
  Requested Power (W): 9.6                 9.6
  Allocated Power (W): 9.6                 9.6

```

Enabled

When LLDP allocation for max-power is disabled, the network switch will reserve the full amount of 15.4 W PoE according to IEEE 802.3af with no savings gained. Compare this with having the LLDP allocation for max-power enabled, which will result in the network switch reserving in total 11.3 W PoE instead, where 9.6 W results from the needs of the Axis device and the additional 1.7 W is a margin for power loss due to cable length. This improved PoE management results in saving 4.1 W PoE that can be used on a different network port on the same network switch.

Media Endpoint Discovery (LLDP-MED)

LLDP-MED (Media Endpoint Device Extension) is an extension on top of the LLDP protocol stack that allows devices to include more information (TLVs) during LLDP exchange with network neighbors. At the time of writing (December 2020), Axis devices do not support LLDP-MED extensions and therefore do not support e.g. the LLDP-MED POE-MDI TLV for PoE power negotiation.

Fabric Attach

Fabric Attach (FA) is a technology developed by Extreme Networks. It comes with an Autonomic Edge capability which simplifies the addition of new devices to the network. Axis devices with AXIS OS 12.1 or later have the Basic Fabric Attach client capability, which reduces the time and cost to deploy them in Extreme Networks with "Zero-Touch". For a complete list of products supporting Fabric Attach, please refer to *Products on active track* in AXIS OS Release notes.

Fabric Attach uses the Link Layer Discovery Protocol (LLDP) with custom organizational Type-Length-Values (TLVs) to automate the onboarding process for network devices onto different networks or services. As a Basic Fabric Attach client, Axis devices generate a Fabric Attach Element TLV which includes the following properties:

- Fabric Attach Element type
- A System ID with the device's MAC Address

The screenshot below provides a closer look at the LLDP packet structure for an Axis device.

```

> Ethernet II, Src: AxisCommunic_28:25:d1 (b8:a4:4f:28:25:d1), Dst: LLDP_Multicast (01:80:c2:00:00:0e)
v Link Layer Discovery Protocol
  > Chassis Subtype = MAC address, Id: b8:a4:4f:28:25:d1
  > Port Subtype = MAC address, Id: b8:a4:4f:28:25:d1
  > Time To Live = 120 sec
  > System Name = axis-b8a44f2825d1
  > System Description = AXIS P3265-LV Dome Camera 12.1.31
  > Capabilities
  > Management Address
  > Port Description = eth0
  > IEEE 802.3 - Link Aggregation
  > IEEE 802.3 - MAC/PHY Configuration/Status
  > IEEE 802.3 - Power Via MDI
  v Avaya Inc - Extreme Fabric Attach Element TLV
    1111 111. .... .. = TLV Type: Organization Specific (127)
    .... ..0 0011 0010 = TLV Length: 50
    Organization Unique Code: 00:04:0d (Avaya Inc)
    Subtype: Extreme Fabric Attach Element TLV (11)
    HMAC-SHA Digest: 0000000000000000000000000000000000000000000000000000000000000000
    0010 11. .... .. = Element Type: 11
    .... ..10 1000 .... .. = State: 40
    .... ..0000 0000 0000 = Mgmt VLAN: 0
    Reserved: 0
    System ID: b8:a4:4f:28:25:d1:00:00:00
  > End of LLDPDU
  
```

The following applies for all Axis devices:

- Fabric Attach Element Type is always set to 11 (IP camera).
- System ID contains your device's unique MAC address.
- LLDP is enabled by default.
- The FA Element TLV is included in every outgoing LLDP packet.


Extreme Networks has four FA client variants. Axis devices act as Basic FA clients with minimal implementation, which allows you to bypass authentication for the FA Element TLV. As a result, the HMAC-SHA digest value is always zero.

Example setup

In this scenario, the customer has a dedicated network segment, VLAN 202.

Previously, to onboard a camera, the customer would connect it to a physical switch port and then manually assign that port to VLAN 202. Fabric Attach simplifies the onboarding process.

1. By default, all ports on the Extreme Networks Fabric Engine switch are set for auto-sense.
2. The customer connects the Axis device to Port 2, which has Fabric Attach enabled. Once the device is powered on, it starts sending LLDP packets.
3. Using the FA Element TLV, the switch identifies the device as an IP Camera and automatically moves Port 2 to VLAN 202 with no manual intervention required.

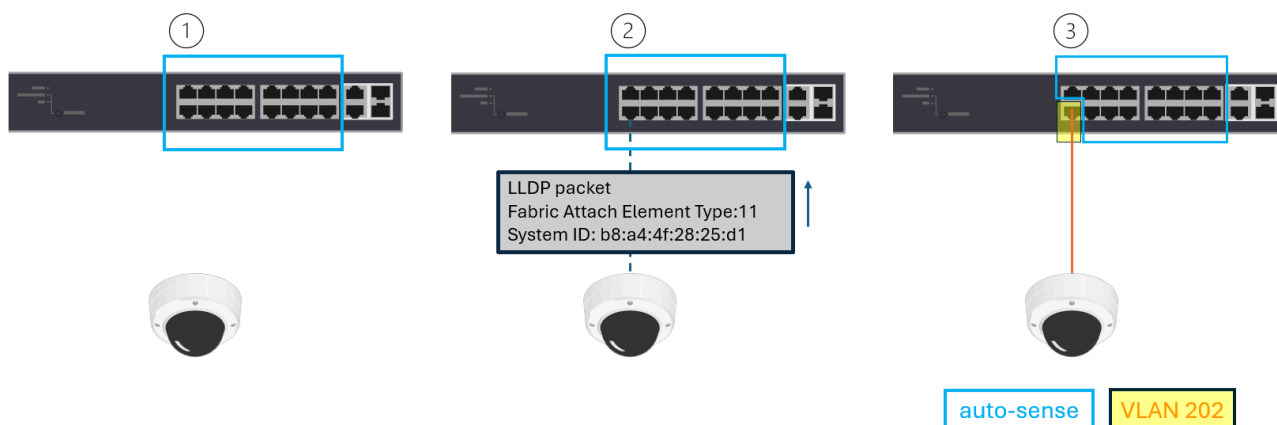

To verify the Fabric Attach status on the Extreme Network switch:

```
SW24.14 # show fabric attach elements Fabric Attach Mode: Standalone Proxy Mgmt AutoSystem Id Port
Type VLAN Tag Provision-----b8-
a4-4f-28-25-d1-00-00-00-00 2 IP Camera None Mix Disabled
```

```
SW24.15 # show fabric attach assignments Fabric Attach Mode: Standalone ProxyPort VLAN VLAN Name
Type ISID/NSI Status-----202 VLAN_0202
Static N/A Active2 202 VLAN_0202 ZTC N/A Active
```

The type ZTC stands for Zero Touch Client. The minimal configurations of Fabric Attach have been included below for reference.

```
configure fabric attach uplink 24configure fabric attach zero-touch-client camera vlan VLAN_
0202 nsi 12345configure fabric attach zero-touch-client camera enableconfigure vlan VLAN_0202
add nsi 12345
```

CDP (Cisco Discovery Protocol)

All Axis devices with AXIS OS 8.50.1 and higher are utilizing the CDP (Cisco Discovery Protocol) protocol to announce their identity and capabilities in the network. Compared to the LLDP protocol, no CDP traffic is sent out from the Axis device by default unless the network switch initiates CDP communication first.

CDP is also used for power negotiation in IEEE 802.3at (30W PoE+) capable devices. By default, the Axis device is capable of power negotiating IEEE 802.3at (30W PoE+) either using CDP or LLDP. Which one of these protocols is used depends on the network switch configuration.

In a situation where both protocols are being enabled and used by the network switch, the Axis device will respond to the protocol that arrives first (first come, first served). Note that Cisco 60W UPoE power negotiations are not supported regardless if they are hardware- or software-based.

Syslog

Syslog is a standard for message logging in IT devices. It is increasingly required in IT business applications and governance to facilitate, store, monitor and analyze audit logs from IT devices. The syslog standard is based on RFC 3164 and the newer RFC 5424. Axis devices are compliant with both standards in order to allow for an easy and simple integration towards 3rd party syslog servers such as Nagios, PRTG, Syslog-NG- or Rsyslog-based syslog servers. The common term used for edge devices sending their log messages to a syslog server is referred to as "remote logging" or "remote syslogging". When it comes to syslog, there are two different types of devices in a network working together:

- **Edge device:** An edge device with support for syslog generates log messages which are sent to a centralized server. The edge device in itself, however, may have limited amount of system resources to keep log messages long enough, or the messages may be overwritten or erased automatically upon reboot. Axis devices are examples of edge devices.
- **Syslog server:** The syslog server is a centralized entity in the network that receives syslog messages from edge devices and facilitates and stores them in a manner that allows for real-time analysis and/or

auditing. Different types of syslog servers are available and range from simple servers that “just” store incoming syslog messages up to fully-fledged enterprise-class syslog servers providing all means for real-time analysis as well as auditing with notification backend.

In order to send log messages to the syslog server, the edge device and server need to communicate using the same protocol/port. The edge device also needs to be configured so that it sends log messages with the desired severity.

- **Protocol/ports:** The syslog standard is based on RFC 3164 and the newer RFC 5424. The default ports that are used are UDP port 514 and TCP port 601 as well as encrypted transport via SSL/TLS port 6514. With AXIS OS 11.6 and later, we introduced our own proprietary format called “Axis” format that is mainly for our internal use. It’s the same format that we currently using in our server report logs. Please be noted that Axis may change this format without prior notice.
- **Log message severity:** Log messages are categorized in severities based on importance, from low to high. In newer AXIS OS versions, it is possible to define from which severity level the Axis device will send log messages to a remote syslog sever. See log message severities for Axis devices below:DEBUG – INFO – NOTICE – WARNING – ERROR – CRITICAL – ALERT – EMERGENCY

Examples of log messages from an Axis device

RFC 3164

```
<8>Aug 23 16:32:18.000 axis-b8a44f18d105 remote-syslogd: remote-syslogd-
test: This is Emergency message
<9>Aug 23 16:32:18.000 axis-b8a44f18d105 remote-syslogd: remote-syslogd-
test: This is Alert message
<10>Aug 23 16:32:18.000 axis-b8a44f18d105 remote-syslogd: remote-syslogd-
test: This is Critical message
<11>Aug 23 16:32:18.000 axis-b8a44f18d105 remote-syslogd: remote-syslogd-
test: This is Error message
<12>Aug 23 16:32:18.000 axis-b8a44f18d105 remote-syslogd: remote-syslogd-
test: This is Warning message
```

RFC 5424

```
<8>1 2023-08-23T16:34:23.000+02:00 axis-b8a44f42b8b0 remote-syslogd - - -
remote-syslogd-test: This is Emergency message
<9>1 2023-08-23T16:34:23.000+02:00 axis-b8a44f42b8b0 remote-syslogd - - -
remote-syslogd-test: This is Alert message
<10>1 2023-08-23T16:34:23.000+02:00 axis-b8a44f42b8b0 remote-syslogd - - -
remote-syslogd-test: This is Critical message
<11>1 2023-08-23T16:34:23.000+02:00 axis-b8a44f42b8b0 remote-syslogd - - -
remote-syslogd-test: This is Error message
<12>1 2023-08-23T16:34:23.000+02:00 axis-b8a44f42b8b0 remote-syslogd - - -
remote-syslogd-test: This is Warning message
```

Axis format

```
2023-08-23T16:30:14.998+02:00 axis-b8a44f4645f4 [ EMERG ] remote-syslogd
[209665]: remote-syslogd-test: This is Emergency message
2023-08-23T16:30:14.998+02:00 axis-b8a44f4645f4 [ ALERT ] remote-syslogd
[209665]: remote-syslogd-test: This is Alert message
2023-08-23T16:30:14.998+02:00 axis-b8a44f4645f4 [ CRIT ] remote-syslogd
[209665]: remote-syslogd-test: This is Critical message
2023-08-23T16:30:14.998+02:00 axis-b8a44f4645f4 [ ERR ] remote-syslogd
[209665]: remote-syslogd-test: This is Error message
2023-08-23T16:30:14.998+02:00 axis-b8a44f4645f4 [ WARNING ] remote-syslogd
[209665]: remote-syslogd-test: This is Warning message
```

Syslog in Axis devices

Axis devices have been compliant with the syslog standard since its implementation in the 2000s. As such, Axis devices have throughout the years been supporting syslog in various ways in order to adapt, always using the newest implementation:

Implementation	SYSKLOGD	RSYSLOG	SYSLOG-NG MK I	SYSLOG-NG MK II
Supported versions	≤ 5.55	5.60 - 6.50	7.10 - 10.0	10.1 ≥
Script editor configuration	✓	✓	✓	
Web interface configuration				✓
VAPIX API configuration				✓
SD card or network share storage*	✓	✓		
Transport protocol	UDP	TCP/UDP	TCP/UDP	TCP/UDP/TLS
Primary & secondary remote syslog server**				✓
Send log messages test button***				✓
Log severity configuration****				✓

* Optional support for saving syslog messages to the local SD card or network share.

** Possibility to configure a primary and secondary remote syslog server. When both are configured, the Axis device will send its log messages simultaneously to both servers. Observe that this is not a failover-configuration.

*** Possibility to send test messages to the remote syslog server in order to verify correct configuration.

**** Possibility to configure the Axis device to send log messages with a specific severity and higher only.

The coming sections will show example configurations that can be accomplished illustrated with the different syslog implementations that Axis devices have supported throughout the years.

Syslog configuration in AXIS OS 10.1

Web interface

Devices with AXIS OS version 10.1 and higher have a graphical user interface for syslog configuration. This can be found via the web interface of the device.

AXIS OS version	Web interface configuration path
≥ 10.1	Settings > System > TCP/IP
≥ 10.9	System > Logs

Remote syslog via UDP:

Remote syslog

Use remote syslog

Server ^

Host
192.168.0.100

Format
 RFC 3164 RFC 5424

Protocol
UDP

Port
514

Severity
Warning or higher (4)

X

+

CA certificates v

Test Save

Remote syslog via TCP:

Remote syslog

Use remote syslog

Server ^

Host
192.168.0.100

Format
 RFC 3164 RFC 5424

Protocol
TCP

Port
601

Severity
Alert or higher (1)

X

+

CA certificates v

Test Save

Remote syslog via TCP/TLS*:


Remote syslog via TCP/TLS (primary + secondary)**:

<div style="border: 1px solid #ccc; padding: 10px;"> <p>Remote syslog</p> <p>Use remote syslog <input checked="" type="checkbox"/></p> <hr/> <p>Server ^</p> <p>Host <input type="text" value="192.168.0.100"/></p> <p>Format <input type="radio"/> RFC 3164 <input checked="" type="radio"/> RFC 5424</p> <p>Protocol <input type="text" value="TLS"/></p> <p>Port <input type="text" value="6514"/></p> <p>Severity <input type="text" value="Alert or higher (1)"/></p> <p style="text-align: right;"><input type="button" value="X"/></p> <hr/> <p style="text-align: center;"><input type="button" value="+"/></p> <hr/> <p>CA certificates ^</p> <p><input type="text" value="Cybertrust Global Root"/> <input type="button" value="X"/></p> <p style="text-align: center;"><input type="button" value="+"/></p> <hr/> <p style="text-align: center;"><input type="button" value="Test"/> <input type="button" value="Save"/></p> </div>	<div style="border: 1px solid #ccc; padding: 10px;"> <p>Remote syslog</p> <p>Use remote syslog <input checked="" type="checkbox"/></p> <hr/> <p>Server ^</p> <p>Host <input type="text" value="192.168.0.100"/></p> <p>Format <input type="radio"/> RFC 3164 <input checked="" type="radio"/> RFC 5424</p> <p>Protocol <input type="text" value="TLS"/></p> <p>Port <input type="text" value="6514"/></p> <p>Severity <input type="text" value="Alert or higher (1)"/></p> <p style="text-align: right;"><input type="button" value="X"/></p> <hr/> <p>Server ^</p> <p>Host <input type="text" value="192.168.0.101"/></p> <p>Format <input type="radio"/> RFC 3164 <input checked="" type="radio"/> RFC 5424</p> <p>Protocol <input type="text" value="TLS"/></p> <p>Port <input type="text" value="6514"/></p> <p>Severity <input type="text" value="Warning or higher (4)"/></p> <p style="text-align: right;"><input type="button" value="X"/></p> <hr/> <p>CA certificates ^</p> <p><input type="text" value="Cybertrust Global Root"/> <input type="button" value="X"/></p> <p><input type="text" value="DigiCert Assured ID Root CA"/> <input type="button" value="X"/></p> <hr/> <p style="text-align: center;"><input type="button" value="Test"/> <input type="button" value="Save"/></p> </div>
<div style="border: 1px solid #ccc; height: 200px;"></div>	<div style="border: 1px solid #ccc; height: 200px;"></div>

* For the TLS mode you need to specify a CA certificate that will be used by the Axis device to verify the remote syslog server. This CA certificate is generated and provided during the configuration of the 3rd party remote syslog server.

** When a primary and secondary syslog server is configured, the Axis device will always send its log messages simultaneously to both servers independently regardless if the primary, secondary, or both servers are available.

See the sample illustrations below of an Axis device streaming its syslog messages to either a primary server only, or a primary/secondary server in parallel.

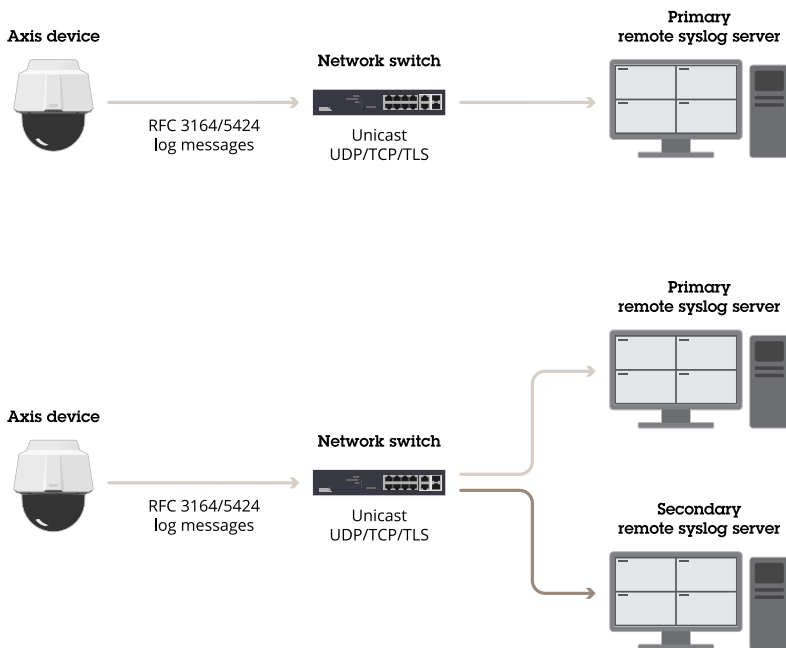


VAPIX interface (VAPIX API)

Devices with AXIS OS version 10.1 and higher also support the Remote Syslog API VAPIX interface that allows for mass-configuration of Axis devices e.g. using AXIS Device Manager. For more information, go to the *VAPIX library*.

AXIS Device Manager

With the introduction of the new Remote Syslog API, it's also possible to configure remote syslog settings for multiple Axis devices simultaneously.

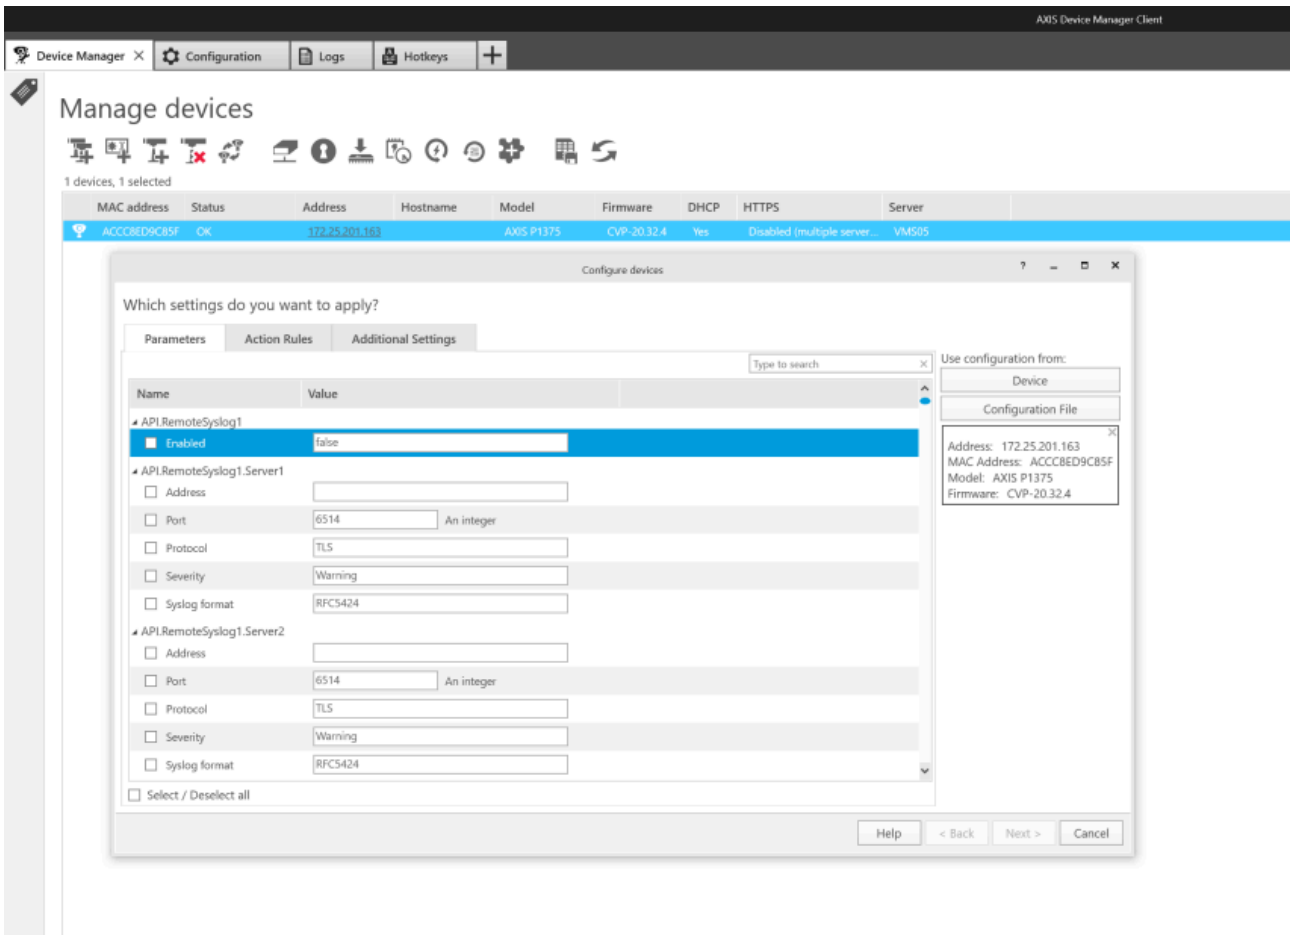

Syslog configuration in AXIS OS 7.10 – 10.0

Script editor

In order to configure remote syslog server, the script editor needs to be enabled. This can be done via the web interface of the Axis device, under **Settings > System > Plain config > System > Enable the script editor (editcgi)**.

To configure syslog, open the following link in the browser, replace the IP address placeholder ("ip_of_cam") with the real IP address of the Axis device: http://ip_of_cam/admin-bin/editcgi.cgi?file=/etc/syslog-ng.d/remote.conf

Add IP address, transport method and port as you see in the below example configuration. Click **Save file** once done and restart the device.

File: /etc/syslog-ng.d/remote.conf Length: 144 bytes [\[Select new file\]](#)

Save as: Mode: Convert CRLF to LF:

```
destination d_remote-syslog { network("192.168.0.100" transport("udp")
port(514)); };
log { source(s_system); destination(d_remote-syslog); };
```

Note

Make sure that no code line is out commented by a hash symbol ("#") like in the example configuration above.

Syslog configuration in AXIS OS 5.60 – 6.50

In order to configure syslog, open the following link in the browser and replace the IP address placeholder (i.e. "ip-address") with the real IP address of the Axis device: http://ip-address/admin-bin/editcgi.cgi?file=/etc/rsyslog.d/40-remote_log.conf

Remote syslog server

Add `*.*@ip-address` at the bottom of the configuration file and specify the real IP address of the remote syslog server instead. Click **Save file** once done and restart the device.

File: /etc/rsyslog.d/40-remote_log.conf Length: 1891 bytes [\[Select new file\]](#)

Save as:

Mode:

Convert CRLF to LF:

```
#####
# Remote logging configuration
#####
#
# !!! IMPORTANT: !!!
# !!! This file will be replaced on firmware upgrade !!!
# !!! Add your additions to a new file and place it !!!
# !!! in /etc/rsyslog.d/ !!!
#
template(name="sysklogd" type="string" string="%PRI%>%TIMESTAMP% %syslogtag%msg%\n")

## TEMPLATES
# There are several templates available to specify output format:
#
# RSYSLOG_ForwardFormat
# A new high-precision forwarding format very similar to the traditional
# one, but with high-precision timestamps and timezone information.
# Recommended to be used when sending messages to rsyslog 3.12.5 or above.
#
# RSYSLOG_TraditionalForwardFormat
# The traditional forwarding format with low-precision timestamps.
# Most useful if you send messages to other sysklogd's or rsyslogd
# below version 3.12.5.
#
# sysklogd
# sysklogd does not support RFC 3164 format. As such, you will experience
# duplicate hostnames if rsyslog is the sender and sysklogd is the receiver.
# Specify sysklogd as your template if you run into this problem.
#
# AxisFormat
# The default format used in local log files on Axis devices
#
## EXAMPLE
# To send messages from all facilities and all severities in
# RSYSLOG_ForwardFormat via UDP to a server with ip 192.168.0.1 on port
# 55555, use the following line:
# *.* action(type="omfud" template="RSYSLOG_ForwardFormat" Target="192.168.0.1" Port="55555" Protocol="udp")
# See the following link for more information about configuration options:
# http://www.rsyslog.com/doc/v8-stable/configuration/modules/omfud.html
#
#.* @192.168.0.100
```

SD card

Start by mounting an SD card in the Axis device. Then add `*.* /var/spool/storage/SD_DISK/logs.txt` at the bottom of the configuration file. Click **Save file** once done and restart the device.

File: /etc/rsyslog.d/40-remote_log.conf Length: 1891 bytes [\[Select new file\]](#)

Save as:

Mode:

Convert CRLF to LF:

```
#####
# Remote logging configuration
#####
#
#   !!! IMPORTANT:           !!!
#   !!! This file will be replaced on firmware upgrade !!!
#   !!! Add your additions to a new file and place it !!!
#   !!! in /etc/rsyslog.d/   !!!
#
template(name="sysklogd" type="string" string="<SPRINT%TIMESTAMP% %syslogtag%%msg%\")

## TEMPLATES
# There are several templates available to specify output format:
#
# RSYSLOG_ForwardFormat
# A new high-precision forwarding format very similar to the traditional
# one, but with high-precision timestamps and timezone information.
# Recommended to be used when sending messages to rsyslog 3.12.5 or above.
#
# RSYSLOG_TraditionalForwardFormat
# The traditional forwarding format with low-precision timestamps.
# Most useful if you send messages to other syslogd's or rsyslogd
# below version 3.12.5.
#
# sysklogd
# sysklogd does not support RFC 3164 format. As such, you will experience
# duplicate hostnames if rsyslog is the sender and sysklogd is the receiver.
# Specify sysklogd as your template if you run into this problem.
#
# AxisFormat
# The default format used in local log files on Axis devices
#
## EXAMPLE
# To send messages from all facilities and all severities in
# RSYSLOG_ForwardFormat via UDP to a server with ip 192.168.0.1 on port
# 55555, use the following line:
# *.* action(type="omfwd" template="RSYSLOG_ForwardFormat" Target="192.168.0.1" Port="55555" Protocol="udp")
# See the following link for more information about configuration options:
# http://www.rsyslog.com/doc/v8-stable/configuration/modules/omfwd.html
#
#.* /var/spool/storage/SD_DISK/logs.txt
```

Network share

Start by mounting a network share on the Axis device. Add `*.* /var/spool/storage/NetworkShare/logs.txt` at the bottom of the configuration file. Click **Save file** once done and restart the device.

File: /etc/rsyslog.d/40-remote_log.conf Length: 1891 bytes [\[Select new file\]](#)

Save as: Mode: Convert CRLF to LF:

```

#####
# Remote logging configuration
#####
#
#   !!! IMPORTANT:           !!!
#   !!! This file will be replaced on firmware upgrade !!!
#   !!! Add your additions to a new file and place it !!!
#   !!! in /etc/rsyslog.d/   !!!
#
template(name="sysklogd" type="string" string="<%PRI%>%TIMESTAMP% %syslogtag%%msg%\n")

## TEMPLATES
# There are several templates available to specify output format:
#
# RSYSLOG_ForwardFormat
#   A new high-precision forwarding format very similar to the traditional
#   one, but with high-precision timestamps and timezone information.
#   Recommended to be used when sending messages to rsyslog 3.12.5 or above.
#
# RSYSLOG_TraditionalForwardFormat
#   The traditional forwarding format with low-precision timestamps.
#   Most useful if you send messages to other syslogd's or rsyslogd
#   below version 3.12.5.
#
# sysklogd
#   sysklogd does not support RFC 3164 format. As such, you will experience
#   duplicate hostnames if rsyslog is the sender and sysklogd is the receiver.
#   Specify sysklogd as your template if you run into this problem.
#
# AxisFormat
#   The default format used in local log #files on Axis devices
#
## EXAMPLE
# To send messages from all facilities and all severities in
# RSYSLOG_ForwardFormat via UDP to a server with ip 192.168.0.1 on port
# 55555, use the following line:
# *.* action(type="omfwd" template="RSYSLOG_ForwardFormat" Target="192.168.0.1" Port="55555" Protocol="udp")
# See the following link for more information about configuration options:
# http://www.rsyslog.com/doc/v8-stable/configuration/modules/omfwd.html
#
#.* /var/spool/storage/NetworkShare/logs.txt
    
```

Syslog configuration in AXIS OS 5.55 and below

In order to configure syslog, open the following link in the browser, replace the IP address placeholder (i.e. "ip-address") with the real IP address of the Axis device: <http://ip-address/admin-bin/editcgi.cgi?file=/etc/syslog.conf>.

Remote syslog server

Start by adding `*.* @ip-address` at the bottom of the configuration file and specify the real IP address of the remote syslog server instead. Click **Save file** once done and restart the Axis device.

File: /etc/syslog.conf Length: 795 bytes [\[Select new file\]](#)

Save as:

Mode:

Convert CRLF to LF:

```
# An autogenerated default /etc/syslog.conf.
*.info;*.!warning;authpriv.none;kern.none          | /var/log/info_log_pipe
*.info;*.!warning;mail.none;authpriv.none;kern.none | /var/log/info_mld_pipe
*.=warning;authpriv.none;kern.none                 | /var/log/warning_log_pipe
*.=warning;mail.none;authpriv.none;kern.none        | /var/log/warning_mld_pipe
*.err;authpriv.none                                 | /var/log/crit_log_pipe
*.err;mail.none;authpriv.none                       | /var/log/crit_mld_pipe
authpriv.warning;kern.=warning;authpriv.!crit      | /var/log/authpriv_warn_log_pipe
authpriv.warning;authpriv.!crit                    | /var/log/warning_mld_pipe
authpriv.crit                                       | /var/log/authpriv_crit_log_pipe
authpriv.crit                                       | /var/log/crit_mld_pipe
#kern.debug                                         | /var/log/kern_logs
#*.debug;authpriv.none;kern.none                  | /dev/console
*.debug;authpriv.none                               | /dev/console
*.* @192.168.0.100
```

SD card

Start by mounting an SD card in the Axis device. Then add `*.* /var/spool/storage/SD_DISK/logs.txt` at the bottom of the configuration file. Click **Save file** once done and restart the Axis device.

File: /etc/syslog.conf Length: 795 bytes [\[Select new file\]](#)

Save as:

Mode:

Convert CRLF to LF:

```
# An autogenerated default /etc/syslog.conf.
*.info;*.lwarning;authpriv.none;kern.none |/var/log/info_log_pipe
*.info;*.lwarning;mail.none;authpriv.none;kern.none |/var/log/info_mld_pipe

*.=warning;authpriv.none;kern.none |/var/log/warning_log_pipe
*.=warning;mail.none;authpriv.none;kern.none |/var/log/warning_mld_pipe

*.err;authpriv.none |/var/log/crit_log_pipe
*.err;mail.none;authpriv.none |/var/log/crit_mld_pipe

authpriv.warning;kern.=warning;authpriv.!crit |/var/log/authpriv_warn_log_pipe
authpriv.warning;authpriv.!crit |/var/log/warning_mld_pipe
authpriv.crit |/var/log/authpriv_crit_log_pipe
authpriv.crit |/var/log/crit_mld_pipe

#kern.debug |/var/log/kern_logs
#*.debug;authpriv.none;kern.none |/dev/console
*.debug;authpriv.none |/dev/console

*.* /var/spool/storage/SD_DISK/logs.txt
```

Network share

Start by mounting a network share on the Axis device. Then add `*.* /var/spool/storage/NetworkShare/logs.txt` at the bottom of the configuration file. Click **Save file** once done and restart the Axis device.

File: /etc/syslog.conf Length: 795 bytes [\[Select new file\]](#)

Save as:

Mode:

Convert CRLF to LF:

```
# An autogenerated default /etc/syslog.conf.
*.info;*.!warning;authpriv.none;kern.none          | /var/log/info_log_pipe
*.info;*.!warning;mail.none;authpriv.none;kern.none | /var/log/info_mld_pipe

*.=warning;authpriv.none;kern.none                 | /var/log/warning_log_pipe
*.=warning;mail.none;authpriv.none;kern.none       | /var/log/warning_mld_pipe

*.err;authpriv.none                                | /var/log/crit_log_pipe
*.err;mail.none;authpriv.none                      | /var/log/crit_mld_pipe

authpriv.warning;kern.=warning;authpriv.!crit     | /var/log/authpriv_warn_log_pipe
authpriv.warning;authpriv.!crit                   | /var/log/warning_mld_pipe
authpriv.crit                                       | /var/log/authpriv_crit_log_pipe
authpriv.crit                                       | /var/log/crit_mld_pipe


#kern.debug                                         | /var/log/kern_logs
#*.debug;authpriv.none;kern.none                  | /dev/console
*.debug;authpriv.none                              | /dev/console

*.* /var/spool/storage/NetworkShare/logs.txt
```

About syslog server support

Axis devices are compliant with the syslog standard that is based on RFC 3164 and the newer RFC 5424, so the transmission of syslogs to a server should work out-of-the-box when configured correctly. Axis devices are tested regularly with different syslog servers such as syslog-ng, rsyslog as well as PRTG Paessler, Nagios, QNAP and Synology.

Below is a sample image of an Axis device sending log messages to a Nagios syslog server.

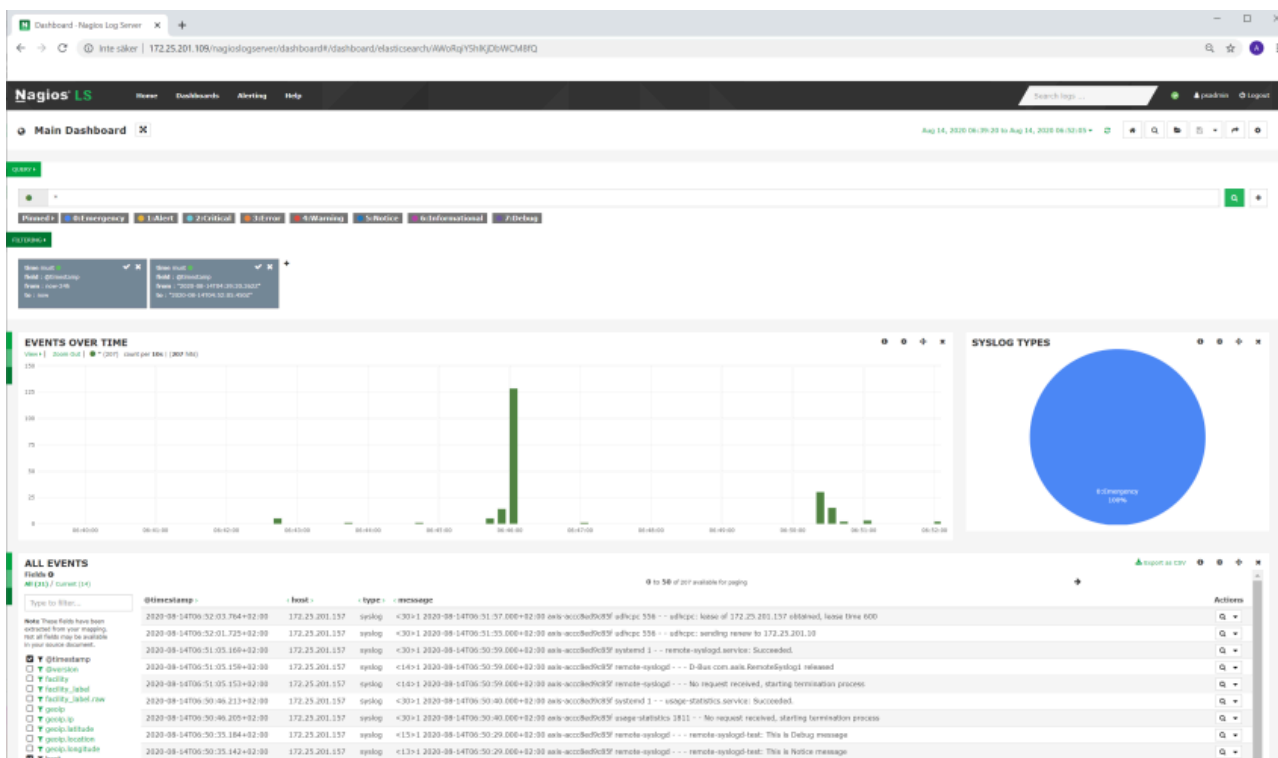

MQTT

MQTT is a machine-to-machine (M2M)/Internet of things (IoT) connectivity protocol. It was designed as an extremely lightweight publish/subscribe messaging transport and is useful for connections with remote locations where a small code footprint is required and/or network bandwidth is at a premium.

MQTT is quickly becoming the standard communication protocol for implementing IoT solutions due to its lightweight and bandwidth-efficient characteristics. You can read more about benefits and usecases in the whitepaper *Device integration with MQTT* or keep on reading to learn more about configuring MQTT, starting with the most important components.

Client

Any publisher or subscriber that connects to a centralized server/broker over a network is a client. Both publishers and subscribers are called clients since they connect to a centralized service. Clients can be persistent or transient. Persistent clients maintain a session with the server/ broker while transient clients are not tracked by the server/ broker. Clients often connect to the server/ broker through libraries and SDKs.

Server/broker


The server/broker is the software that receives all the messages from the publishing clients and sends them to the subscribing clients. It holds the connection to persistent clients. Since the server/broker can become a bottleneck or result in a single point of failure, it is often clustered for scalability and reliability. It is up to the implementor to decide how to create a scalable server/broker infrastructure. Some of the commercial implementations of MQTT brokers include HiveMQ, Xively, AWS IoT and Loop.

Topic

A topic in MQTT is an endpoint information that a client (publisher) can share, and another client (subscriber) can connect to. Topics are simple, hierarchical strings, encoded in UTF-8, delimited by a forward slash. For example, "building1/room1/temperature" and "building1/room1/humidity" are valid topic names.

Connection

MQTT can be utilized by clients based on TCP/IP. The standard port exposed by servers/brokers is 1883, which is not a secure port. Servers/brokers that support TLS/SSL typically use port 8883. For secure communication, the clients and the server/broker rely on digital certificates.

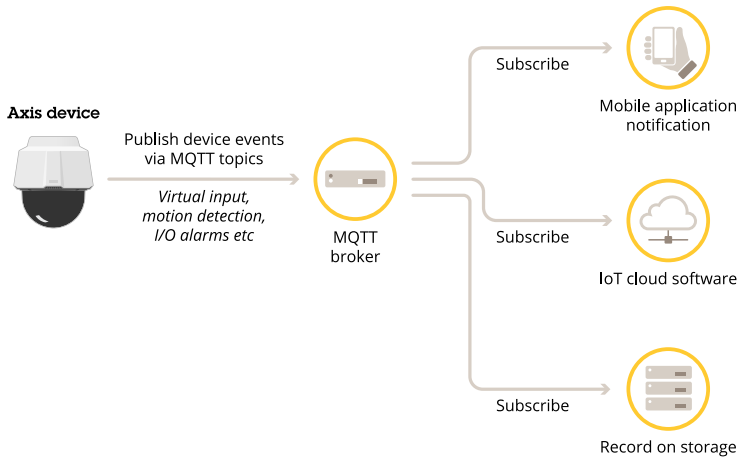

Functionality overview

Axis devices with AXIS OS version 9.80 and above support the MQTT protocol to allow customers and the market to deepen the integration of their business and system applications. In the table you can see the functionality that is currently supported as well as upcoming functionality.

Functionality	AXIS OS version
Generic MQTT event publishing	AXIS OS 9.80.1
Custom MQTT event publishing	AXIS OS 10.4.0
Custom MQTT event subscription	AXIS OS 10.6. Added to web interface in AXIS OS 10.7
MQTT web interface support	AXIS OS 10.1
MQTT over TCP	AXIS OS 9.80.1
MQTT over SSL	AXIS OS 9.80.1
MQTT over WebSocket	AXIS OS 9.80.1
MQTT over WebSocket (SSL)	AXIS OS 9.80.1
<i>MQTT VAPIX API</i>	AXIS OS 9.80.1
MQTT ALPN support (Application-Layer Protocol Negotiation)	AXIS OS 10.9.0
MQTT Overlay Support	AXIS OS 11.4

In the following sections you can read more about configuring a device via the web interface.

Server

These examples show you how to configure an Axis device to connect to an MQTT server/broker in the web interface. To connect, the user must specify the server's/broker's IP address or hostname, the transport protocol and port, as well as credentials (i.e. username and password). The MQTT server/broker connection configurations can be found under **Settings > System > MQTT** in the web interface.

Example configuration: MQTT over TCP

MQTT

Client

Connect

Status: Connected

Server ▲

Host
172.25.201.102

Protocol
MQTT over TCP ▼

Port
1883

Username
mqtt_1

Password

Policies ▼

Last will testament ▼

Connect message ▼

Example configuration: MQTT over SSL*

MQTT

Client

Connect

Status: Connected

Server ▲

Host
172.25.201.102

Protocol
MQTT over SSL ▼

Port
8883

Username
mqtt_1

Use password

Password

Certificates ▲

Client certificate
Default (self-signed) ▼

CA certificate
Baltimore CyberTrust Root ▼

Validate server certificate

Policies ▼

Last will testament ▼

Connect message ▼

*For the MQTT over SSL connection to be successful the CA and client certificate must be available under Settings > System > Security so that they can be selected in the MQTT configuration.

Policies

The connection policies help the user define general MQTT connection behavior of the Axis device towards the MQTT server/broker it connects to. Below you will find a more detailed description of the individual settings of the policies.

MQTT

Client

Connect

Status: Connected

Server ▼

Policies ▲

Client id

AXIS-M1137

Keep alive interval

60

Timeout

60

Reconnect automatically

Clean session

Last will testament ▼

Connect message ▼

Save

- **Client id:** nice/nick name that is used by the Axis device to identify itself towards the MQTT server/broker.
- **Keep alive interval:** defines the maximum time in seconds that can pass without communication between the Axis device and the MQTT server/broker. The Axis device will send a keep alive message within the defined interval to ensure connection. Note that this will affect the **last will testament** settings.
- **Timeout:** defines the maximum time in seconds for a connection to complete successfully. If the connection attempt exceeds the defined value, the connection will not be accomplished.
- **Reconnect automatically:** when enabled, the Axis device will try to reconnect to the MQTT server/broker upon unintentional connection loss.
- **Clean session:** controls the client state persistency on the broker side and defines how a connecting client should be treated upon connection. When enabled, no state is kept on the broker. When disabled, the MQTT broker will keep the subscriptions alive and queue QoS 1/2 messages for delivery after a reconnect. This field has no impact on publishing only clients.

MQTT QoS settings

Each distinct message - i.e. the connect message, the last will testament message and the individual event filtering/topics - allows for dedicated QoS settings to be configured. Below the general QoS behavior and the level of service upon message delivery is described.

Level 0 is the lowest service level and provides no guarantee of message delivery.

```

> Frame 972: 317 bytes on wire (2536 bits), 317 bytes captured (2536 bits)
> Ethernet II, Src: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f), Dst: VMware_85:93:68 (00:0c:29:85:93:68)
> Internet Protocol Version 4, Src: 172.25.201.156, Dst: 172.25.201.102
> Transmission Control Protocol, Src Port: 49936, Dst Port: 1883, Seq: 18028, Ack: 545, Len: 251
> MQ Telemetry Transport Protocol, Publish Message
  > Header Flags: 0x30, Message Type: Publish Message, QoS Level: At most once delivery (Fire and Forget)
    Msg Len: 248
    Topic Length: 74
    Topic: ACCC8ED9C85F/event/tns:onvif/Device/tns:axis/IO/VirtualPort/$source/port/1
    Message: 7b2274696d657374616d70223a2031353937333030353330...

```

Level 1 guarantees message delivery at least once to the broker with the possibility of receiving the same message multiple times before acknowledgement.

```

> Frame 581: 319 bytes on wire (2552 bits), 319 bytes captured (2552 bits)
> Ethernet II, Src: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f), Dst: VMware_85:93:68 (00:0c:29:85:93:68)
> Internet Protocol Version 4, Src: 172.25.201.156, Dst: 172.25.201.102
> Transmission Control Protocol, Src Port: 49936, Dst Port: 1883, Seq: 1, Ack: 1, Len: 253
> MQ Telemetry Transport Protocol, Publish Message
  > Header Flags: 0x32, Message Type: Publish Message, QoS Level: At least once delivery (Acknowledged deliver)
    Msg Len: 250
    Topic Length: 74
    Topic: ACCC8ED9C85F/event/tns:onvif/Device/tns:axis/IO/VirtualPort/$source/port/1
    Message Identifier: 66
    Message: 7b2274696d657374616d70223a2031353937333030353234...

```

Level 2 is the highest service level providing a four-way handshake to ensure that each message is delivered exactly once to the broker.

```

> Frame 633: 319 bytes on wire (2552 bits), 319 bytes captured (2552 bits)
> Ethernet II, Src: AxisComm_d9:c8:5f (ac:cc:8e:d9:c8:5f), Dst: VMware_85:93:68 (00:0c:29:85:93:68)
> Internet Protocol Version 4, Src: 172.25.201.156, Dst: 172.25.201.102
> Transmission Control Protocol, Src Port: 49936, Dst Port: 1883, Seq: 507, Ack: 9, Len: 253
> MQ Telemetry Transport Protocol, Publish Message
  > Header Flags: 0x34, Message Type: Publish Message, QoS Level: Exactly once delivery (Assured Delivery)
    Msg Len: 250
    Topic Length: 74
    Topic: ACCC8ED9C85F/event/tns:onvif/Device/tns:axis/IO/VirtualPort/$source/port/1
    Message Identifier: 68
    Message: 7b2274696d657374616d70223a2031353937333030353235...

```

Axis topic expressions

To determine which topics are supported by an Axis device, you can use the following API calls in VAPIX or ONVIF. Although it's possible to run these commands within the SSH console from the camera, we recommend using a tool like CURL or POSTMAN instead. This approach doesn't require enabling SSH access to the device.

If you prefer to use SSH, go to **Plain config > Network > SSH** and log in directly to the AXIS device.

For more information about Postman and CURL, see *VAPIX, on page 311*.

VAPIX interface

Make a `GetEventInstances` request to VAPIX web services as in the example below, but replace the username, password and IP address with the actual configured settings:

```

curl -noproxy "*" -user <username>:<password> -digest -request POST
'http://<device-address>/vapix/services' \
-header 'Content-Type: application/soap+xml;
action=http://www.axis.com/vapix/ws/event1/GetEventInstances; Charset=UTF-8' \

```

```
-data-raw '<SOAP-ENV:Envelope xmlns:SOAP-ENV="http://www.w3.org/2003/05/soap-envelope"
xmlns:SOAP-ENC="http://www.w3.org/2003/05/soap-encoding"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xmlns:xsd="http://www.w3.org/2001/XMLSchema">
<SOAP-ENV:Body>
<m:GetEventInstances xmlns:m="http://www.axis.com/vapix/ws/event1"/>
</SOAP-ENV:Body>
</SOAP-ENV:Envelope>'
```

ONVIF interface

Make a `GetEventProperties` request to ONVIF event services as in the example below, but replace the username, password and IP address with the actual configured settings:

```
curl -noproxy "*" -user <username>:<password> -digest -request POST
'http://<device-address>/onvif/services' \
-header 'Content-Type: application/xml' \
-data-raw '<?xml version="1.0" encoding="UTF-8"?>
<SOAP-ENV:Envelope
xmlns:SOAP-ENV="http://www.w3.org/2003/05/soap-envelope"
xmlns:wsa="http://www.w3.org/2005/08/addressing"
xmlns:tet="http://www.onvif.org/ver10/events/wsd1">
<SOAP-ENV:Header>
<wsa:Action>
http://www.onvif.org/ver10/events/wsd1/EventPortType/GetEventPropertiesRequest
</wsa:Action>
</SOAP-ENV:Header>
<SOAP-ENV:Body>
<tet:GetEventProperties>
</tet:GetEventProperties>
</SOAP-ENV:Body>
</SOAP-ENV:Envelope>'
```

Output examples

```
onvif:Device/axis:Status/SystemReady
onvif:Device/axis:IO/.
onvif:RuleEngine/MotionRegionDetector/Motion
axis:CameraApplicationPlatform/VMD/Camera1ProfileANY
```

Last will testament

The last will testament settings define the behavior of the Axis device towards the MQTT server/broker after ungraceful disconnection, i.e. without the Axis device sending out a disconnect message. This could happen due to bad network connection, power disconnect, etc.

When the last will testament is enabled, the MQTT server/broker will announce the defined message in case the Axis device disconnects ungracefully. Below you will find a more detailed description of the individual settings of the last will testament and an example of a customized last will testament message.

MQTT

Client

Connect

Status: Disconnected

Server ▼

Policies ▼

Last will testament ▲

Send messages

Use default

Topic

Message

Keep


QoS

Connect message ▼

Save

- **Use default:** use predefined default settings.
- **Topic:** a customized topic that will be used by the MQTT broker for disconnection announcements, i.e. to announce to subscribed MQTT clients that the Axis device has disconnected ungracefully.
- **Message:** a customized message to be used by the MQTT broker for disconnection announcements. See below example.
- **Keep:** also known as retain. Defines if the broker should retain the last will testament message in the broker's cache so that new subscribers will receive the message directly after subscribing.
- **QoS:** defines the level of service upon message delivery. Go to *MQTT QoS settings, on page 167* for more information.

In the example below we have configured a customized last will testament (LWT) announcing the message "Axis device LWT message" in case the device disconnects ungracefully.

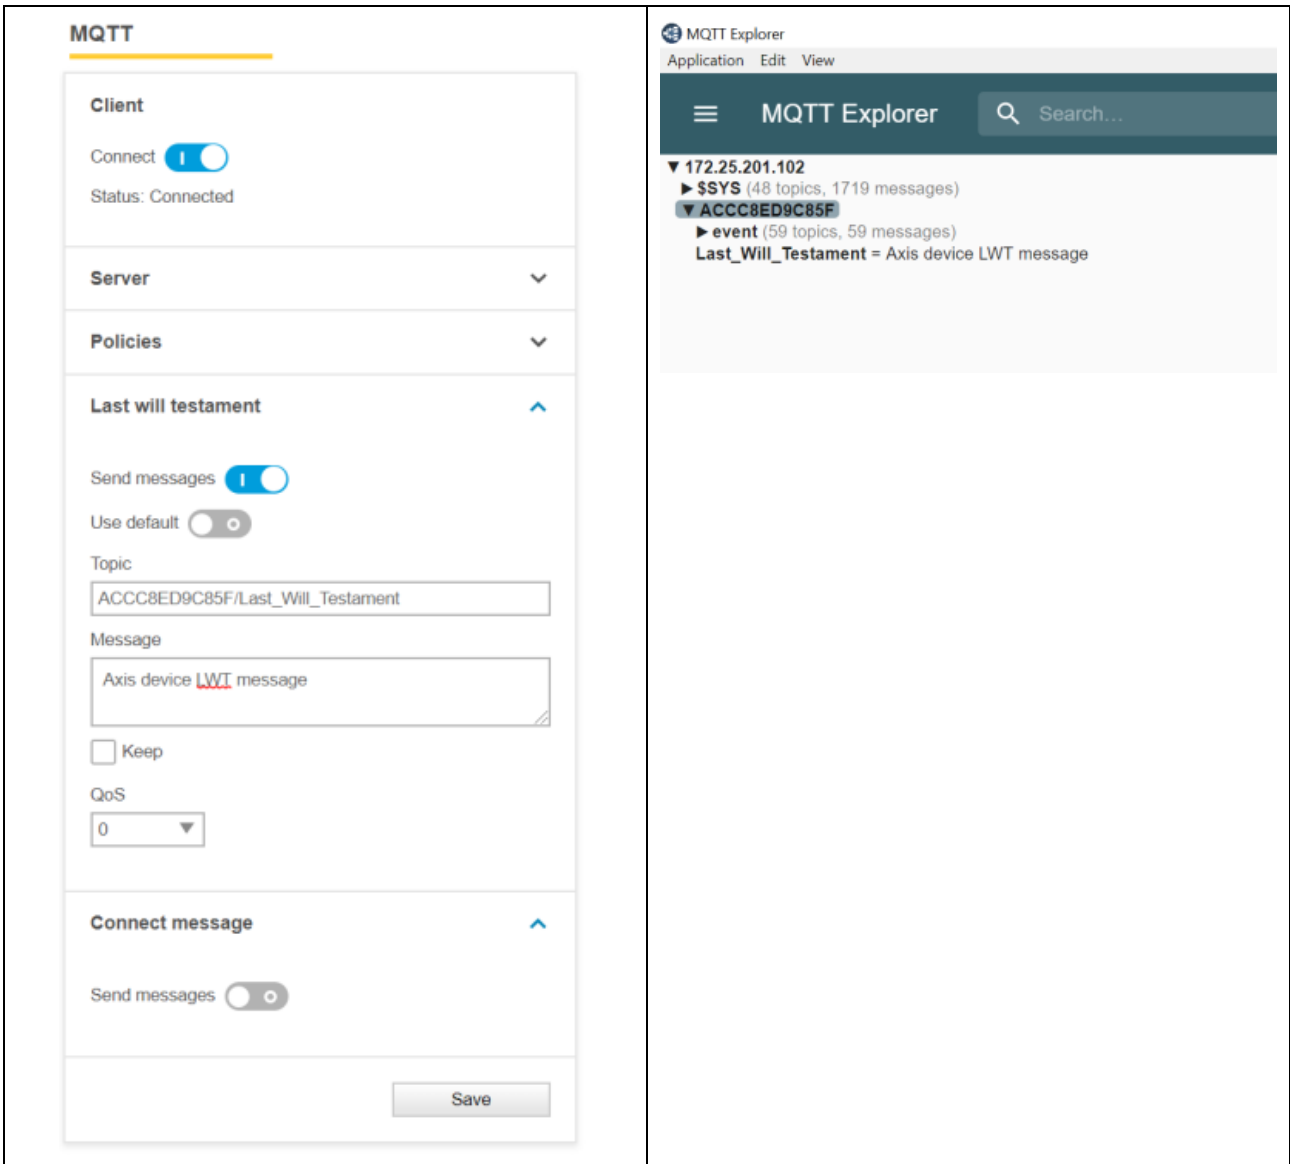

Connect message

The connect message can be used to let the Axis device announce its connection state to the MQTT broker and other subscribed MQTT clients. Below you will find a more detailed description of the individual settings of the connect message.

MQTT

Client

Connect

Status: Connected

Server ▼

Policies ▼

Last will testament ▼

Connect message ▲

Send messages

Use default

Topic

Message


Keep

QoS


Save

- **Use default:** use predefined default settings.
- **Topic:** a customized topic to be used for announcements upon connection to an MQTT broker.
- **Message:** a customized message to be used for announcements upon connection to an MQTT broker.
- **Keep:** also known as retain. Defines if the broker should retain the connection announcement message in the brokers cache so that new subscribers will get this message directly after subscribing.
- **QoS:** defines the level of service upon message delivery. Go to *MQTT QoS settings, on page 167* for more information

Configuration example with a default connect message

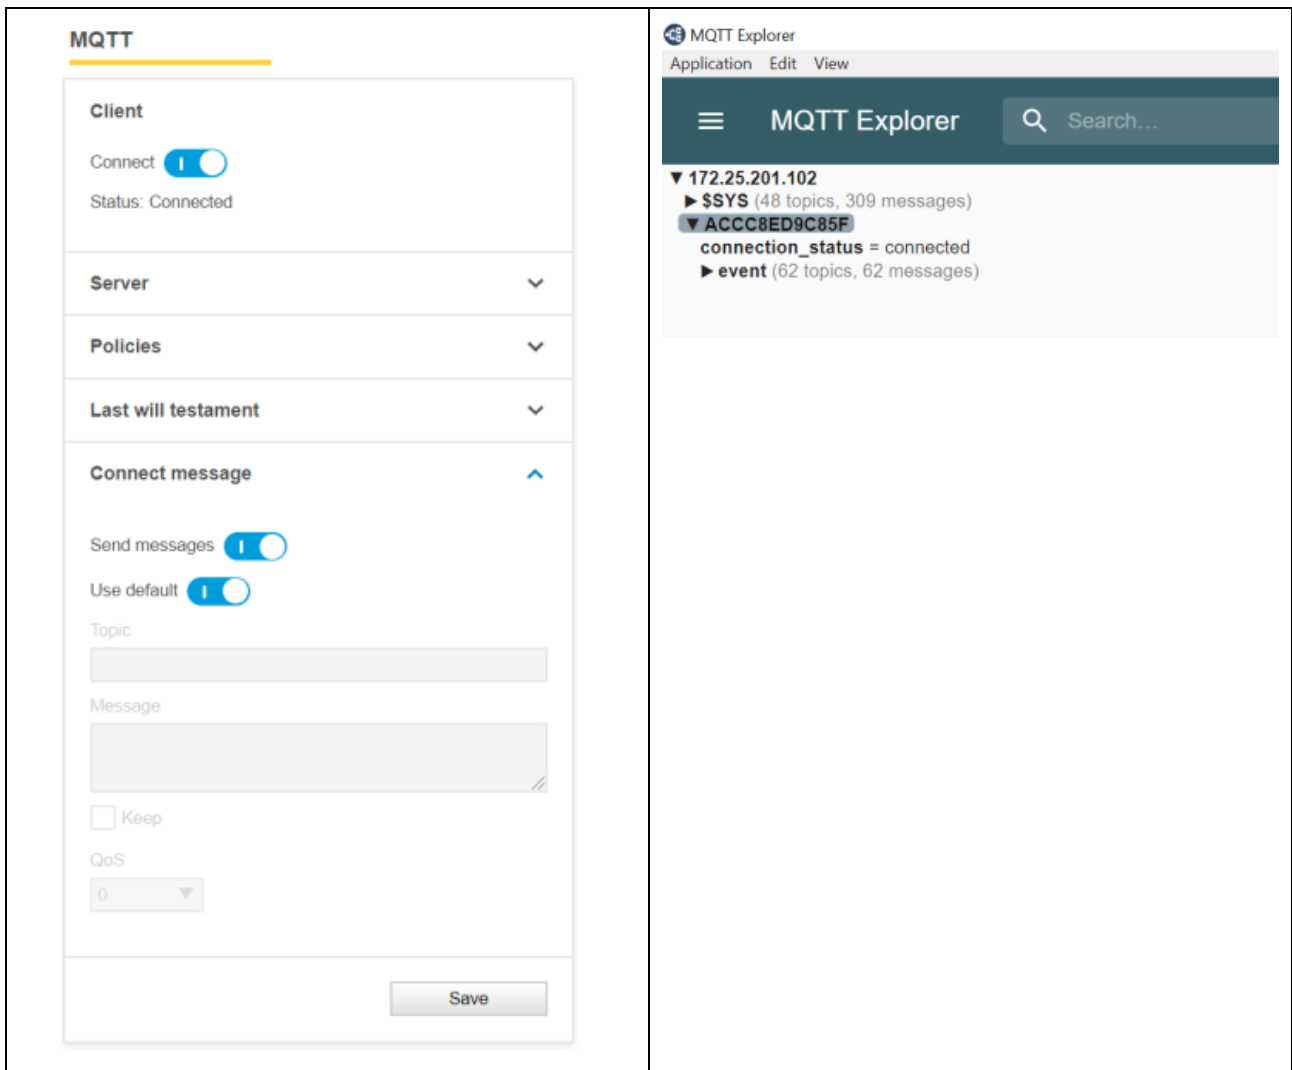

Configuration example with a customized connect message

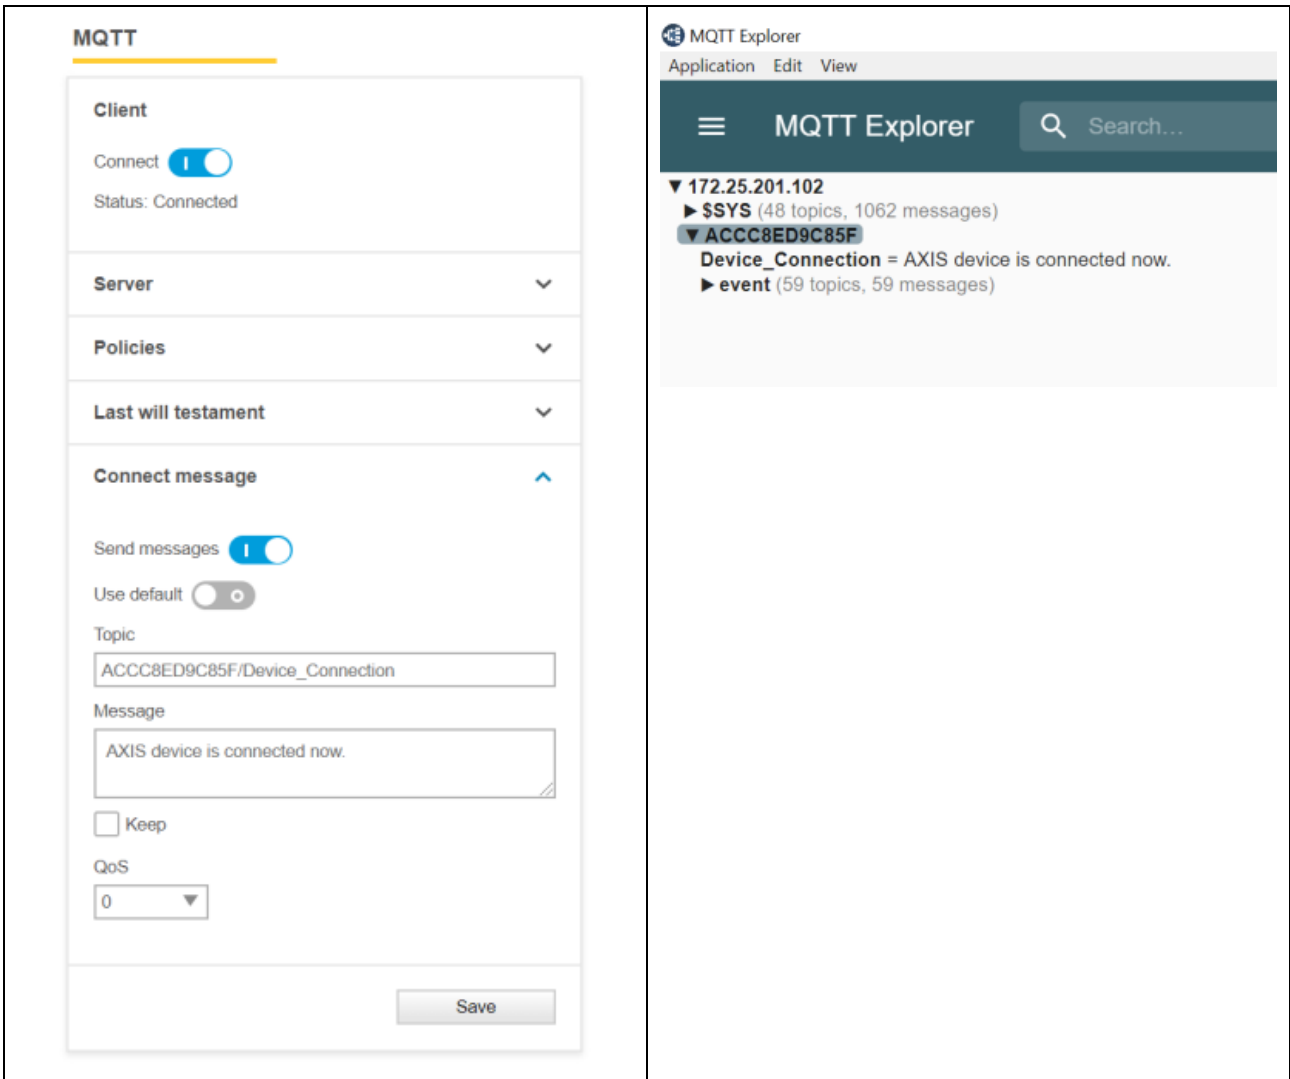

Generic MQTT event publishing

After connecting to an MQTT broker, the user must specify event and event filtering related configurations, which can be found under **Settings > System > Events > MQTT events**.

The below MQTT configuration shows a typical setup where the Axis device will be configured to send specific events to the MQTT broker, in this example by using **manual trigger** and **virtual input**.

Note

If a specific option is missing in the list of conditions, you may need to enable the functionality and then reboot the device for the condition to appear.

Example: If "Shock detected" is missing, go to **Settings > System > Detectors** and enable shock detection, and then reboot the device. Performing this step will add "Shock detected" to the list of conditions.

The examples in this section are illustrated using an *Eclipse Mosquitto* broker and an MQTT client such as *MQTT Explorer*, which has a graphical user interface.

Device events **MQTT events**

Publish

Use default condition prefix

Custom condition prefix

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list ^

Manual trigger ^

Condition

QoS

Keep

Virtual input ^

Condition

QoS

Keep

Note that if no event is added, the Axis device will not send any events to the MQTT broker. Furthermore, it's only possible to select **virtual input** as an event topic. The virtual input trigger usually consists of 32–64 virtual inputs, and if **virtual input** is selected as an event topic, all available virtual inputs are considered.

- **Keep:** also known as retain. Defines if the broker should retain the last state of this message in the brokers cache so that new MQTT subscribers will get the actual state of the event directly after subscription. This setting affects stateful and stateless events of an Axis device. Go to the *Event and action services section* in the VAPIX library for information about if particular events are stateful or stateless.
 - **None:** all events are sent as non-retained, regardless if they are stateful or stateless events.
 - **Property:** only stateful events are sent as non-retained, regardless if they are stateful or stateless events.

- All: all stateful and stateless events are sent as retained messages.
- QoS: defines the level of service upon message delivery. For more information, see *MQTT QoS settings, on page 167*.

To exemplify we have configured the manual trigger as an event to be published to the MQTT broker. The manual trigger is a stateful event, meaning that the manual trigger at all times is in either one of two states; 0 or 1. In the two configurations below we compare two possible scenarios.

1. We do not want the broker to keep the last known event state of the manual trigger to be available for newly subscribed MQTT clients.
2. We do want the broker to keep the last known event state of the manual trigger to be available for newly subscribed MQTT clients.

Scenario 1	Scenario 2
<div style="border: 1px solid #ccc; padding: 10px;"> <p style="margin: 0;">Device events <u>MQTT events</u></p> <hr/> <p>Publish</p> <p>Use default condition prefix <input checked="" type="checkbox"/></p> <p>Custom condition prefix <input type="text"/></p> <p><input checked="" type="checkbox"/> Include condition name</p> <p><input checked="" type="checkbox"/> Include condition namespaces</p> <p><input checked="" type="checkbox"/> Include serial number in payload</p> <hr/> <p>Event filter list ^</p> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 5px;"> <p>Manual trigger ^</p> <p>Condition: <input type="text" value="Manual trigger"/></p> <p>Topic: <i>onvif:Device/axis:IO/VirtualPort</i></p> <p>QoS: <input type="text" value="0"/></p> <p>Retain: <input type="text" value="None"/></p> <p style="text-align: right;"><input type="button" value="X"/></p> </div> <p style="text-align: left;"><input type="button" value="+"/></p> <p style="text-align: right;"><input type="button" value="Save"/></p> </div>	<div style="border: 1px solid #ccc; padding: 10px;"> <p style="margin: 0;">Device events <u>MQTT events</u></p> <hr/> <p>Publish</p> <p>Use default condition prefix <input checked="" type="checkbox"/></p> <p>Custom condition prefix <input type="text"/></p> <p><input checked="" type="checkbox"/> Include condition name</p> <p><input checked="" type="checkbox"/> Include condition namespaces</p> <p><input checked="" type="checkbox"/> Include serial number in payload</p> <hr/> <p>Event filter list ^</p> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 5px;"> <p>Manual trigger ^</p> <p>Condition: <input type="text" value="Manual trigger"/></p> <p>Topic: <i>onvif:Device/axis:IO/VirtualPort</i></p> <p>QoS: <input type="text" value="0"/></p> <p>Retain: <input type="text" value="Property"/></p> <p style="text-align: right;"><input type="button" value="X"/></p> </div> <p style="text-align: left;"><input type="button" value="+"/></p> <p style="text-align: right;"><input type="button" value="Save"/></p> </div>

Let's assume that the manual trigger was triggered, and that we have been connected to a broker in order to subscribe to it. As you can see below, we would see the actual MQTT message because we were connected and subscribed to the broker at the same time the manual trigger triggered.




In case we would not have been connected to the broker with our MQTT client and would have connected at a later point in time, we would still see the last state of the manual trigger event if we had configured the event as "Retain=Property", as can be seen below:




If we had configured the manual trigger event as "Retain=Off", we would not see the last message of the manual trigger and would only receive newly triggered events after we had been connected to the broker in question. Reasonably, no events would be listed:



After successful configuration we can see that the Axis device is publishing events for the manual trigger (=VirtualPort) and the 64 virtual inputs.

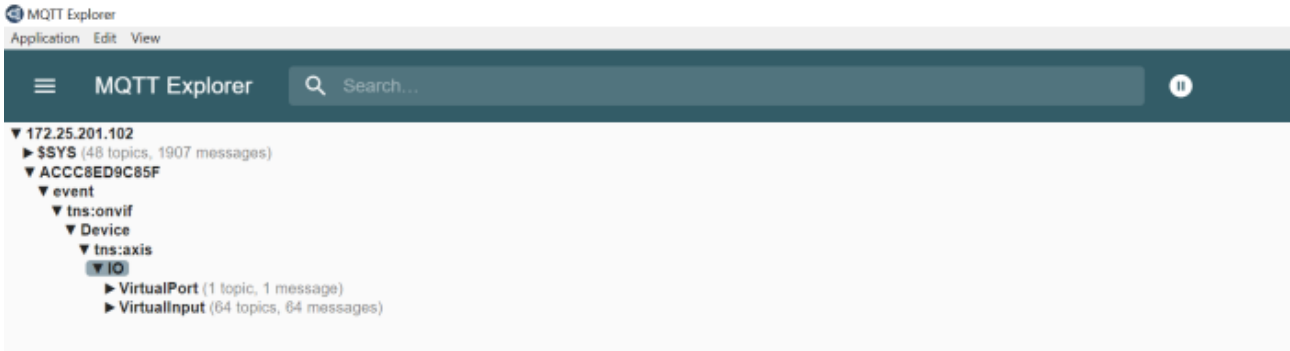

By expanding the tree structure further, we can see the status of each individual virtual input, identified by the port argument.

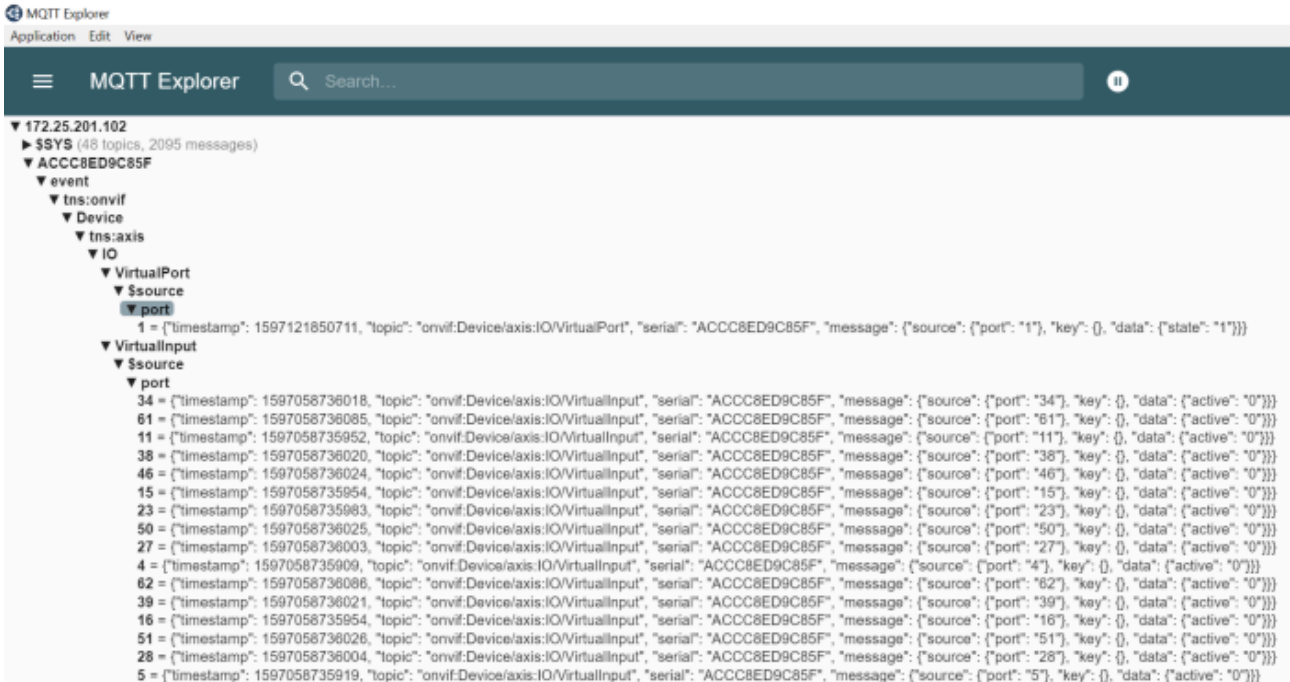

Include condition name

Enable Include condition name to include the entire event topic name tree instead of just the raw event itself.

Enabled

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix

Include condition name
 Include condition namespaces
 Include serial number in payload

Event filter list ^

Manual trigger v

Virtual input v

+

Save

MQTT Explorer

Application Edit View

☰ MQTT Explorer 🔍 Search...

- ▼ 172.25.201.102
 - ▶ \$SYS (48 topics, 3751 messages)
 - ▼ ACCC8ED9C85F
 - ▼ event
 - ▼ tns:onvif
 - ▼ Device
 - ▼ tns:axis
 - ▼ IO
 - ▶ VirtualPort (1 topic, 1 message)
 - ▶ VirtualInput (64 topics, 64 messages)

Disabled

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix

Include condition name
 Include condition namespaces
 Include serial number in payload

Event filter list ^

Manual trigger v

Virtual input v

+

Save

MQTT Explorer

Application Edit View


☰ MQTT Explorer 🔍 Search...

- ▼ 172.25.201.102
 - ▶ \$SYS (48 topics, 5441 messages)
 - ▼ ACCC8ED9C85F
 - event = {"timestamp": 1597135492122, "topic": "onvif:Device/axis:IO/Vi

Include condition namespaces


Enable Include condition namespaces if the ONVIF topic namespaces should be included.

Enabled

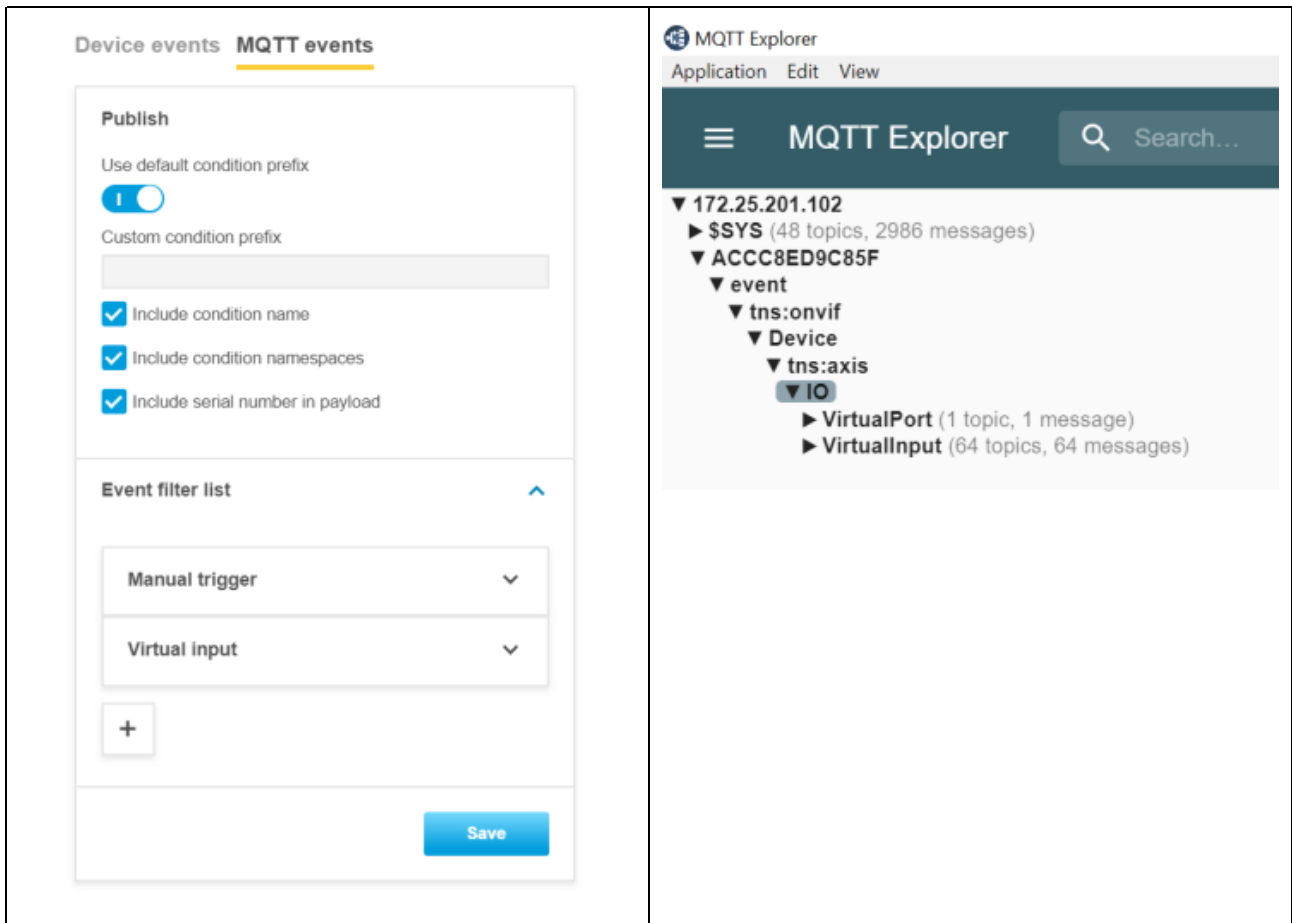

The image shows two side-by-side screenshots. The left screenshot is a configuration panel for MQTT events. It has two tabs: 'Device events' and 'MQTT events', with 'MQTT events' selected. Under the 'Publish' section, there is a toggle for 'Use default condition prefix' which is turned on. Below it is a text input for 'Custom condition prefix'. Three checkboxes are checked: 'Include condition name', 'Include condition namespaces', and 'Include serial number in payload'. An 'Event filter list' section contains two dropdown menus with 'Manual trigger' and 'Virtual input' selected, and a plus sign button. A 'Save' button is at the bottom right. The right screenshot is the MQTT Explorer application interface. It shows a tree view of MQTT topics for the IP address 172.25.201.102. The tree structure is: \$SYS (48 topics, 2986 messages) -> ACCC8ED9C85F -> event -> tns:onvif -> Device -> tns:axis -> IO -> VirtualPort (1 topic, 1 message) and VirtualInput (64 topics, 64 messages).

Disabled

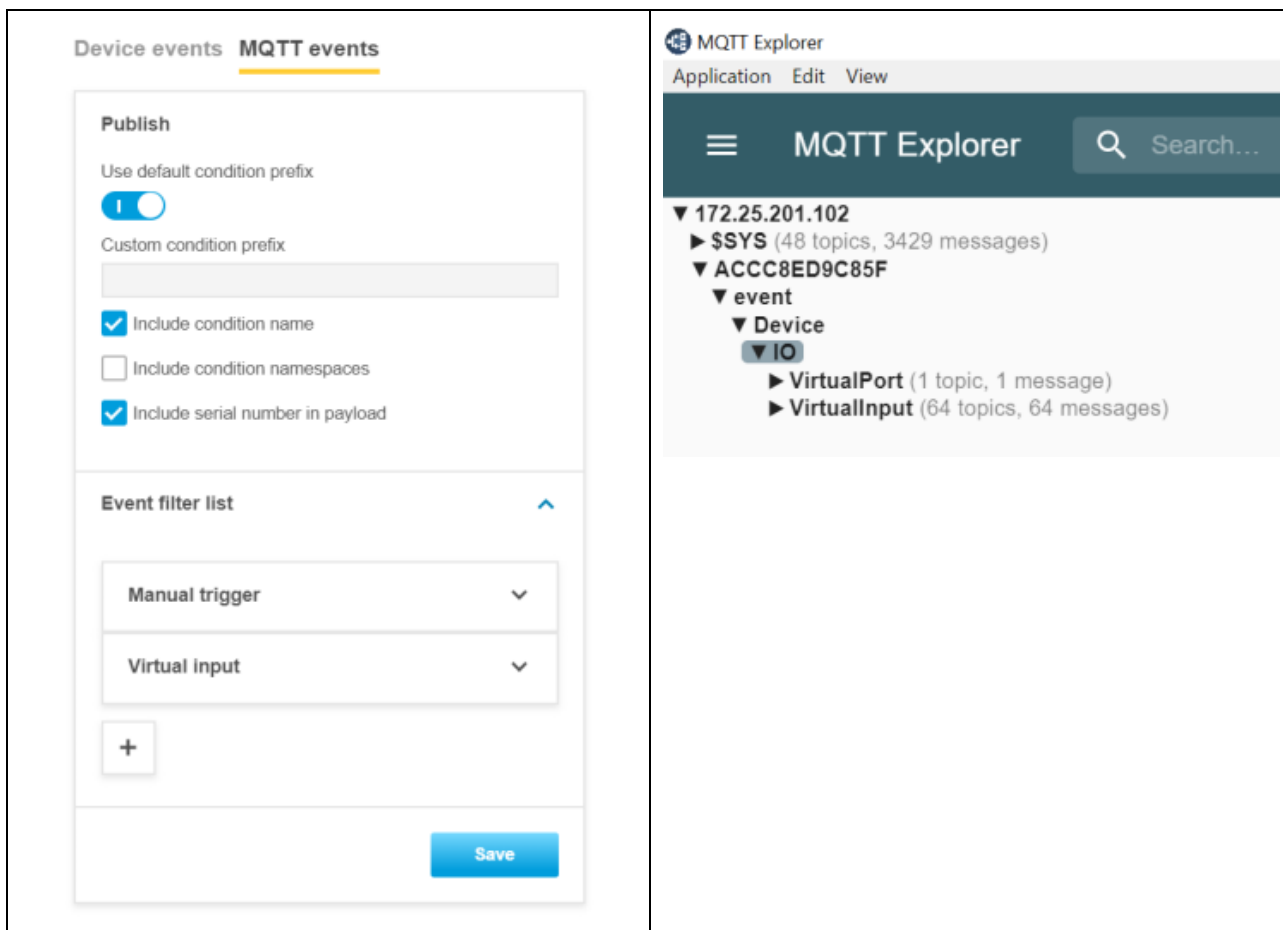

Include serial number in payload

Enable **Include serial number in payload** to include the serial number of the Axis device in the MQTT payload message. This could be used as additional information to identify the sending device.

Enabled

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list ^

Manual trigger v

Virtual input v

+

Save

Disabled

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list ^

Manual trigger v

Virtual input v

+

Save

Custom MQTT event publishing

In addition to the generic MQTT events that come with predefined topics and payloads, the **Publish MQTT** action rule can be triggered by any of the available device events and send a message with a custom topic and payload.

In the below example the Axis device is publishing a message to the topic "P1375/ManualTrigger/Custom/Topics/" carrying the payload "Manual Trigger is activated". The topic can include up to 1024 characters and the payload's limit is set to 8192 characters.

The image shows two side-by-side screenshots. The left screenshot is the Axis OS configuration interface for an MQTT Publish rule. It features a 'Rules' tab and a 'Manual trigger | Publish MQTT' rule. The rule is active, with a name of 'MQTT_Publish' and a wait time of '00:00:00'. The condition is set to 'Manual trigger'. The action is 'Publish MQTT' with a topic of 'P1375/ManualTrigger/Custom/Topics/' and a payload of 'Manual Trigger is activated'. The QoS is set to '0' and 'Retained' is unchecked. There are 'Save', 'Delete', and 'Duplicate' buttons at the bottom. The right screenshot is the MQTT Explorer application, showing a tree view of the MQTT topics. The path 'P1375/ManualTrigger/Custom/Topics/' is expanded, and the message 'Manual Trigger is activated' is visible in the message list.

This video illustrates how the action rule is set up:



Custom MQTT event subscription

Custom MQTT event subscription is available from AXIS OS 10.7 and onwards and makes it possible for the Axis device to subscribe to a topic when connecting to the MQTT broker. Once subscribed, the Axis device will listen to new incoming messages and will be able to act on it, e.g. by configuration of an action rule in the built-in event system.

See how it's configured in this video:



MQTT subscription data as overlays

With AXIS OS 11.4 and subsequent versions, you can overlay MQTT subscription data onto the video stream. In this section, we guide you through the process of implementing this feature.


First, make sure the device can successfully publish MQTT messages to the broker. In the screenshot below, we have a door monitor that can publish the door status among other information to the broker.

```

▼ shellies
  ▼ R2D2-Sensor-1
    online = false
    announce = [{"id":"R2D2-Sensor-1","model":"SHDW-2","mac":"485519D6F3F7","ip":"172.25.201.138","new_fw":false,"fw_ver":"20210414-113641/v1.10.2-rc5-6-gb89901a35-release-1.10"}]
    ▼ sensor
      state = close
      tilt = -1
      vibration = 0
      temperature = 23.70
      lux = 104
      illumination = twilight
      battery = 94
      error = 0
      act_reasons = ["sensor"]
    announce = [{"id":"R2D2-Sensor-1","model":"SHDW-2","mac":"485519D6F3F7","ip":"172.25.201.138","new_fw":false,"fw_ver":"20210414-113641/v1.10.2-rc5-6-gb89901a35-release-1.10"}]
  
```

In the Axis device web interface, go to **System > MQTT > MQTT client** and fill in the necessary information for the MQTT broker based on your setup. Once finished, you should be able to see the MQTT connection status has changed to **Connected**.

MQTT client

Connect 

Status: Connected

Broker ^

<p>Host</p> <input type="text" value="172.25.201.102"/>	<p>Client ID</p> <input type="text" value="client_B8A44F28254E"/>
<p>Protocol</p> <input type="text" value="MQTT over TCP"/>	<p><input type="checkbox"/> Clean session</p>
<p>Port</p> <input type="text" value="1883"/>	<p>HTTP proxy</p> <input type="text"/>
<p>Username</p> <input type="text" value="psadmin"/>	<p>HTTPS proxy</p> <input type="text"/>
<p>Password</p> <input type="password" value="....."/>	<p>Keep alive interval</p> <input type="text" value="60"/> s
	<p>Timeout</p> <input type="text" value="60"/> s
	<p><input checked="" type="checkbox"/> Reconnect automatically</p>
	<p>Device topic prefix</p> <input type="text" value="axis/B8A44F28254E"/>

Connect message v

Last Will and Testament message v

[Save](#)

After that, you can create MQTT overlays in the Axis device. Go to **System > MQTT > MQTT overlays** and click **Add overlay modifier**.

There are two types of modifiers:

- **#XMP**: The payload tag. The overlay modifier with #XMP form contains the entire payload of a published MQTT message.
- **#XMD**: The data tag. The overlay modifier with #XMD form contains the JSON value of a key in the payload of a published MQTT message.

Let's take a second look at the door monitor. In the published message, there's a section called "announce":

```

▼ shellies
  ► R2D2-Sensor-1 (11 topics, 21 messages)
    announce = {"id": "R2D2-Sensor-1", "model": "SHDW-2", "mac": "485519D6F3F7", "ip": "172.25.201.138", "new_fw": false, "fw_ver": "20210414-113641/v1.10.2-rc5-6-gb89901a35-release-1.10"}
    
```

Enter `shellies/announce` in the **Topic filter**. Click **Save** to subscribe to this topic and use it as an overlay.

Add overlay modifier

Topic filter

Data field

Cancel


Save

This will generate a modifier called #XMPO.

+ Add overlay modifier Go to Overlays

Topic filter	Data field	Modifier
shellies/announce		#XMPO

On the same page, click **Overlays**. On the Overlays page, you can see the entire payload of the message as an overlay in the live view.

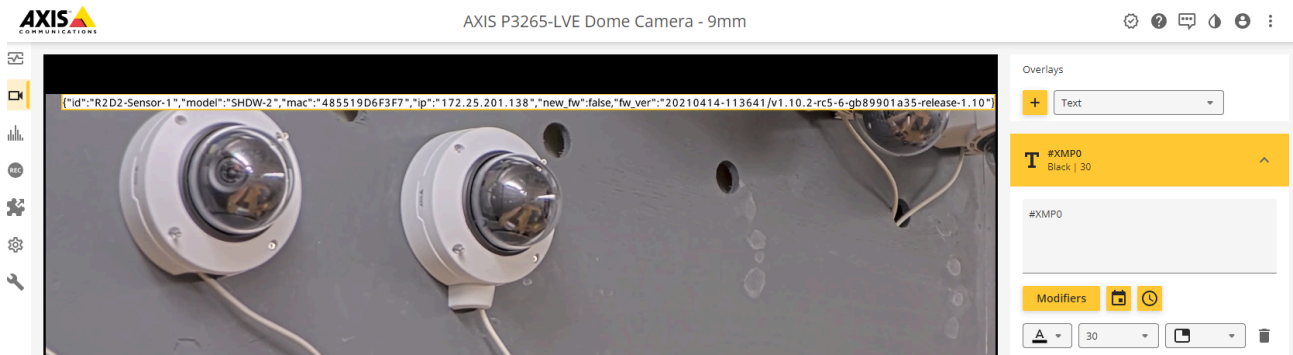

You can also choose to only overlay a specific part of the message, such as the IP address of the door monitor. That's what the #XMD modifier is used for.

Go to **System > MQTT > MQTT overlays** and click **Add overlay modifier**. Enter `shellies/announce` in the **Topic filter** and `ip` in the **Data field**. Finally, click **Save**.

Add overlay modifier

Topic filter

shellies/announce

Data field

ip


Cancel

Save

You should now see a new overlay modifier in the list:

+ Add overlay modifier Go to Overlays		
Topic filter	Data field	Modifier
shellies/announce		#XMP0
shellies/announce	ip	#XMP1, #XMD1

On the same page, click **Overlays**. On the Overlays page, create a new text overlay with **#XMD1** in the string. For example, **The IP address of the door monitor is: #XMD1**. In the overlay, **#XMD1** will be replaced by the door monitor's IP address.

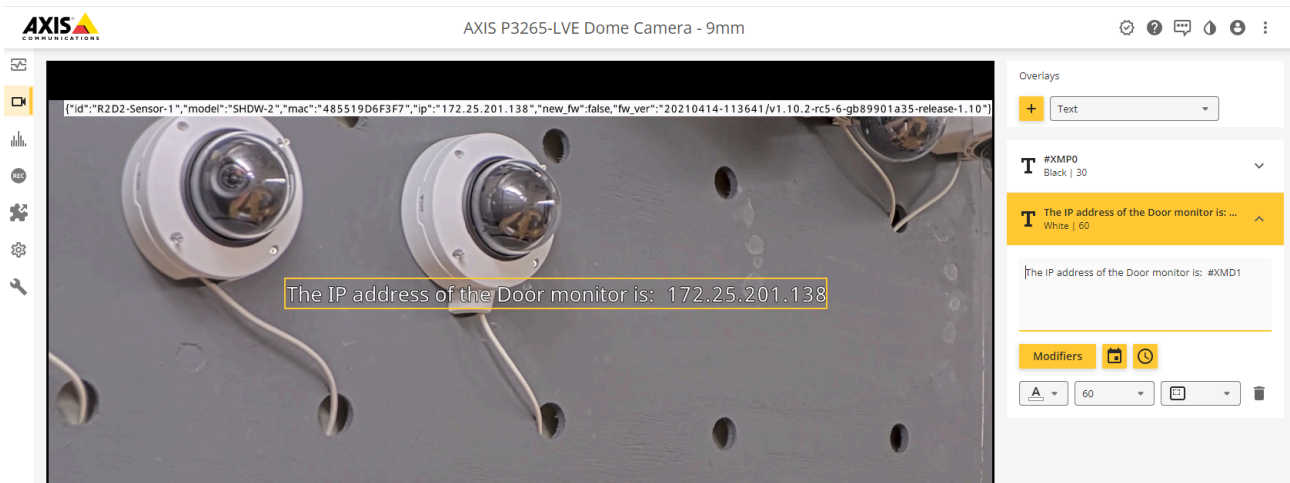

In some scenarios, subscribed messages include a lot of information in JSON format. Objects might also be nested within other objects, as in the example below.

```
{
  "topic": "axis:CameraApplicationPlatform/ObjectAnalytics/Device1Scenario2",
  "timestamp": 1710240482163,
  "message": {
    "source": {},
    "key": {},
    "data": {
      "bike": "0",
      "human": "0",
      "bus": "0",
      "total": "0",
      "otherVehicle": "0",
      "scenario": "Scenario 2",
      "car": "0",
      "truck": "0"
    }
  }
}
```

To overlay the number of humans, for instance, you would enter `message.data.human` in the overlay modifier **Data** field.

With AXIS OS 11.8 and later, the MQTT graph overlay feature has been added to ARTPEC- 8 products as well (except the fisheye and panoramic cameras). The steps to create the MQTT overlays are the same aside from the final step to add the overlays in the video stream. Instead of overlaying the MQTT data in text format, it's displayed in graphs.

In the following example, we'll use the MQTT graph overlay to display the room temperature and the battery level, drawn from the door monitor data below:

```
▼ shellies
  ▼ R2D2-Sensor-1
    online = false
    announce = {"id":"R2D2-Sensor-1","model":"SHDW-2","mac":"485519D6F3F7","ip":"172.25.201.138","new_fw":false,"fw_ver":"20210414-113641/v1.10.2-rc5-6-gb89901a35-release-1.10"}
    ▼ sensor
      state = close
      tilt = -1
      vibration = 0
      temperature = 23.00
      lux = 104
      illumination = twilight
      battery = 94
      error = 0
      act_reasons = ["sensor"]
```

Go to **System > MQTT > MQTT overlays** and click **Add overlay modifier** . Create one for the door monitor's room temperature and another for the door monitor's battery level.

Add overlay modifier

Topic filter

shellies/R2D2-Sensor-1/sensor/temperature

Data field

Cancel

Save

Add overlay modifier

Topic filter

shellies/R2D2-Sensor-1/sensor/battery

Data field

Cancel

Save


Once created, both overlay modifiers should be visible on the list.

+ Add overlay modifier


[Go to Overlays](#)

Topic filter	Data field	Modifier
shellies/R2D2-Sensor-1/sensor/temperature		#XMP0
shellies/R2D2-Sensor-1/sensor/battery		#XMP1


On the same page, click **Overlays**. On the Overlays page, create a new **Widget: Linegraph** overlay.

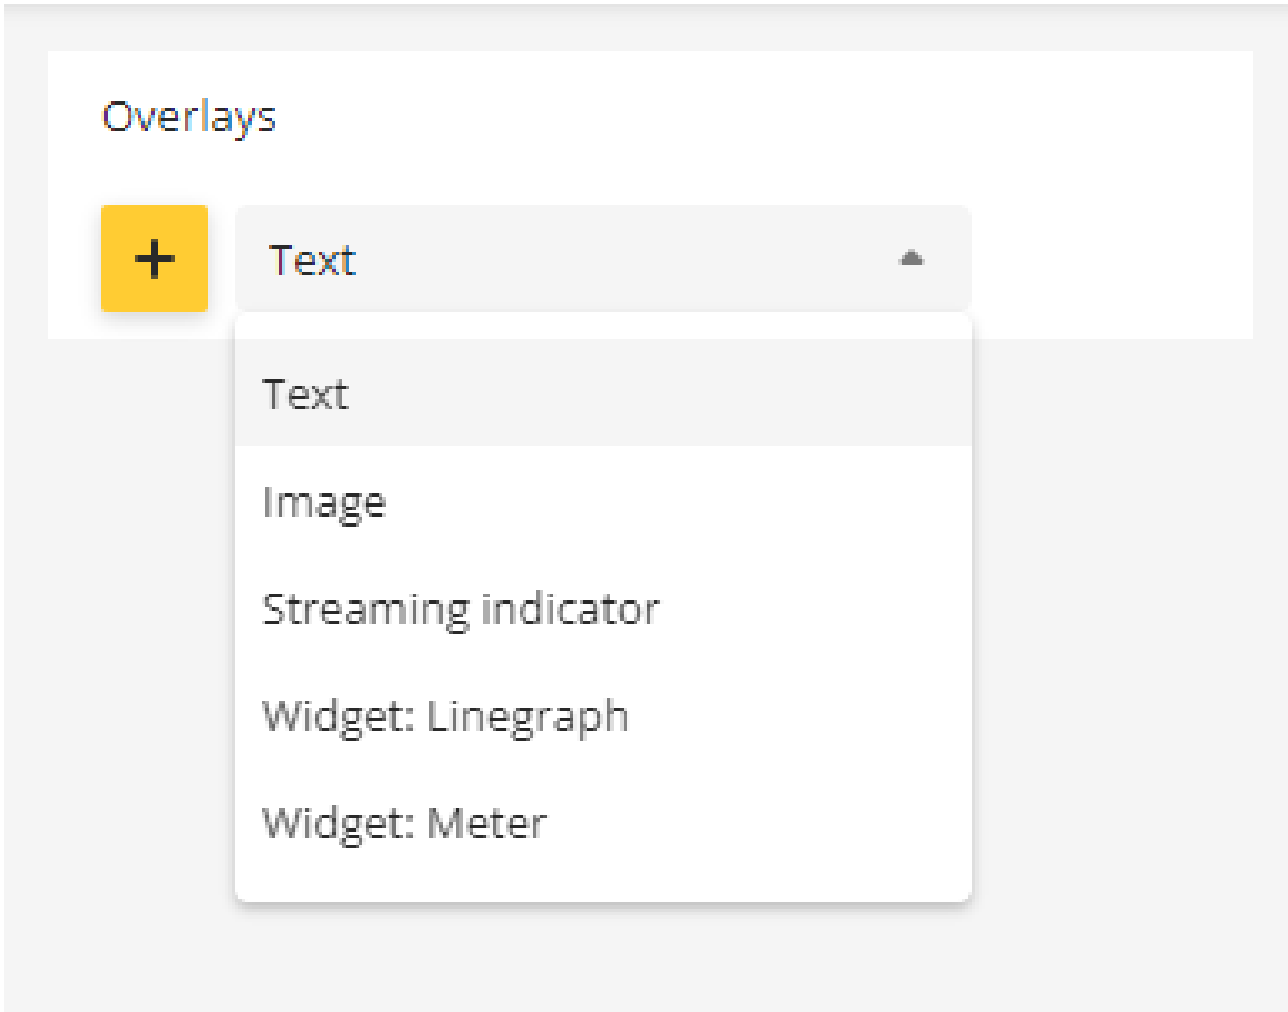

Select **##XMP0** as the overlay modifier.

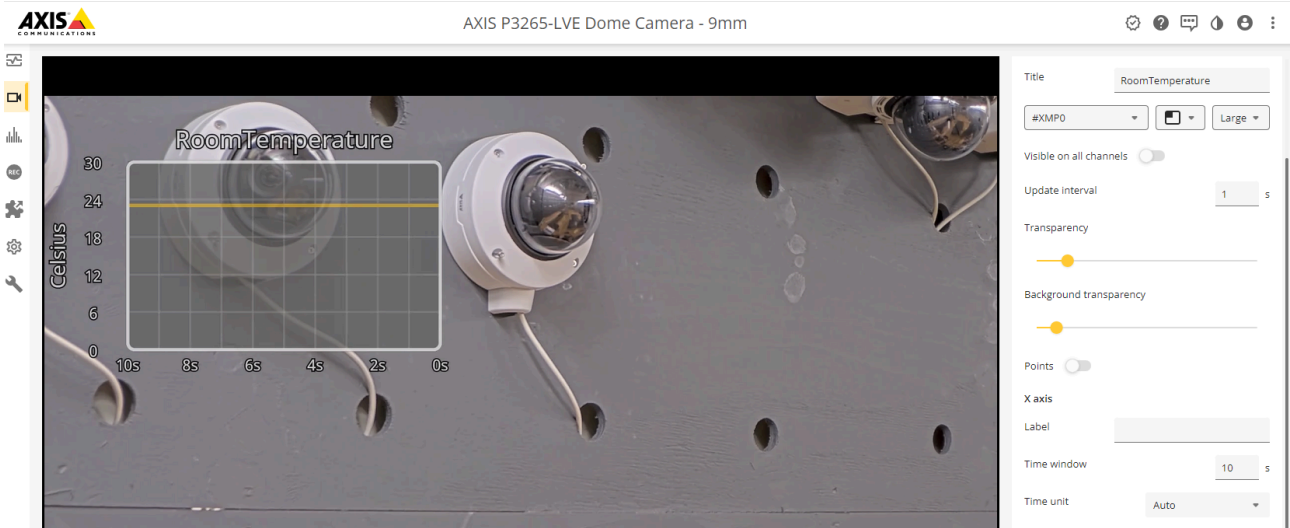

Create another graph overlay for the battery level of the door monitor. This time, use **Widget: Meter** instead. Select **#XMP1** as the overlay modifier.

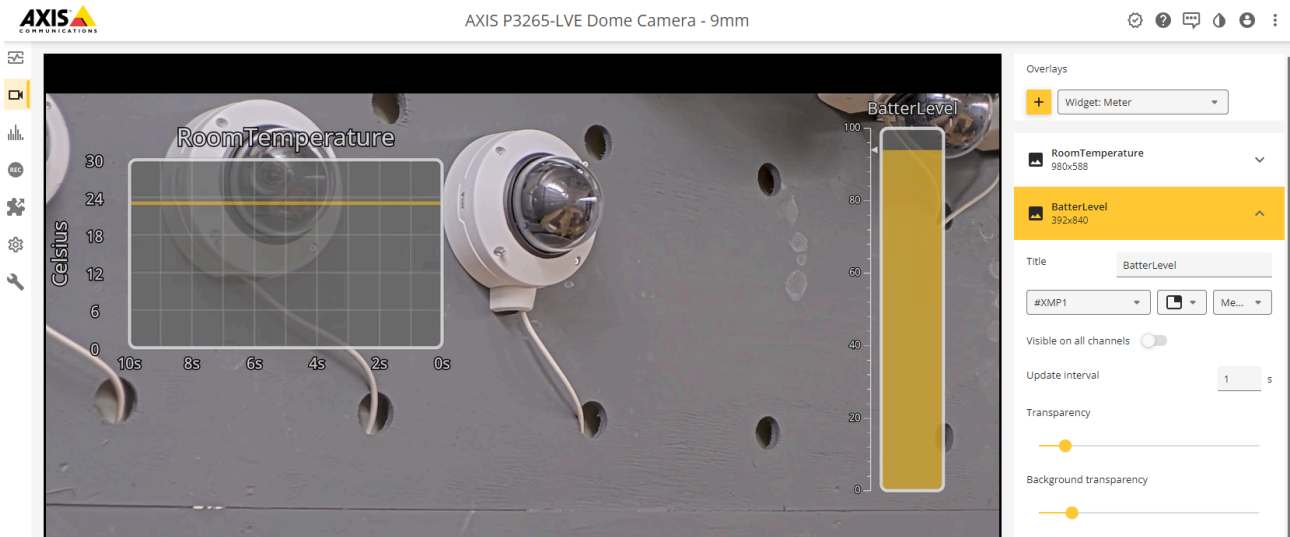

Eclipse Mosquitto

In this section you can read about the configuration steps required to connect an Axis device to an Eclipse Mosquitto MQTT broker in order to publish topics.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Eclipse Mosquitto configuration

For a common Mosquitto MQTT broker configuration based on Linux Ubuntu 18.04, see [this guide](#). The steps below cover the configuration in TCP and SSL/TLS mode only.

```

psadmin@app02: ~
File Edit View Search Terminal Help
GNU nano 2.9.3 /etc/mosquitto/mosquitto.conf

# Place your local configuration in /etc/mosquitto/conf.d/
# A full description of the configuration file is at
# /usr/share/doc/mosquitto/examples/mosquitto.conf.example

pid_file /var/run/mosquitto.pid
persistence true
persistence_location /var/lib/mosquitto/
log_dest file /var/log/mosquitto/mosquitto.log
log_type all
include_dir /etc/mosquitto/conf.d

allow_anonymous false

#MQTT Server (Login Credentials Required)
listener 1883

#MQTT Server (SSL/TLS Encryption w/o certificate)
#listener 8883
#protocol mqtt
#require_certificate false

#MQTT Server (SSL/TLS Encryption)
listener 8884
cafile /etc/mosquitto/ca_certificates/R2D2MQTTRootCA.crt
certfile /etc/mosquitto/certs/R2D2MQTTClient.crt
keyfile /etc/mosquitto/certs/R2D2MQTTClient.key

#Microsoft Azure Connections
#listener 9155
#protocol websockets

#Microsoft Azure Connections (SSL/TLS Encryption)
#listener 9156
#protocol websockets
#cafile /etc/mosquitto/ca_certificates/R2D2MQTTRootCA.crt
#certfile /etc/mosquitto/certs/R2D2MQTTClient.crt
#keyfile /etc/mosquitto/certs/R2D2MQTTClient.key

```

Step 2: Axis device configuration

Server configuration

MQTT over TCP	MQTT over SSL
<p>MQTT</p> <p>Client</p> <p>Connect <input checked="" type="checkbox"/></p> <p>Status: Connected</p> <hr/> <p>Server ▲</p> <p>Host <input type="text" value="172.25.201.102"/></p> <p>Protocol <input type="text" value="MQTT over TCP"/></p> <p>Port <input type="text" value="1883"/></p> <p>Username <input type="text" value="mqtt_1"/></p> <p>Password <input type="text" value="*****"/></p> <hr/> <p>Policies ▼</p> <p>Last will testament ▼</p> <p>Connect message ▼</p> <p><input type="button" value="Save"/></p>	<p>MQTT</p> <p>Client</p> <p>Connect <input checked="" type="checkbox"/></p> <p>Status: Connected</p> <hr/> <p>Server ▲</p> <p>Host <input type="text" value="172.25.201.102"/></p> <p>Protocol <input type="text" value="MQTT over SSL"/></p> <p><input checked="" type="checkbox"/> Validate server certificate</p> <p>Port <input type="text" value="8884"/></p> <p>Username <input type="text" value="mqtt_1"/></p> <p>Password <input type="text" value="*****"/></p> <hr/> <p>Policies ▼</p> <p>Last will testament ▼</p> <p>Connect message ▼</p> <p><input type="button" value="Save"/></p>

Policies configuration

MQTT

Client

Connect

Status: Connected

Server ▼

Policies ▲

Client id

Keep alive interval

Timeout

Reconnect automatically

Clean session

Last will testament ▼

Connect message ▼

Microsoft Azure (SAS token)

In this section you can read about the configuration steps required to connect an Axis device to an MQTT broker in order to publish topics. For further reading, go to <https://docs.microsoft.com/en-us/azure/iot-hub/quickstart-send-telemetry-cli> and <https://docs.microsoft.com/en-us/azure/iot-hub/iot-hub-mqtt-support>.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Create an IoT device

In order to get started, an IoT device must be created in Microsoft Azure. Follow the steps below in order to proceed.

Microsoft Azure

Home > R2D2-IoT-Hub | IoT devices

Search (Ctrl+/)

- Overview
- Activity log
- Access control (IAM)
- Tags
- Diagnose and solve problems
- Events

Settings

- Shared access policies
- Identity
- Pricing and scale
- Networking
- Certificates
- Built-in endpoints
- Falover
- Properties
- Locks
- Export template

Explorers

- Query explorer
- IoT devices

View, create, delete, and update devices in your IoT Hub.

Field: Operator: Value:

+ Add a new clause

Query devices [Switch to query editor](#)

DEVICE ID	STATUS	LAST STATUS UPDATE (UTC)	AUTHENTICATION TYPE	CLOUD TO DEVICE MESSAGE COUNT
-----------	--------	--------------------------	---------------------	-------------------------------

Microsoft Azure

Home > R2D2-IoT-Hub | IoT devices >

Create a device

Find Certified for Azure IoT devices in the Device Catalog

Device ID *

Authentication type Symmetric key X.509 Self-Signed X.509 CA Signed

Primary key


Secondary key

Auto-generate keys


Connect this device to an IoT hub Enable Disable

Parent device **No parent device**
[Set a parent device](#)

Save

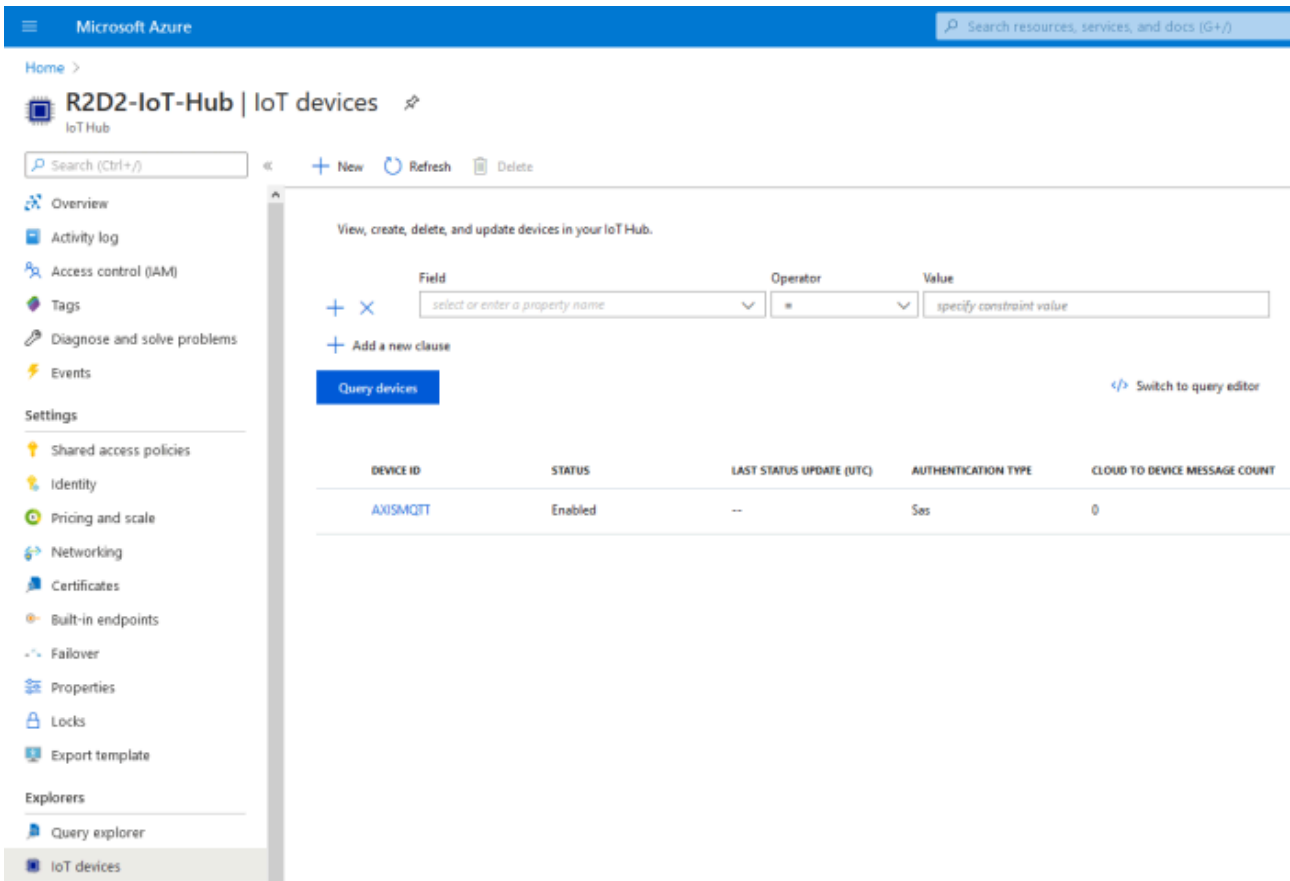

After creating a device, obtain the hostname of your Microsoft Azure entity. This can be looked up in the hub overview.

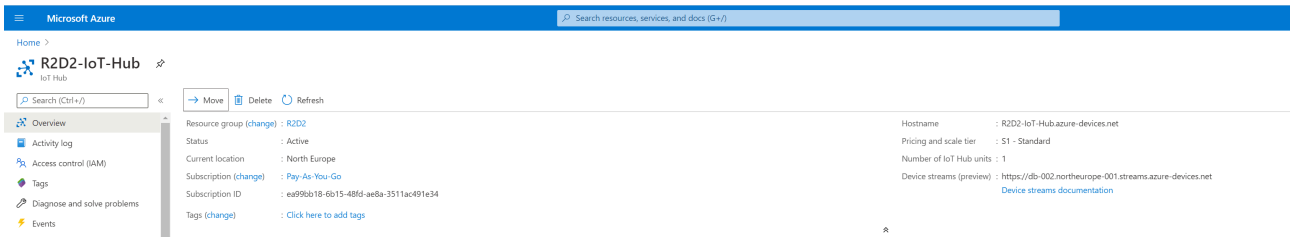

Step 2: Generate SAS token

The SAS token can be generated using the Cloud Shell console in Microsoft Azure. In the following example, the password is generated and valid for 3600 seconds. This SAS token is used later on to connect the Axis device to the Microsoft Azure MQTT broker.

Cloud Shell command: `az iot hub generate-sas-token -d AXISMQTT -n R2D2-IoT-Hub -du 3600`

MQTT

Client

Connect

Status: Connected

Server

Host
R2D2-IoT-Hub.azure-devices.net

Protocol
MQTT over WebSocket Secure

Validate server certificate

Port
443

Basepath
\$iothub/websocket

Username
R2D2-IoT-Hub.azure-devices.net/AXISMQTT/?api-versior

Password

Policies

Client id
AXISMQTT

Keep alive interval
60

Timeout
60

Reconnect automatically

Clean session

Last will testament

Connect message

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix
devices/AXISMQTT/messages/events/

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list

Manual trigger

Condition
Manual trigger

QoS
0

Keep
None

Virtual input

Condition
Virtual input


QoS
0

Keep
None

Step 4: Listen to MQTT events

Now we're ready to test our setup. Use the following command in Cloud Shell to listen to incoming MQTT events from the Axis device. The simplest way of testing is to use **manual trigger** in the Axis device.

Cloud Shell Command: `az iot hub monitor-events --hub-name R2D2-IoT-Hub`

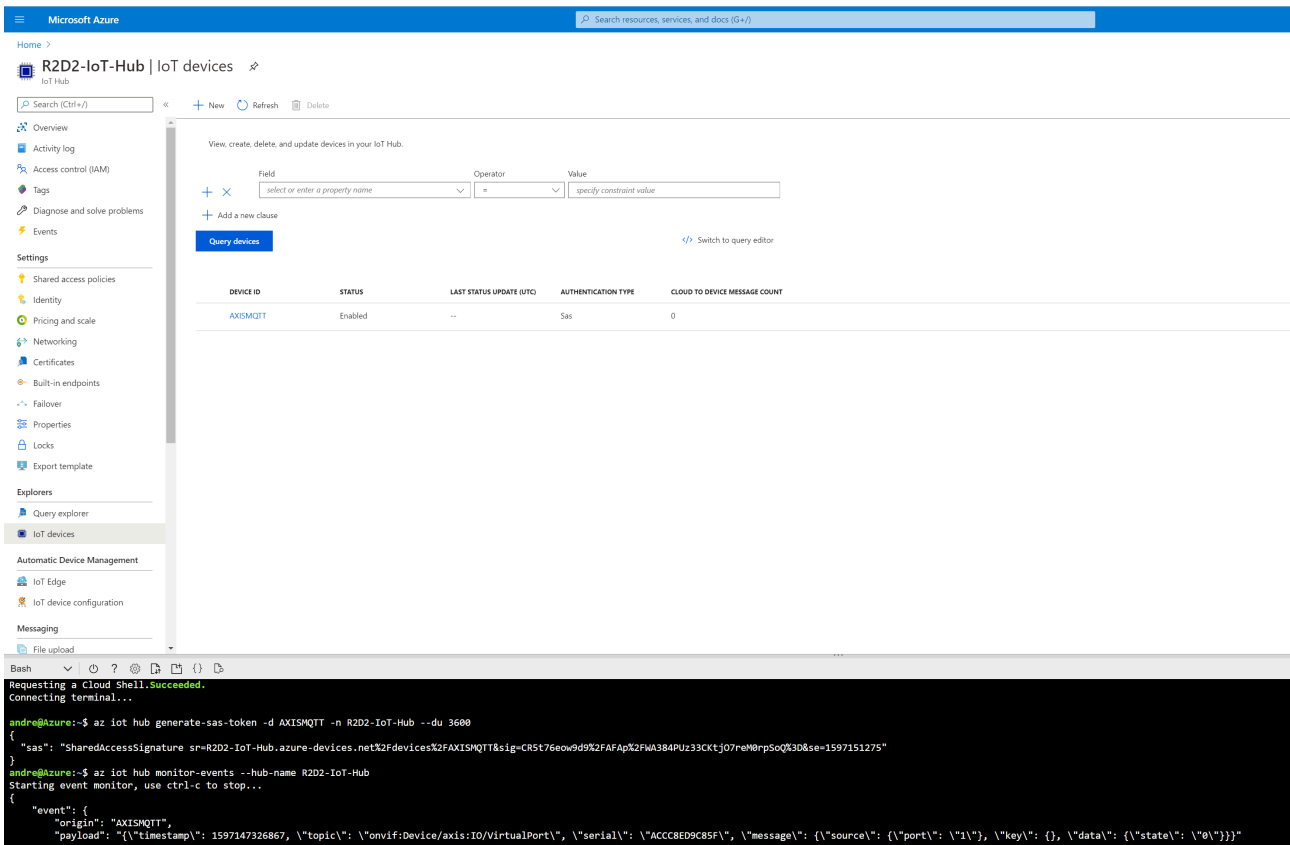

Microsoft Azure (certificate authentication)

In this section you can read about the configuration steps required to connect an Axis device to an MQTT broker in order to publish topics. For further reading, go to <https://docs.microsoft.com/en-us/azure/iot-hub/quickstart-send-telemetry-cli> and <https://docs.microsoft.com/en-us/azure/iot-hub/iot-hub-mqtt-support>.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider’s guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Certificate authority configuration

In order to configure certificate-based authentication in Microsoft Azure, a trusted root certificate is required, which is used to sign and verify clients and their certificates in return. The below process describes how to add a root certificate in Azure and how to apply the proof-of-possession method in order to prove to Azure that this root certificate should be verified and trusted.

Let's create a root certificate of our choice by running the following commands:

```

openssl genrsa -des3 -out R2D2AzureRootCA.key 2048
openssl req -new -x509 -days 36500 -key R2D2AzureRootCA.key -out R2D2AzureRootCA.pem
    
```

The screenshot shows the Microsoft Azure portal interface for the 'R2D2-IoT-Hub | Certificates' page. The left sidebar contains navigation options like Overview, Activity log, Access control (IAM), Tags, Diagnose and solve problems, Events, Settings, Shared access policies, Identity, Pricing and scale, Networking, and Certificates. The main content area features a search bar, an 'Add' button, and a refresh icon. An information message states: 'You can use this tool to upload and manage your certificates.' Below this is a table with the following structure:

Name	Status	Expiry	Su
No results			

At the bottom of the screenshot is a terminal window with the following output:

```


Requesting a Cloud Shell.Succeeded.
Connecting terminal...

andre@Azure:~$ openssl genrsa -des3 -out R2D2AzureRootCA.key 2048
Generating RSA private key, 2048 bit long modulus
.....+++
..+++
e is 65537 (0x10001)
Enter pass phrase for R2D2AzureRootCA.key:
Verifying - Enter pass phrase for R2D2AzureRootCA.key:
andre@Azure:~$ openssl req -new -x509 -days 36500 -key R2D2AzureRootCA.key -out R2D2AzureRootCA.pem
Enter pass phrase for R2D2AzureRootCA.key:
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:SE
State or Province Name (full name) [Some-State]:Skane
Locality Name (eg, city) []:Lund
Organization Name (eg, company) [Internet Widgits Pty Ltd]:AXIS Communications AB
Organizational Unit Name (eg, section) []:R2D2 Test Lab
Common Name (e.g. server FQDN or YOUR name) []:R2D2 Test Lab
Email Address []:
andre@Azure:~$
    
```


Download the certificate that was created in the PowerShell and upload the certificate in the certificate store as seen below.

The screenshot shows the Microsoft Azure portal interface. The top navigation bar includes the Microsoft Azure logo and a search bar. The main content area is titled "R2D2-IoT-Hub | Certificates" and displays a table with columns for Name, Status, Expiry, and Subject. The table is currently empty, showing "No results".

Below the portal, a terminal window is open, showing a Bash shell prompt. A context menu is visible over the terminal, with options: "Upload", "Download", and "Manage file share". A "Download a file" dialog box is also open, prompting the user to enter a file path. The path entered is `/home/andre/R2D2AzureRootCA.pem`. The dialog has "Download" and "Quit" buttons.

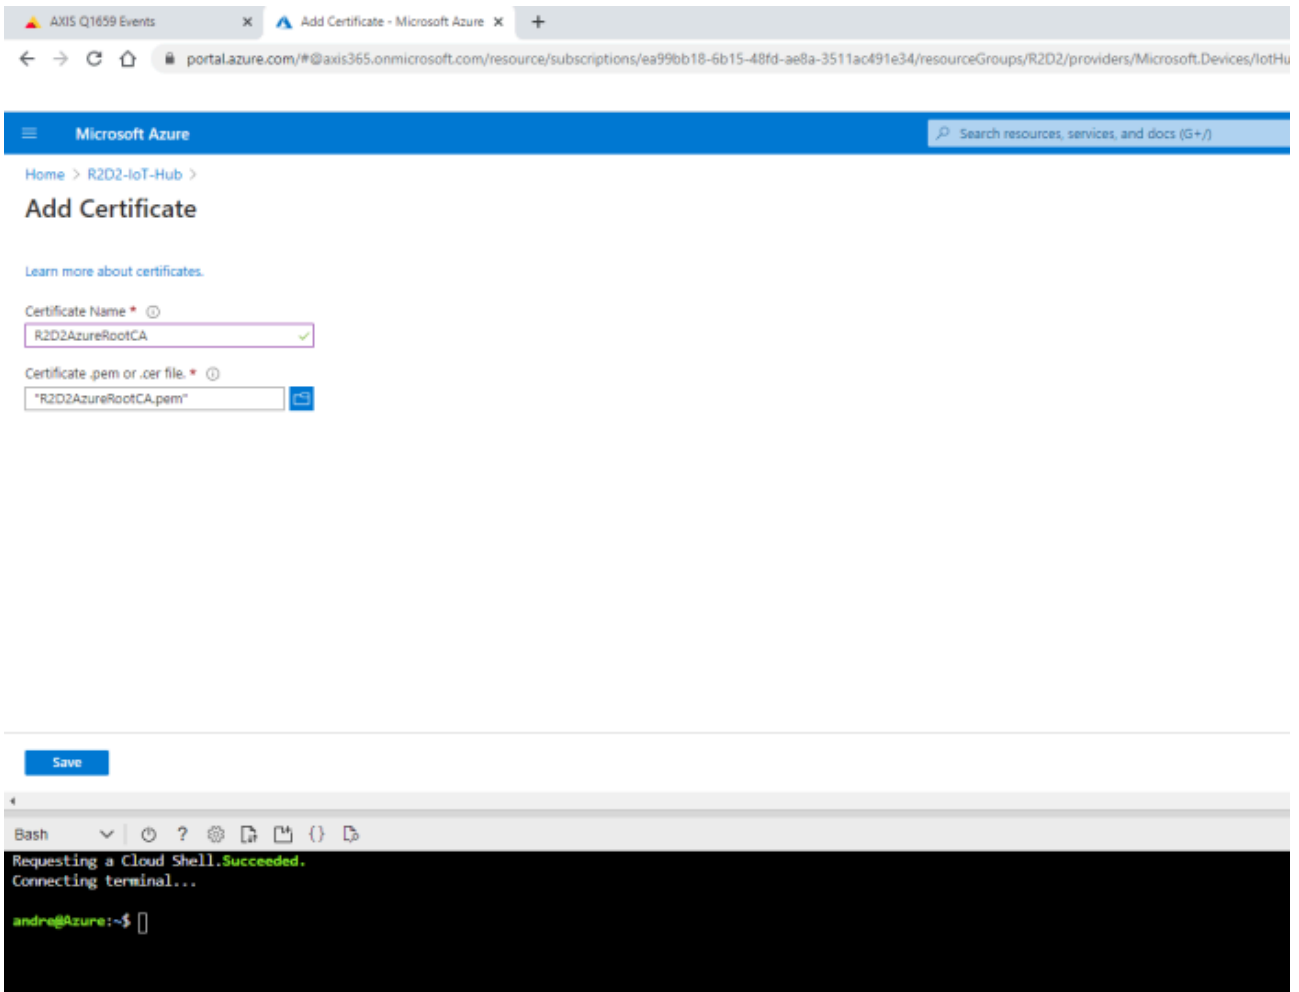


As you might have noticed, the status of the new root certificate is "Unverified", meaning that we need to prove to Azure that the uploading user is in real possession of the certificate and its authority. Therefore, Azure requires us to sign a new certificate from the root certificate that was uploaded, which includes the below verification code in the CN/Subject of the new certificate.

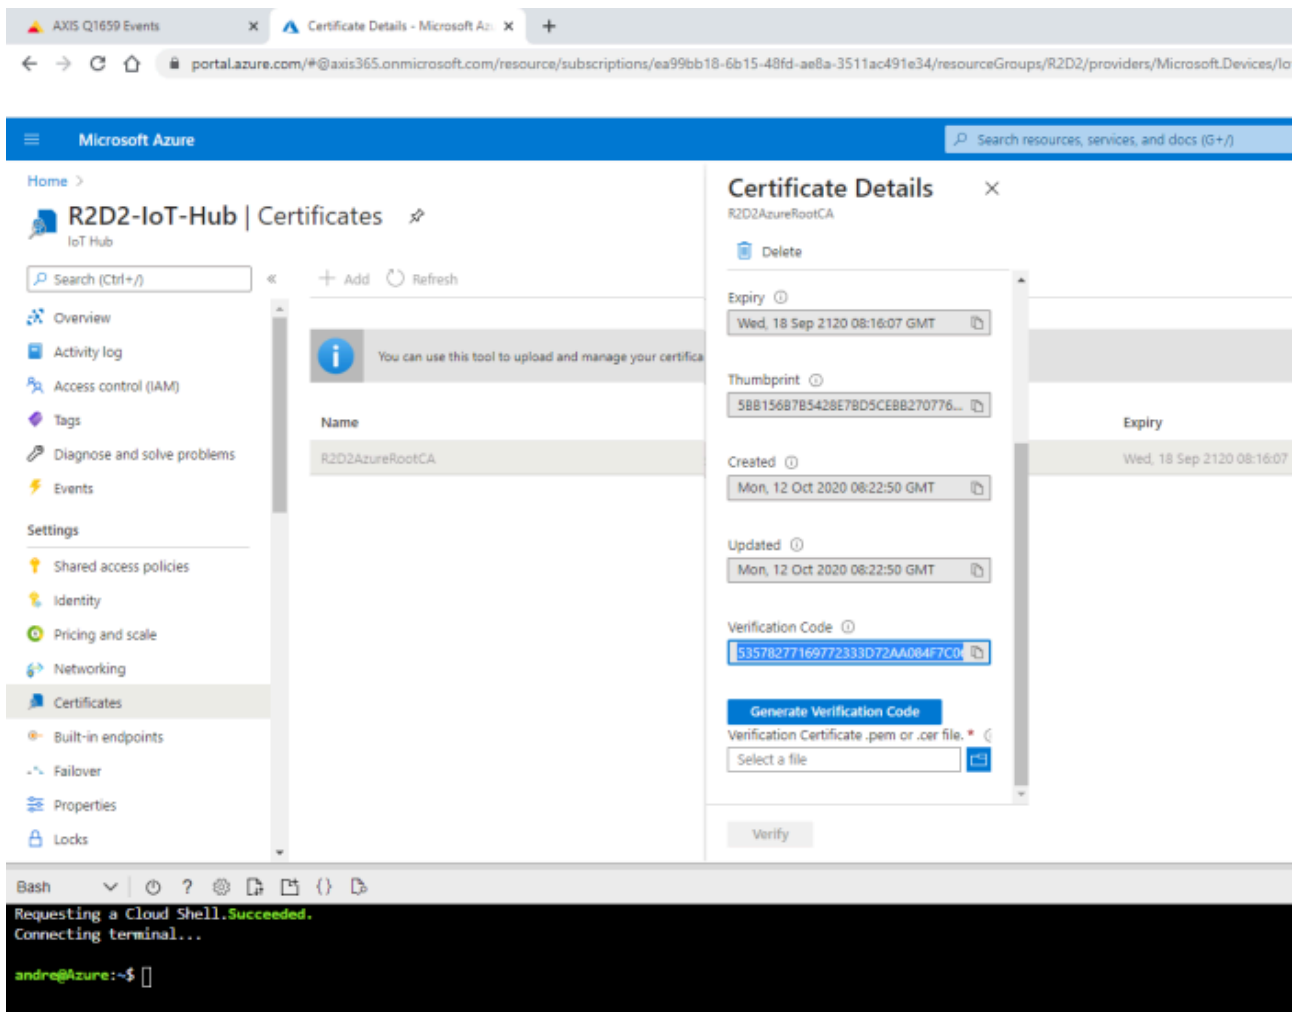

With the help of the below commands, a new certificate is created. Observe that the verification code must be used in the CN/Subject of the new certificate. Note that a challenge password during the certificate creation is not needed.

```
openssl genrsa -out R2D2AzureRootCAProof.key 2048
openssl req -new -out R2D2AzureRootCAProof.csr -key R2D2AzureRootCAProof.key
openssl x509 -req -in R2D2AzureRootCAProof.csr -CA R2D2AzureRootCA.pem -CAkey R2D2AzureRootCA.key -CAcreateserial -out R2D2AzureRootCAProof.pem -days 36500
```

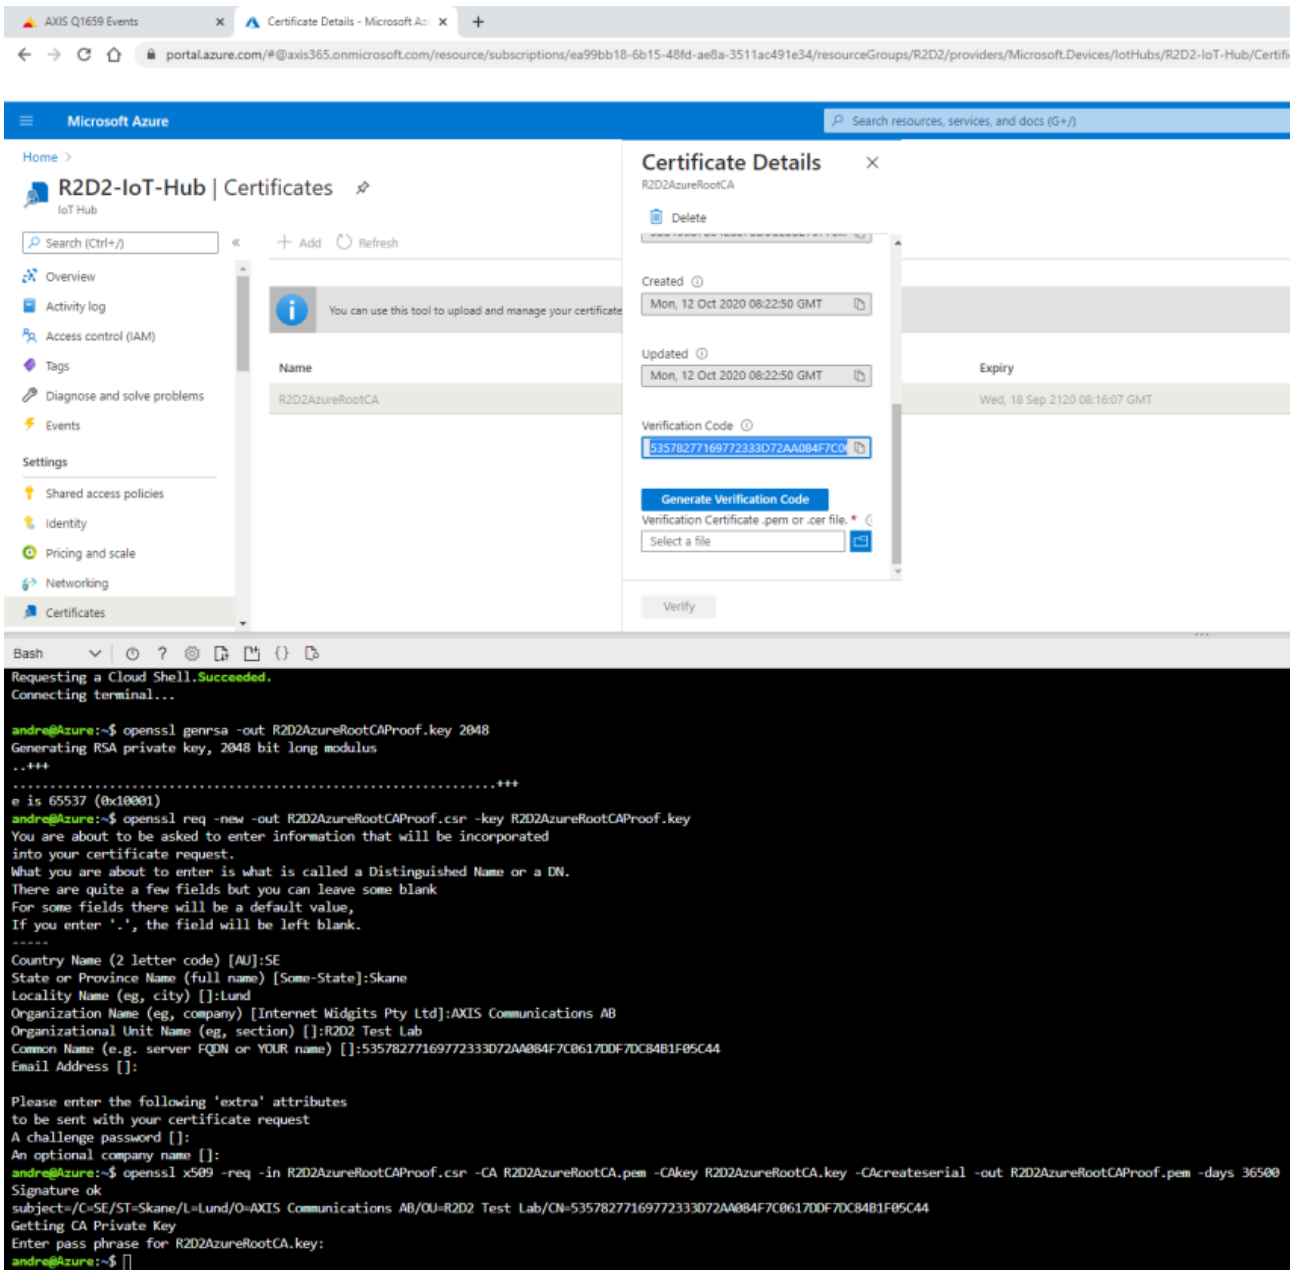

After the certificate has been successfully created, download it in order to upload it into the certification store to confirm the proof-of-possession. Upon successful verification, the certificate status should change to "Verified".

The screenshot shows the Microsoft Azure portal interface for the 'R2D2-IoT-Hub' Certificates section. The 'Certificate Details' pane for 'R2D2AzureRootCA' is open, displaying the following information:

- Created:** Mon, 12 Oct 2020 08:22:50 GMT
- Updated:** Mon, 12 Oct 2020 08:22:50 GMT
- Verification Code:** 53578277169772333072AA084F7C...
- Expiry:** Wed, 18 Sep 2120 08:16:07 GMT
- Subject:** R2D2 Test Lab

Below the details, there is a 'Generate Verification Code' button and a text input field containing 'R2D2AzureRootCAProof.pem'. A 'Verify' button is also present.

In the foreground, a terminal window shows the execution of the following commands:

```

andre@Azure:~$ openssl genrsa -out R2D2AzureRootCAProof.key 2048
Generating RSA private key
.....+++
e is 65537 (0x10001)
andre@Azure:~$ openssl req -new -out R2D2AzureRootCAProof.csr -key R2D2AzureRootCAProof.key
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:SE
State or Province Name (full name) [Some-State]:Skane
Locality Name (eg, city) []:Lund
Organization Name (eg, company) [Internet Widgits Pty Ltd]:AXIS Communications AB
Organizational Unit Name (eg, section) []:R2D2 Test Lab
Common Name (e.g. server FQDN or YOUR name) []:53578277169772333072AA084F7C06170DF70C84B1F05C44
Email Address []:

Please enter the following 'extra' attributes
to be sent with your certificate request
A challenge password []:
An optional company name []:
andre@Azure:~$ openssl x509 -req -in R2D2AzureRootCAProof.csr -CA R2D2AzureRootCA.pem -CAkey R2D2AzureRootCA.key -Ccreateserial -out R2D2AzureRootCAProof.pem -days 36500
Signature ok
subject=C=SE/ST=Skane/L=Lund/O=AXIS Communications AB/OU=R2D2 Test Lab/CN=53578277169772333072AA084F7C06170DF70C84B1F05C44
Getting CA Private Key
Enter pass phrase for R2D2AzureRootCA.key:
andre@Azure:~$
    
```

A 'Download a file' dialog box is also visible, showing the file path '/home/andre/R2D2AzureRootCAProof.pem' and 'Download' and 'Quit' buttons.



This screenshot shows the same Microsoft Azure portal interface, but the 'Certificate Details' for 'R2D2AzureRootCA' now show an updated status:

- Status:** Verified (indicated by a green checkmark icon)
- Expiry:** Wed, 18 Sep 2120 08:16:07 GMT

The 'Generate Verification Code' button and the text input field are no longer visible in this view.

Step 2: Create an IoT device

In order to send MQTT messages from an Axis device to Microsoft Azure using certificate-based authentication, a new IoT device needs to be created with the appropriate authentication method.

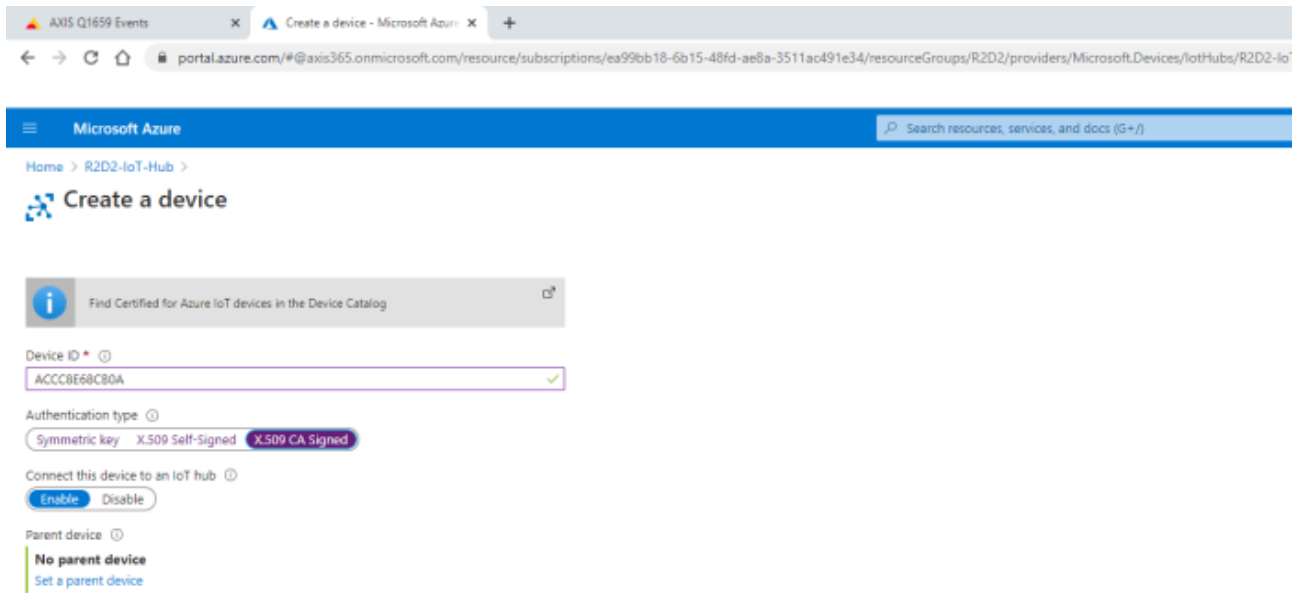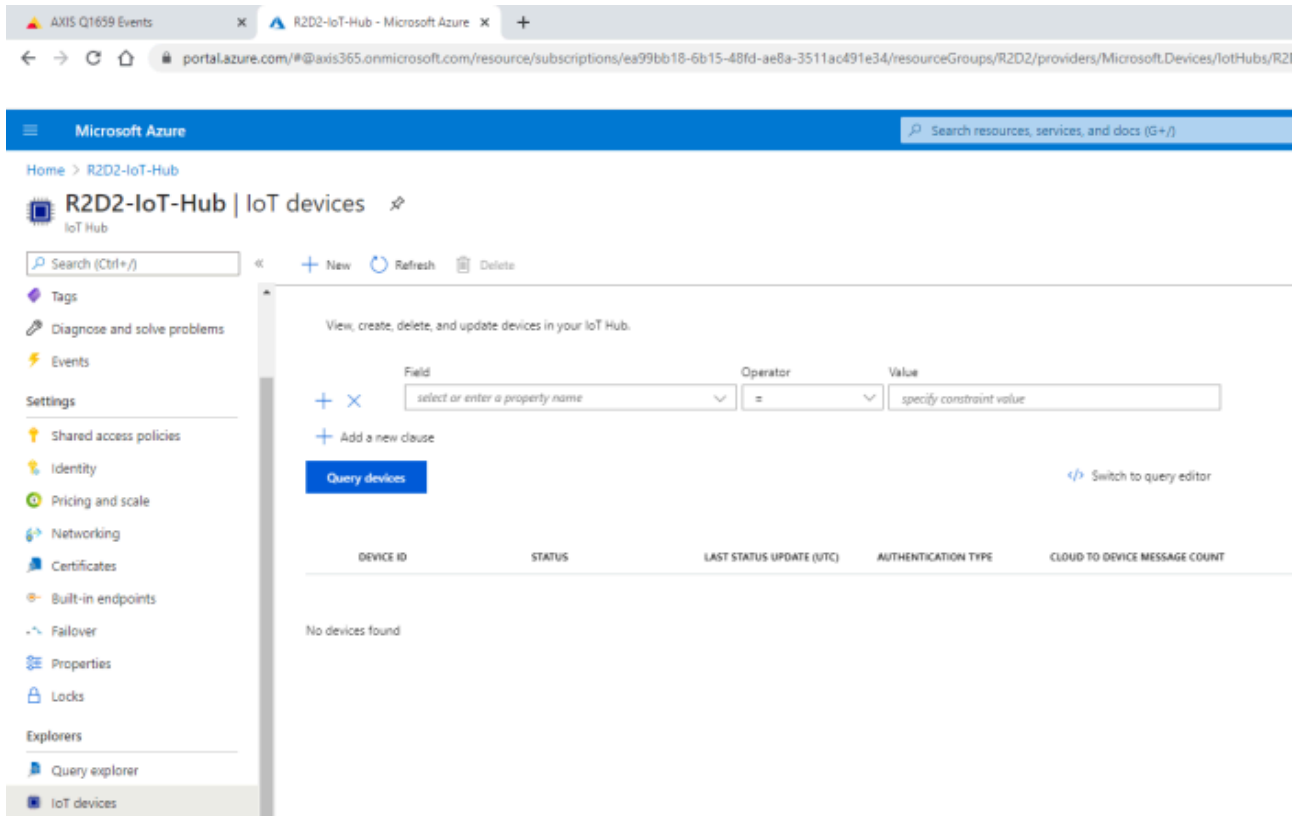

The Axis device must authenticate using a new client certificate that needs to be generated and signed from the root certificate that we uploaded in step 1. The below commands or similar are needed to do so:

```
openssl genrsa -out R2D2AzureACCC8E68CB0A.key 2048
```

```
openssl req -new -out R2D2AzureACCC8E68CB0A.csr -key R2D2AzureACCC8E68CB0A.key
openssl x509 -req -in R2D2AzureACCC8E68CB0A.csr -CA R2D2AzureRootCA.pem -CAkey R2D2AzureRootCA.key -CAcreateserial -out R2D2AzureACCC8E68CB0A.pem -days 36500
```

Observe that the device ID must match the CN/Subject of the client certificate exactly, or the authentication will fail. Note that a challenge password during certificate creation is not needed.


The screenshot shows the Microsoft Azure portal interface for an IoT Hub. The main content area displays a table of IoT devices with the following data:

DEVICE ID	STATUS	LAST STATUS UPDATE (UTC)	AUTHENTICATION TYPE	CLOUD TO DEVICE MESSAGE COUNT
ACCC8E68CB0A	Enabled	--	CertificateAuthority	0

Below the table, a terminal window shows the execution of the following commands and their output:

```
andre@Azure:~$ openssl genrsa -out R2D2AzureACCC8E68CB0A.key 2048
Generating RSA private key, 2048 bit long modulus
.....+++
e is 65537 (0x10001)
andre@Azure:~$ openssl req -new -out R2D2AzureACCC8E68CB0A.csr -key R2D2AzureACCC8E68CB0A.key
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:SE
State or Province Name (full name) [Some-State]:Skane
Locality Name (eg, city) []:Lund
Organization Name (eg, company) [Internet Widgits Pty Ltd]:AXIS Communications AB
Organizational Unit Name (eg, section) []:R2D2 Test Lab
Common Name (e.g. server FQDN or YOUR name) []:ACCC8E68CB0A
Email Address []:

Please enter the following 'extra' attributes
to be sent with your certificate request
A challenge password []:
An optional company name []:
andre@Azure:~$ openssl x509 -req -in R2D2AzureACCC8E68CB0A.csr -CA R2D2AzureRootCA.pem -CAkey R2D2AzureRootCA.key -CAcreateserial -out R2D2AzureACCC8E68CB0A.pem -days 36500
Signature ok
subject=C=SE/ST=Skane/L=Lund/O=AXIS Communications AB/OU=R2D2 Test Lab/CN=ACCC8E68CB0A
Getting CA Private Key
Enter pass phrase for R2D2AzureRootCA.key:
andre@Azure:~$
```

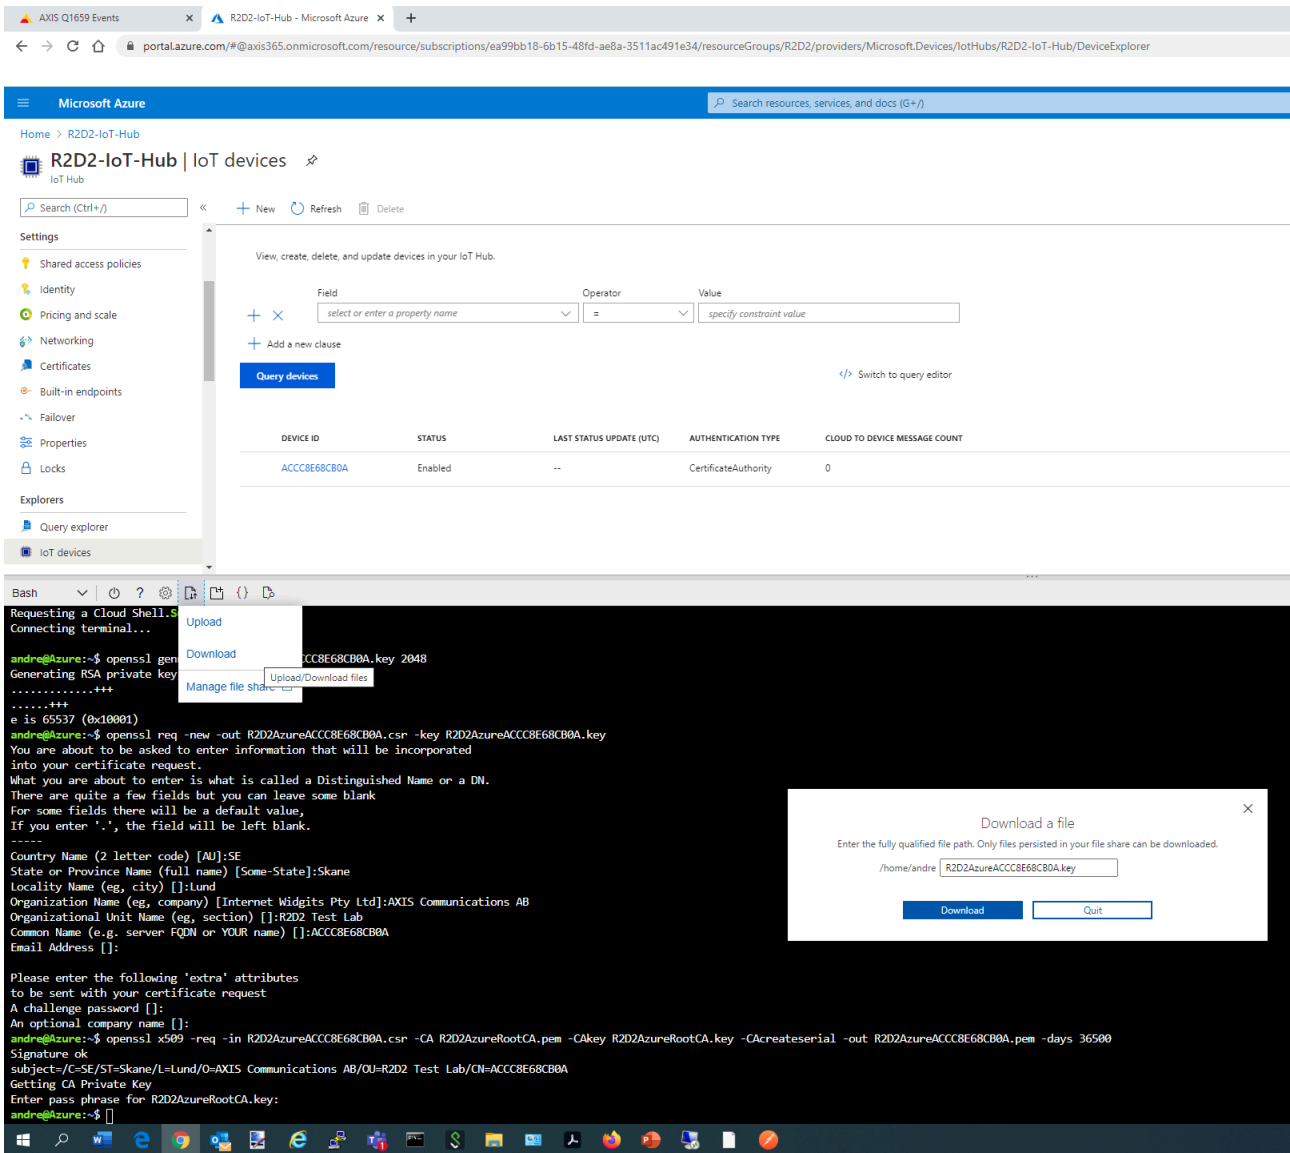

Step 3: Axis device configuration

In the last step, the previously created client certificate needs to be uploaded onto the Axis device, and be selected in the MQTT broker configuration. The rest of the configuration is well documented in the Microsoft Azure guidelines.

Security

Certificates

Client certificates

Default (self-signed)

+ ⓘ 🗑

CA certificates

- Baltimore CyberTrust Root
- Cybertrust Global Root
- DigiCert Assured ID Root CA
- DigiCert Assured ID Root G2
- DigiCert Global Root CA
- DigiCert Global Root G2
- DigiCert High Assurance EV Root CA

+ ⓘ 🗑

HTTP and HTTPS

Allow access through

HTTP and HTTPS

HTTP port HTTPS port

80 443

Certificate

Default (self-signed)

Save

IEEE 802.1x

Client certificate

none

CA certificate

none

EAP Identity

axis-acc8e68cb0a

EAPOL Version

1

2

3

Use IEEE 802.1x

Save

Custom-signed firmware certificate

Install

Install a certificate

Select a type of signing method

Signing request

Private key (PKCS#12)

Separate private key

Certificate

R2D2AzureACCC8E68CB0A.pem

Private key

R2D2AzureACCC8E68CB0A.key

MQTT

Client

Connect

Status: Connected

Server

Host: R2D2-IoT-Hub.azure-devices.net

Protocol: MQTT over SSL

Port: 8883

Username: R2D2-IoT-Hub.azure-devices.net/ACCC8E68CB0A/?api-versi

Use password

Password: *****

Certificates

Client certificate: R2D2AzureACCC8E68CB0A

CA certificate: Baltimore CyberTrust Root

Validate server certificate

Policies

Client id: ACCC8E68CB0A

Keep alive interval: 60

Timeout: 60

Reconnect automatically

Clean session

Device events MQTT events

Publish

Use default condition prefix:

Custom condition prefix: devices/ACCC8E68CB0A/messages/events/

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list

Manual trigger

Condition: Manual trigger

QoS: 0

Keep: None

✕

+

Save

Step 4: Listen to MQTT events

Now we're ready to test our setup. Use the following command in the Cloud Shell to listen to incoming MQTT events from the Axis device. The simplest way of testing is to use the **manual trigger** in the Axis device.

Cloud Shell command: `az iot hub monitor-events --hub-name R2D2-IoT-Hub`

Go to *Microsoft Azure (SAS token)*, on page 194 and see the example in Step 4 for more information.

Amazon Web Services (AWS)

In this section you can read about the configuration steps required to connect an Axis device to an Amazon Web Services (AWS) MQTT broker in order to publish topics. For further reading, go to <https://docs.aws.amazon.com/iot/latest/developerguide/mqtt.html#mqtt-sdk>.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Create a thing policy

Before we start creating a thing device in AWS, we want to configure the thing policy first. The thing policy is basically access and connection rights given to a device upon creation. The below example illustrates a policy that lets the Axis device connect and publish messages.

The screenshot shows the AWS IoT console interface for creating a policy. The left sidebar contains navigation options like Monitor, Activity, Onboard, Manage, Greengrass, Secure, Defend, Act, Test, Software, Settings, Learn, and Documentation. The main content area is titled 'Create a policy' and includes a description, a 'Name' field with the value 'axismqttdevice', and an 'Add statements' section. The 'Add statements' section is in 'Advanced mode' and contains two statements. The first statement has the action 'iot:Connect', the resource ARN 'arn:aws:iot:eu-central-1:148231931467:client/\${iot:Connection.Thing.ThingName}', and the effect 'Allow'. The second statement has the action 'iot:Publish', the resource ARN 'arn:aws:iot:eu-central-1:148231931467:topic/*', and the effect 'Allow'. Each statement has a 'Remove' button. At the bottom of the statements section is an 'Add statement' button, and at the bottom right of the main area is a 'Create' button.

Step 2: Create IoT device (thing)

After creating the thing policy, it is time to create the actual device. AWS IoT Core is providing access via certificate-based authority rather than credential-based authentication. So, a certificate and a private key are generated during the process of creating a thing as well.

The screenshot displays the AWS IoT console interface. At the top, the navigation bar includes the AWS logo, 'Services', and 'Resource Groups'. The left sidebar is titled 'AWS IoT' and lists various management and monitoring options. The main content area is titled 'Creating AWS IoT things' and provides a brief definition of an IoT thing. It offers two primary actions: 'Register a single AWS IoT thing' and 'Bulk register many AWS IoT things', each with a corresponding button. A 'Cancel' button is also visible at the bottom of the main content area.

Navigation Sidebar:

- AWS IoT
- Monitor
- Activity
- Onboard
- Manage
 - Things
 - Types
 - Thing groups
 - Billing groups
 - Jobs
 - Tunnels
- Greengrass
- Secure
 - Certificates
 - Policies
 - CAs
 - Role Aliases
 - Authorizers
- Defend
- Act
 - Test
- Software
- Settings
- Learn
- Documentation

Main Content Area:

Creating AWS IoT things

An IoT thing is a representation and record of your physical device in the cloud. Any physical device needs a thing record in order to work with AWS IoT. [Learn more.](#)

Register a single AWS IoT thing
Create a thing in your registry [Create a single thing](#)

Bulk register many AWS IoT things
Create things in your registry for a large number of devices already using AWS IoT, or register devices so they are ready to connect to AWS IoT. [Create many things](#)

[Cancel](#) [Create a single thing](#)

aws
Services ▾ Resource Groups ▾

AWS IoT ✕

- Monitor
- Activity
- ▶ Onboard
- ▼ Manage
 - Things**
 - Types
 - Thing groups
 - Billing groups
 - Jobs
 - Tunnels
- ▶ Greengrass
- ▼ Secure
 - Certificates
 - Policies
 - CAs
 - Role Aliases
 - Authorizers
- ▶ Defend
- ▶ Act
- Test

- Software
- Settings
- Learn
- Documentation [🔗](#)

AWS IoT > Things > Create things > Add your device to the thing registry

CREATE A THING

Add your device to the thing registry

STEP 1/3

This step creates an entry in the thing registry and a thing shadow for your device.

Name

Apply a type to this thing

Using a thing type simplifies device management by providing consistent registry data for things that share a type. Types provide things with a common set of attributes, which describe the identity and capabilities of your device, and a description.

Thing Type

Create a type

Add this thing to a group

Adding your thing to a group allows you to manage devices remotely using Jobs.

Thing Group

Groups /
Create group Change

Set searchable thing attributes (optional)

Enter a value for one or more of these attributes so that you can search for your things in the registry.

This thing type does not have searchable attributes

Set non-searchable thing attributes (optional)


You can use thing attributes to describe the identity and capabilities of your device.

Attribute key	Value	
Provide an attribute key, e.g. Manufacturer	Provide an attribute value, e.g. Acme-Corporation	Clear
Add another		


Show thing shadow ▾

Cancel


Back
Next

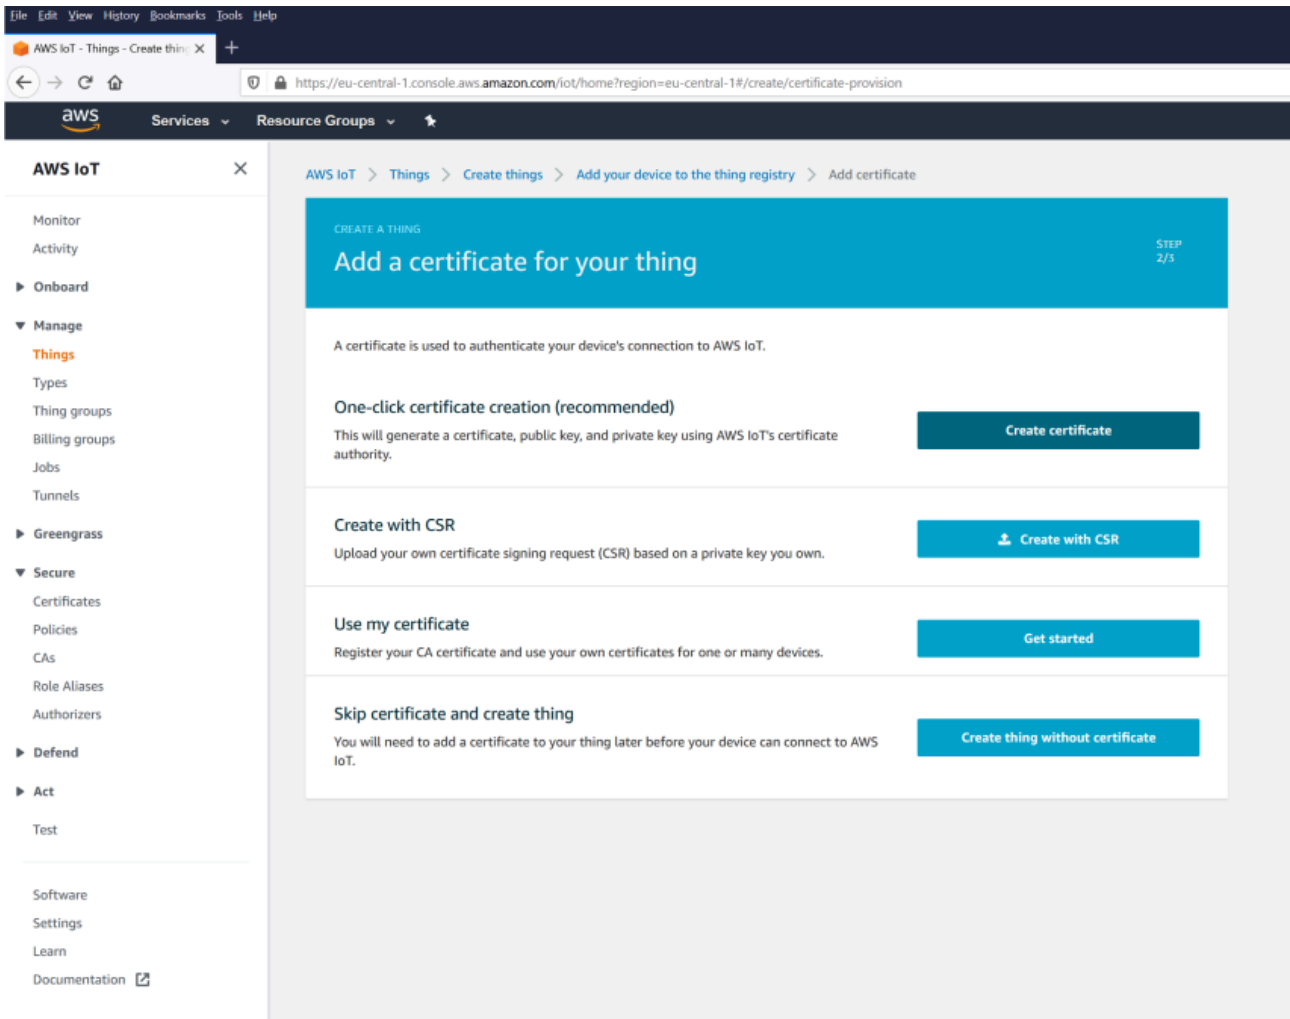

Observe that the certificate and private key must be uploaded to the Axis device. If the Axis device should validate the AWS MQTT broker as well, the Amazon Root CA must be uploaded on the Axis device too. Furthermore, make sure that the certificates are activated by toggling the button as illustrated in the screenshot.

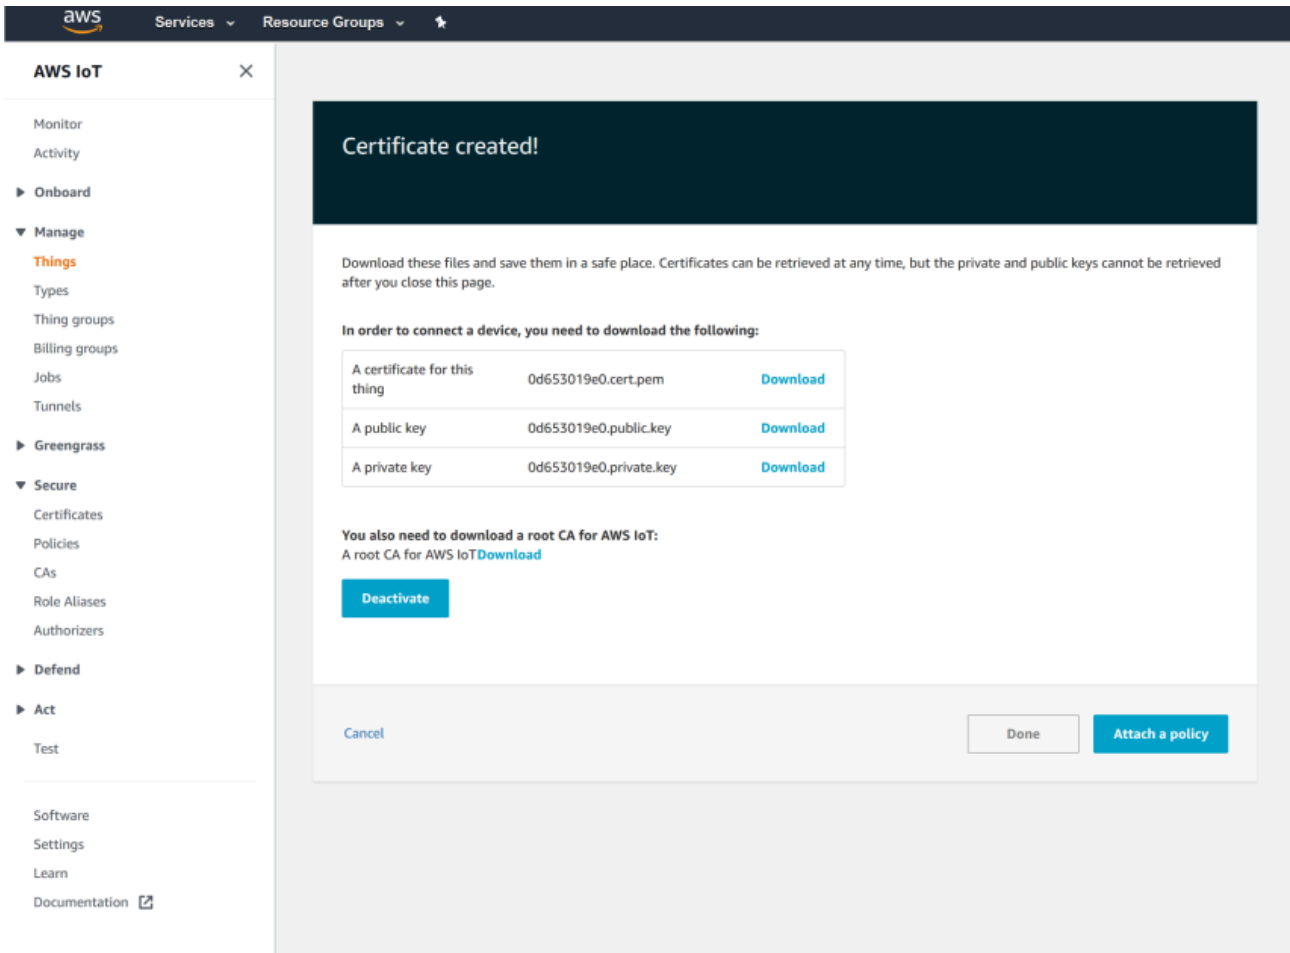

Here we attached the policy that we created in Step 1 to the thing device we are creating. After doing this, the thing is ready and it is time to configure the Axis device.

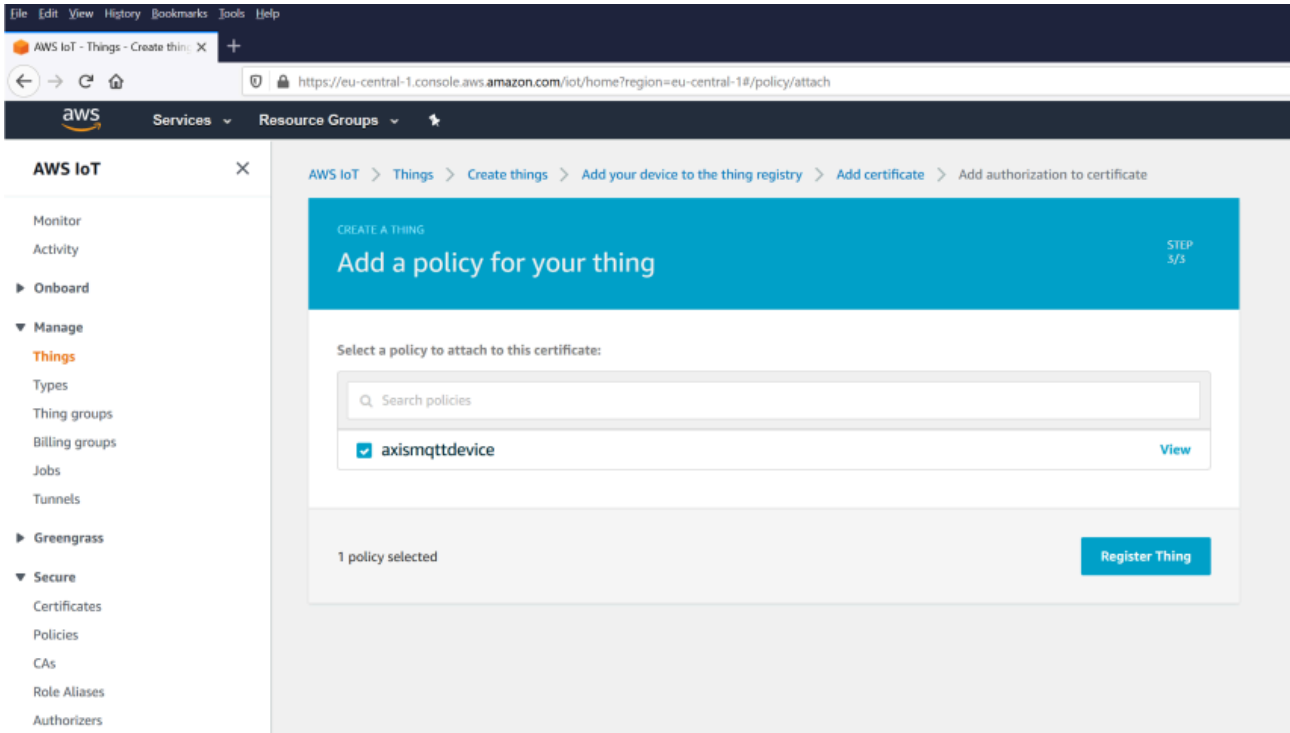

Step 3: Axis device configuration

With the information provided in step 1 and step 2 we can now connect the Axis device to the AWS MQTT broker.

Note that AWS IoT Core enforces a hard limit on the length of the topic expression so we simply started with only including the condition name to keep the topic short.

The image shows a two-panel configuration interface for MQTT. The left panel, titled 'MQTT', contains the following sections:

- Client:** A 'Connect' toggle is turned on, and the status is 'Connected'.
- Server:** Host is 'a1vu2nh8upg6so-ats.iot.eu-central-1.amazonaws.com', Protocol is 'MQTT over SSL', and Port is '8883'. There is a checkbox for 'Validate server certificate' which is unchecked.
- Certificates:** Client certificate is 'Od653019e0' and CA certificate is empty. There is a checkbox for 'Validate server certificate' which is unchecked.
- Policies:** Client id is 'axismqttdevice', Keep alive interval is '60', and Timeout is '60'. There are checkboxes for 'Reconnect automatically' (checked) and 'Clean session' (checked).


The right panel, titled 'Device events MQTT events', contains the following sections:

- Publish:** 'Use default condition prefix' toggle is on. There is a text input for 'Custom condition prefix' which is empty. There are checkboxes for 'Include condition name' (checked), 'Include condition namespaces' (unchecked), and 'Include serial number in payload' (unchecked).
- Event filter list:** Contains two filters:
 - Manual trigger:** Condition is 'Manual trigger', QoS is '0', and Keep is 'None'.
 - Virtual input:** Condition is 'Virtual input', QoS is '0', and Keep is 'None'.
- A '+' button is located below the filter list.
- A 'Save' button is at the bottom right.


Step 4: Listen to MQTT events

Now we are ready to test our setup. With the help of Amazon CloudWatch we can verify if the Axis device can send MQTT messages to the AWS cloud successfully.

First, make sure you have logging enabled. This will then result in the AWS cloud logging connection attempts.

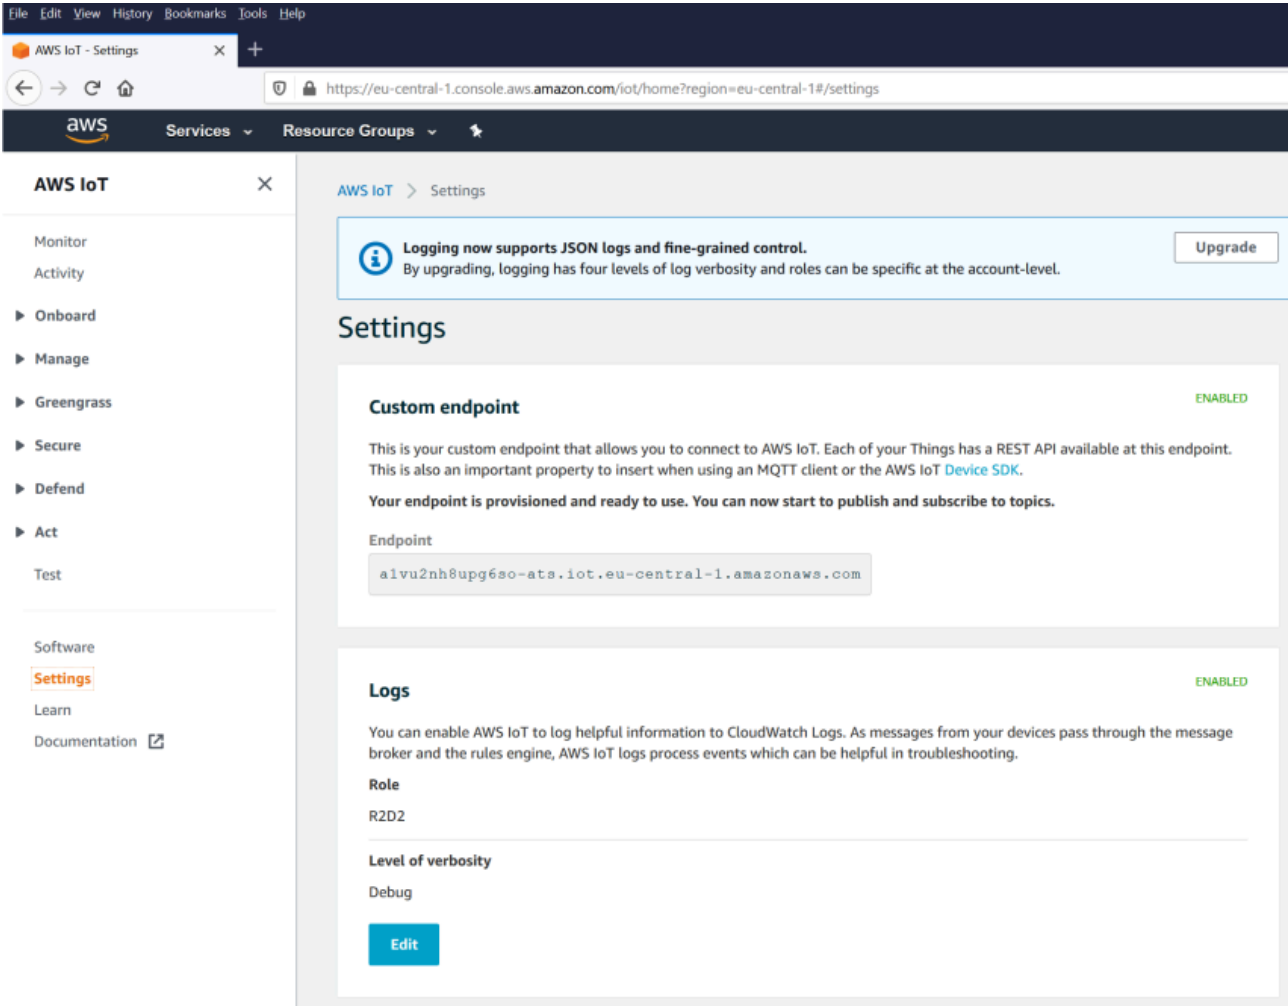

By using the Amazon CloudWatch service, the AWSIoTlogs log group will reveal connection attempts and whether or not MQTT actions such as publishing or subscribing were successful.

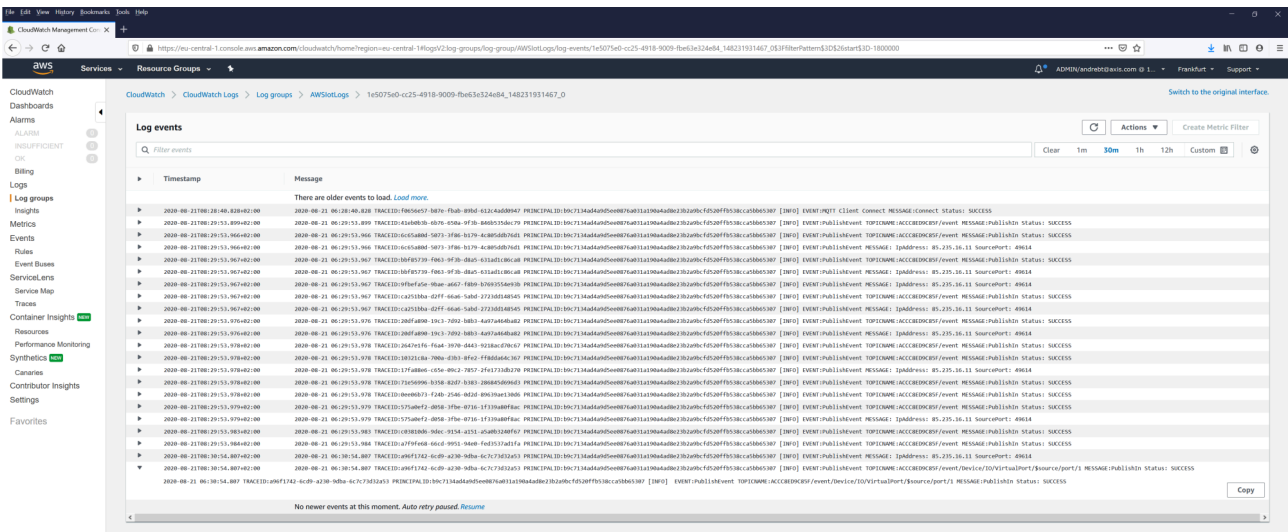

IBM Watson



In this section you can read about the configuration steps required to connect an Axis device to an IBM Watson MQTT broker in order to publish topics. For further reading, go to <https://developer.ibm.com/articles/iot-mqtt-why-good-for-iot/>.




Important


The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Create IoT device

Follow the steps below to create an IoT device.

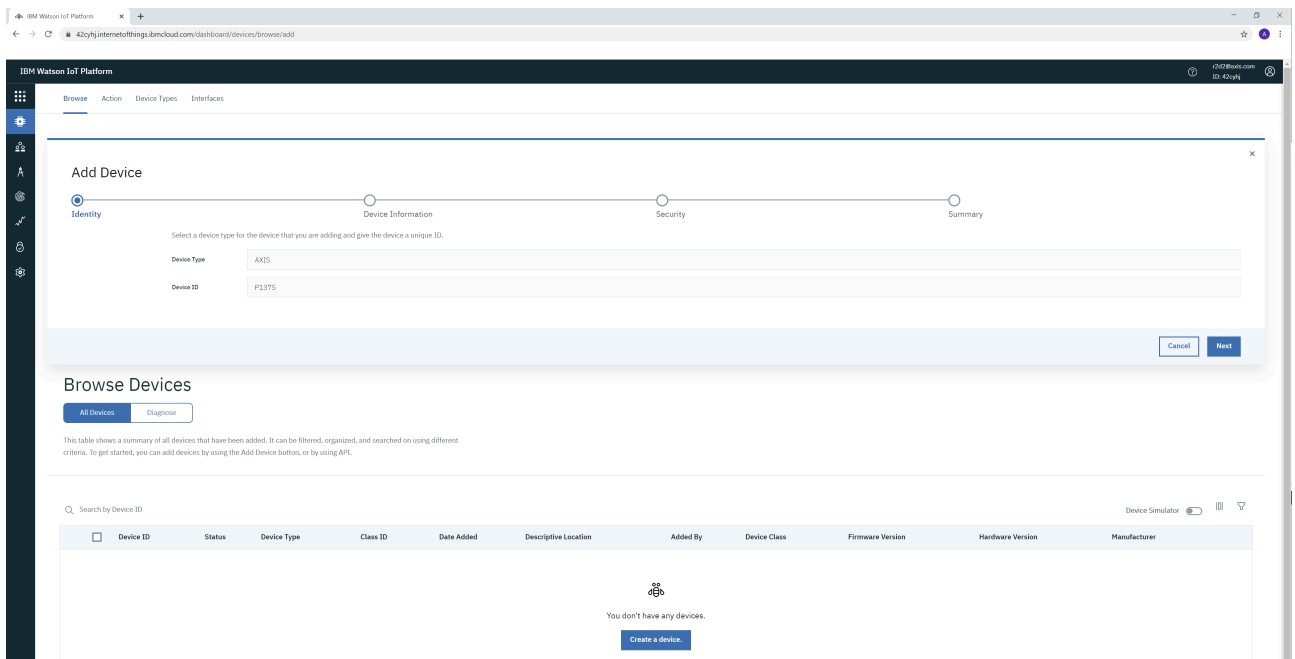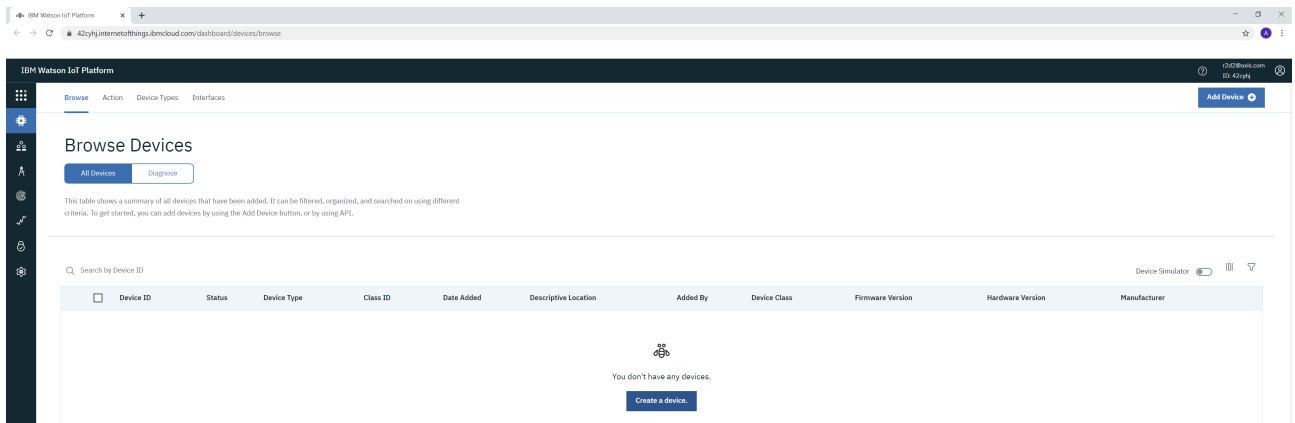

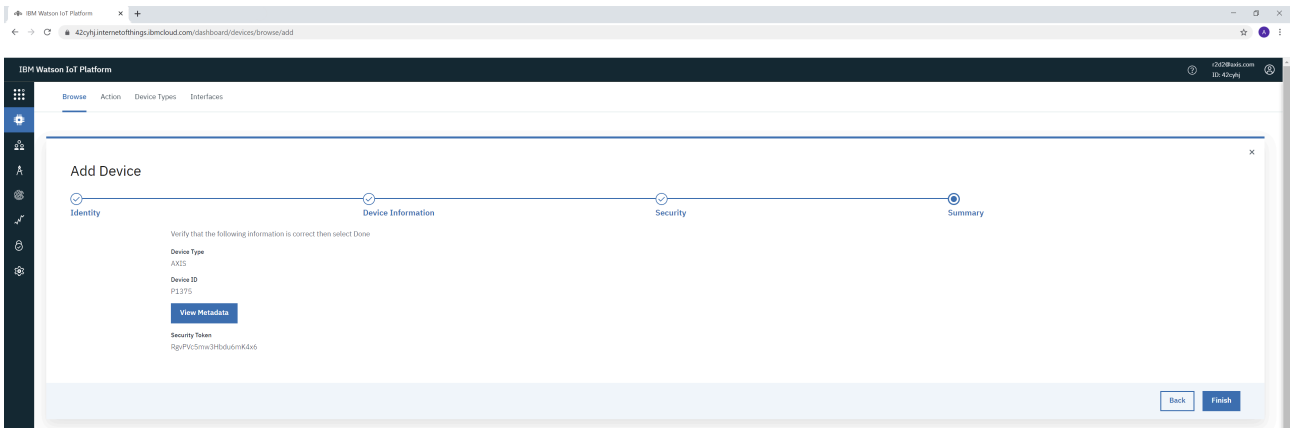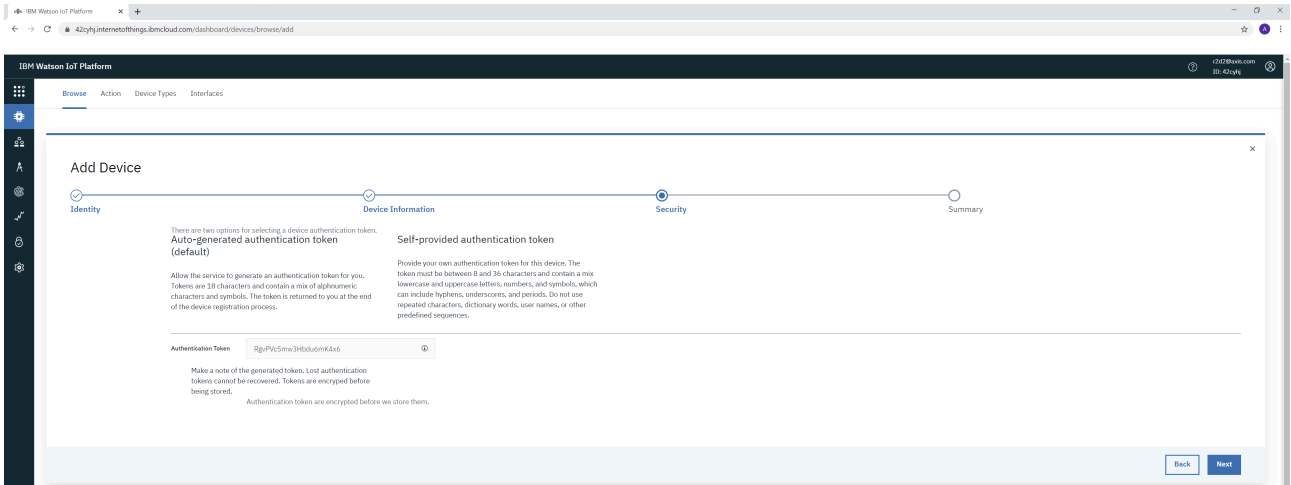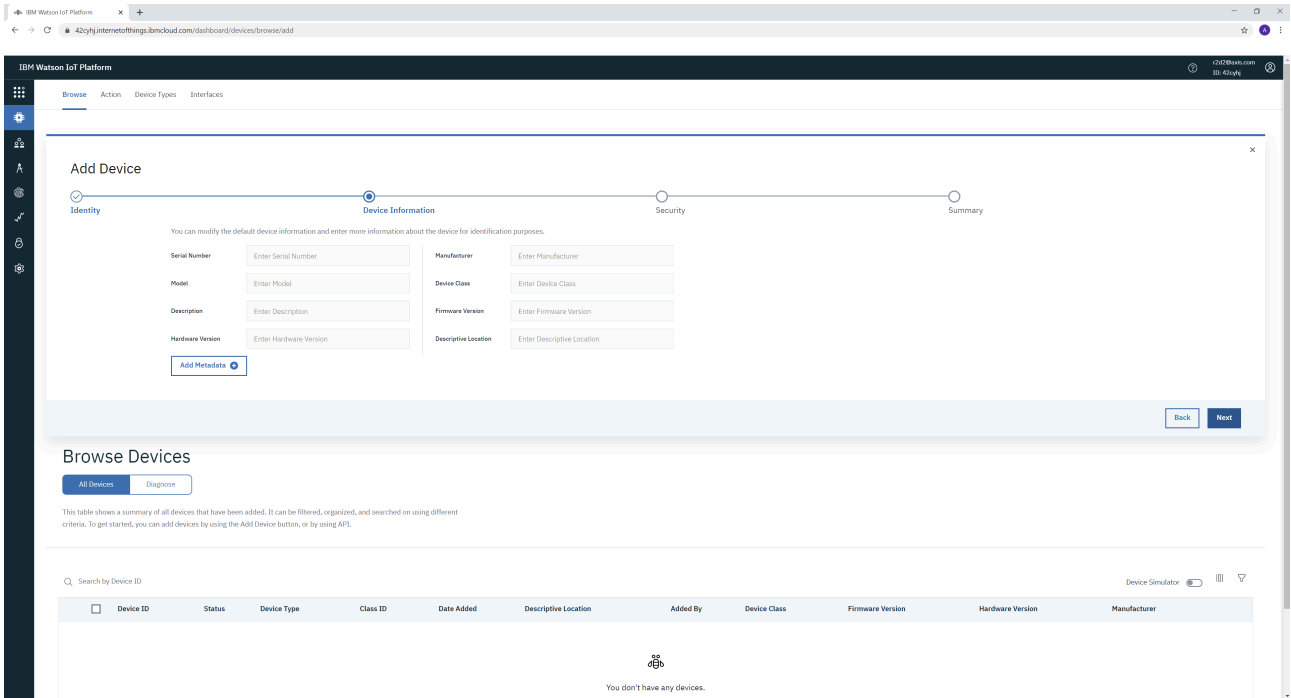

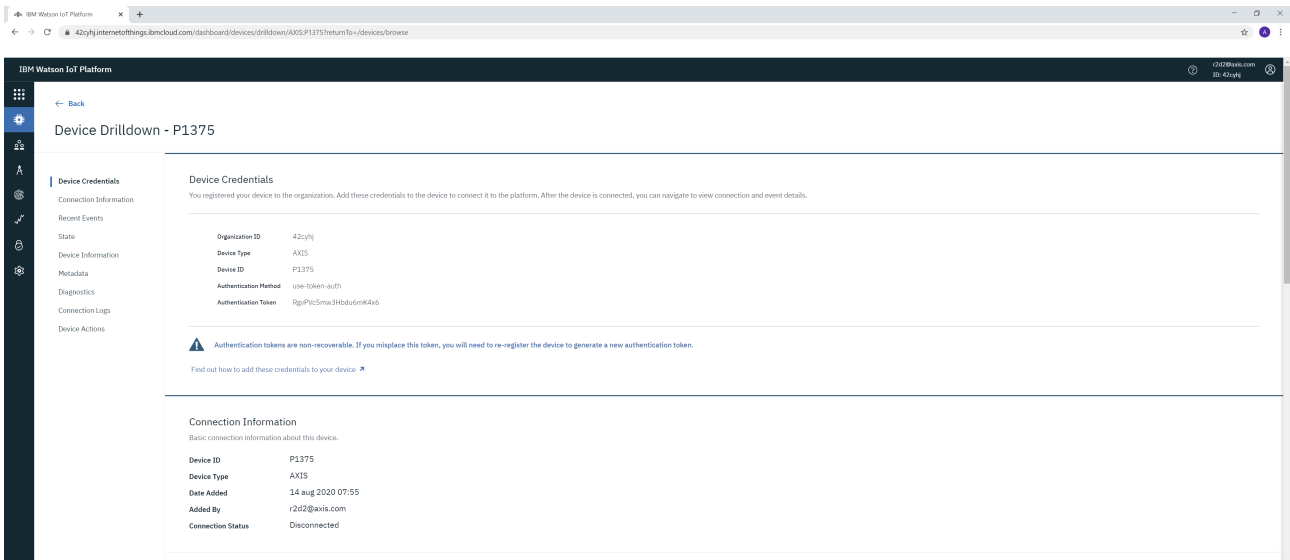

Step 2: Axis device configuration

With the information and settings provided by the IoT device creation in Step 1, we can now connect the Axis device to the IBM MQTT broker. Again, below is a typical example.

Note that the custom condition prefix in the MQTT events and the disabling of the condition name are mandatory for the Axis device to publish messages.

MQTT

Client

Connect

Status: Connected

Server

Host
42cyhj.messaging.internetofthings.ibmcloud.com

Protocol
MQTT over SSL

Validate server certificate

Port
8883

Username
use-token-auth

Password

Policies

Client id
d:42cyhj:AXIS:P1375

Keep alive interval
60

Timeout
60

Reconnect automatically

Clean session

Last will testament

Connect message

Device events
MQTT events

Publish

Use default condition prefix

Custom condition prefix
iot-2/evt/event-id-1/fml/json

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list

Manual trigger

Condition
Manual trigger

QoS
0

Keep
None

Virtual input




Condition
Virtual input


QoS
0

Keep
None


Step 3: Listen to MQTT events

IBM Watson Cloud does not possess a built-in MQTT client for subscribing to events in the cloud. We therefore use MQTT Explorer. In order for MQTT Explorer to connect to the IBM MQTT broker, it is necessary to first generate API keys to allow access. This is described in the following images.

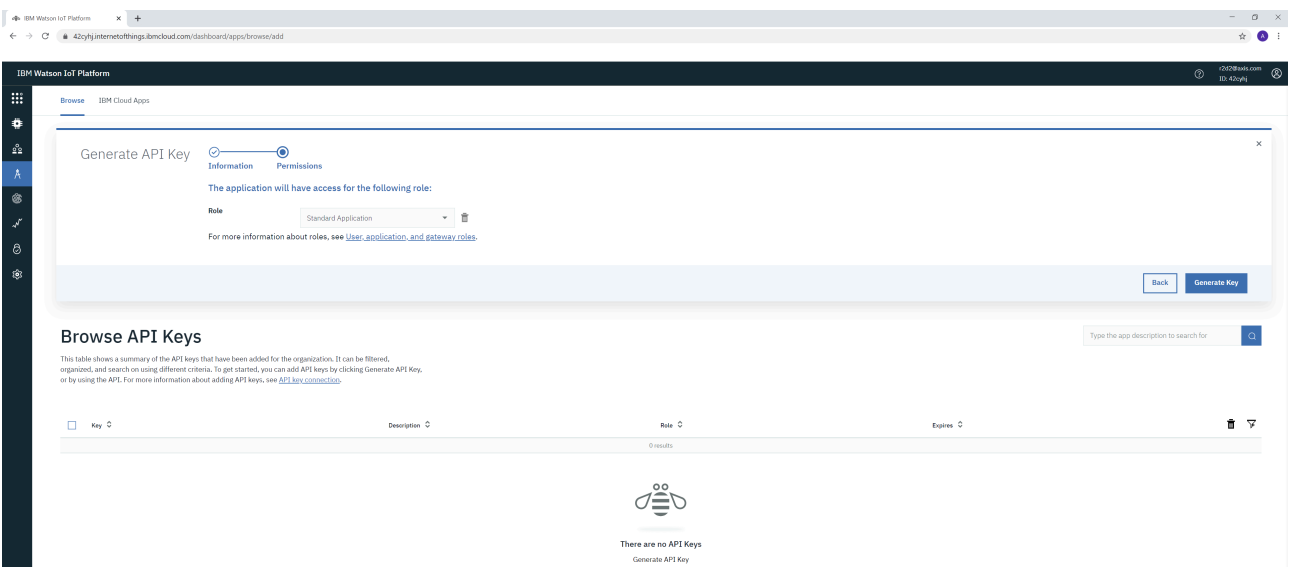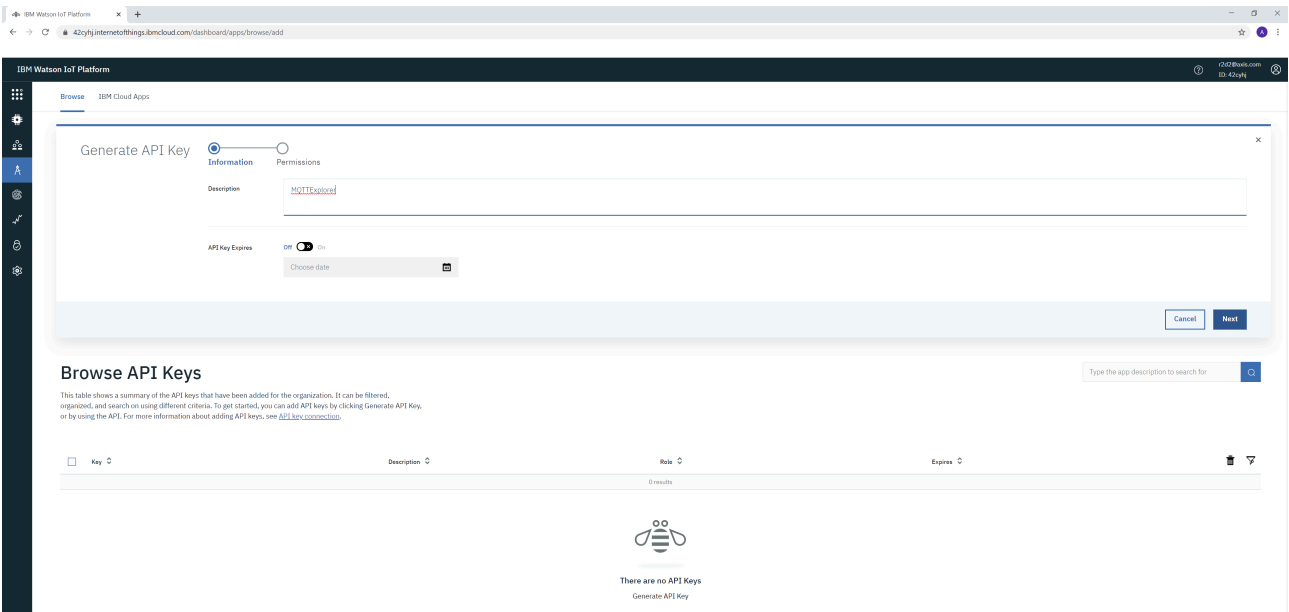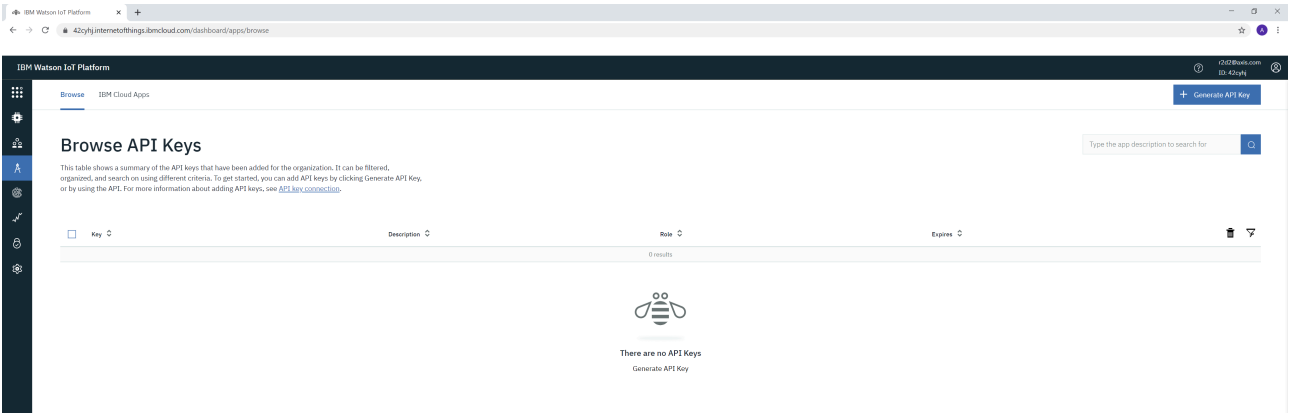


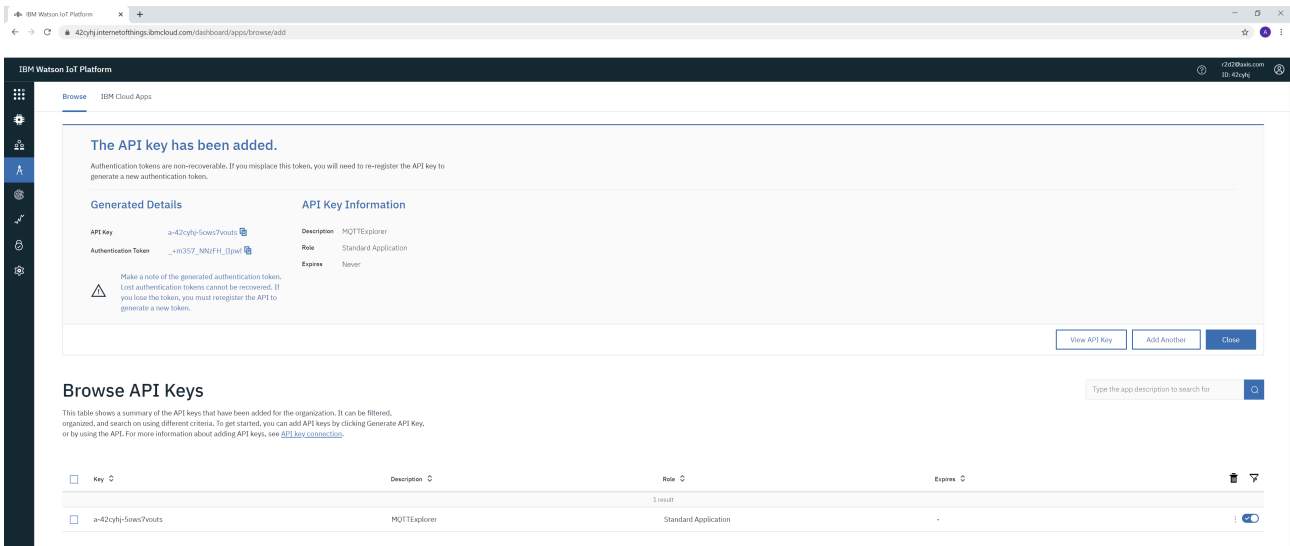

With the newly generated API keys we can connect to the IBM MQTT broker. See example settings below.

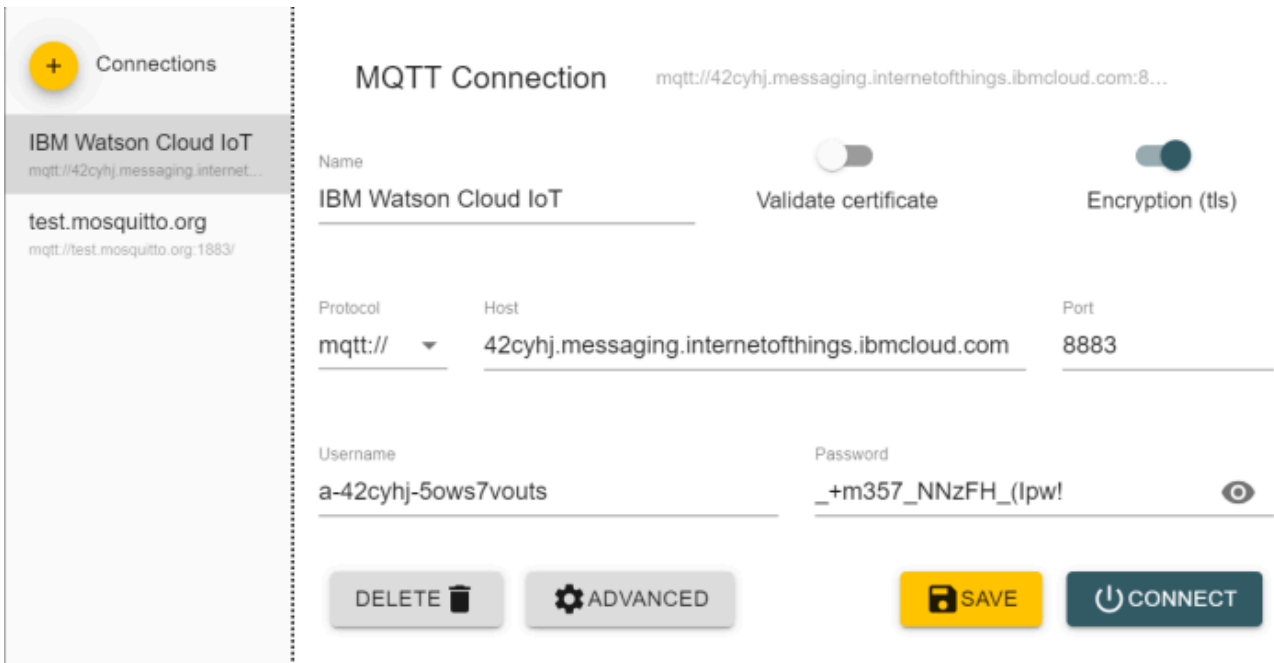

The below subscription topic is mandatory to configure, otherwise no events will be seen. The MQTT client ID must consist of your IBM cloud entity followed by a customizable string (e.g. "mqtt") that a user can define.

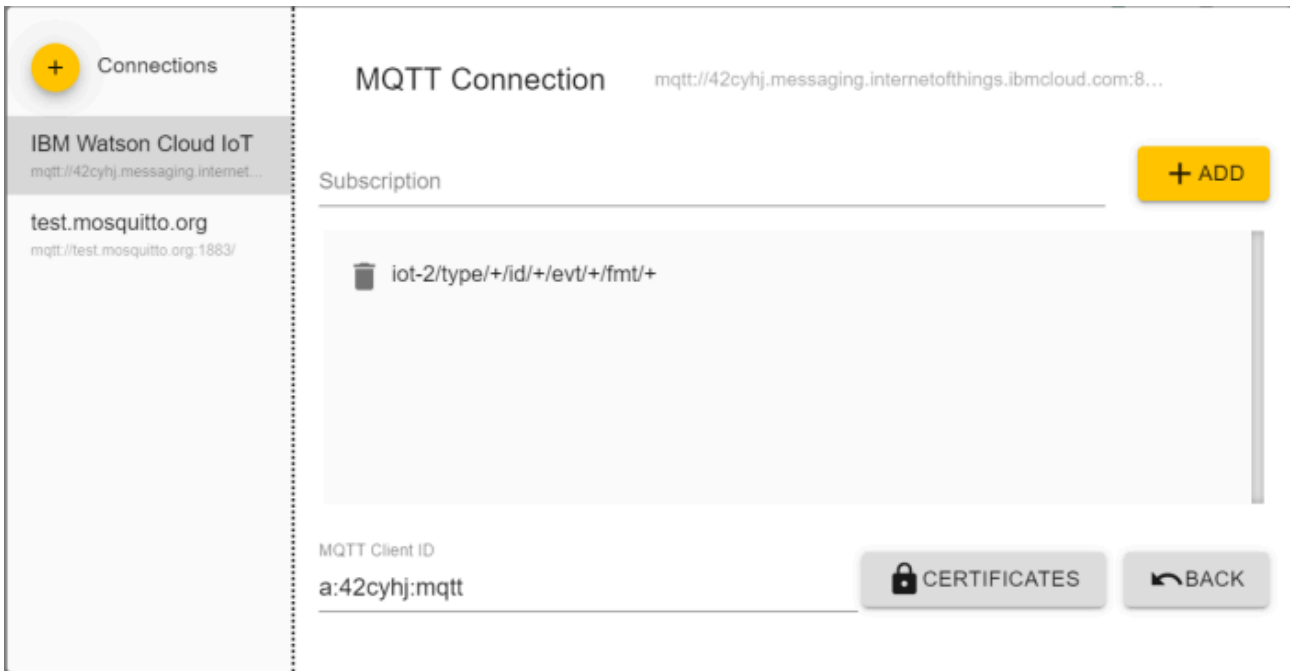

Upon successful connection, events should be sent from the Axis device. The simplest way of testing this is to use the **manual trigger** in the Axis device.



Google Cloud Platform (GCP)



In this section you can read about the configuration steps required to connect an Axis device to a Google Cloud Platform (GCP) MQTT broker in order to publish topics. For further reading, go to <https://cloud.google.com/iot/docs/how-tos/gateways/mqtt-bridge> and <https://cloud.google.com/iot/docs/how-tos/mqtt-bridge>.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Step 1: Pub/Sub configuration

In the first step, we will use Google's Pub/Sub hub. Pub/Sub is used to create topics so that a device can publish its MQTT events to GCP. In addition, one can also subscribe directly to the topics.

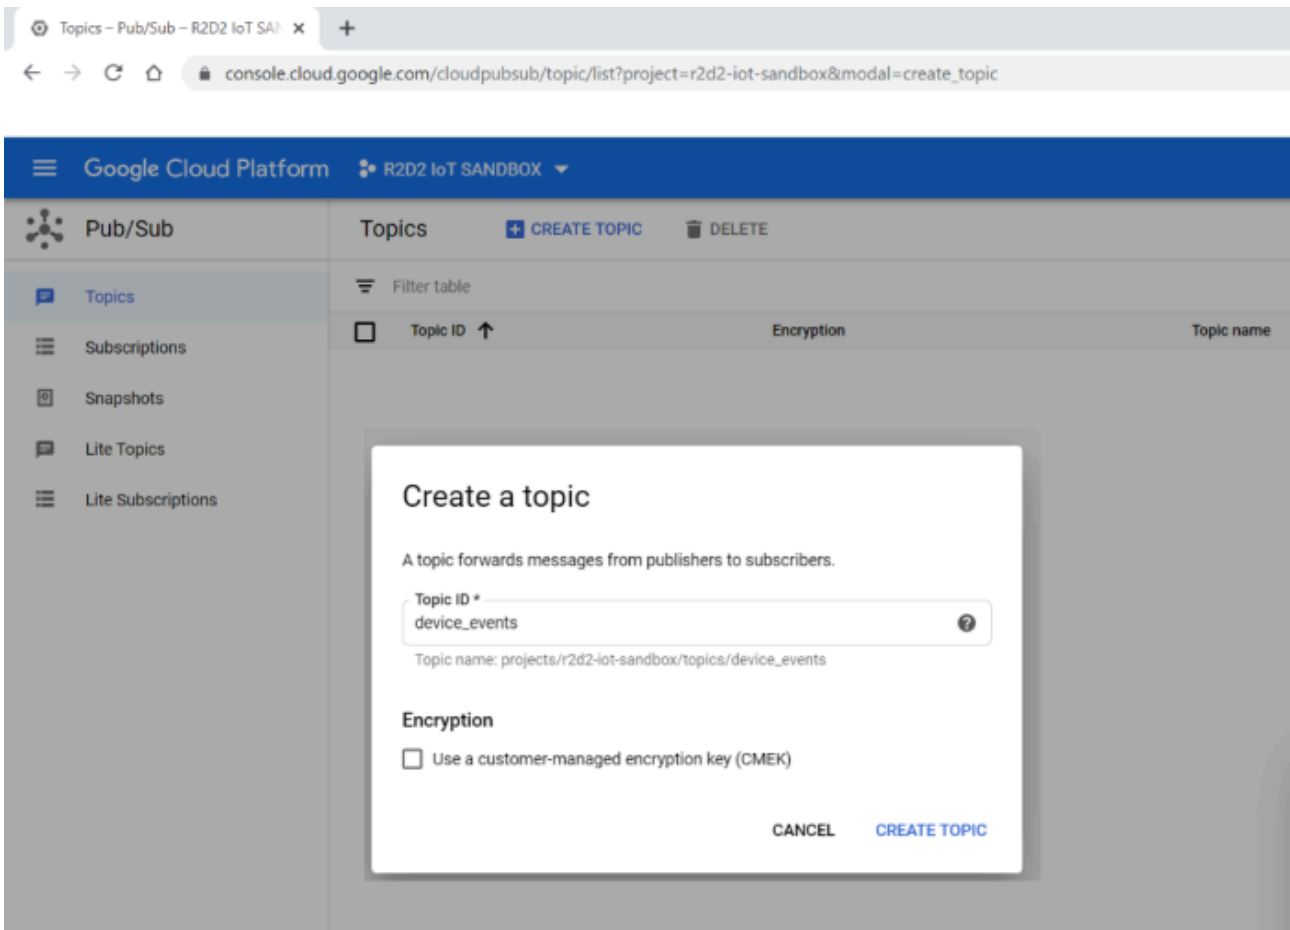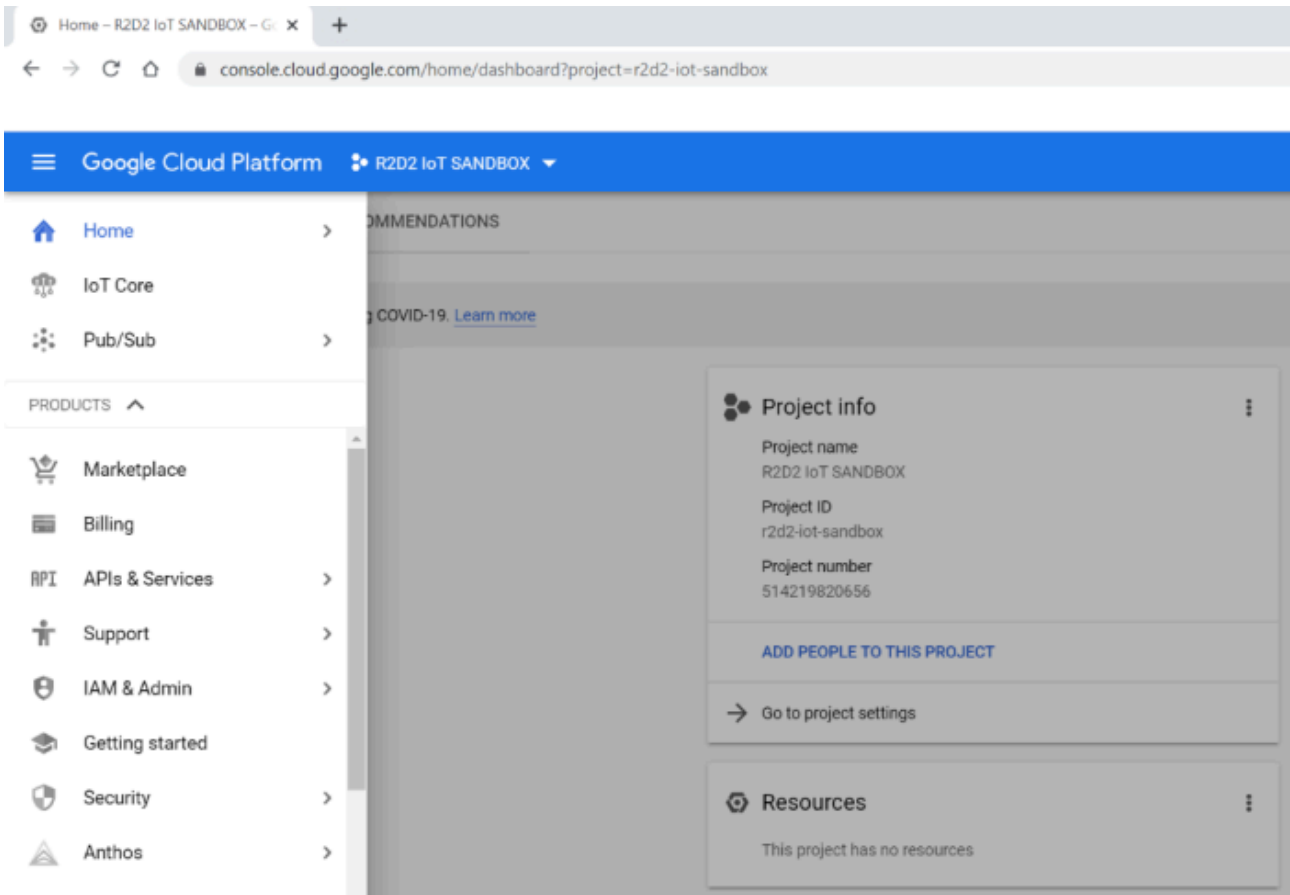

Topics - Pub/Sub - R2D2 IoT SAN x +

console.cloud.google.com/cloudpubsub/topic/list?project=r2d2-iot-sandbox&cloudshell=false

Google Cloud Platform R2D2 IoT SANDBOX Search products and resources

Pub/Sub Topics CREATE TOPIC DELETE

Filter table

Topic ID ↑	Encryption	Topic name
<input type="checkbox"/> device_events	Google-managed	projects/r2d2-iot-sandbox/topics/device_events

Topics

- Subscriptions
- Snapshots
- Lite Topics
- Lite Subscriptions

Subscriptions - Pub/Sub - R2D2 IoT SAN x +

console.cloud.google.com/cloudpubsub/subscription/list?project=r2d2-iot-sandbox

Google Cloud Platform R2D2 IoT SANDBOX

Pub/Sub Subscriptions CREATE SUBSCRIPTION DELETE

Filter table

Subscription ID ↑	Delivery type	Topic name
No subscriptions to display		

Topics

- Subscriptions
- Snapshots
- Lite Topics
- Lite Subscriptions

Create subscription – Pub/Sub – 1 x

console.cloud.google.com/cloudpubsub/subscription/create?project=r2d2-iot-sandbox

Google Cloud Platform R2D2 IoT SANDBOX

Pub/Sub

- Topics
- Subscriptions**
- Snapshots
- Lite Topics
- Lite Subscriptions

← Create subscription

A subscription directs messages on a topic to subscribers. Messages can be pushed to subscribers immediately, or subscribers can pull messages as needed.

Subscription ID *
device_events

Subscription name: projects/r2d2-iot-sandbox/subscriptions/device_events

Select a Cloud Pub/Sub topic *
projects/r2d2-iot-sandbox/topics/device_events

Delivery type

If Pull, subscribers must request delivery. If Push, Pub/Sub delivers messages as soon as they are published.

Pull

Push

The screenshot shows the Google Cloud Platform console interface. At the top, the breadcrumb navigation indicates the path: Pub/Sub > device_events. The main content area is titled 'Subscription details' and contains the following information:

- Subscription name:** projects/r2d2-iot-sandbox/subscriptions/device_events
- Topic name:** projects/r2d2-iot-sandbox/topics/device_events



Below this information is a chart titled 'Unacked message count'. The x-axis represents time, ranging from 6:05 to 6:55 in 5-minute increments. The chart area is currently empty, indicating no unacked messages.

At the bottom, there is a table of configuration parameters for the subscription:

Delivery type	Pull
Subscription expiry	Subscription expires in 31 days if there is no activity.
Acknowledgement deadline	10 Seconds
Subscription filter	—
Message retention duration	7 Days
Retain acknowledged messages	No
Message ordering	Disabled
Dead lettering	Disabled
Retry policy	Retry immediately
Labels	—

Step 2: GCP MQTT bridge configuration

In this step of the configuration we add a registry point so we can add devices that later on can publish topics. We will use the IoT Core tab for the configuration.

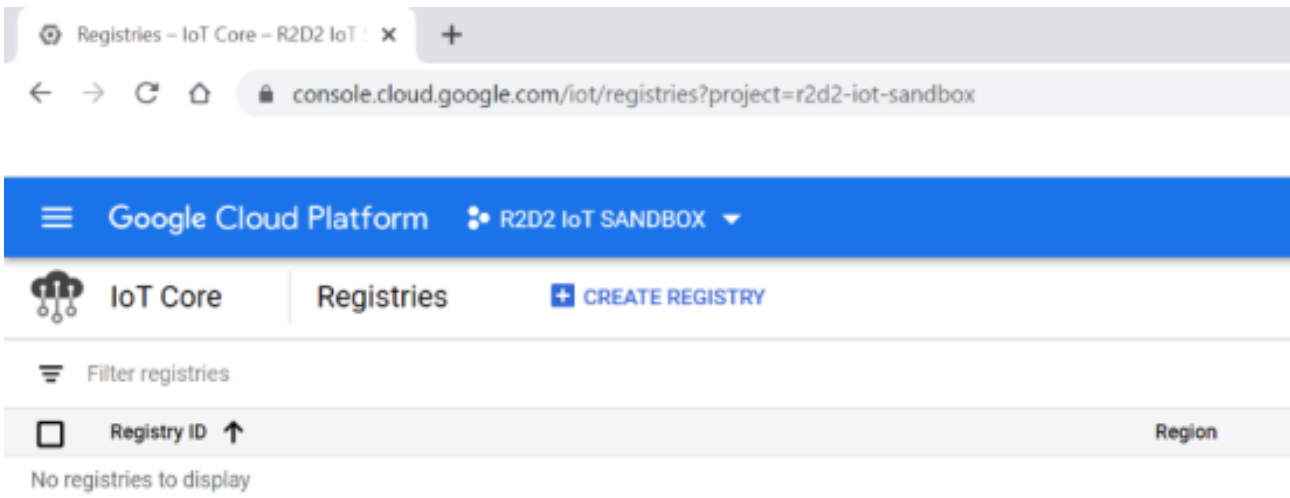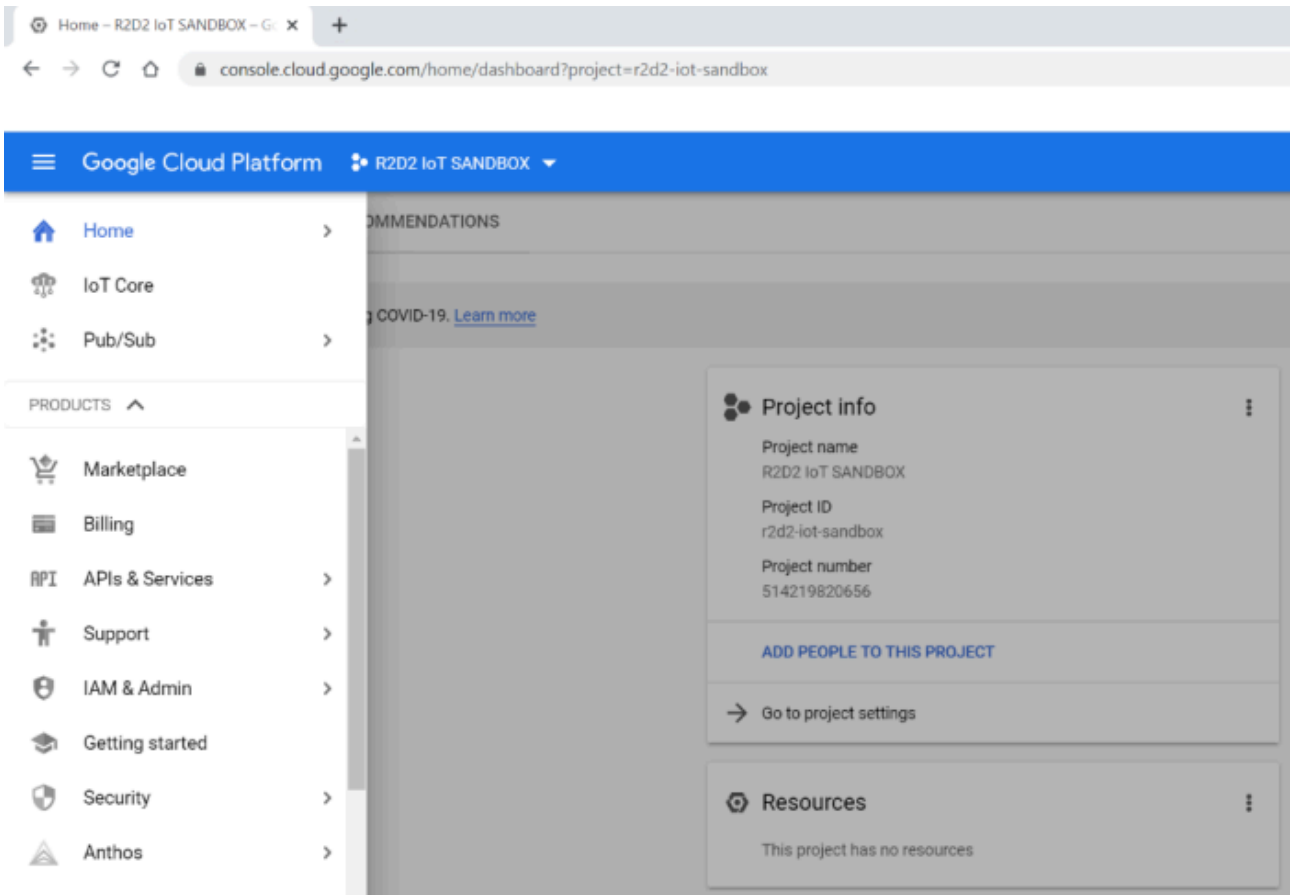

Create a registry – IoT Core – R2D2 x +

← → ↻ 🏠 console.cloud.google.com/iot/registries/new?project=r2d2-iot-sandbox

☰ Google Cloud Platform R2D2 IoT SANDBOX ▾

☁ IoT Core | ← Create a registry

Define how devices in this registry will send data to Cloud IoT Core. After you create your registry, you can start adding devices to it. [Learn more](#)

Registry properties

Registry ID

Permanent identifier for your registry. 3–255 characters. Start with a letter. You can also include numbers and the following characters: + . % - _ ~

Region

Determines where data is stored for devices in this registry. Choice is permanent.

Cloud Pub/Sub topics

Cloud IoT Core routes device messages to Cloud Pub/Sub for aggregation. You can route messages to different topics and subfolders in Cloud Pub/Sub based on the type of data in the messages. [Learn more](#)

Select a Cloud Pub/Sub topic

Device telemetry events will be published to this topic by default.

[+ ADD ADDITIONAL TOPIC](#)

✓ [SHOW ADVANCED OPTIONS](#)

CREATE

CANCEL

The screenshot shows the 'Create a registry' page in the Google Cloud Platform console. The browser address bar shows the URL: console.cloud.google.com/iot/registries/new?project=r2d2-iot-sandbox. The page header includes 'Google Cloud Platform' and 'R2D2 IoT SANDBOX'. The main content area is titled 'IoT Core' and 'Create a registry'. A note states: 'Device telemetry events will be published to this topic by default.' Below this is a button '+ ADD ADDITIONAL TOPIC'. The 'Device state topic (optional)' section explains that device state data will be published to the selected topic on a best-effort basis, as well as to the default MQTT state topic (if your devices use MQTT protocol). A dropdown menu is set to 'projects/r2d2-iot-sandbox/topics/device_events'. The 'Protocols' section allows selecting protocols for devices to connect to Cloud IoT Core. 'MQTT' is checked, and 'HTTP' is unchecked. The 'Cloud Logging' section sets the default logging for all devices in this registry. The 'Debug' option is selected. The 'CA certificate (optional)' section has 'Enter manually' selected. A text input field for the certificate value is present. At the bottom, there are 'CREATE' and 'CANCEL' buttons.

Create a registry – IoT Core – R2D2 x +

console.cloud.google.com/iot/registries/new?project=r2d2-iot-sandbox

Google Cloud Platform R2D2 IoT SANDBOX

IoT Core Create a registry

projects/r2d2-iot-sandbox/topics/device_events

Device telemetry events will be published to this topic by default.

+ ADD ADDITIONAL TOPIC

Device state topic (optional)

Device state data will be published to your selected topic on a best-effort basis, as well as to the default MQTT state topic (if your devices use MQTT protocol). [Learn more](#)

Select a Cloud Pub/Sub topic

projects/r2d2-iot-sandbox/topics/device_events

Protocols

Select the protocols that your devices will use to connect to Cloud IoT Core. [Learn more](#)

MQTT

HTTP

Cloud Logging

Set the default logging for all devices in this registry. You can apply a different setting or debug at the device level. [Learn more](#)

Disabled
No device data stored.

Error
Captures device errors, such as failed connection attempts and failed publishes. Does not include authentication errors.

Info
MQTT only. Captures device errors (except authentication errors) and includes all lifecycle events, such as device connections and disconnections.

Debug
Captures all device activity in a highly verbose log statement. Recommended for device troubleshooting.

CA certificate (optional)

Input method

Enter manually


Upload

Certificate value

You can add more certificates after you've created this registry.

[HIDE ADVANCED OPTIONS](#)

CREATE CANCEL

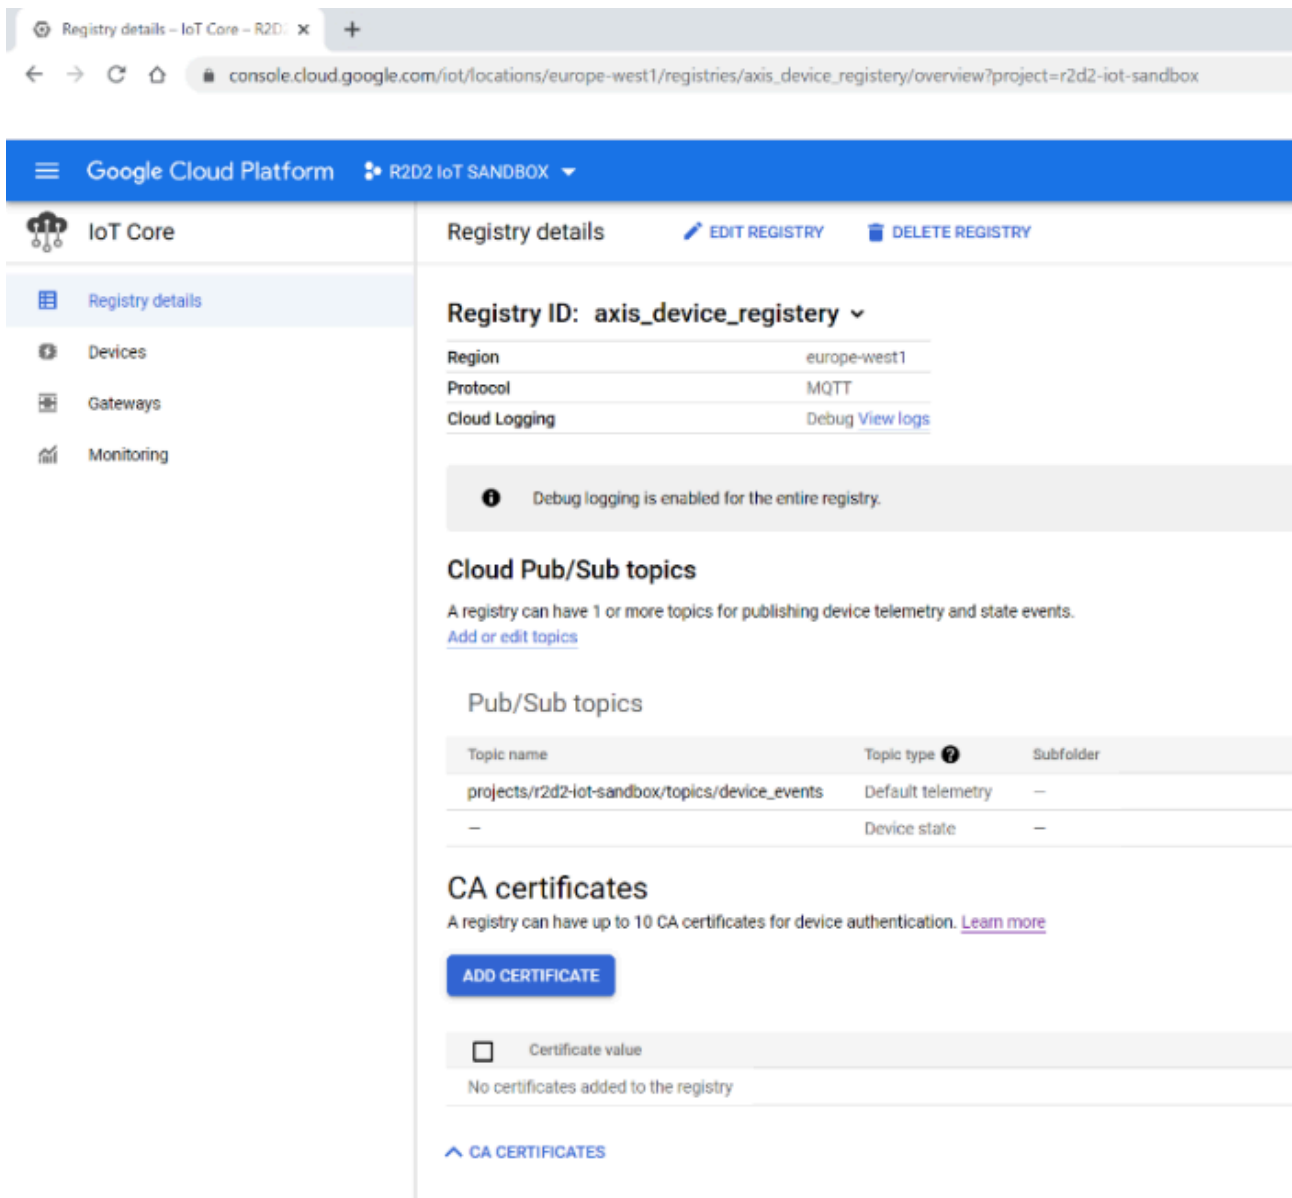

Step 3: GCP device configuration

After creating the registry point, we can now bind devices to it. The devices will then be able to publish topics.

The screenshot shows the Google Cloud Platform console for IoT Core. The browser address bar displays the URL: `console.cloud.google.com/iot/locations/europe-west1/registries/axis_device_registry/devices?project=r2d2-iot-sandbox`. The page header includes "Google Cloud Platform" and "R2D2 IoT SANDBOX". The left sidebar contains navigation options: "IoT Core", "Registry details", "Devices" (selected), "Gateways", and "Monitoring". The main content area is titled "Devices" and includes a "CREATE A DEVICE" button and a "DELETE" button. Below this, the "Registry ID: axis_device_registry" is shown, along with the location "europe-west1". A descriptive text states: "Devices are things that connect to the Internet directly or through a gateway. [Learn more](#)". There is a search bar labeled "Enter exact device ID" and a "Device ID" input field. The main content area displays the message "No devices to display in this registry" and a link to "Cloud IoT Core documentation".

Create a device - IoT Core - R2D2 x +

console.cloud.google.com/iot/locations/europe-west1/registries/axis_device_registry/devices/new?project=r2d2-iot-sandbox

Google Cloud Platform R2D2 IoT SANDBOX

IoT Core

- Registry details
- Devices
- Gateways
- Monitoring

← Create a device

Device ID
ACCC8E68CB0A

Enter a permanent ID that starts with a lowercase letter. Must end in a letter or number.
You can also include the following characters: + . % - _ ~


Device metadata (optional)

You can set custom metadata, such as manufacturer, location, etc. for the device. These can be used to query devices in this registry. [Learn more](#)

+ ADD ATTRIBUTE

✓ COMMUNICATION, CLOUD LOGGING, AUTHENTICATION

CREATE CANCEL

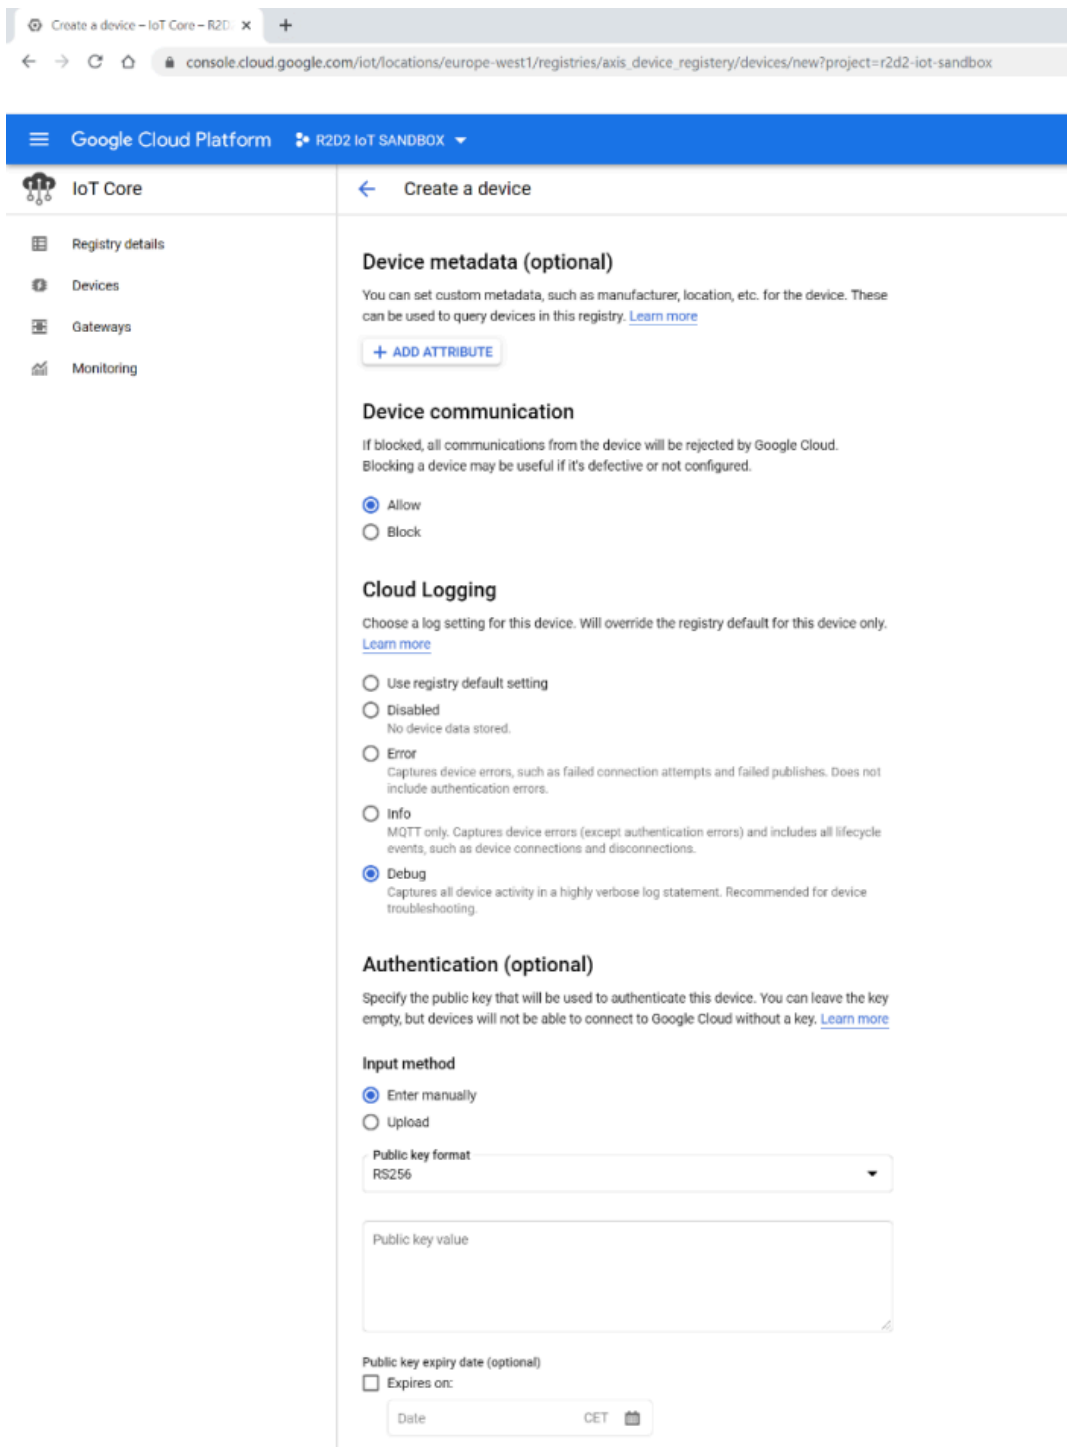

In order to authenticate a device in GCP, a JWT token needs to be used as password for each device, and GCP also needs to bind the public key to decrypt the traffic and authenticate the device correctly.

About the JWT token

The JWT token is generated at a later stage using the public and private key.

About the device public key

In order to create a device in GCP, a public key is needed to authenticate and decrypt traffic from the device. For a test environment, public and private keypairs can be generated in the GCP console directly.

```
openssl genpkey -algorithm RSA -out rsa_private.pem -pkeyopt rsa_keygen_bits:2048
openssl rsa -in rsa_private.pem -pubout -out rsa_public.pem
```

Read out the public and private key from the GCP console editor. Use the public key directly to create the device. The public key and the private key is also used later on to sign the JWT token.

The screenshot displays the Google Cloud Platform console interface for creating a new IoT device. The browser address bar shows the URL: `console.cloud.google.com/iot/locations/europe-west1/registries/axis_device_registry/devices/new?project=r2d2-iot-sandbox&clouds`. The console header indicates the project is 'R2D2 IoT SANDBOX'.

IoT Core sidebar options:

- Registry details
- Devices
- Gateways
- Monitoring

Create a device main content:

Choose a log setting for this device. Will override the registry default for this device only. [Learn more](#)

- Use registry default setting
- Disabled
No device data stored.
- Error
Captures device errors, such as failed connection attempts and failed publishes. Does not include authentication errors.
- Info
MQTT only. Captures device errors (except authentication errors) and includes all lifecycle events, such as device connections and disconnections.
- Debug**
Captures all device activity in a highly verbose log statement. Recommended for device troubleshooting.

Authentication (optional)

Specify the public key that will be used to authenticate this device. You can leave the key empty, but devices will not be able to connect to Google Cloud without a key. [Learn more](#)

Input method

- Enter manually
- Upload

Public key format: `RS256`

Public key value: [Empty text area]

Public key expiry date (optional)

- Expires on: [Date picker]

COMMUNICATION, CLOUD LOGGING, AUTHENTICATION

CREATE **CANCEL**

CLOUD SHELL

Terminal `(r2d2-iot-sandbox)`

```
Welcome to Cloud Shell! Type "help" to get started.
Your Cloud Platform project in this session is set to r2d2-iot-sandbox.
Use "gcloud config set project [PROJECT_ID]" to change to a different project.
andrebt@cloudshell:~ (r2d2-iot-sandbox)$ openssl genpkey -algorithm RSA -out rsa_private.pem -pkeyopt rsa_keygen_bits:2048
.....+++++
.....+++++
andrebt@cloudshell:~ (r2d2-iot-sandbox)$ openssl rsa -in rsa_private.pem -pubout -out rsa_public.pem
writing RSA key
andrebt@cloudshell:~ (r2d2-iot-sandbox)$
```

The image shows two parts of a web interface. The top part is the Google Cloud Platform IoT Core console, and the bottom part is a Cloud Shell editor.

IoT Core Console - Create a device

Choose a log setting for this device. Will override the registry default for this device only. [Learn more](#)

- Use registry default setting
- Disabled
No device data stored.
- Error
Captures device errors, such as failed connection attempts and failed publishes. Does not include authentication errors.
- Info
MQTT only. Captures device errors (except authentication errors) and includes all lifecycle events, such as device connections and disconnections.
- Debug**
Captures all device activity in a highly verbose log statement. Recommended for device troubleshooting.

Authentication (optional)

Specify the public key that will be used to authenticate this device. You can leave the key empty, but devices will not be able to connect to Google Cloud without a key. [Learn more](#)

Input method

- Enter manually
- Upload

Public key format: RS256

Public key value: -----BEGIN PUBLIC KEY-----
MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEAsODQCC+jL11VvmzVEes
rBVE42e4qso9Bfsb01L3Wbq5VxaseqjY8g/eugVluQwM3gPZ6lpay8xztggSa
u7+CVsuuqQwoNECLpBSpZiGDxBMmHfZ1mvelpbt9EJeqIU6YakPGwHevSvnc
q/GP1N2SUSIXPGVrBgLeadborTzp+lvj+rNF57aehButCDzDx92D7kVPkZuxyGjC
6peWLenrLeahDOZHRALDnN95bMeAFYcz9abW0nFg3sp1XSabcB+BqOUKjsnYAbp
7k4b+Uc1eCe/o5UOT/K7PluDS6y6guW/Xb0IznYOTVhrTh46ixhff5fg2Gkrvtvzyz
8hQIDAQAB
9-----END PUBLIC KEY-----

Public key expiry date (optional)
 Expires on: Date CET

^ COMMUNICATION, CLOUD LOGGING, AUTHENTICATION

CREATE **CANCEL**


CLOUD SHELL Editor (Built with Eclipse Theia)

EXPLORER: ANDREBT

- README-cloudshell.txt
- rsa_private.pem
- rsa_public.pem

```

1  -----BEGIN PUBLIC KEY-----
2  MIIBIjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEAsODQCC+jL11VvmzVEes
3  rBVE42e4qso9Bfsb01L3Wbq5VxaseqjY8g/eugVluQwM3gPZ6lpay8xztggSa
4  u7+CVsuuqQwoNECLpBSpZiGDxBMmHfZ1mvelpbt9EJeqIU6YakPGwHevSvnc
5  q/GP1N2SUSIXPGVrBgLeadborTzp+lvj+rNF57aehButCDzDx92D7kVPkZuxyGjC
6  6peWLenrLeahDOZHRALDnN95bMeAFYcz9abW0nFg3sp1XSabcB+BqOUKjsnYAbp
7  7k4b+Uc1eCe/o5UOT/K7PluDS6y6guW/Xb0IznYOTVhrTh46ixhff5fg2Gkrvtvzyz
8  8hQIDAQAB
9  -----END PUBLIC KEY-----
    
```

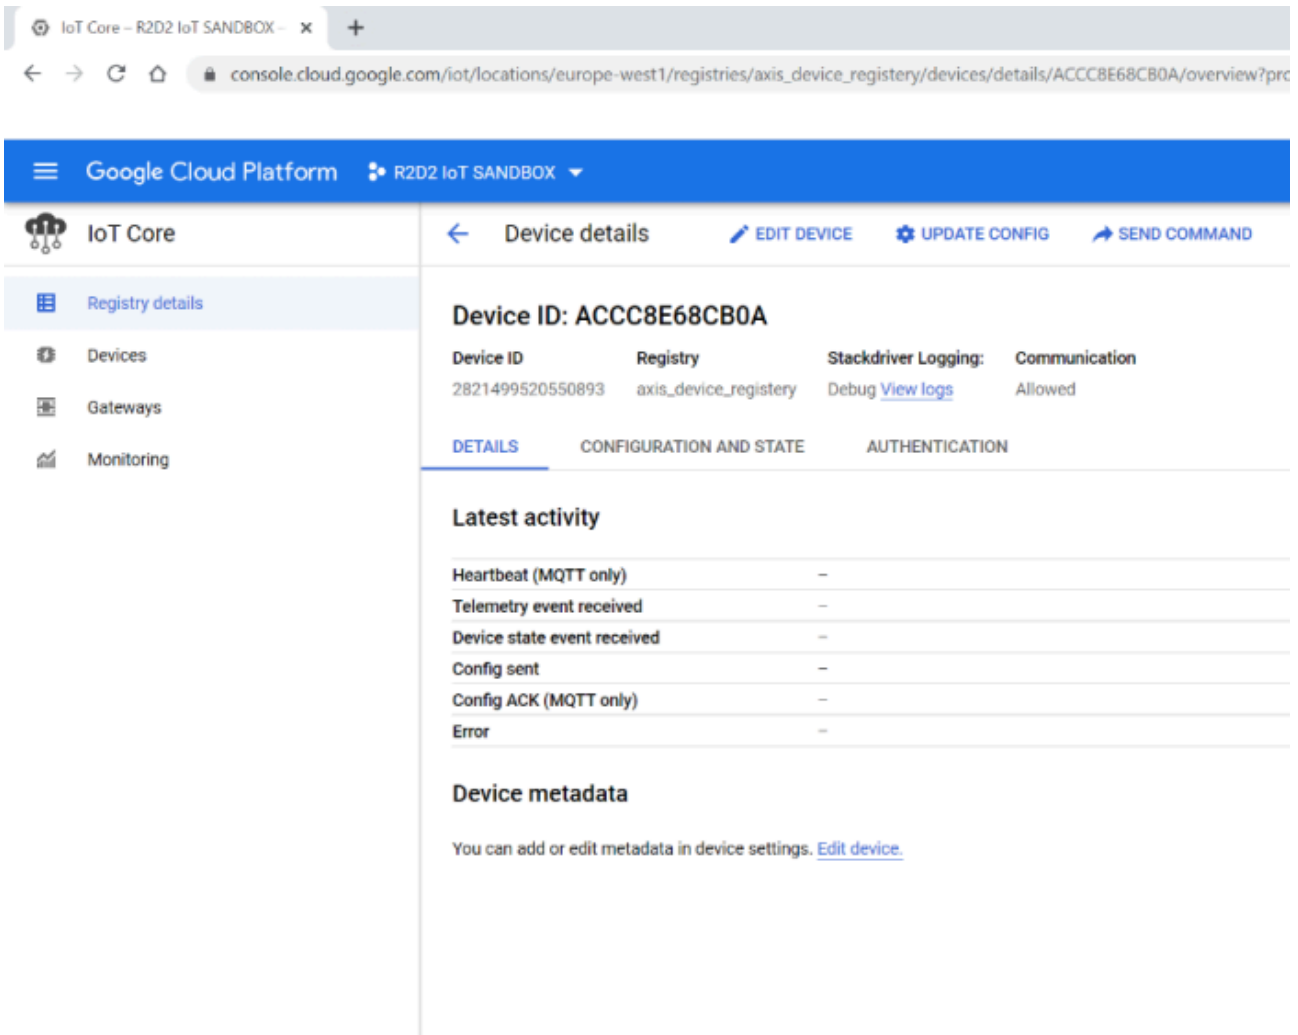


Step 4: JWT token claim

Google Cloud Platform uses JWT token-based authentication. To exemplify, we have used an *online tool* to generate the JWT token. Note that this is not recommended in a production environment.

The JWT token itself needs the **aud** (audience), **iat** (issued-at) and **exp** (expiration) fields to be available in the JWT token. The **iat** and **exp** fields are defined as unix timestamps. These can be used e.g. using this *tool*. The **aud** field is defined by the project ID in Google Cloud Platform. When you are done with **aud**, **iat** and **exp**, paste the public and private keypair into the JWT claim in order to export the JWT token as a password for the Axis device.

Important: Google Cloud Platform will reject any authentication attempts with a JWT token that has a longer duration than 24 hours in total.

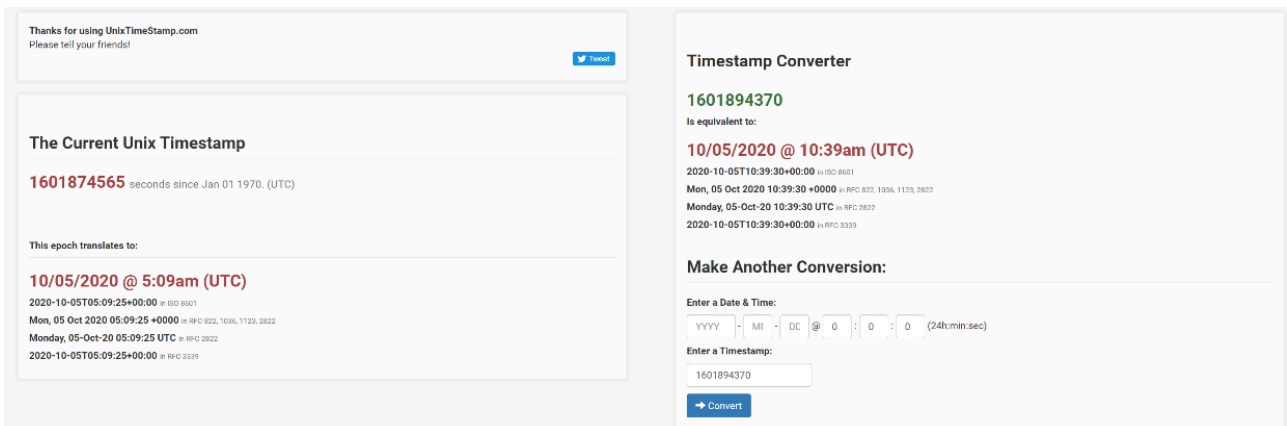

Debugger

Warning: JWTs are credentials, which can grant access to resources. Be careful where you paste them! We do not record tokens, all validation and debugging is done on the client side.

Algorithm

Encoded PASTE A TOKEN HERE

Decoded EDIT THE PAYLOAD AND SECRET

HEADER: ALGORITHM & TOKEN TYPE
<pre>{ "alg": "RS256", "typ": "JWT" }</pre>
PAYLOAD: DATA
<pre>{ "aud": "r2d2-1ot-sandbox", "exp": 1601894378, "iat": 1601874565 }</pre>
VERIFY SIGNATURE
<pre>RSASHA256(base64UrlEncode(header) + "." + base64UrlEncode(payload),</pre> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px;"><p>Public Key or Certificate. Enter it in plain text only if you want to verify a token</p></div> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px;"><p>Private Key. Enter it in plain text only if you want to generate a new token. The key never leaves your browser.</p></div> <pre>)</pre>

Debugger

Warning: JWTs are credentials, which can grant access to resources. Be careful where you paste them! We do not record tokens, all validation and debugging is done on the client side.

Algorithm

Encoded PASTE A TOKEN HERE

```
eyJhbGciOiJSUzI1NiIsInR5cCI6IkpXVCJ9.eyJhdWQiOiJyMmQyLWlvdC1zYW5kYm94IiwiaXNjaW50IjoxNjV9.H8q8Ngz9IFJWKDMjx2ruyxORV4j2EV2FXKGRsGcKmFcBsw_zkNR8u4cY7pjmZ9Ex7kEQzfdSDv1j5-EbAS9atB0WCnQCEFMLi0EiC_wo9oGn8jZFzgM8Vxq2m6UGT6zR-8kdZN2E5Vsp36FwoQkA8GMKZ3Dnwma26gtiqmVntokI6AnKEfInpQNthu5Pjr1da1E0VvGFjKhosKjw5S-c_HWNZ0yyQ0cFGiQrED5NonxsyMbhzx-Di2JzNR7yw-juBhP8Rt-Y1v1izJIpz0nJT2sheXIY2zq2HhRzpUauvpRNN6J1T0Cn7Rp7NaEp93C_mHoH01ByzcCgEq1bgJXYA
```

Decoded EDIT THE PAYLOAD AND SECRET

HEADER: ALGORITHM & TOKEN TYPE

```
{
  "alg": "RS256",
  "typ": "JWT"
}
```

PAYLOAD: DATA

```
{
  "aud": "r2d2-iot-sandbox",
  "exp": 1601894370,
  "iat": 1601874565
}
```

VERIFY SIGNATURE

```
RSASHA256(
  base64UrlEncode(header) + "." +
  base64UrlEncode(payload),
  uW/Xb0iZnY0TVHrTh46ixMhfsfG2
  Gkrtvzyz
  m0TDAQAB
  -----END PUBLIC KEY-----

  Y1b5HAjBpkVBvmfTbvEALnkwsaSB
  oQoQKEtxuWDBFwJfajHxHmVnGCcK
  nVV0dN10
  hotNqI/3RKLYdaeggGZy6fZ5
  -----END PRIVATE KEY-----
)
```

Step 5: Axis device configuration

Below is the actual Axis device configuration for MQTT. Observe the settings required for a successful connection. The username is ignored/not respected in GCP. The client ID uses the following naming convention format, and the parts marked in bold are individual to your configuration illustrated previously:

projects/r2d2-iot-sandbox/locations/europe-west1/registries/axis_device_registry/devices/**ACCC8E68CBOA**

The password is the JWT token that has been generated previously. The custom condition prefix for event publication uses the following convention and depends on your previously made configuration:

/devices/**ACCC8E68CBOA**/events

MQTT

Client

Connect

Status: Connected

Server

Host
mqtt.googleapis.com

Protocol
MQTT over SSL

Validate server certificate

Port
8883

Username
ignored

Password
.....

Policies

Client id
projects/r2d2-iot-sandbox/locations/europe-west1/registrie

Keep alive interval
45

Timeout
45

Reconnect automatically

Clean session

Last will testament

Connect message

Device events MQTT events

Publish

Use default condition prefix

Custom condition prefix
/devices/ACCC8E68CB0A/events

Include condition name

Include condition namespaces

Include serial number in payload

Event filter list



Manual trigger

+

Step 6: listen to MQTT events

Google Cloud Platform has its own tools to listen to incoming MQTT events from devices either using the Pub/ Sub hub or the GCP console directly by using the command below. Again, the part marked in bold is depending on your previous configuration.

```
gcloud pubsub subscriptions pull device_events
```

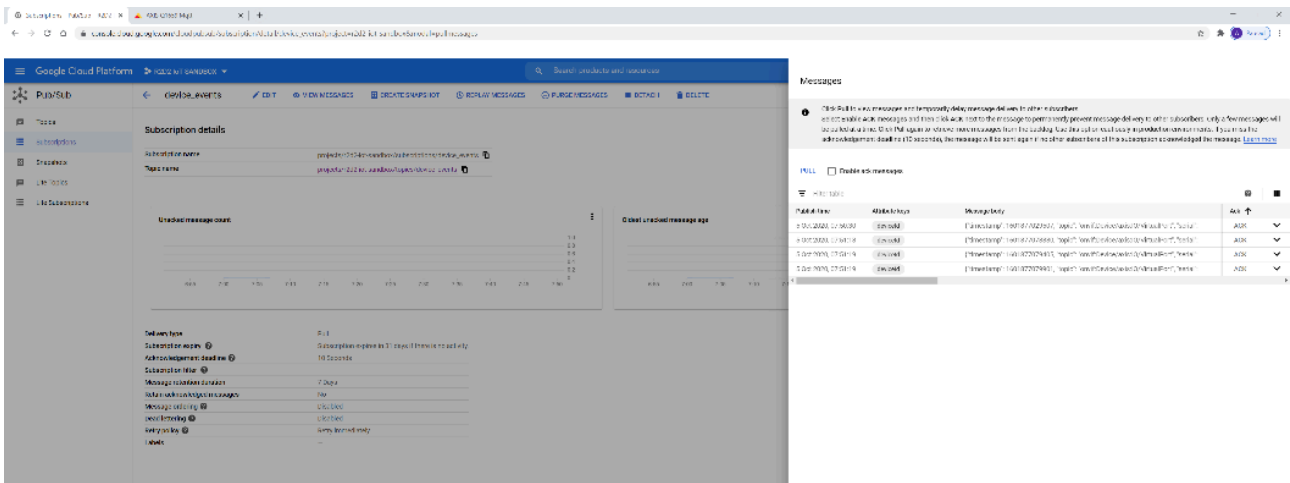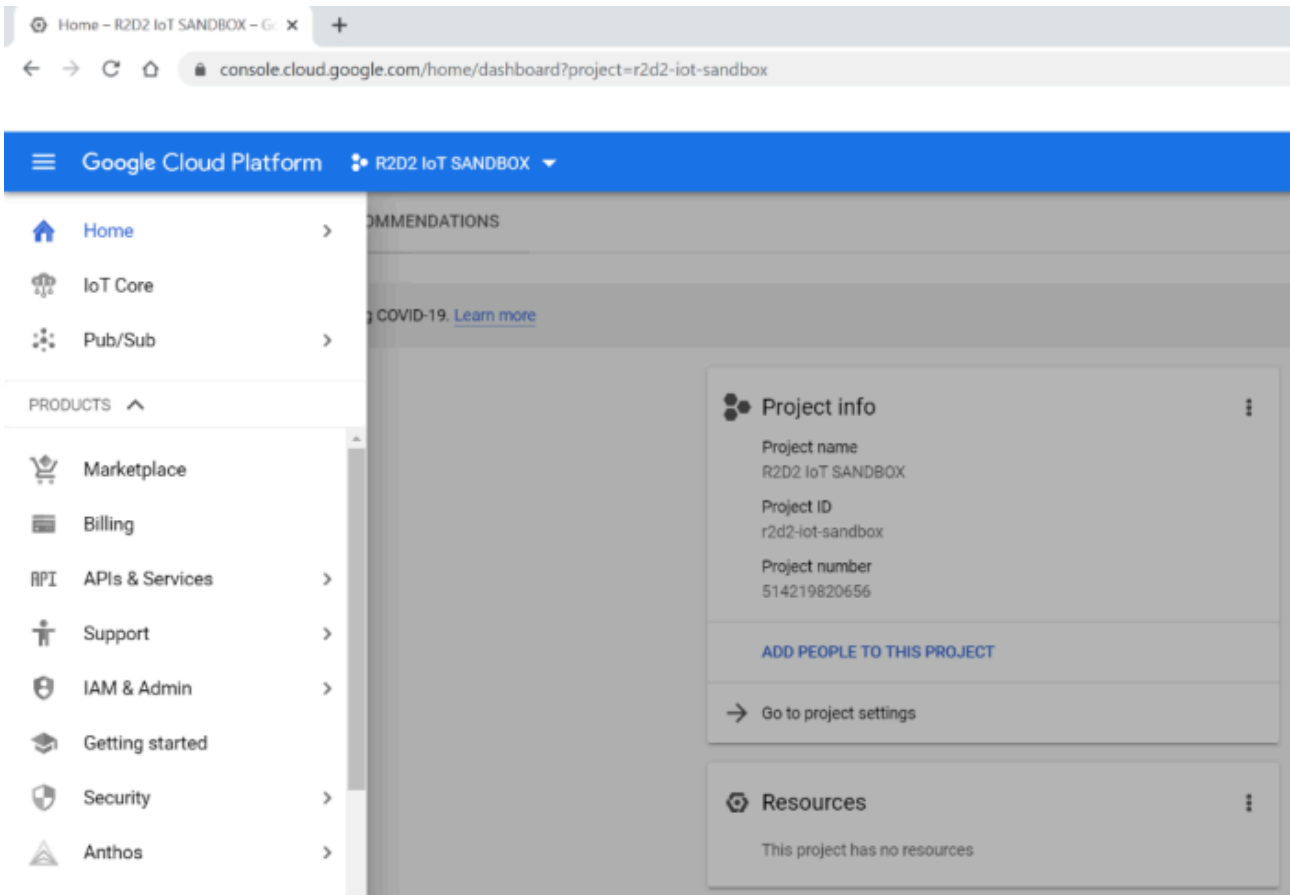


- Axis devices integrate seamlessly into IT-infrastructure supported secure Identity and Access Management (IAM).
- HTTP(S) web-interface access and tunneled video streaming is supported.
- IT enforced IAM security policies, traceability, and security audit logging.

Limitations


The following limitations/considerations need to be taken into account when the Axis device is operated in OAuth 2.0 mode:

- The Video or Device Management System that is connecting to the Axis device also needs to support OAuth 2.0 to interact with the Axis device. Contact your third-party Video and Device Management System vendor for further information.
- Video Streaming through RTSP-server authentication is not supported.
- AXIS Device Management solutions (ADM5, ADMX) as well as AXIS Companion and AXIS Camera Station are currently not supported.


Legacy setup with HTTP(S) Basic/Digest only

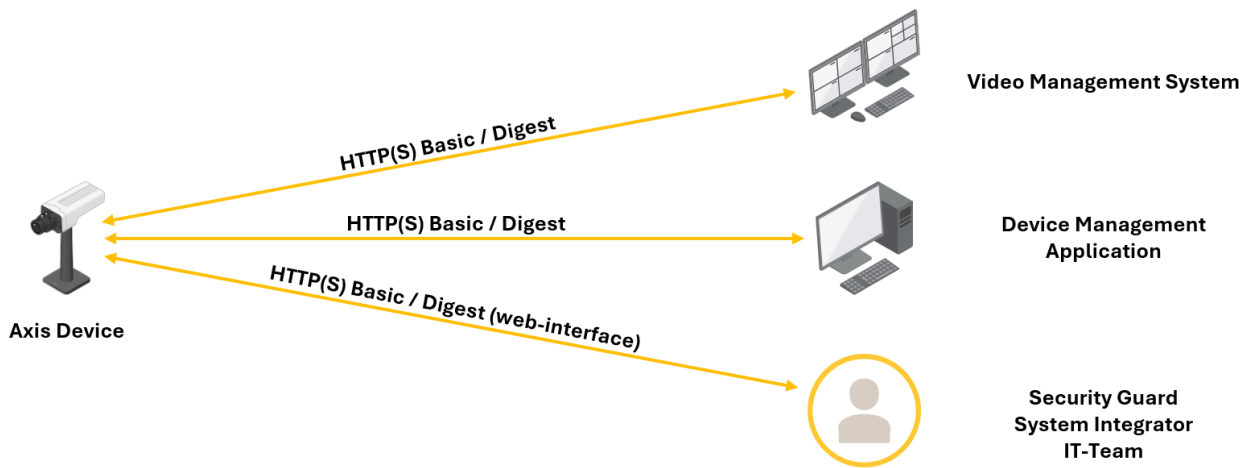

Hybrid setup with HTTP(S) Basic/Digest and OAuth 2.0 Authorization Code Flow

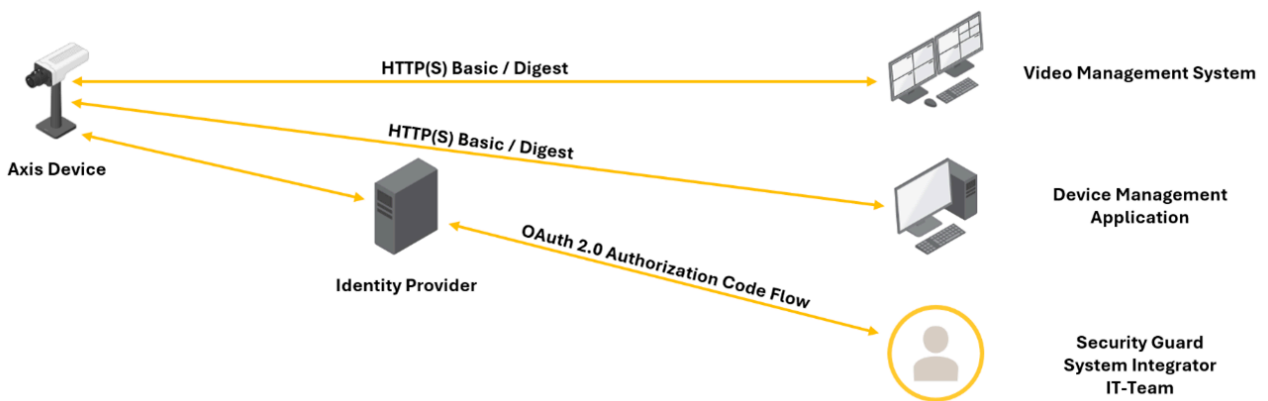


Fully adapted setup with OAuth 2.0 Client Credential Grant and OAuth 2.0 Authorization Code Flow

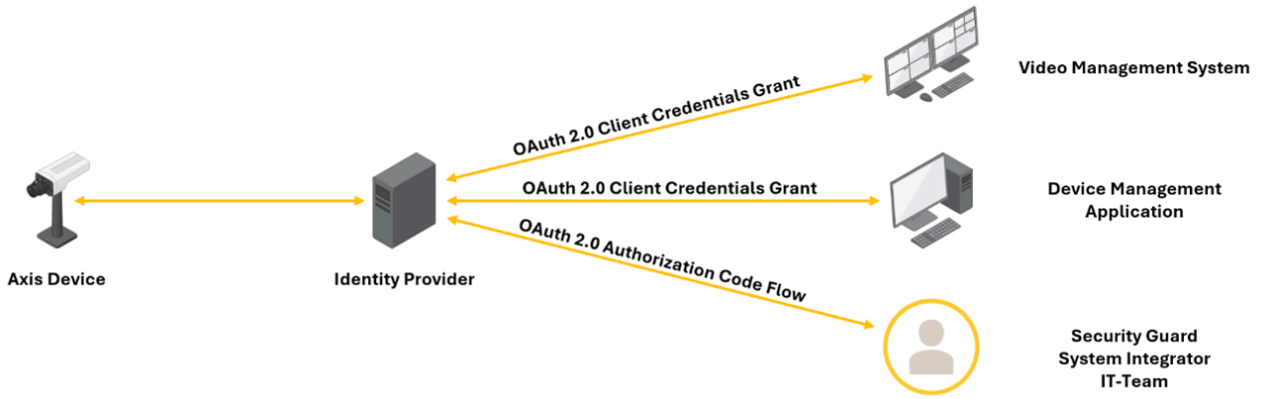

Authorization Code Flow (human to machine)

The Authorization Code Flow is an OAuth 2.0 process meant for human to machine communication where an actual user logs into the Axis device typically using a username and password or via federated login through an identity provider.


In this flow, available with AXIS OS 11.7 and later, the user is redirected to the identity provider to authenticate and give consent. Once approved, the application receives an authorization code, which it exchanges for an access token. This token allows the application to access the Axis device on behalf of the logged-in user. Unlike machine-to-machine flows, the Axis device can associate the request with a specific user identity, enabling user-specific access control and auditing.

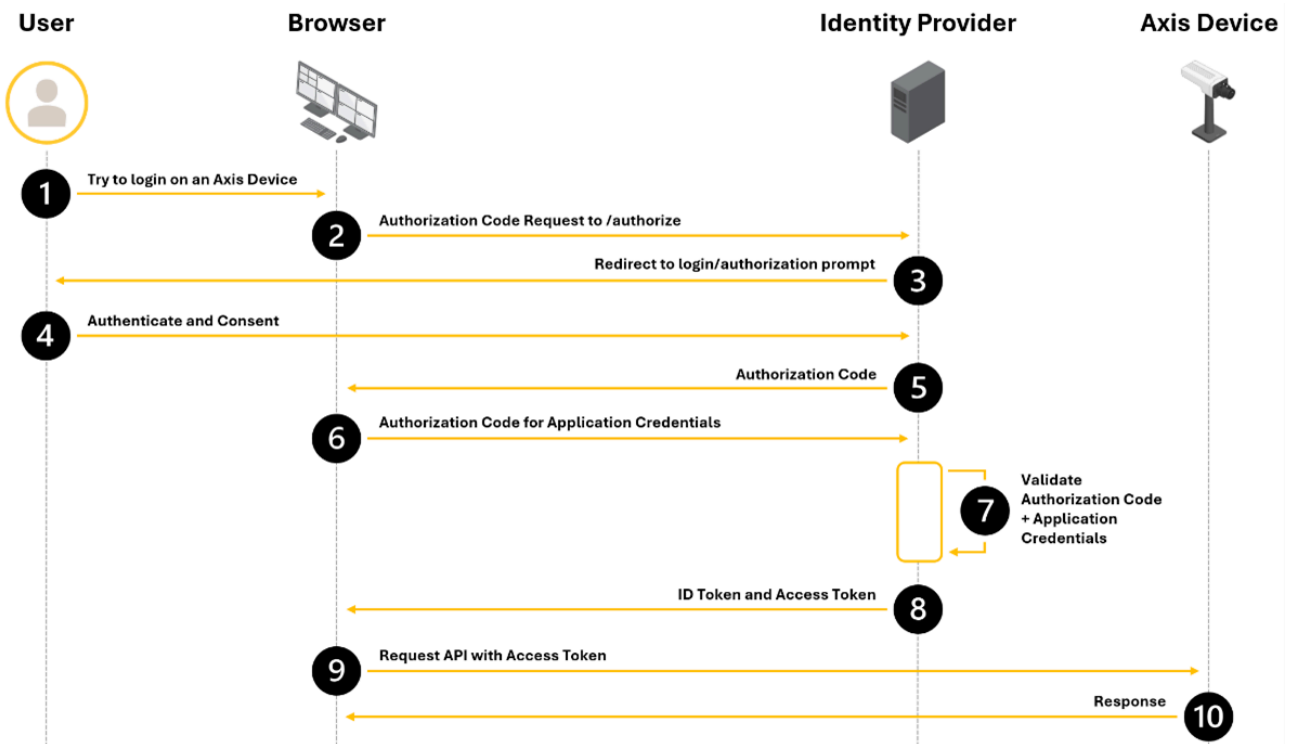

Axis device configuration

Note

This section only covers the OAuth 2.0 OpenID Connect parameters. To enable OAuth 2.0 OpenID Connect Authorization Code Flow, you need to configure a virtual host. See *Authentication schemes, on page 16* for more information how to configure a virtual host.

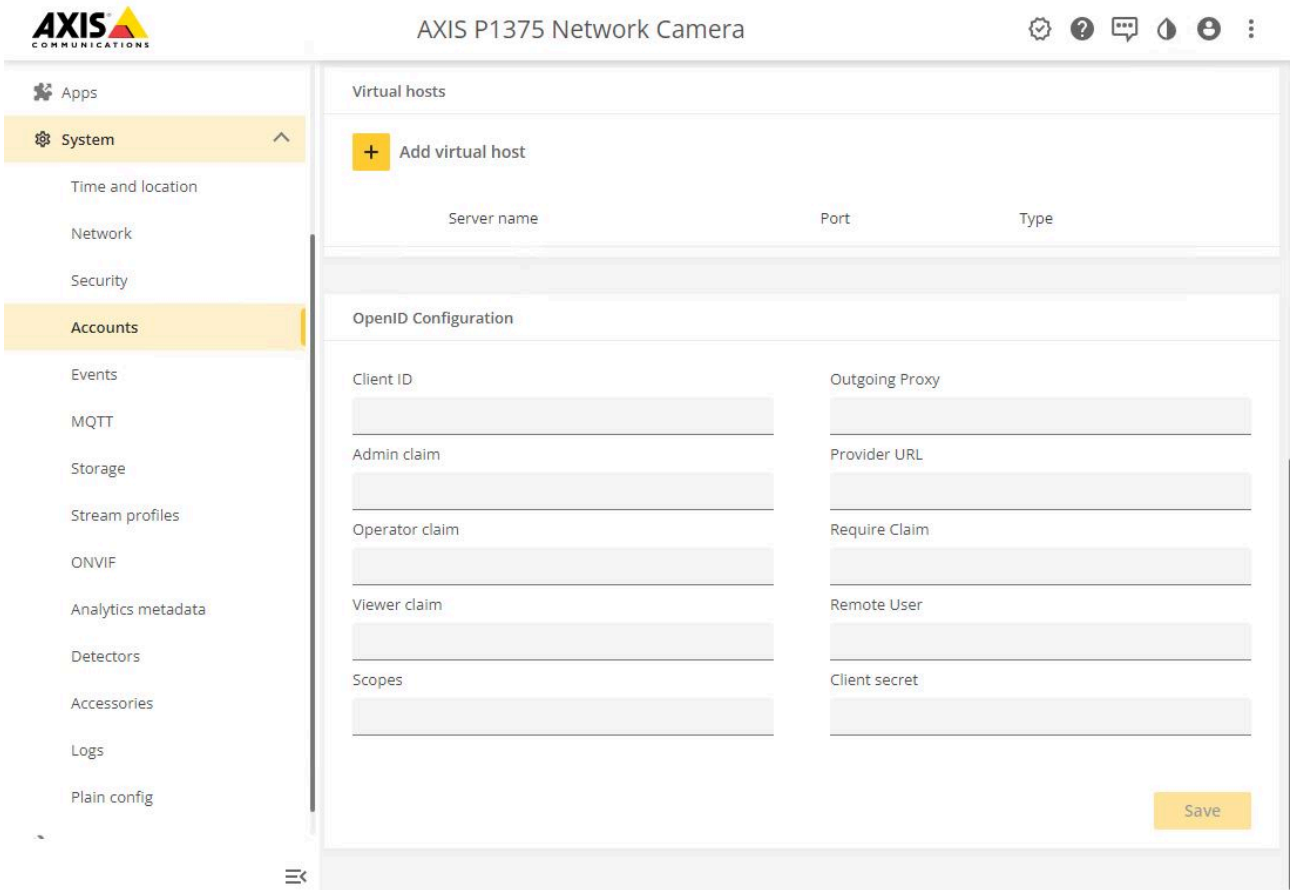


While the above example shows the configuration using the built-in web interface, it is also possible to use the available *OpenID Connect Setup VAPIX API* to configure the required OpenID Connect parameters on an Axis device. Using *AXIS Device Manager*, the required settings can be pushed to multiple devices at once.


Parameter	Value
Client ID	The client ID (or application ID) issued by the Identity Provider.
Admin claim	See <i>User roles, on page 249</i> for more information.
Operator claim	See <i>User roles, on page 249</i> for more information.
Viewer claim	See <i>User roles, on page 249</i> for more information.
Scopes	Optional list of additional OpenID Connect (OIDC) scopes.
Outgoing proxy	If applicable, specify the outgoing proxy here.
Provider URL	Metadata URL from the Identity Provider (typically <code>/.well-known/openid-configuration</code>).
Require claim	A specific piece of user information (a claim) that is required for authentication.
Remote user	This value is used by the Axis web interface to display the user name.
Client secret	The client secret corresponding to the application.

Example login

1. Browse to `https://<hostname>/` of the Axis device, for example `https://p1375.axis.com`.
2. The device should now redirect to the configured redirect URL of the Identity Provider. This example shows the redirect page of a Azure application.

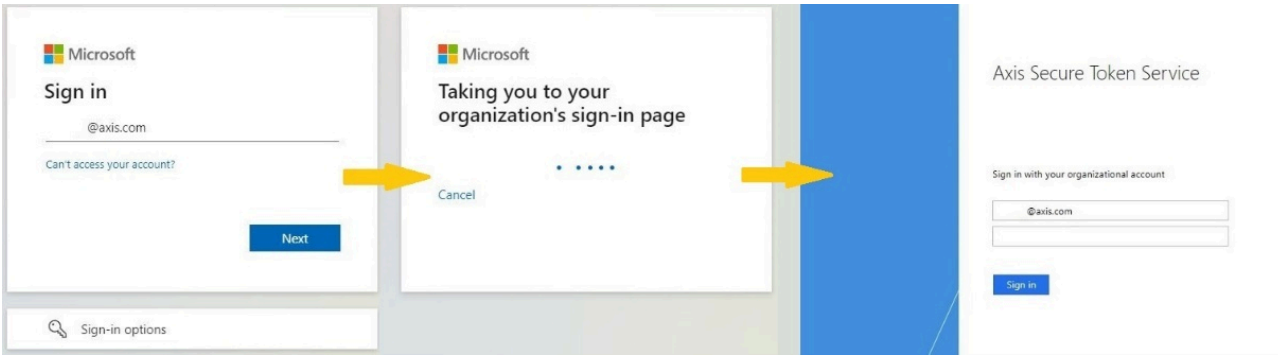


3. After providing the user identity to the identity provider, you are redirected back to the Axis device interface.

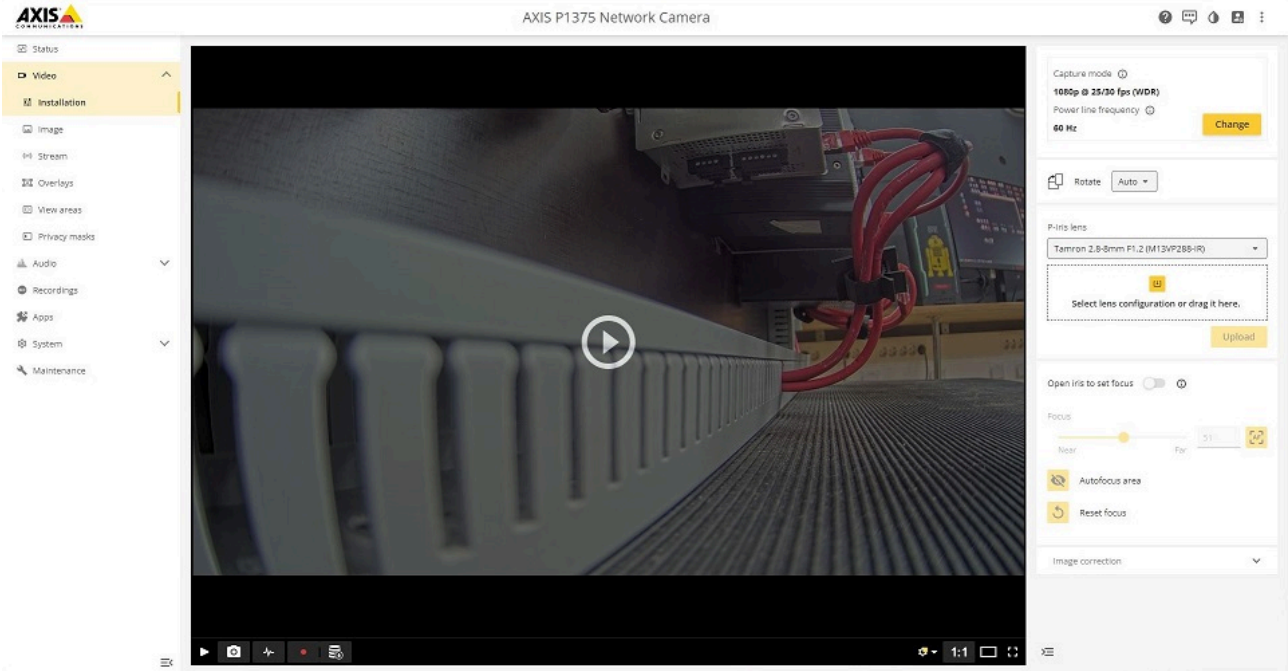

Client Credentials Grant (machine to machine)

The earlier scenario describes a human-to-machine situation, where an actual user logs into the Axis device, typically using credentials or federated authentication through an identity provider. In contrast, the Client Credentials Flow or Client Credentials Grant in OAuth 2.0 is used in machine-to-machine authentication and authorization.


In this flow, available with AXIS OS 12.4 and later, there is no end-user involved. Instead, a service or application (such as a Video or Device Management System) authenticates directly with the identity provider using its own credentials to obtain an access token. This token can then be used to access the Axis device. The Axis device has no visibility into any specific user identity, since the request is made on behalf of the service account, not a person.

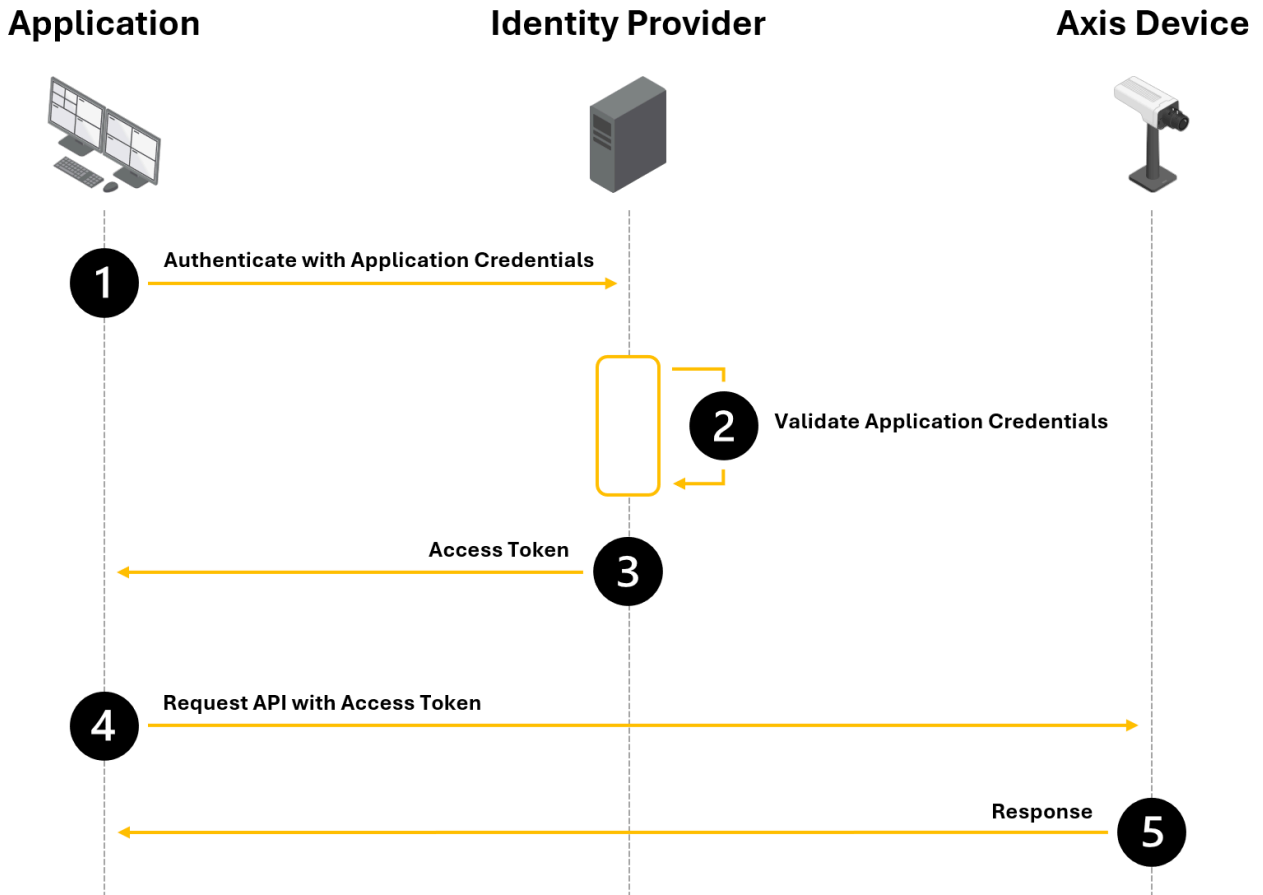

Axis device configuration

Note

This section only covers the OAuth 2.0 OpenID Connect parameters. To enable OAuth 2.0 OpenID Connect Authorization Code Flow, you need to configure a virtual host. See *Authentication schemes, on page 16* for more information how to configure a virtual host.

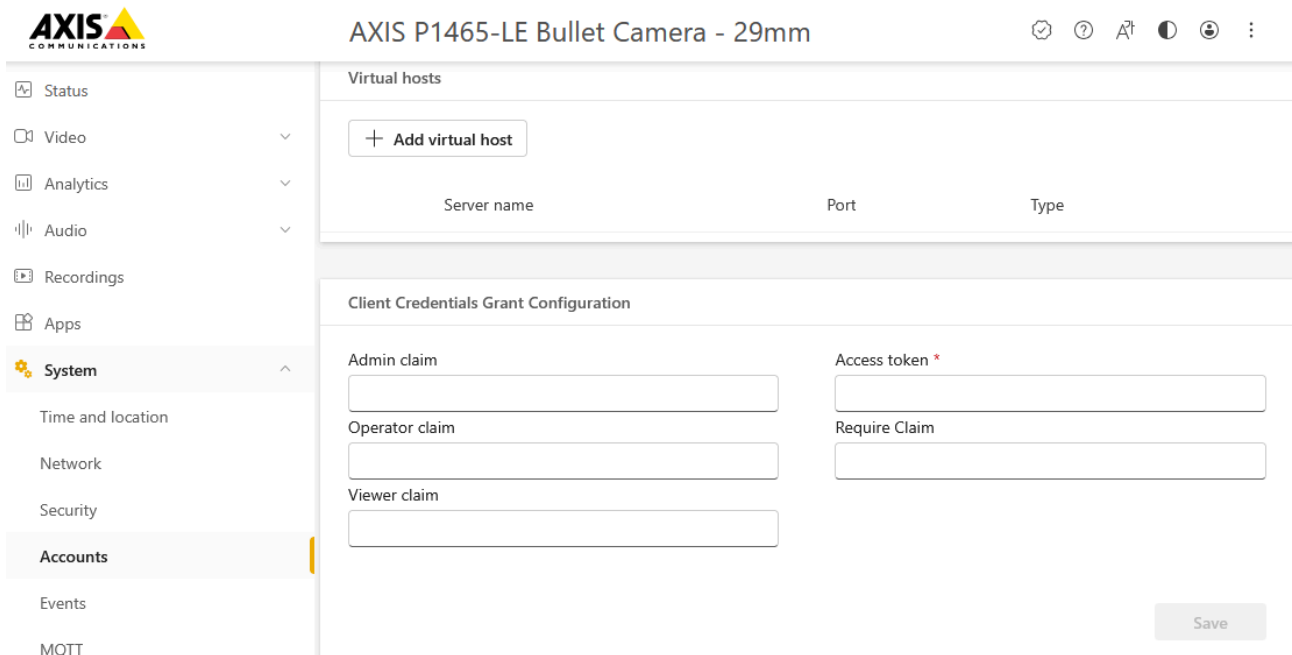


While the above example shows the configuration using the built-in web interface, it is also possible to use the available *OpenID Connect Setup VAPIX API* to configure the required OpenID Connect parameters on an Axis device. Using *AXIS Device Manager*, the required settings can be pushed to multiple devices at once.

Parameter	Value
Admin claim	See <i>User roles, on page 249</i> for more information
Operator claim	See <i>User roles, on page 249</i> for more information
Viewer claim	See <i>User roles, on page 249</i> for more information
Verification URL	The verification URL or token endpoint is a URL
Require claim	A specific piece of user information (a claim) to

Example login

We'll use Postman in this example to demonstrate how the OAuth 2.0 OpenID Connect Client Credentials Grant works.

1. Pick the request you'd like to authorize (for example, a GET or POST to a protected API).
2. Go to the **Authorization** tab > type: **OAuth 2.0** > Click **Get New Access Token**.
3. Fill in the token details as provided by your identity provider.
4. Click **Get Token** > Postman will send a request to the token URL and get an access_token back.
5. Click **Use Token**. This attaches the token to your request's Authorization: Bearer <token> header.

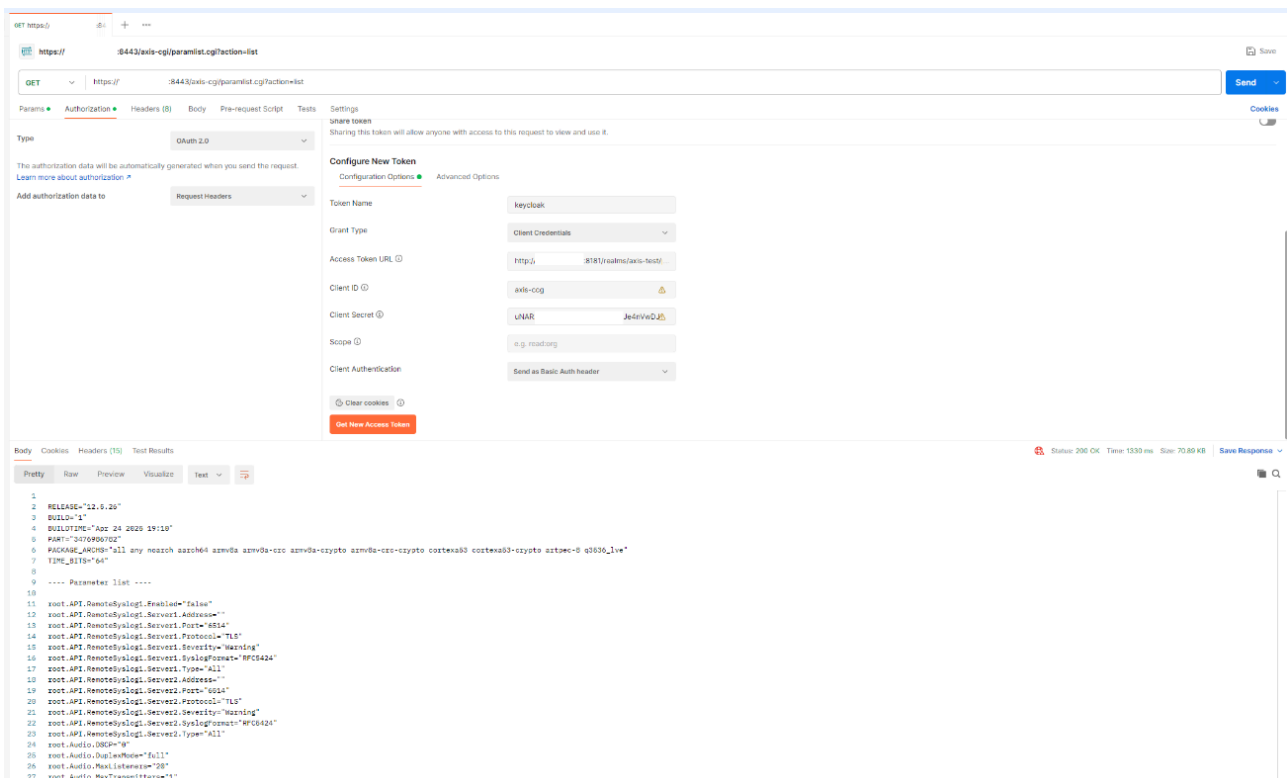

User roles

Axis devices know 3 different roles when using the OAuth 2.0 OpenID Connect Authorization Code Flow:

- Administrator (with PTZ rights)
- Operator (with PTZ rights)
- Viewer (without PTZ rights)

To illustrate a setup with different user roles, the following security groups have been created in an Active Directory, each containing different users.

Active Directory group name	Group members
Axis-Lund-admin	User1
Axis-Lund-operator	User2
Axis-Lund-viewer	User3

Depending on the identity provider, a custom claim may need to be configured so the above Active Directory Group information is part of the information in the ID token that is provided by the Identity Provider. For this example, the claim name "groups" has been configured on the identity provider to include the Active Directory Group membership. When a user belongs to a group, the group name will be included in the user's profile.

To link Active Directory groups to the Axis user roles, the following values should now be used in the Axis device parameter configuration.

Parameter	Value
Admin claim	groups:Axis-Lund-admin
Operator claim	groups:Axis-Lund-operator
Viewer claim	groups:Axis-Lund-viewer

This will result with the following user roles being assigned to the earlier created user.

User1	Administrator with PTZ rights
User2	Operator with PTZ rights
User3	Viewer without PTZ rights

Curity Identity Server

In this section you can read about the configuration steps required to connect an Axis device to a Curity Identity Server. Please see the *Curity website* for further reading about the Curity Identity Server.

Important












The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Curity Identity Server setup

1. Following the *getting started guide* described on the Curity website should supply you with a basic setup to integrate an Axis device into Curity Identity Server. Please note you should configure trusted certificates. Please refer to the Curity Identify Server documentation on how this is done.
2. Navigate to **Token Service > Client** and create a new client. Enter a client id and document it.
3. Add a new capability, choose **Code Flow** and **Introspection**.

Capabilities

Select All


 JWT Assertion Allows the client to use JWT assertions as grant	 Assisted Token The assisted-token capability allows the client to use a helper endpoint to use simplified OAuth flows.	 Client Credentials Allows for the Client Credentials Grant
 Code Flow Allows code flow	 Device Authorization Allows the client to use the device flow	 Implicit Flow Allows implicit flow
 Introspection Allows the client to use token introspection	 Resource Owner Password Flow Allows ROPC grant-type	 Token Exchange Allows the client to use exchange tokens for other tokens
 Hypermedia Authentication API Allows the client to use the hypermedia authentication API	 Backchannel Authentication Allows the client to perform backchannel authentication	

Next

4. Define a redirect URI. This should be device unique.

Client Application Details

Redirect URIs

Add  OAuth.tools

ADDED VALUES (1)

https://p1375.r2d2.lab/oidc/oauth2callback

The whitelist of Redirect URIs allowed for the client. If code or Implicit flow is used, this will have a required minimum of 1 items

5. Define a client secret and document it.

Client Authentication
✕

Authentication Method

secret
▾

Secret

.....

👁

🔄
Generate

A password used by the client

⚠

Make sure to copy this value. You cannot get it later

📄

Back

Next

6. Define a user authentication method. During the getting started steps a default username–password page was created which we use in this example.

User Authentication
✕

🔍

Select All

Select Authenticator Types ▾

</>


username-
password

✓


Back

Done


7. Add a scope and enter email, openid and profile.

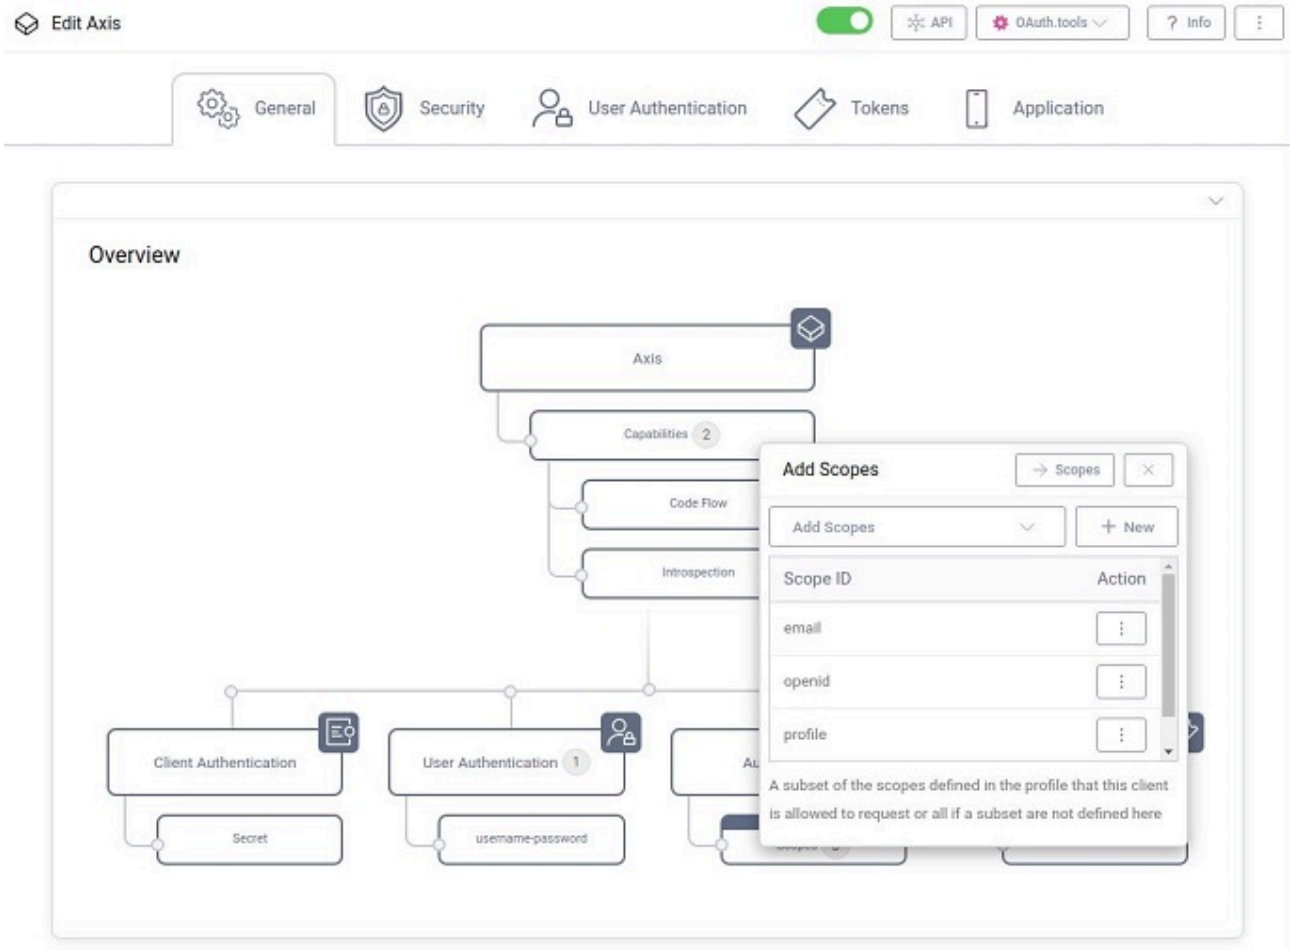


8. The overview now should look like this:

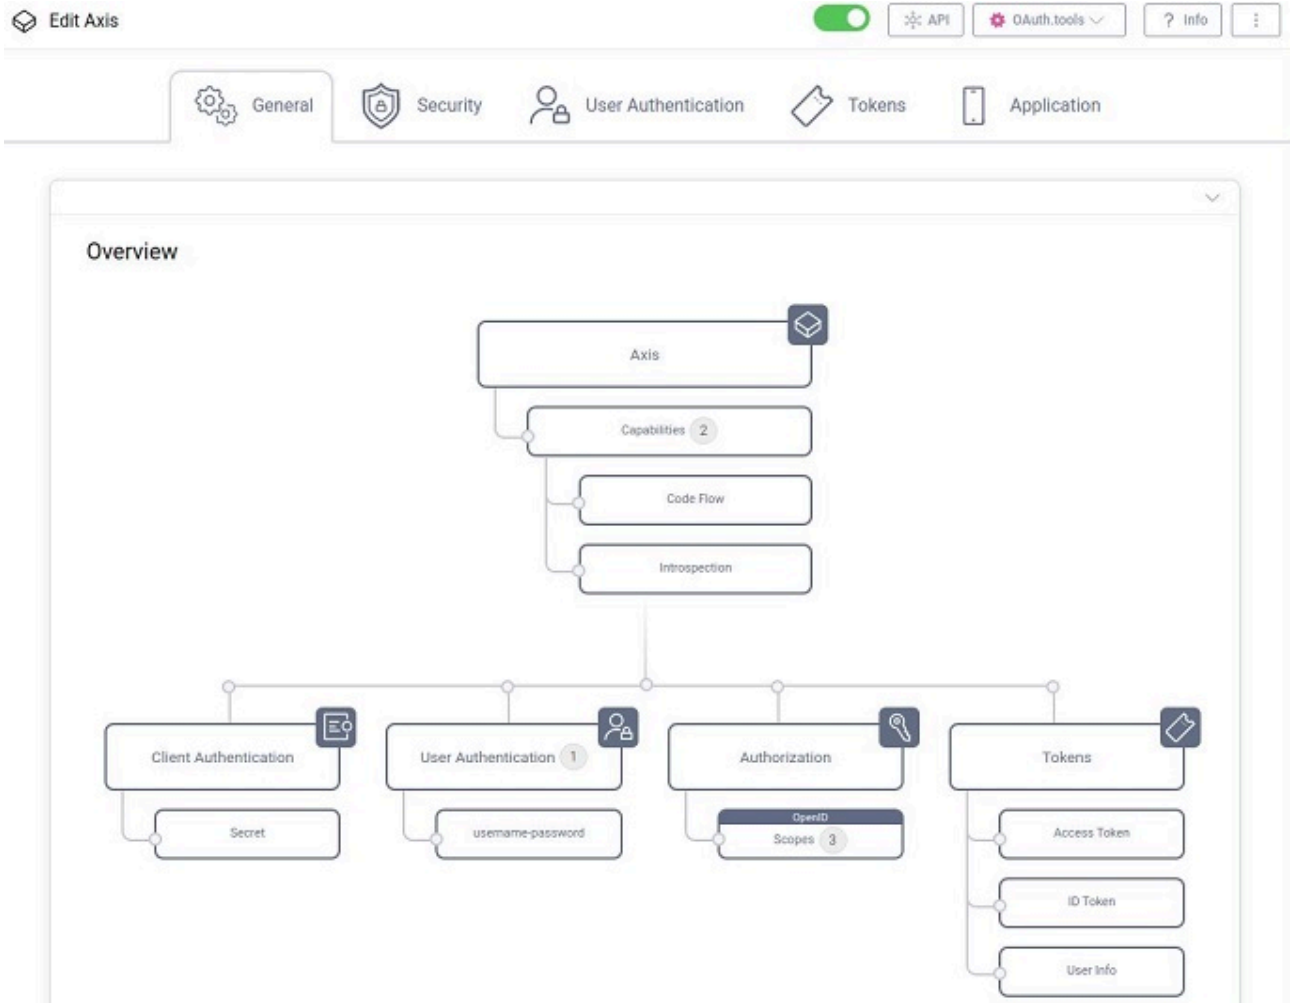

9. In the Security tab, under Origins and Validation, please add the hostname of your device.

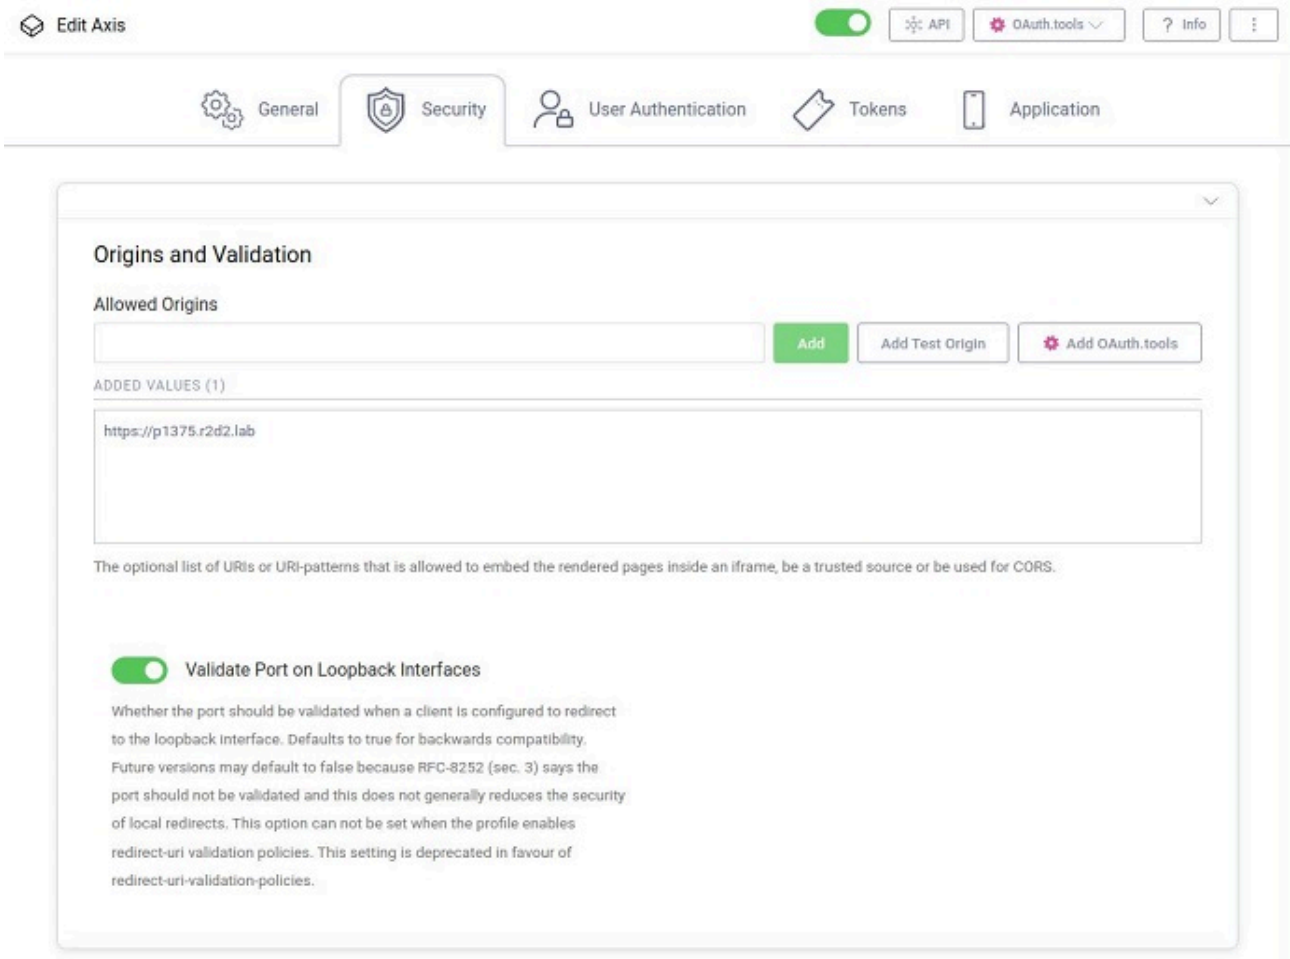

10. Under **Changes** in the menu, select to **Commit** your changes.

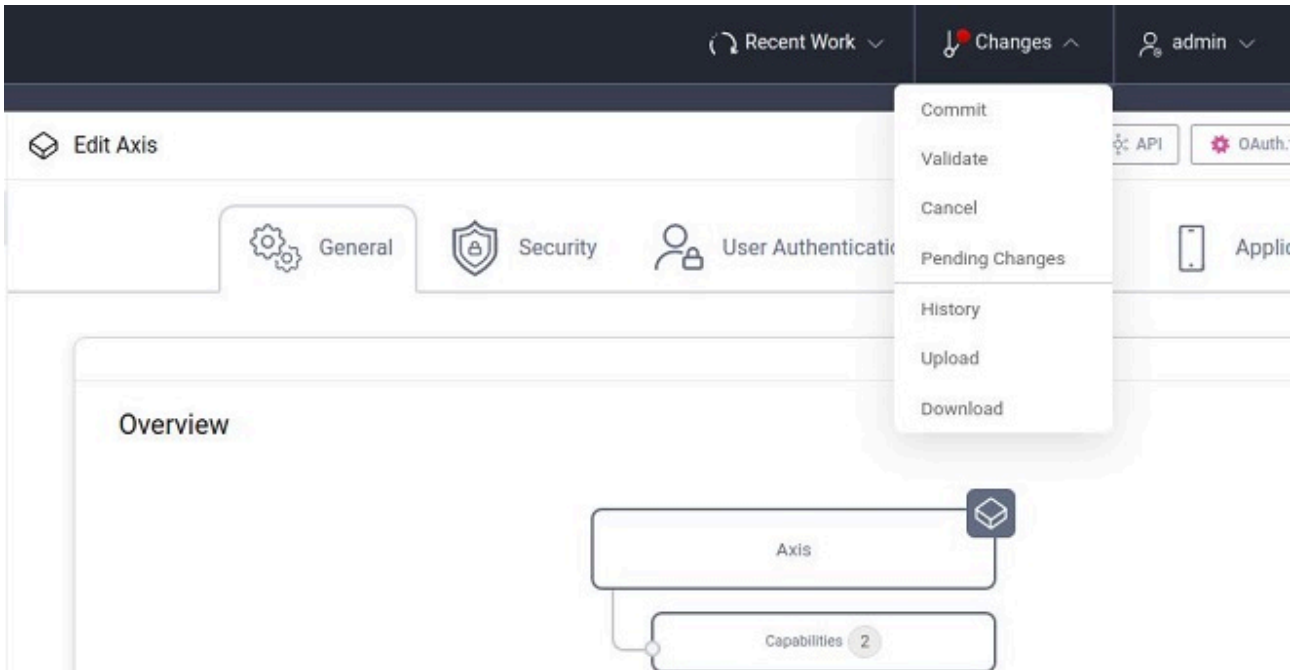

Axis device parameters

Parameter	Value
Admin claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://curity_server/oauth/v2/oauth-anonymous"

Operator claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://curity_server/oauth/v2/oauth-anonymous"
Viewer claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://curity_server/oauth/v2/oauth-anonymous"
Client ID	The client ID obtained during step 2.
Client secret	The client secret obtained during step 10
Outgoing Proxy	Not used in this example but if required for your setup, specify here the outgoing proxy.
Provider URL	https://curity_server/oauth/v2/oauth-anonymous/.well-known/openid-configuration
Remote User	This is the value used by the web interface to display the logged-in user. Possible values can be found in the ProviderMetadataURL > claims_supported. Example: "sub"
Require Claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://curity_server.com"
Scopes	Optional list of additional OIDC scopes.

Google Cloud Platform


In this section you can read about the configuration steps required to connect an Axis device to the Google Cloud Platform using OpenID Connect. For further reading, please review the *Google Identity documentation*.

Important


The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Google Cloud Platform setup


1. Setup a project in the *Google API Console*.
2. Click on **Select project** and select **New project**.

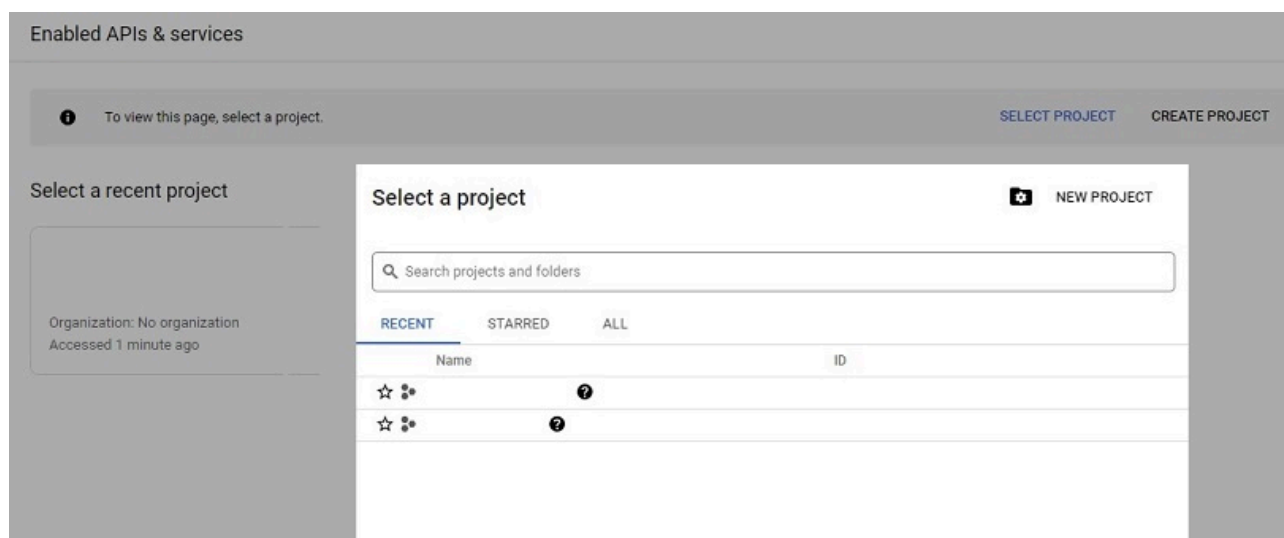


3. Enter a **Project name** and click on **Create**.

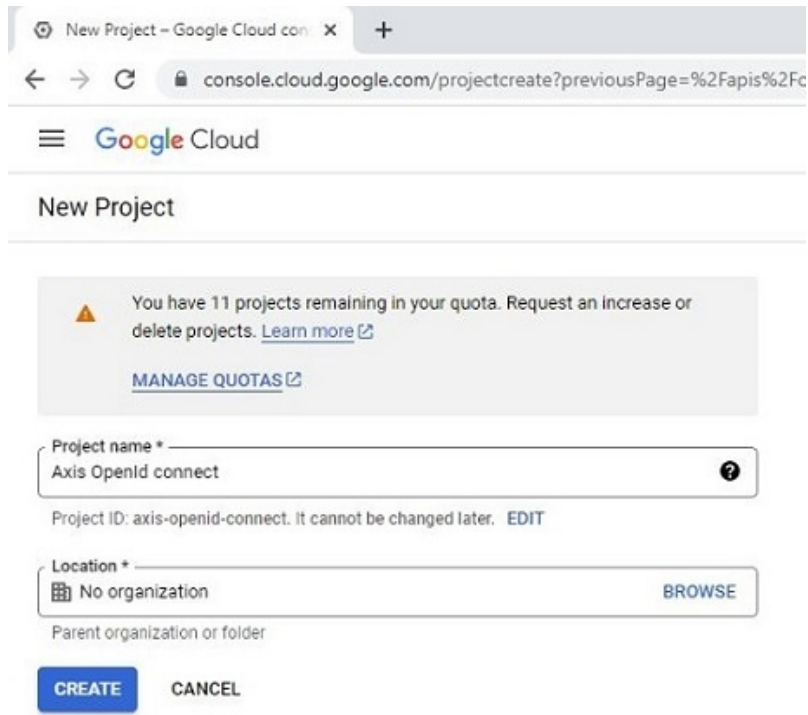

- To setup OAuth 2.0, go to *OAuth consent screen page* and select user type.

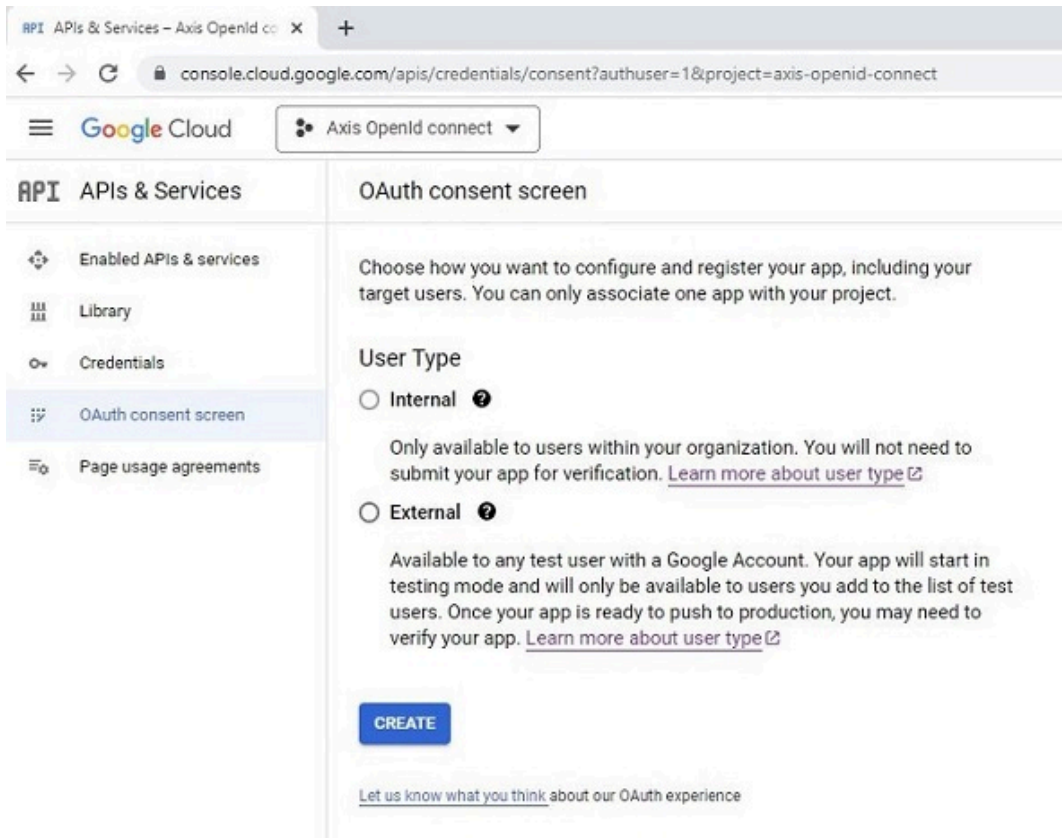

- Enter the required details.

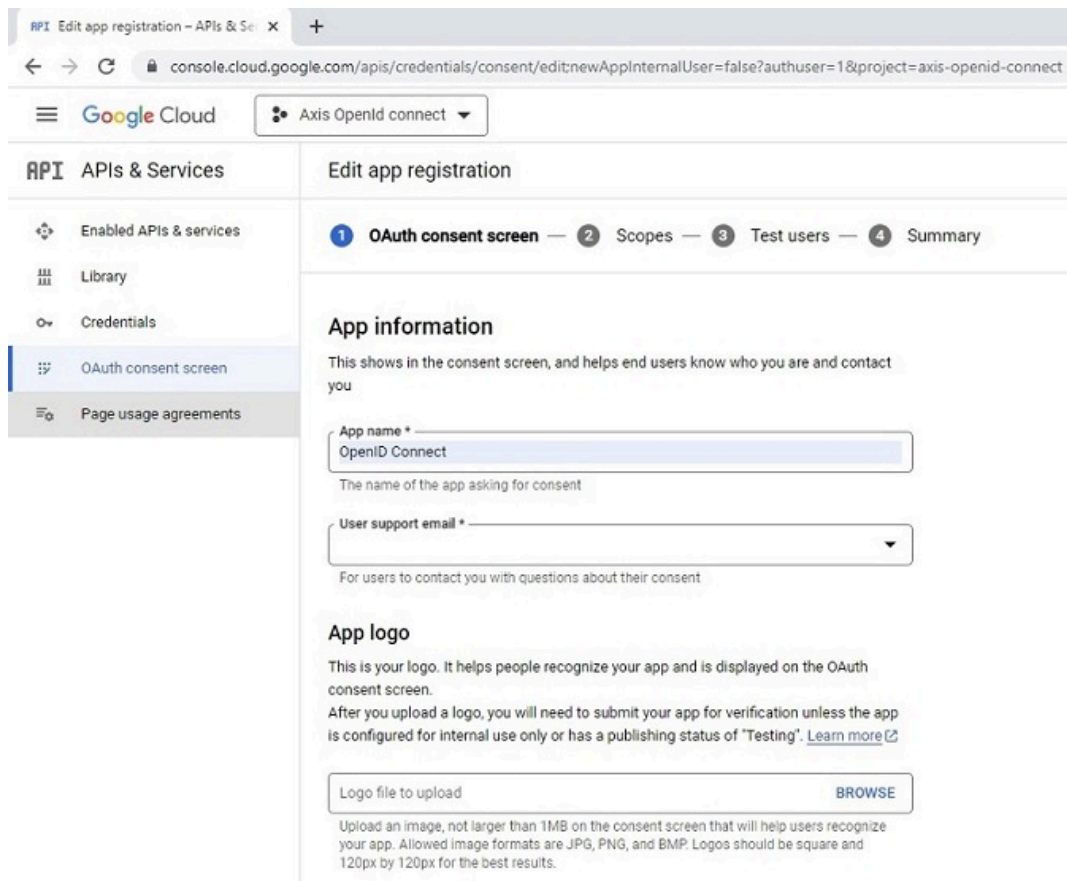

6. Add the scopes: `userinfo.email`, `userinfo.profile` and `openid`.

API Edit app registration - APIs & Services x +

console.cloud.google.com/apis/credentials/consent/edit:newAppInternalUser=false?authuser=1&project=axis-openid-connect

Google Cloud Axis OpenId connect

API APIs & Services

- Enabled APIs & services
- Library
- Credentials
- OAuth consent screen**
- Page usage agreements

Edit app registration

1 OAuth consent screen — 2 **Scopes** — 3 Test users — 4 Summary

Scopes express the permissions you request users to authorize for your app and allow your project to access specific types of private user data from their Google Account. [Learn more](#)

ADD OR REMOVE SCOPES

Your non-sensitive scopes

API ↑	Scope	User-facing description
	.. ./auth/userinfo .email	See your primary Google Account email address
	.. ./auth/userinfo .profile	See your personal info, including any personal info you've made publicly available
	openid	Associate you with your personal info on Google

Your sensitive scopes

Sensitive scopes are scopes that request access to private user data.

API ↑	Scope	User-facing description
No rows to display		


Your restricted scopes

Restricted scopes are scopes that request access to highly sensitive user data.


API ↑	Scope	User-facing description
No rows to display		

SAVE AND CONTINUE CANCEL


7. Add authenticated users to the application.

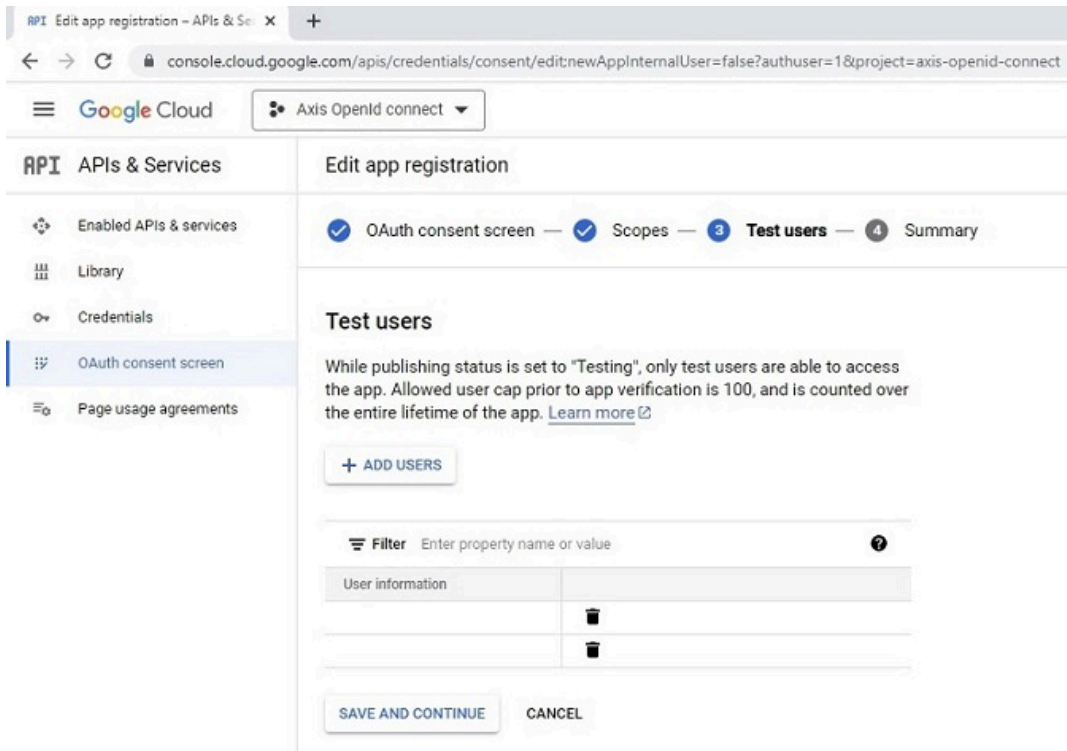

8. To obtain OAuth 2.0 credentials, go to the *Credentials page*.
9. Select **Create credentials > OAuth client ID**.

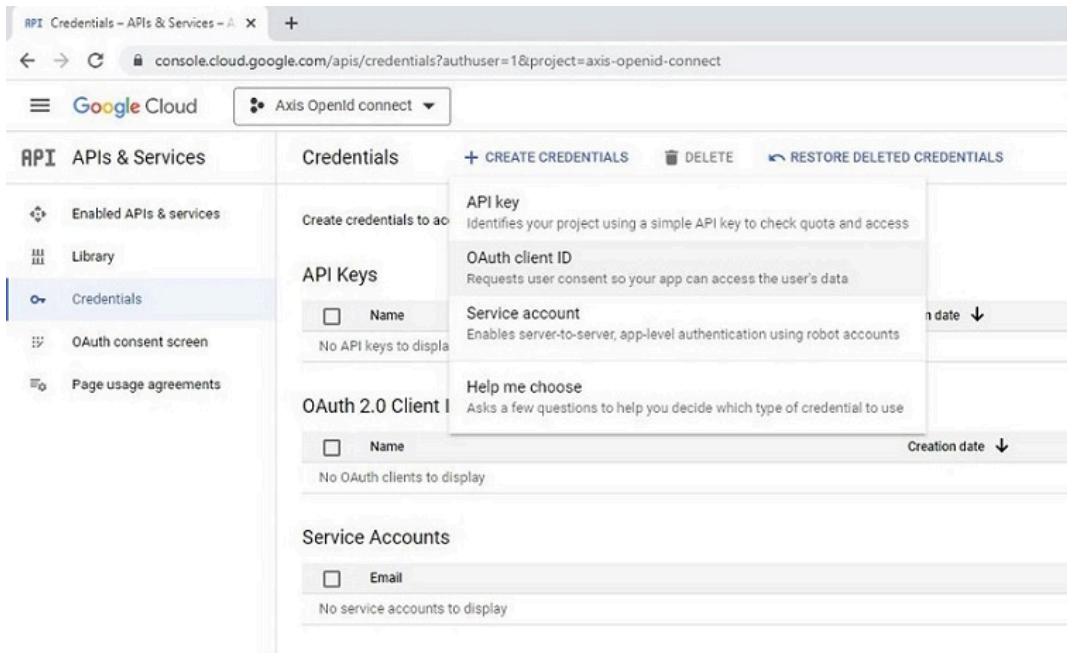

10. Select application type **Web application**, fill in a client name and configure authorized redirect URIs. Note that this the FQDN should end with `"/oidc/oauth2callback"`.

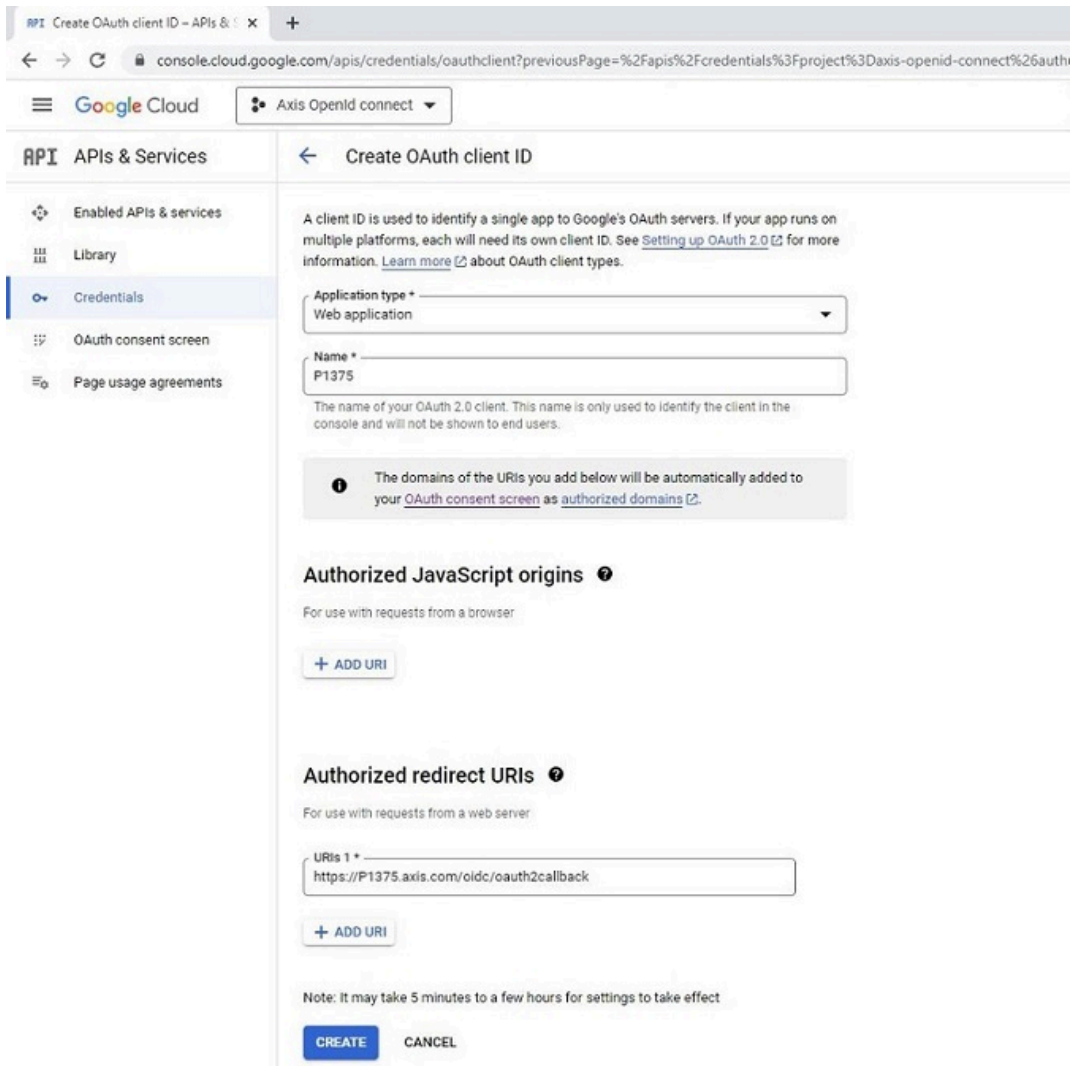

11. Document the Client ID and Client secret for further usage.

OAuth client created

The client ID and secret can always be accessed from Credentials in APIs & Services

i OAuth access is restricted to the [test users](#) listed on your [OAuth consent screen](#)

Client ID	965-n827n26j3bnd1c7mof7km1i1eqvfc2pm.ap ps.googleusercontent.com
Client secret	KOya6udLe8dxkiyr_h_5c-4
Creation date	May 30, 2023 at 10:49:29 AM GMT+2
Status	Enabled

[DOWNLOAD JSON](#)

Axis device parameters

Parameter	Value
Admin claim	https://accounts.google.com
Operator claim	https://accounts.google.com
Viewer claim	https://accounts.google.com
Client ID	The client ID obtained during step 8.
Client secret	The client secret obtained during step 8.
Outgoing Proxy	Not used in this example but if required for your setup, specify here the outgoing proxy.
Provider URL	https://accounts.google.com/.well-known/openid-configuration
Remote User	This is the value used by the web interface to display the logged in user. Possible values can be found in the ProviderMetadataURL > claims_supported. Example: "sub"
Require Claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://accounts.google.com"
Scopes	Optional list of additional OIDC scopes.

Microsoft Identity Platform (Azure)


In this section you can read about the configuration steps required to connect an Axis device to the Microsoft Identity Platform using OpenID Connect. For further reading, please review the *Microsoft Identity Platform documentation*.

Important


The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Microsoft Identity Platform setup


1. Setup an application in the *Microsoft Azure Active Directory console*.
2. Go to the **App registrations** page and select **New registration**.

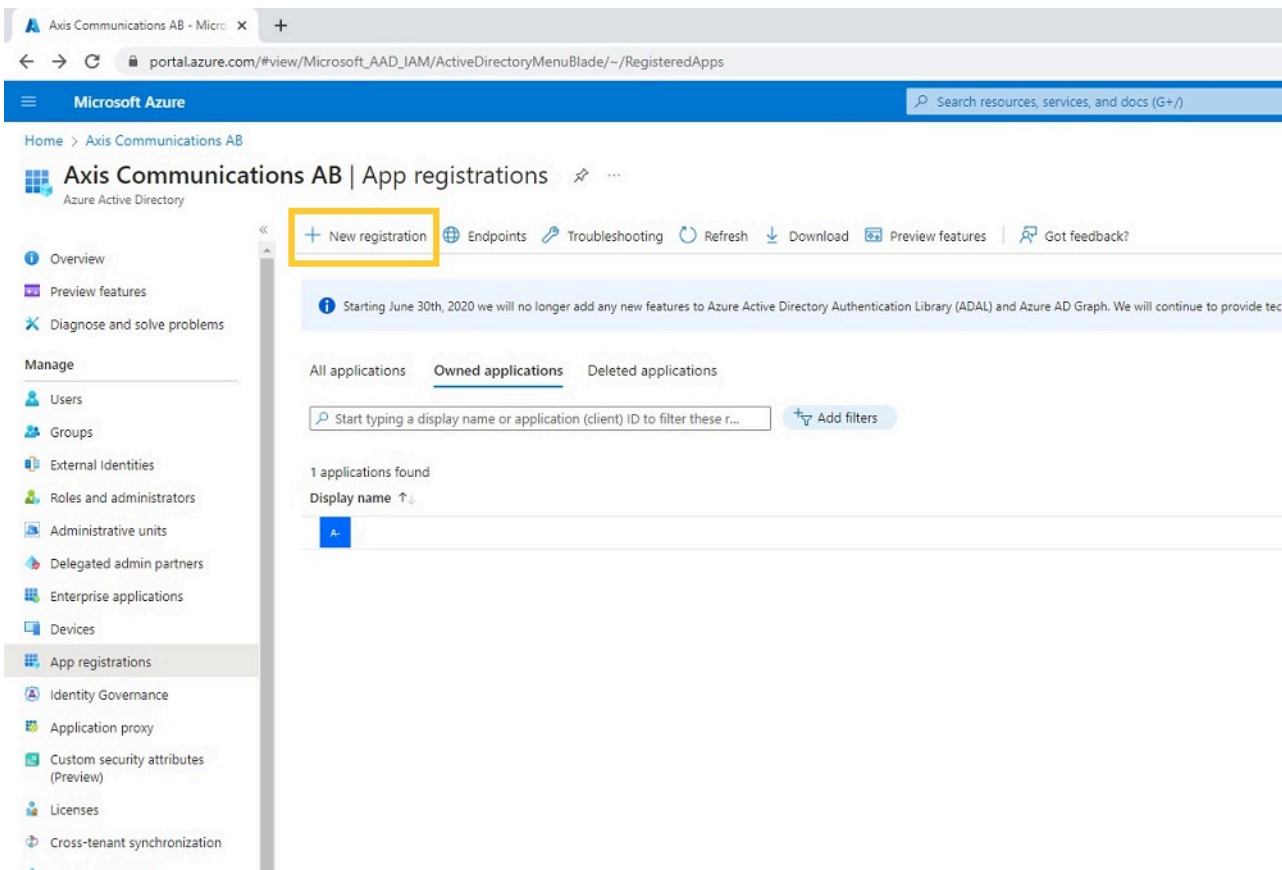


3. Fill in a display name and configure an authorized redirect URI. Note that this the FQDN should end with "/oidc/oauth2callback". Document the Application (client) ID.

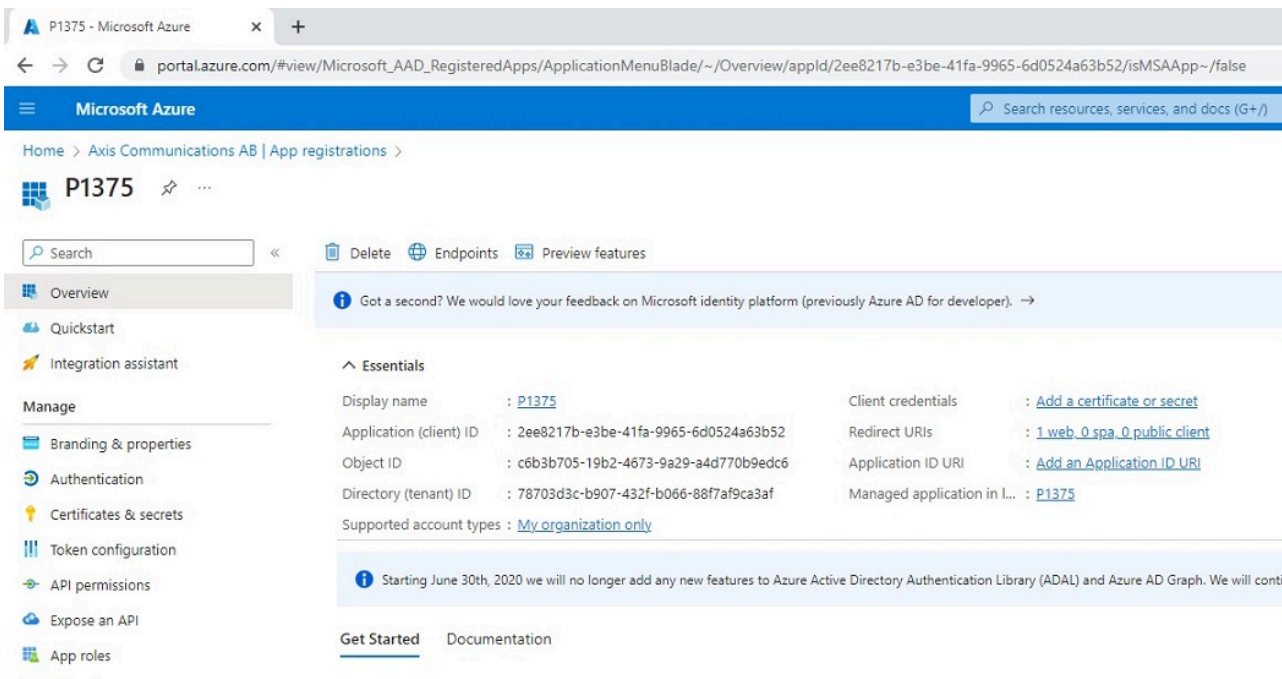

4. To obtain a client secret, go to the Certificates & secrets page and select New client secret.
 5. Fill in a description and expiry date and click Add. Document the Client secret.

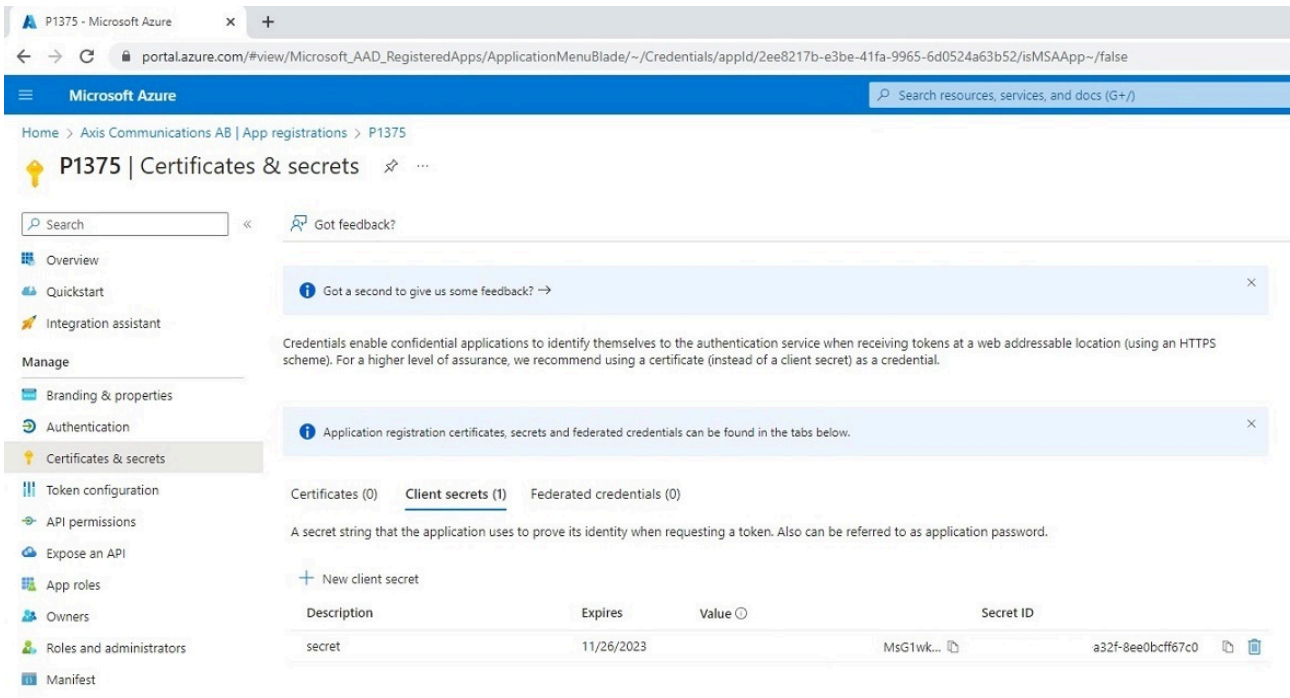

6. Go to the Overview page and select Endpoints and document the shown endpoints.

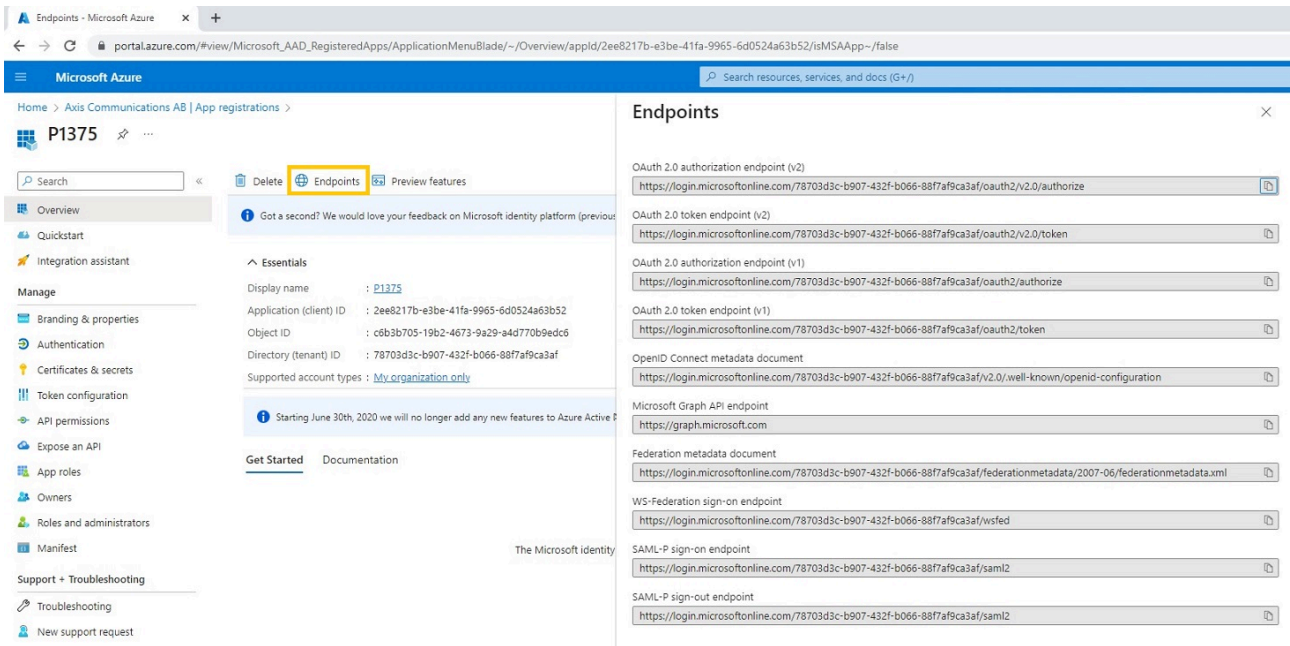

Axis device parameters

Parameter	Value
Admin claim	Value of the issuer property Example: "iss:https://lo...v2.0"
Operator claim	Value of the issuer property Example: "iss:https://lo...v2.0"
Viewer claim	Value of the issuer property Example: "iss:https://lo...v2.0"
Client ID	The client ID obtained c...

Client secret	The client secret obtained from the provider
Outgoing Proxy	Not used in this example
Provider URL	OpenID Connect metadata URL
Remote User	This is the value used by the provider to identify the user. Possible values can be found in the provider's metadata under the "sub" claim.
Require Claim	Value of the issuer property in the provider's metadata. Example: "iss: https://localhost:4434/oidc v2.0"
Scopes	Optional list of additional scopes to request from the provider

Microsoft Windows AD FS


In this section you can read about the configuration steps required to connect an Axis device to Microsoft Windows Active Directory Federation Service (AD FS) using OpenID Connect. For further reading, please review the *Windows AD FS documentation*.

Important

The below steps illustrate basic integration and use-cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

Windows AD FS setup

1. Install the Windows AD FS role as described *here*.
2. Configure the Windows AD FS role as described *here*.
3. Verify that Windows AD FS is working correctly by following the steps described *here*.
4. From the Windows AD FS management console, add a new application group. Use the **Server Application** template.

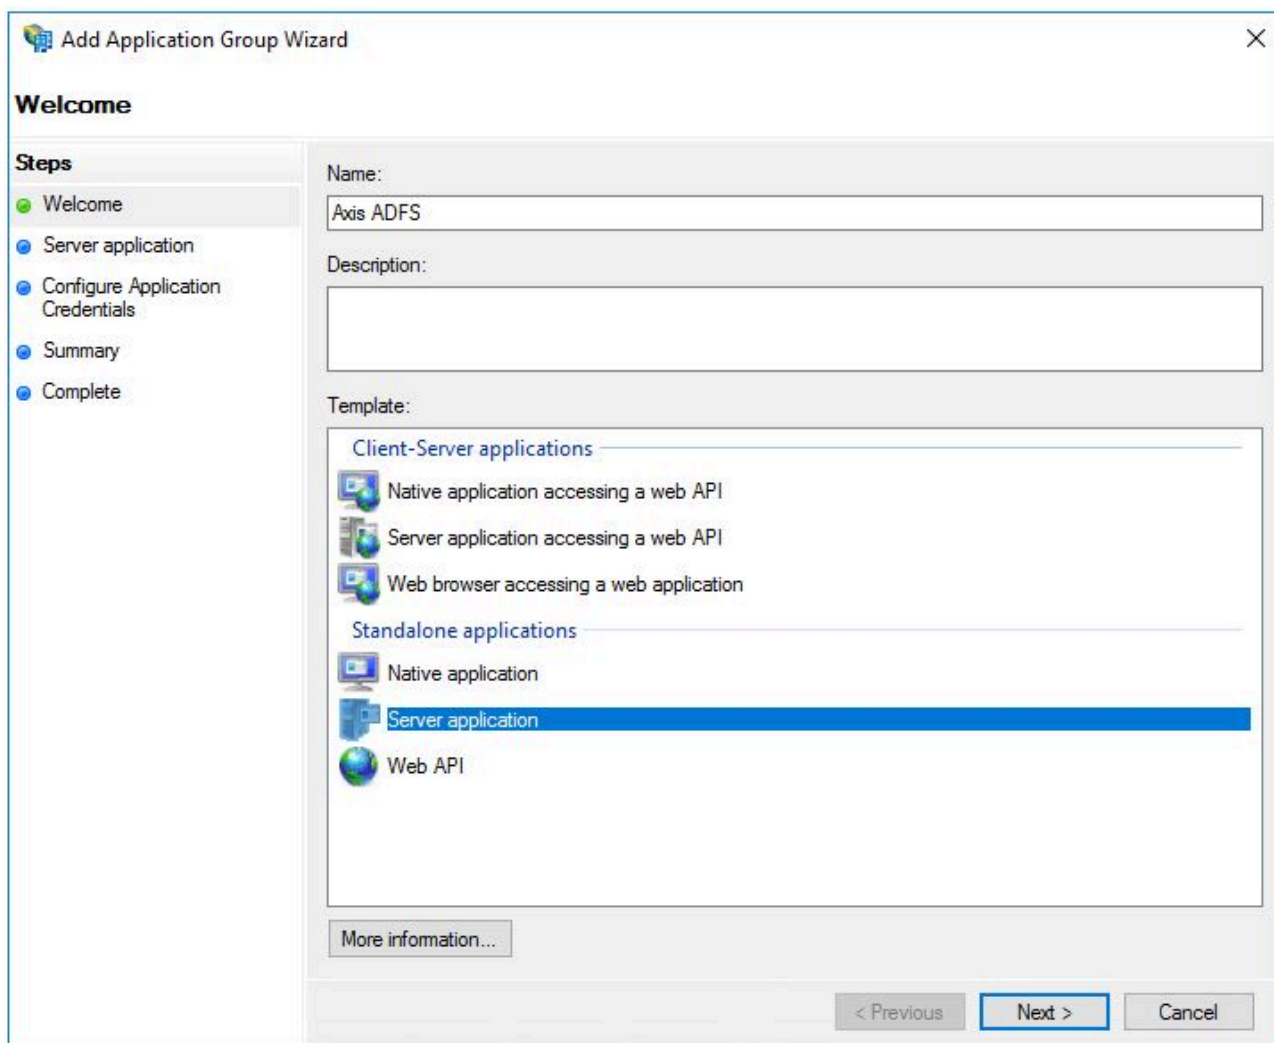


5. Enter a Name, Client Identifier and Redirect URI. Document the Client Identifier. Note that the redirect URI is the FQDN of the Axis device and it should end with "/oidc/oauth2callback". Click Next.

The screenshot shows the 'Add Application Group Wizard' dialog box, specifically the 'Server application' step. The wizard has a 'Steps' pane on the left with five steps: Welcome, Server application, Configure Application Credentials, Summary, and Complete. The 'Server application' step is currently selected. The main area contains the following fields and controls:


- Name:** A text box containing 'Axis ADFS - Server application'.
- Client Identifier:** A text box containing 'a69a5ecf-db9f-4d15-b431-aab6ea45eef0'.
- Redirect URI:** A list of URIs. The first text box contains 'Example: https://Contoso.com'. Below it, a list box contains 'https://FQDN/oidc/oauth2callback', which is currently selected. To the right of the list box are 'Add' and 'Remove' buttons.
- Description:** An empty text box.

At the bottom of the dialog, there are three buttons: '< Previous', 'Next >' (which is highlighted with a blue border), and 'Cancel'.

6. Select **Generate a shared secret**. Document the shared secret. Click **Next**.

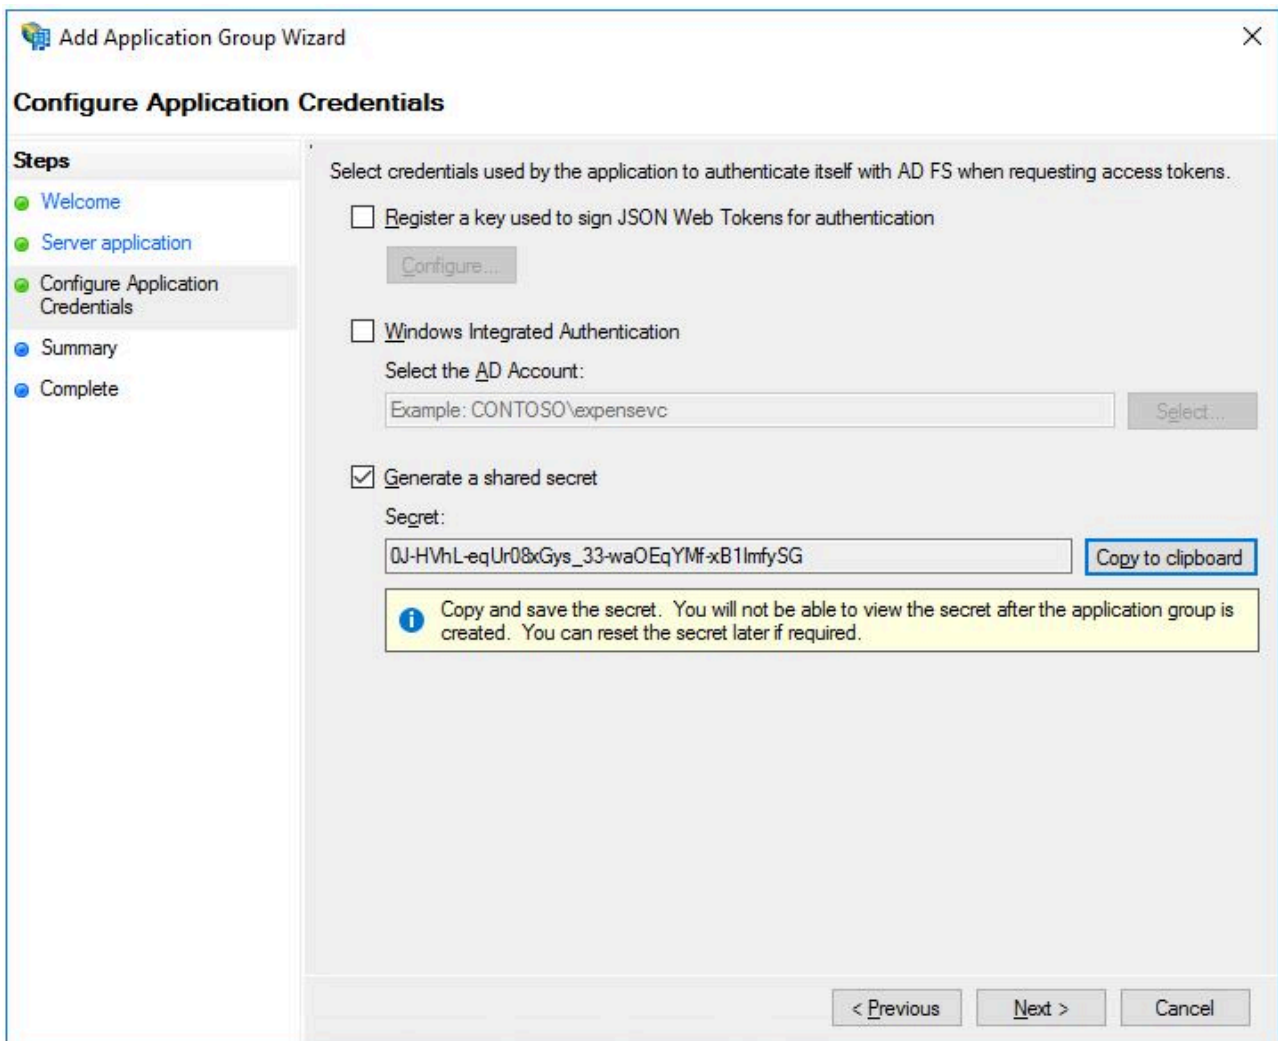

7. Complete the rest of the wizard.

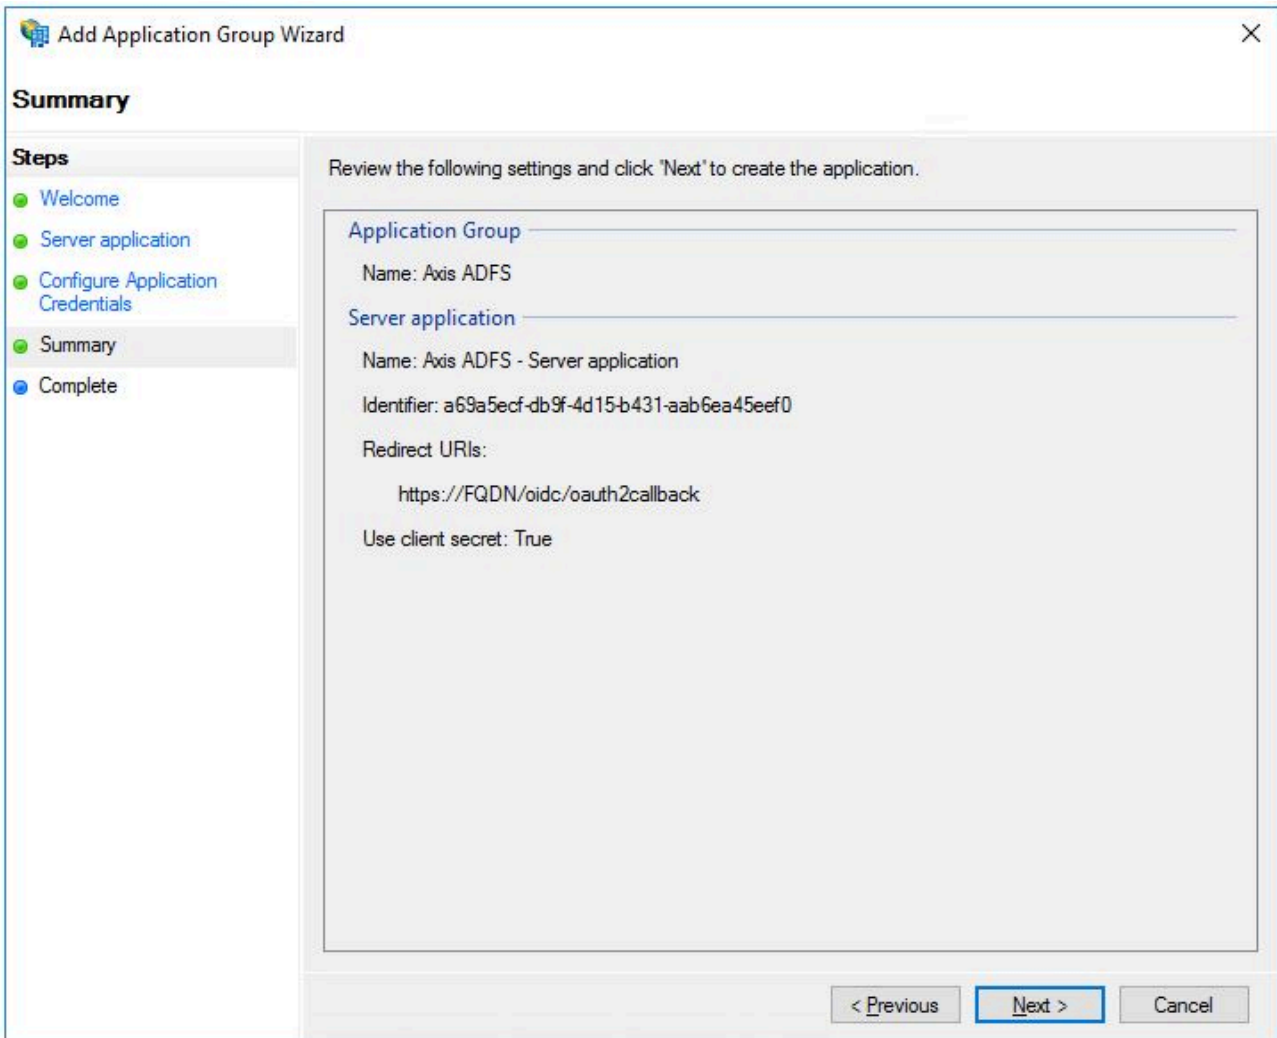

Axis device parameters

Parameter	Value
Admin claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://ADFS_server/adfs/"
Operator claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://ADFS_server/adfs/"
Viewer claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://ADFS_server/adfs/"
Client ID	The client ID obtained during step 5.
Client secret	The client secret obtained during step 6.
Outgoing Proxy	Not used in this example but if required for your setup, specify here the outgoing proxy.
Provider URL	https://ADFS_server/adfs/.well-known/openid-configuration
Remote User	This is the value used by the web interface to display the logged in user. Possible values can be found in the ProviderMetadataURL > claims_supported. Example: "sub" or "unique_name".

Require Claim	Value of the issuer property from the ProviderMetadataURL. Example: "iss:https://ADFS_server/adfs/"
Scopes	Optional list of additional OIDC scopes.

SFTP (SSH File Transfer Protocol)

Axis devices are capable of sending images and videos using the SFTP (SSH File Transfer Protocol) protocol to a remote server. SFTP is using the secure and encrypted SSH protocol to transfer data via FTP. This is not to be mistaken with FTPS (FTP over SSL), which is another secure method of transferring data securely, however not supported by Axis devices.

3rd party SFTP server

Depending on the environment and selected 3rd party SFTP server, the configuration may differ. In this tutorial we are going to have a look at the commonly used OpenSSH server for Linux operating systems.



Important

The below steps illustrate basic integration and use cases within a test lab environment. Axis strongly recommends following the provider's guidelines for an integration that maximizes the handling of certificates, tokens, user-credentials and overall cybersecurity in a production environment.

OpenSSH server configuration

The SFTP implementation of Axis devices is based on the open-source software component Curl. Out of the *many authentication methods that Curl supports*, Axis devices currently only support the so called **CURLSSH_AUTH_PASSWORD**. Therefore you need to make sure that the SFTP server being used supports this method as well.

This guide can be used as a reference to install OpenSSH, which then allows for the Axis device to transfer data using SFTP. Once the OpenSSH server is installed, it should be possible to test that the connections work, e.g. by using *Putty (SSH client)*. Enter the server IP address as well as the login credentials from your Linux operating system to connect.

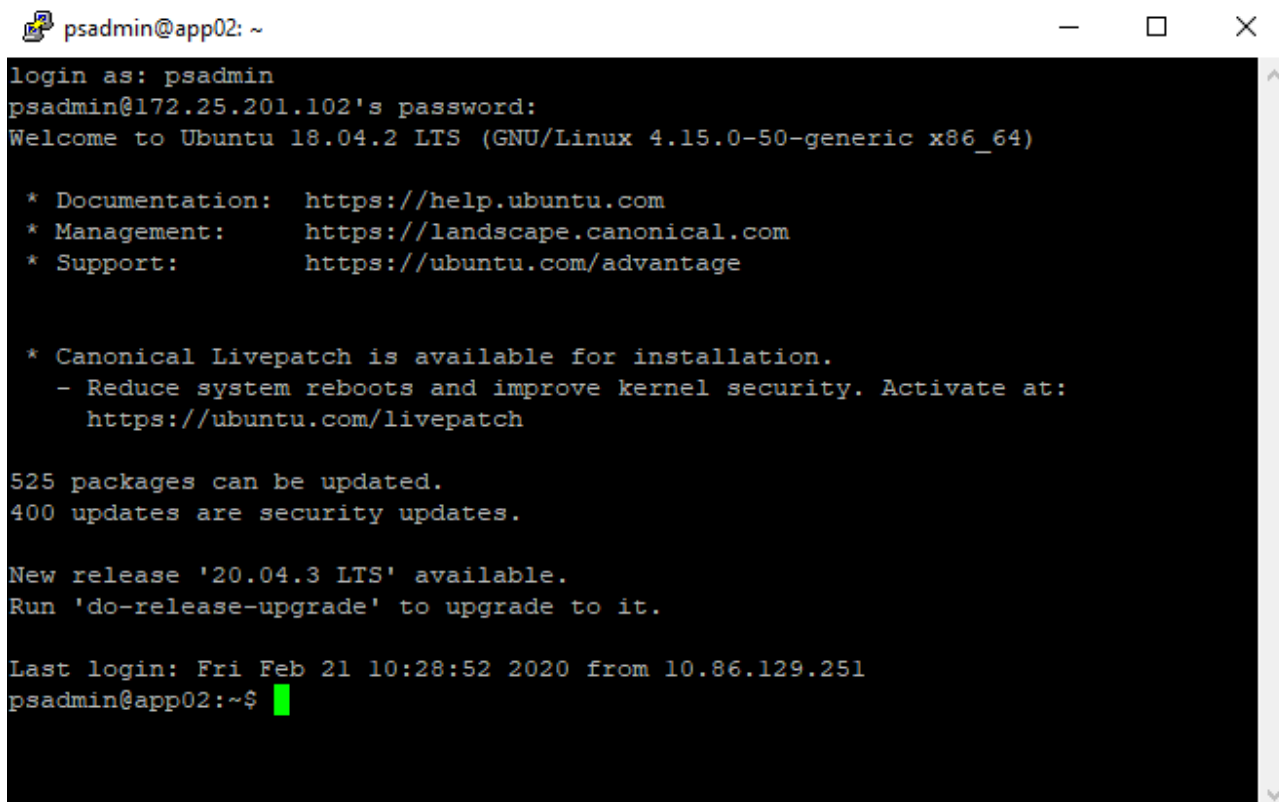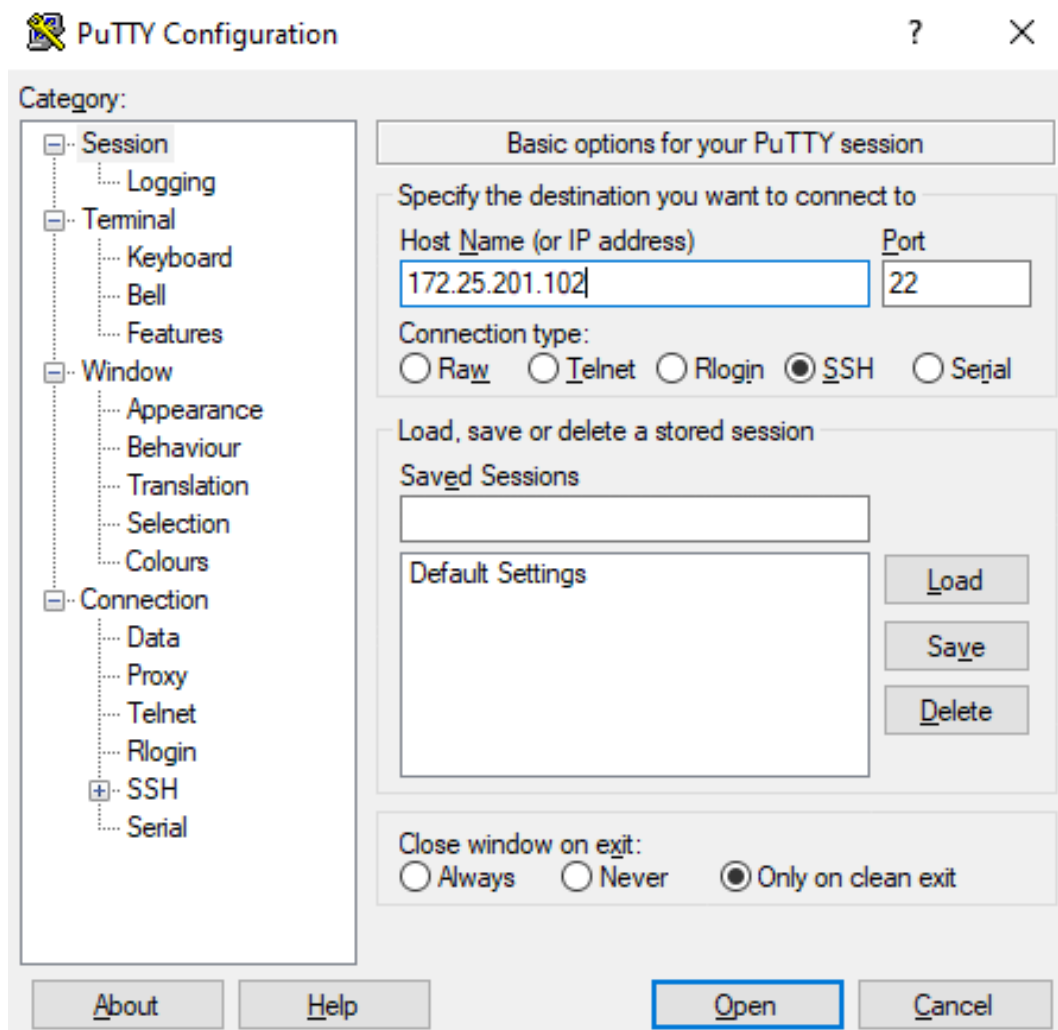

SFTP uses public key authentication in order to allow for secure data transfer, which is why it's recommended to *create dedicated key pairs* for this purpose. In AXIS OS, SSH-2 with RSA, DSA, ECDSA and ED25519 host keys are supported. AXIS OS 11.1 or higher includes a new OpenSSH version which removes deprecated authentication methods of using RSA keys. We recommend using the SFTP server's ECDSA or ED25519 host keys instead. By using the following commands, private/public host key pairs can be created in the OpenSSH server. The private key is exclusively used by the OpenSSH server while the public key will be used by the Axis device in form of a hashed MD5 or SHA-256 key that is generated from the public key.

Command	Description
sudo ssh-keygen -t dsa	Creates a private/public DSA host key pair
sudo ssh-keygen -t rsa	Creates a private/public RSA host key pair
sudo ssh-keygen -t ed25519	Creates a private/public ed25519 host key pair
sudo ssh-keygen -t ecdsa	Creates a private/public ecdsa host key pair

```

psadmin@app02: /etc/ssh
File Edit View Search Terminal Help
psadmin@app02:/etc/ssh$ sudo ssh-keygen -t rsa
Generating public/private rsa key pair.
Enter file in which to save the key (/root/.ssh/id_rsa): Test_Key
Enter passphrase (empty for no passphrase):
Enter same passphrase again:
Your identification has been saved in Test_Key.
Your public key has been saved in Test_Key.pub.
The key fingerprint is:
SHA256:gUYVTq8MVXMaf/TPoJS+/5M9iPt+tGDciHPiP0HvUuA root@app02
The key's randomart image is:
+----[RSA 2048]-----+
|      ..=0+ . . |
|      . = . * 0 . |
|      + 0 0 + 0 . |
|      . 0 0 = 0 0 . |
|      S + 0 0 0 |
|      E @ 0 |
|      % + + |
|      + + * . |
|      . = 0 0 . + |
+----[SHA256]-----+
psadmin@app02:/etc/ssh$

```

```

psadmin@app02: /etc/ssh
File Edit View Search Terminal Help
psadmin@app02:/etc/ssh$ ls -l
total 596
-rw-r--r-- 1 root root 553122 Feb 10 2018 moduli
-rw-r--r-- 1 root root 1580 Feb 10 2018 ssh_config
-rw-r--r-- 1 root root 3264 Mar 4 2019 sshd_config
-rw----- 1 root root 672 Sep 3 2019 ssh_host_dsa_key
-rw-r--r-- 1 root root 600 Sep 3 2019 ssh_host_dsa_key.pub
-rw----- 1 root root 227 Aug 6 2019 ssh_host_ecdsa_key
-rw-r--r-- 1 root root 172 Aug 6 2019 ssh_host_ecdsa_key.pub
-rw----- 1 root root 399 Aug 6 2019 ssh_host_ed25519_key
-rw-r--r-- 1 root root 92 Aug 6 2019 ssh_host_ed25519_key.pub
-rw----- 1 root root 1679 Aug 6 2019 ssh_host_rsa_key
-rw-r--r-- 1 root root 392 Aug 6 2019 ssh_host_rsa_key.pub
-rw-r--r-- 1 root root 338 Aug 6 2019 ssh_import_id
-rw----- 1 root root 1766 Jan 14 09:02 Test_Key
-rw-r--r-- 1 root root 392 Jan 14 09:02 Test_Key.pub
psadmin@app02:/etc/ssh$ █

```

Following the creation of the private/public key pair, we can use the following commands to generate the MD5 and/or SHA-256 hash keys that need to be used in the SFTP recipient configuration in the Axis device (see *Axis device configuration, on page 273*). Note that it's possible to create both an MD5 and/or SHA-256 hash key from either of the generated public host keys above. In the below example, we generate an MD5 or a SHA-256 hash key from the different public host keys.

Command	Example output	Description
sudo ssh-keygen -l -E md5 -f ssh_host_rsa_key.pub	b800c8958b8679a7bd66-c13669051466	Generates an MD5 hash from RSA public key
sudo ssh-keygen -l -E sha256 -f ssh_host_rsa_key.pub	gUYVTq8MVXMaf/TPoJS+/5M9iPt+tGDciHPIp0HvUuA	Generates a SHA-256 hash from RSA public key
sudo ssh-keygen -l -E sha256 -f ssh_host_ecdsa_key	xSUNCp2sUM0fvUEJFDq7PWtRoB-Qej/t5NgwS7NMLI2k	Generates a SHA-256 hash from ECDSA public key
sudo ssh-keygen -l -E sha256 -f ssh_host_ed25519_key	21NFP8emqsMLejiG3Nx-co2D64IZhdMiseDmpXiSaTj0	Generates a SHA-256 hash from ED25519 public key

```

psadmin@app02: /etc/ssh
File Edit View Search Terminal Help
psadmin@app02:/etc/ssh$ sudo ssh-keygen -l -E md5 -f Test_Key.pub
2048 MD5:b8:00:c8:95:8b:86:79:a7:bd:66:c1:36:69:05:14:66 root@app02 (RSA)
psadmin@app02:/etc/ssh$ sudo ssh-keygen -l -E sha256 -f Test_Key.pub
2048 SHA256:gUYVTq8MVXMaf/TPoJS+/5M9iPt+tGDciHPIp0HvUuA root@app02 (RSA)
psadmin@app02:/etc/ssh$ █

```

While the Axis device supports both MD5 and SHA-256 hash keys, it's recommended to use SHA-256 due to stronger security over MD5.

Axis device configuration

When creating a new SFTP recipient, please make sure to enter the right MD5 or SHA256 fingerprint of the host key that is used by your SFTP server. Based on the public/private key we created previously and the MD5 or SHA-256 hash keys we generated from the public host key (see *3rd party SFTP server, on page 270*), the SFTP recipient in the Axis device would look as below:

Add recipient

Name
SFTP Server Test

Type
SFTP

Host
172.25.201.102

Port
22

Folder

Username
psadmin

Password
.....

SSH host public key type
 MD5
 SHA256

SSH host public key (32 byte Hex)
b800c8958b8679a7bd66c13669051466

Use temporary file name

Test Cancel Save

Add recipient

Name
SFTP Server Test

Type
SFTP

Host
172.25.201.102

Port
22

Folder

Username
psadmin

Password
.....

SSH host public key type
 MD5
 SHA256

SSH host public key (Base64)
 gUYVTq8MVXMaf/TPoJS+/5M9iPt+tGDciHPip0HvUuA

Use temporary file name

Test Cancel Save

After the SFTP recipient has been created, action rules for image and/or video clip transfer can be created.

Add rule

Action
Send images through SFTP

Recipient
SFTP Server

Create folder
[Empty text field]

Filename
image%-m-%d_%H-%M-%S-%f_#s.jpg

Maximum sequence number (0 = ∞)
0

Camera
View Area 1

Stream profile
None

Custom image frequency

Prebuffer
03 seconds

Postbuffer
00:05 MM:SS

Maximum images (0 = ∞)
1

Cancel Save

Add rule

Action

Send video clip through SFTP

Recipient

SFTP Server

Create folder

Filename

video%-y-%m-%d_%H-%M-%S-%f_#.mkv

Camera

View Area 1

Stream profile

None

Prebuffer

03 seconds

Postbuffer

00:05 MM:SS

Cancel Save

IPv4-compliant mode

Important

Please ensure that the recommended *upgrade path* is followed prior to upgrading to AXIS OS 12, as deviating from this path may result in the loss of IP settings.

For a long time, the default IP address of Axis devices was 192.168.0.90 when there was no DHCP server available. The link-local address (169.254.0.0/16) was also always on by default. In other words, the camera's interface had a routable address and an IPv4 link-local address configured concurrently. This is not recommended by the RFC document.

Furthermore, if an Axis device was configured with a static IPv4 address, it would use this IP address regardless of whether another device was already using it on the same network segment, and would cause service interruptions for the other devices.

The screenshot shows the 'AXIS IP Utility' application window. At the top, there is a menu bar with 'File', 'View', 'Tools', and 'Help'. Below the menu bar is a toolbar with icons for a computer, a house, and a refresh symbol, followed by a search box labeled 'Type to filter'. The main area contains a table with three columns: 'Name', 'IP Address', and 'Serial Number'.

Name	IP Address	Serial Number
AXIS P1375 - B8A44F42B8B0	192.168.0.90	B8A44F42B8B0
AXIS P1375 - B8A44F42B4C6	192.168.0.90	B8A44F42B4C6
AXIS Q3527-LVE - ACCC8EB05E83	192.168.0.90	ACCC8EB05E83

Below the table is a network diagram. It shows three Axis cameras on the left, each connected to a central switch. The cameras are labeled with their IP addresses and subnets:

- Top camera: 192.168.0.90/24, 169.254.217.205/16
- Middle camera: 192.168.0.90/24, 169.254.72.129/16
- Bottom camera: 192.168.0.90/24, 169.254.38.19/16

 The switch is connected to a server on the right labeled 'NO DHCP server'. A red 'X' is placed over the connection between the switch and the server, indicating a problem or conflict.

For the aforementioned reasons, we made these changes to IPv4 addressing:


- Complete compliance with RFC IPv4
- Disable the link-local address when not in use
- A better customer experience when multiple factory-defaulted Axis devices are placed on the same network
- Addressing conflict detection and resolution

As of AXIS OS 11.7, we added:


- A new "Auto Link-local mode", which is triggered if the static IP address has an addressing conflict, or if a valid DHCP offer is not available.
- Address conflict detection for a static IP address. If a conflict is detected, the Axis device will not take an IP address that is in use by another device. Instead, it will fall back to the link-local address (in auto link-local mode).

What do these changes mean for you?


1. When you have a DHCPv4 server in your network, factory-defaulted Axis devices will take the IP addresses offered by the server. Each device will only have an IPv4 address configured and the link-local address will not be available.

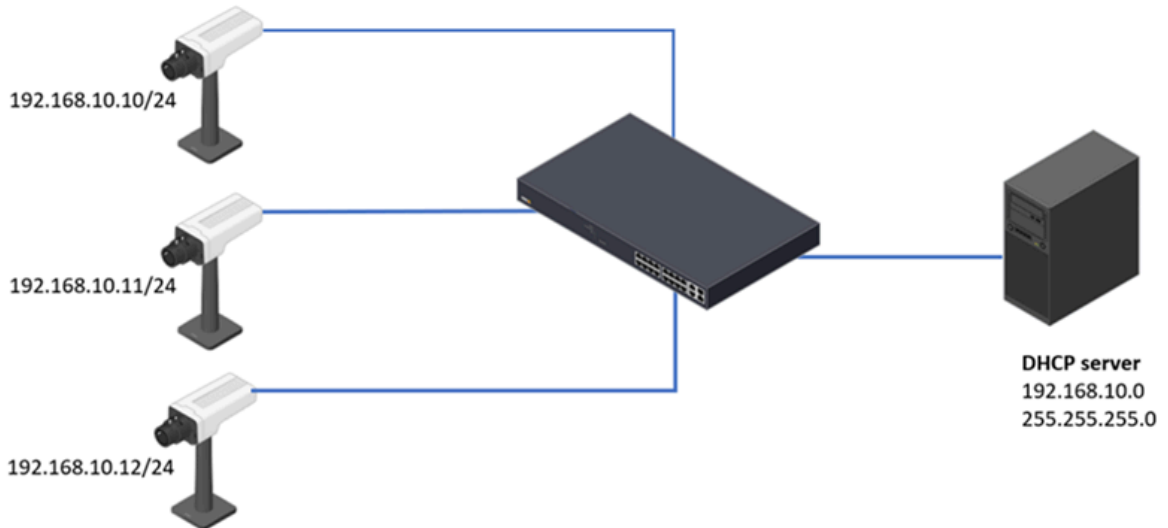


2. When you don't have a DHCPv4 server in your network, a factory-defaulted Axis device will not use 192.168.0.90/24 as the default IP address. Instead, a link-local address (169.254.0.0./16) will be configured.

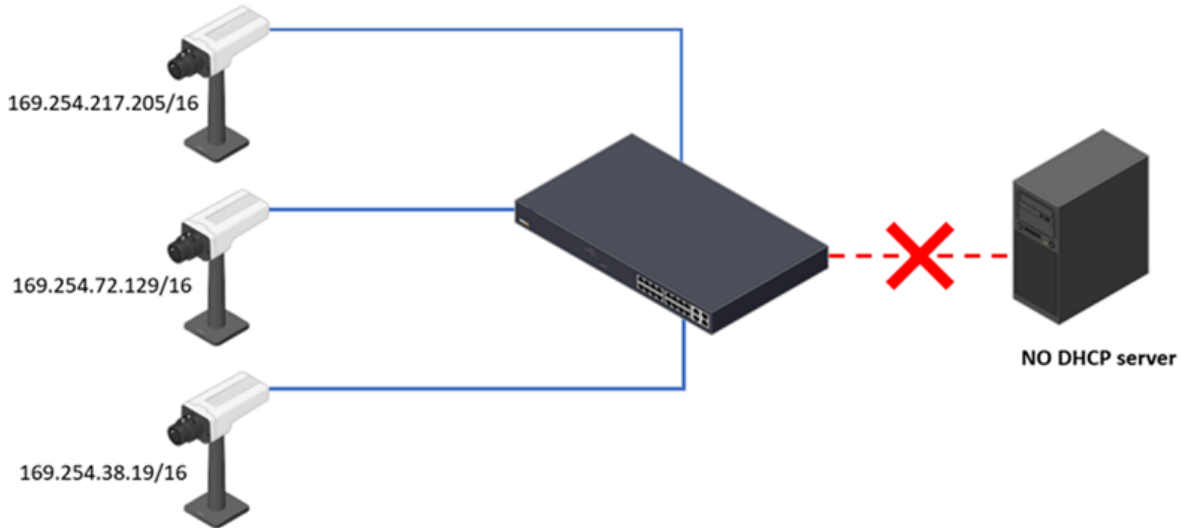

3. When you manually configure static IP addresses for multiple Axis devices, but you mistakenly assign a single IP address to multiple devices. Only the first device will use that IP address when you connect the devices to the network – all other units will fall back to the link-local address.

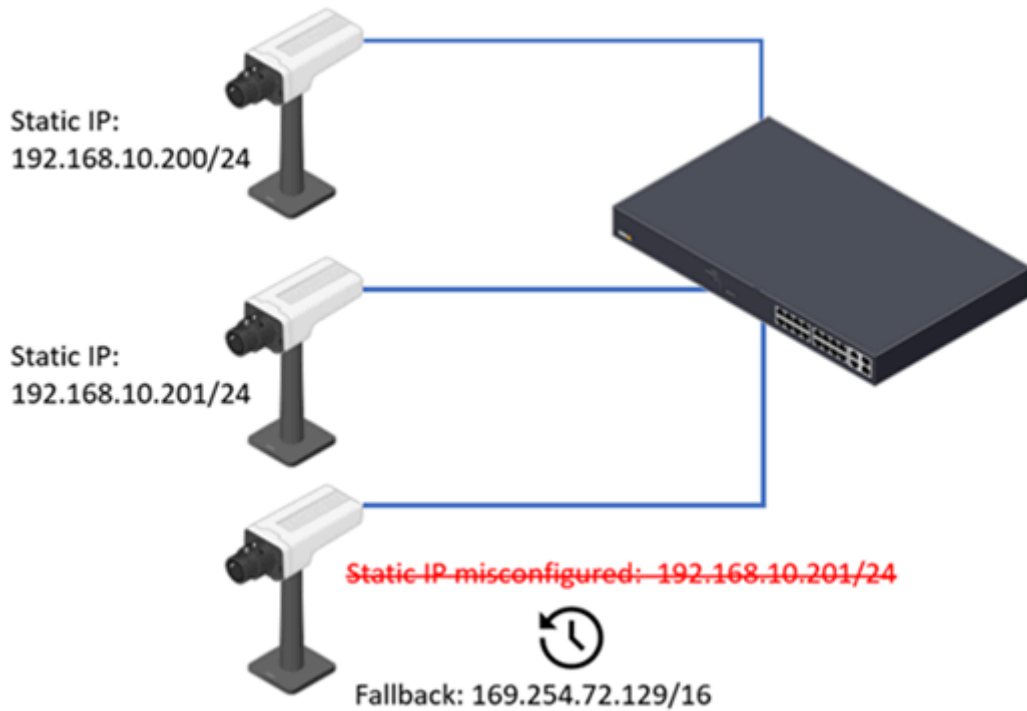


- When an Axis device has a static IP address and a second device connects to the network using the same IP address. In keeping with RFC recommendations, the Axis device will defend the IP address and retain it under any circumstances.

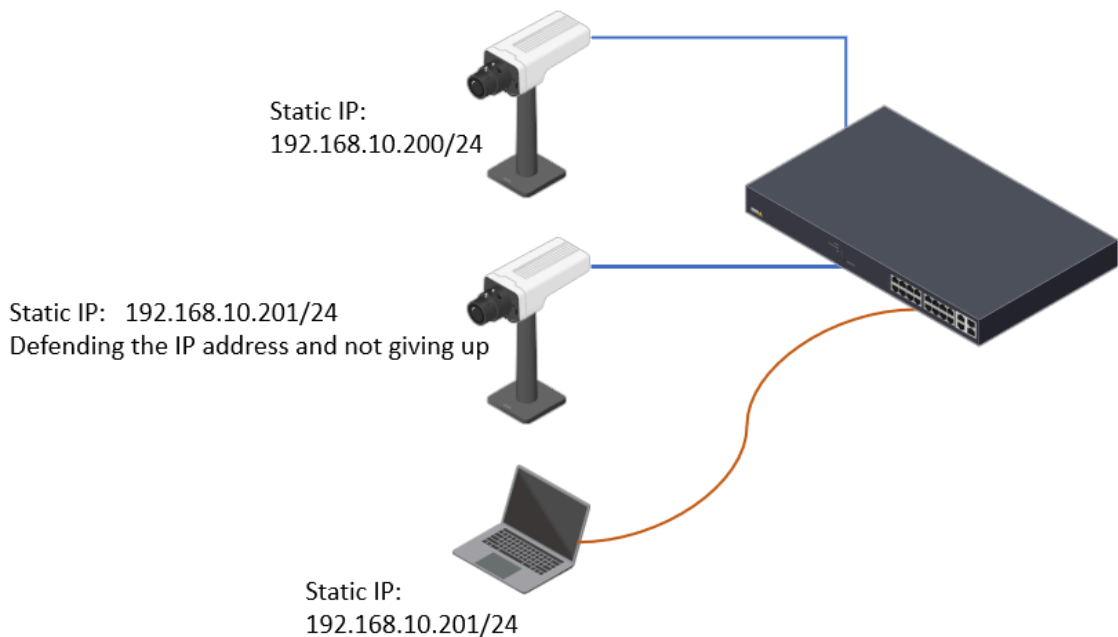

By default, the Axis device will fall back to the link-local address when no DHCP server is available. To make the transition smoother, use the setting (System > Network > IPv4) to select fallback to the static IP address or to the link-local address when DHCP is unavailable.


- ON: When DHCP fails to obtain a lease, the static IP address is configured.
- OFF: When DHCP fails to obtain a lease, the link-local address is configured.

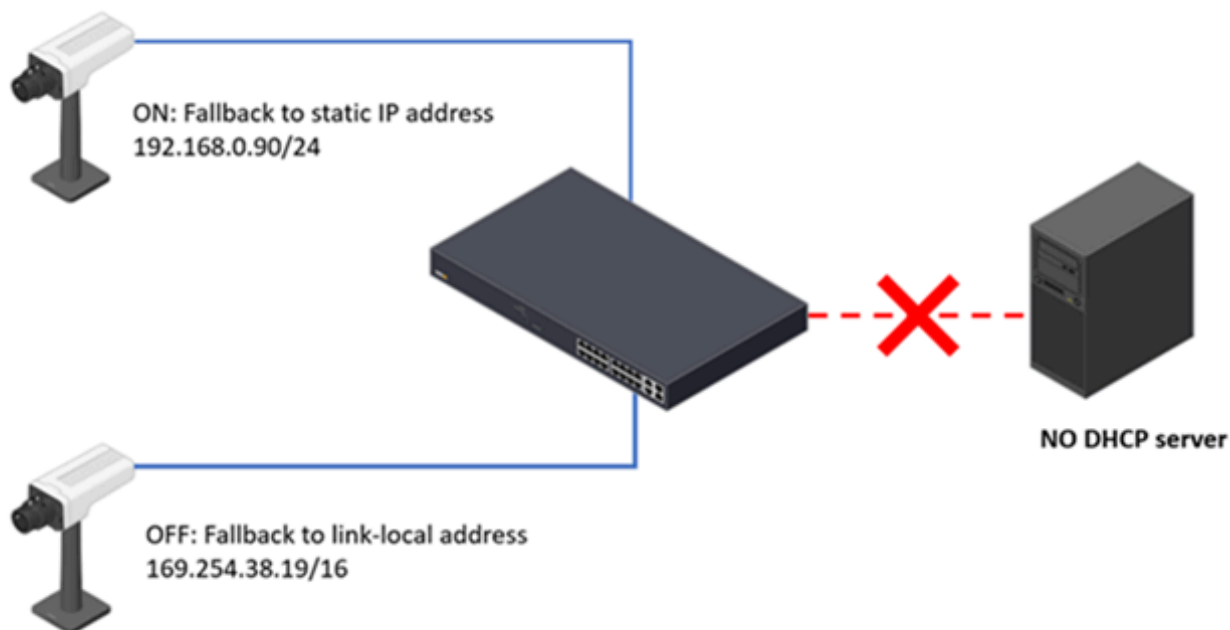


How to find an Axis device if it falls back to the link-local address

First find the network interface card on your computer connecting to the same LAN as the Axis device. The network interface card of the PC should also have a link-local address configured. To configure a link-local address, select one of the following three options.

- **OPTION 1: Automatically assign a link-local address when the DHCP server is unavailable**
 1. Right-click the network interface, select **Properties**, select **Internet Protocol Version 4 (TCP/IPv4)**, then click on **Properties**.

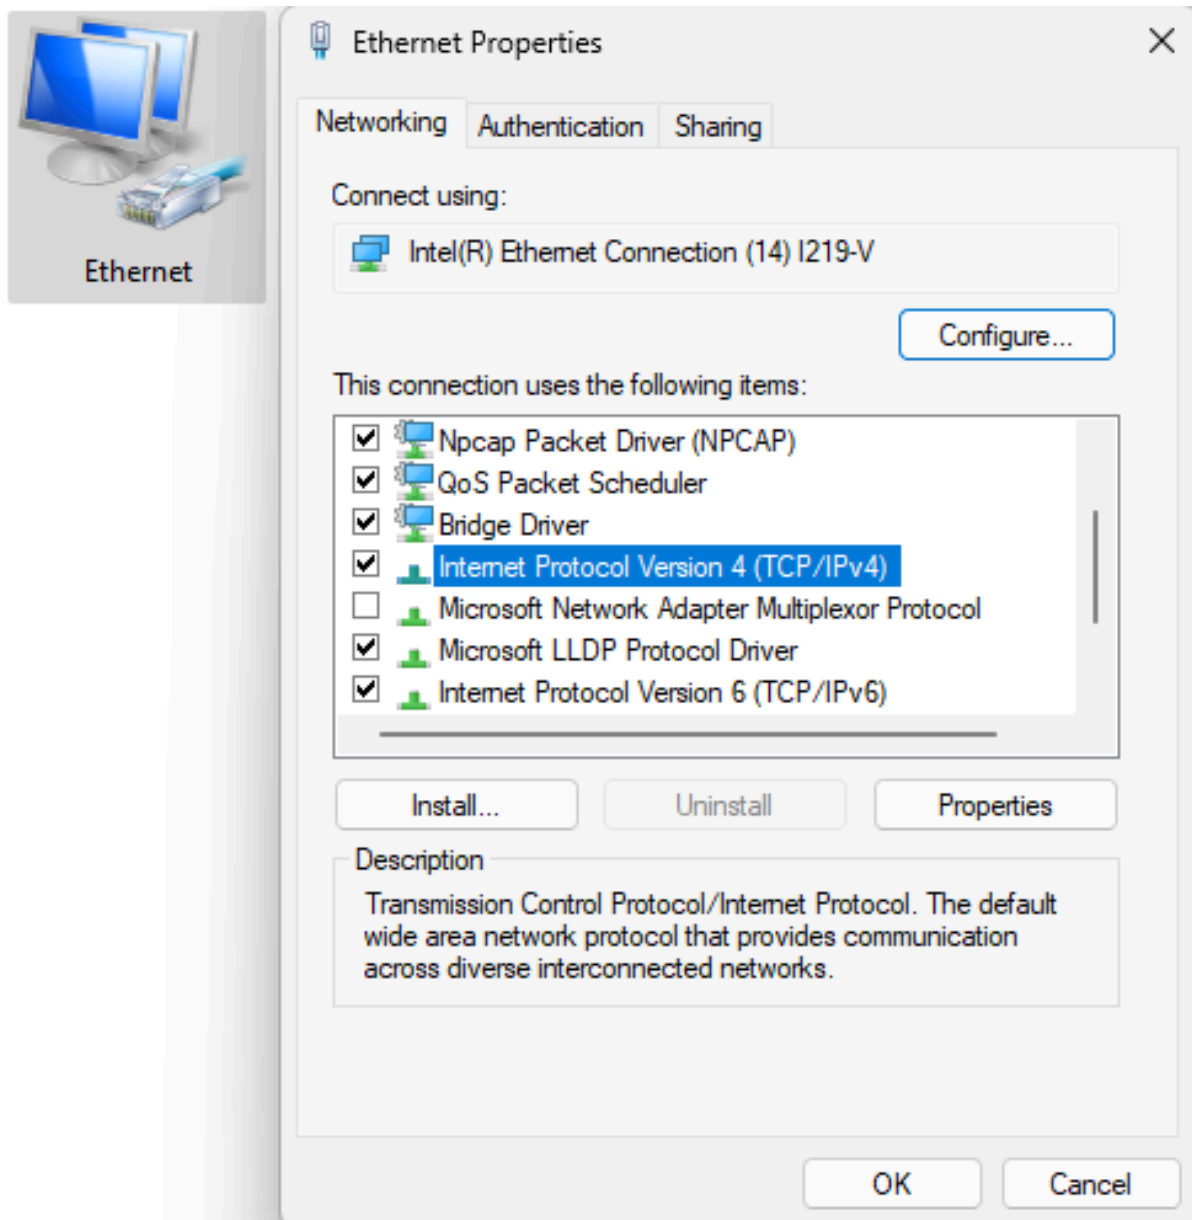


2. Select Obtain an IP address automatically and click OK.

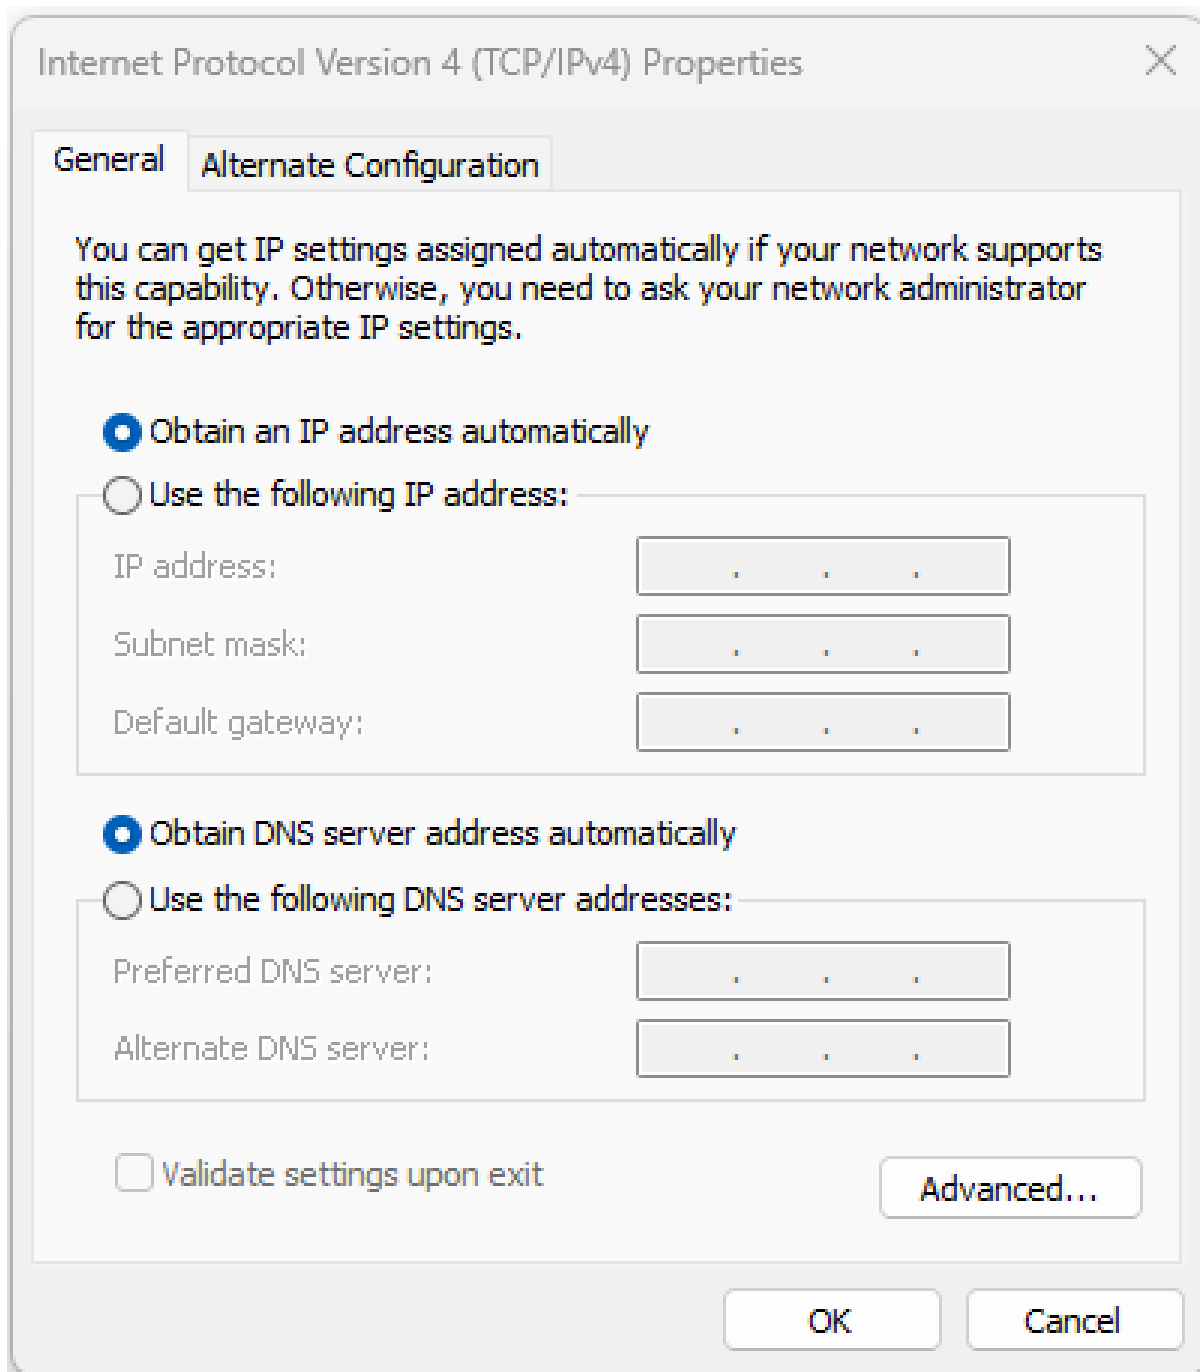


3. The Windows PC will automatically assign a link-local address to the network interface card.

```
Ethernet adapter Ethernet:
Connection-specific DNS Suffix . :
Link-local IPv6 Address . . . . . : fe80::bdb2:adb3:cf5d:ad76%22
Autoconfiguration IPv4 Address. . : 169.254.178.84
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . :
```


4. IP Utility can now discover devices that have fallen back to a link-local address.

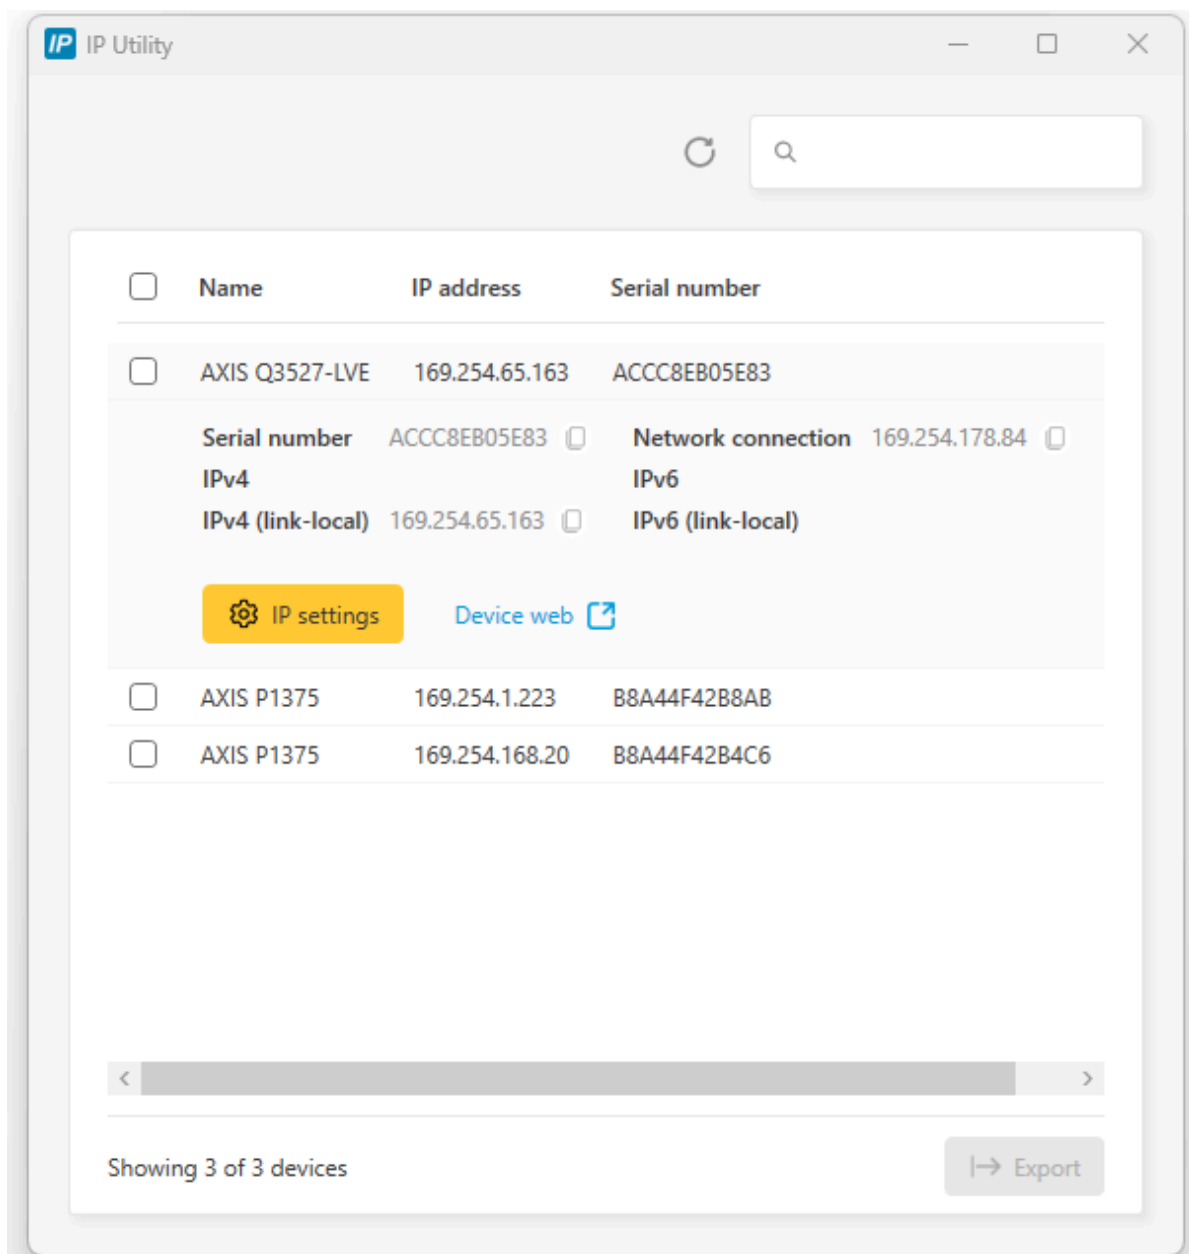


- **OPTION 2: Manually assign a link-local address when the DHCP server is unavailable**
 1. Right-click the network interface, select Properties, select Internet Protocol Version 4 (TCP/IPv4), and then click on Properties.

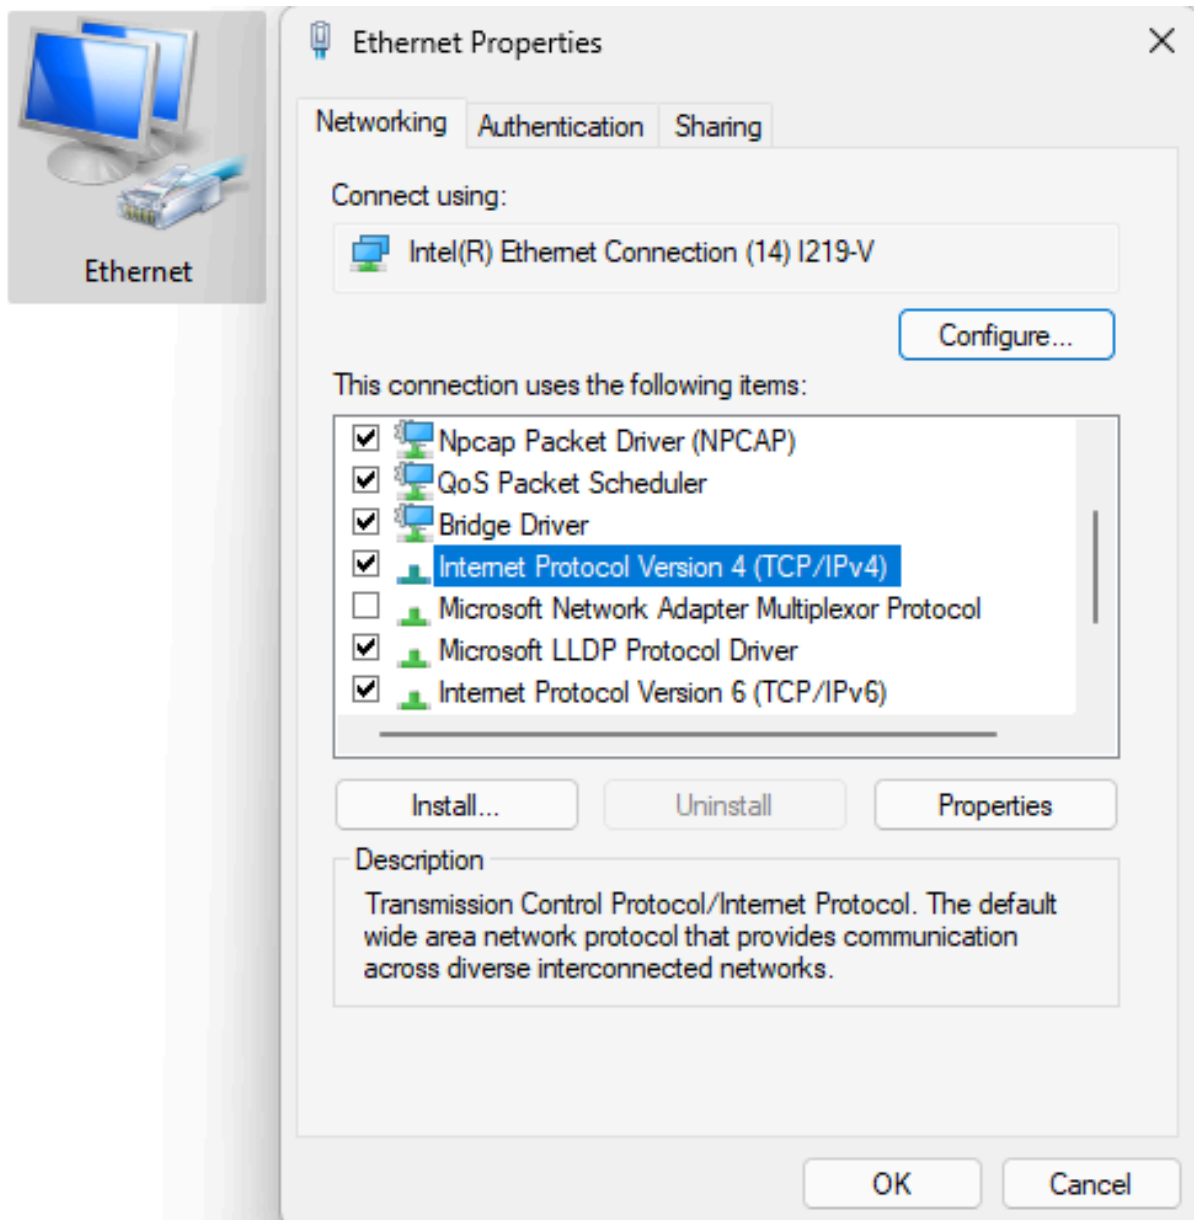


2. Manually assign a link-local address. You can use any unused IP address in the range 169.254.0.0/16, with the exception of 169.254.0.0 and 169.254.255.255.

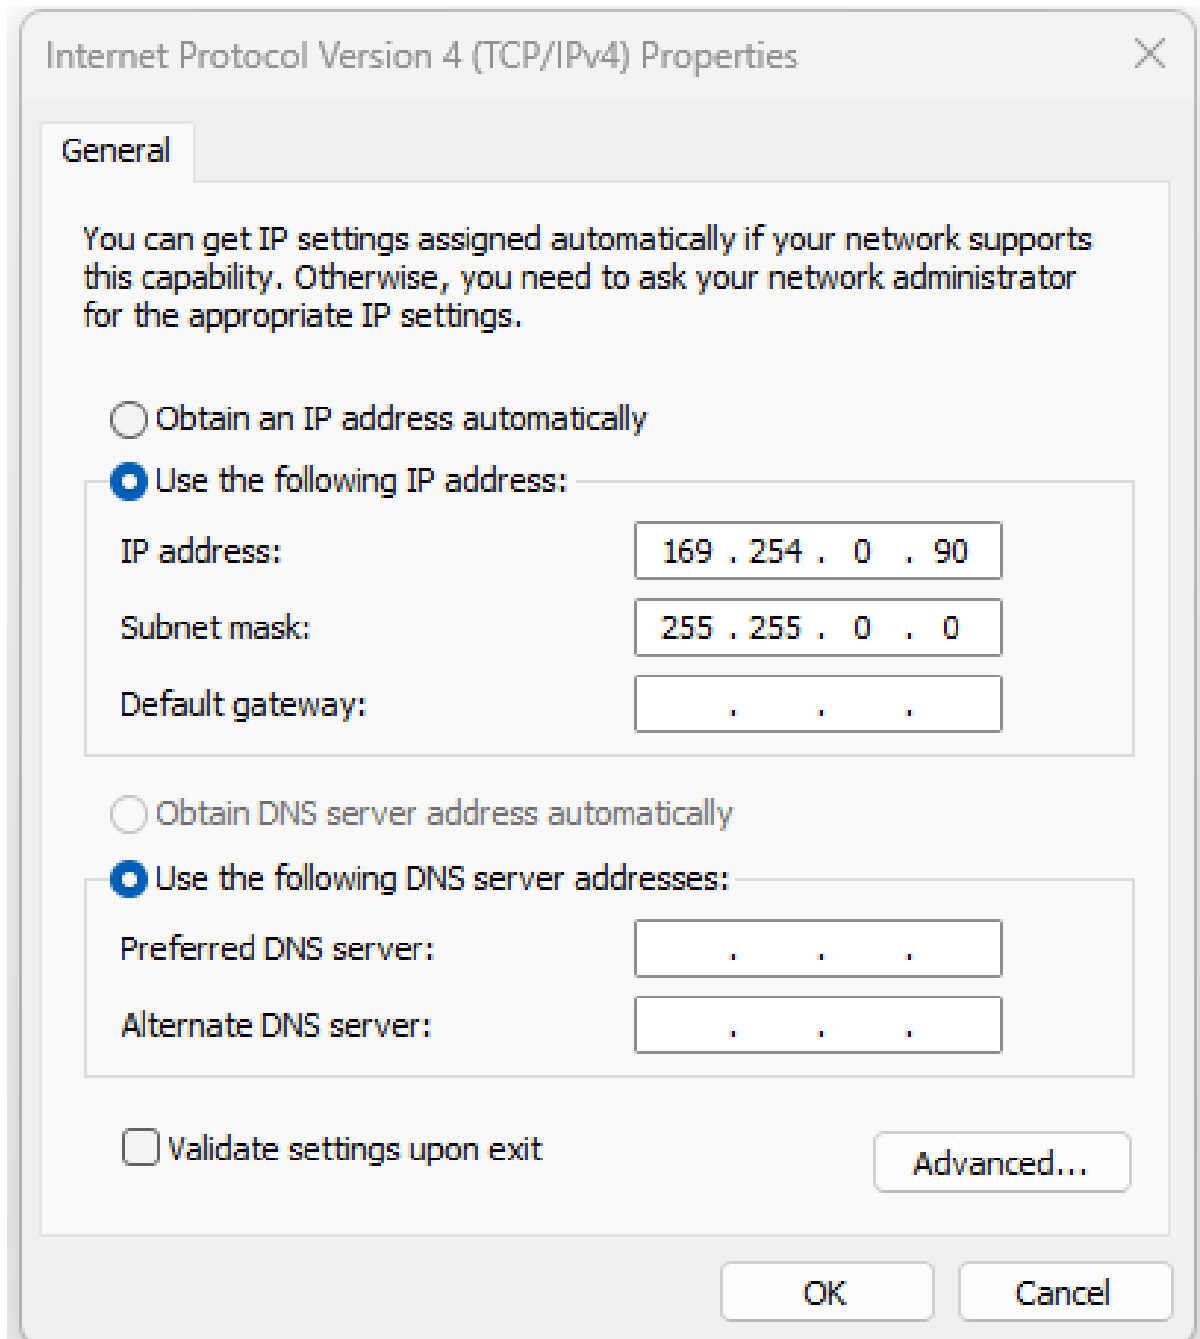


3. IP Utility can now discover devices that have fallen back to a link-local address.

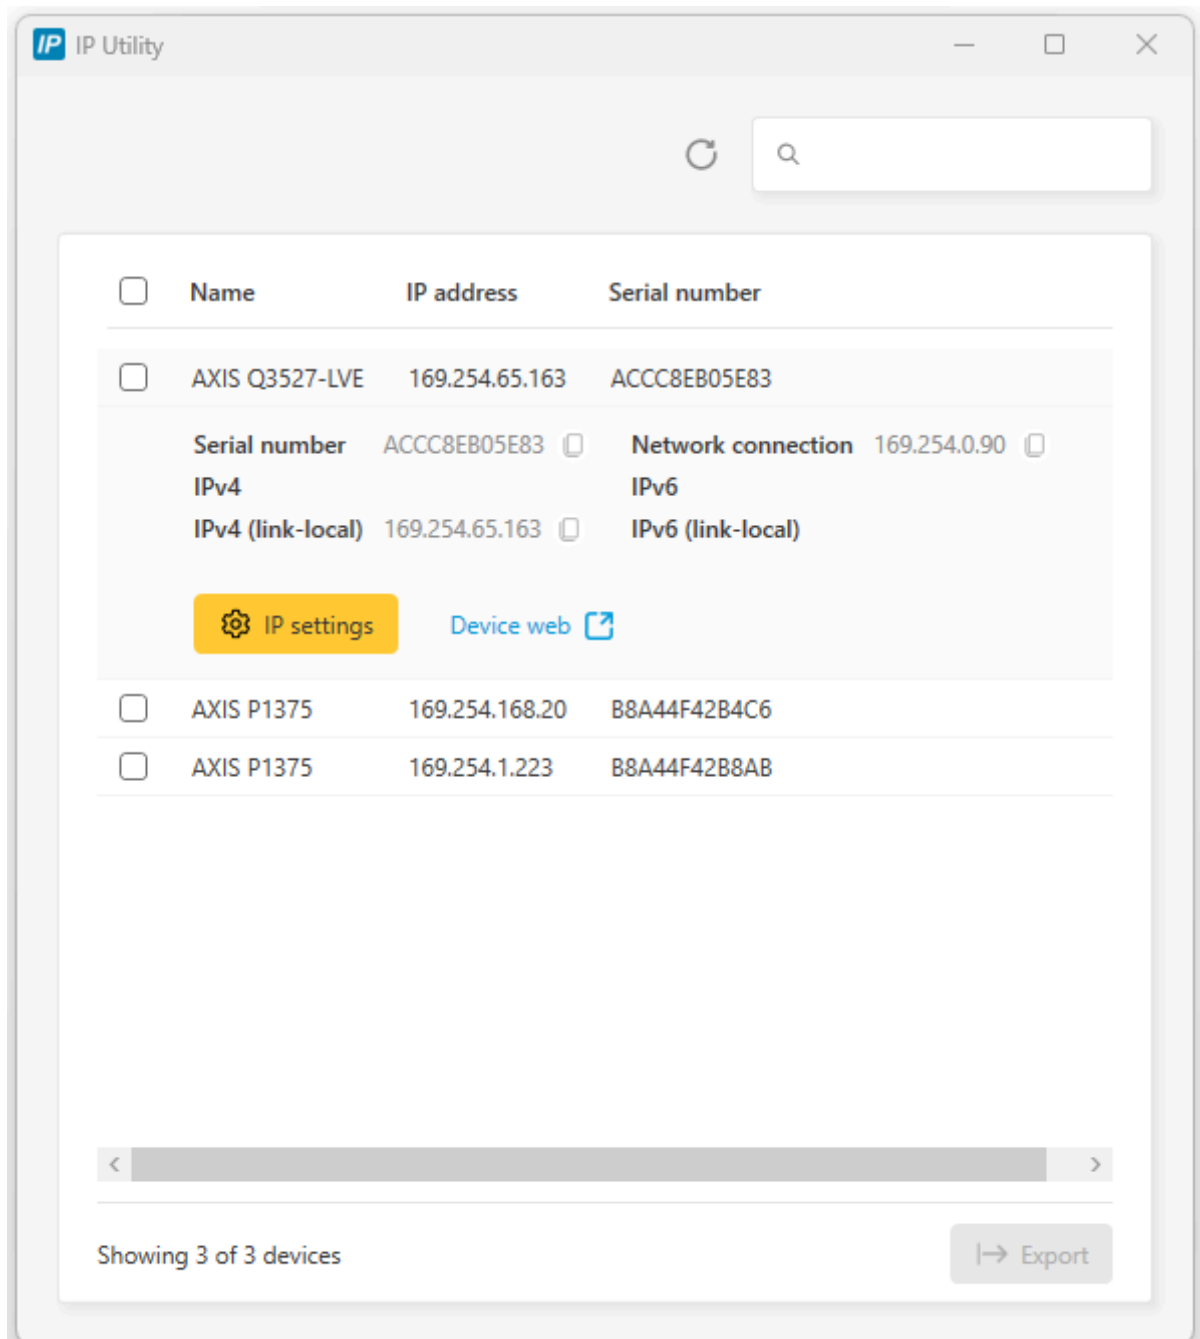


- **OPTION 3: Add a link-local address to the network interface card when a routable address is configured**
 1. Right-click the network interface, select Properties, select Internet Protocol Version 4 (TCP/IPv4), then click on Properties.

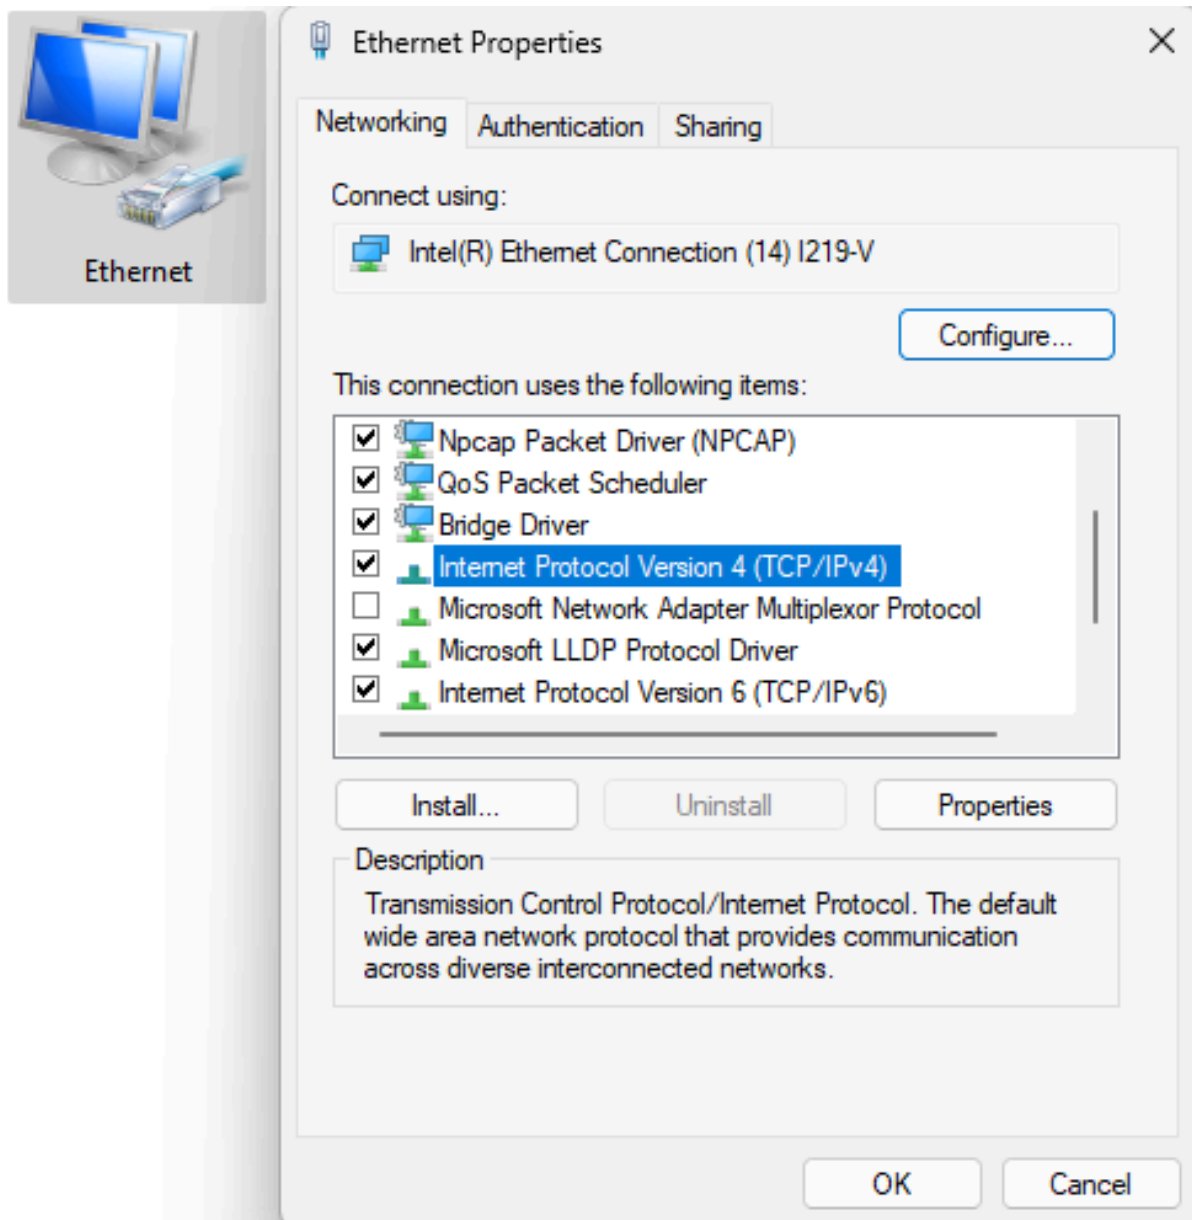

2. If the network interface card already has an IP address 192.168.0.120/24 configured; click **Advanced** to add an additional link-local address.

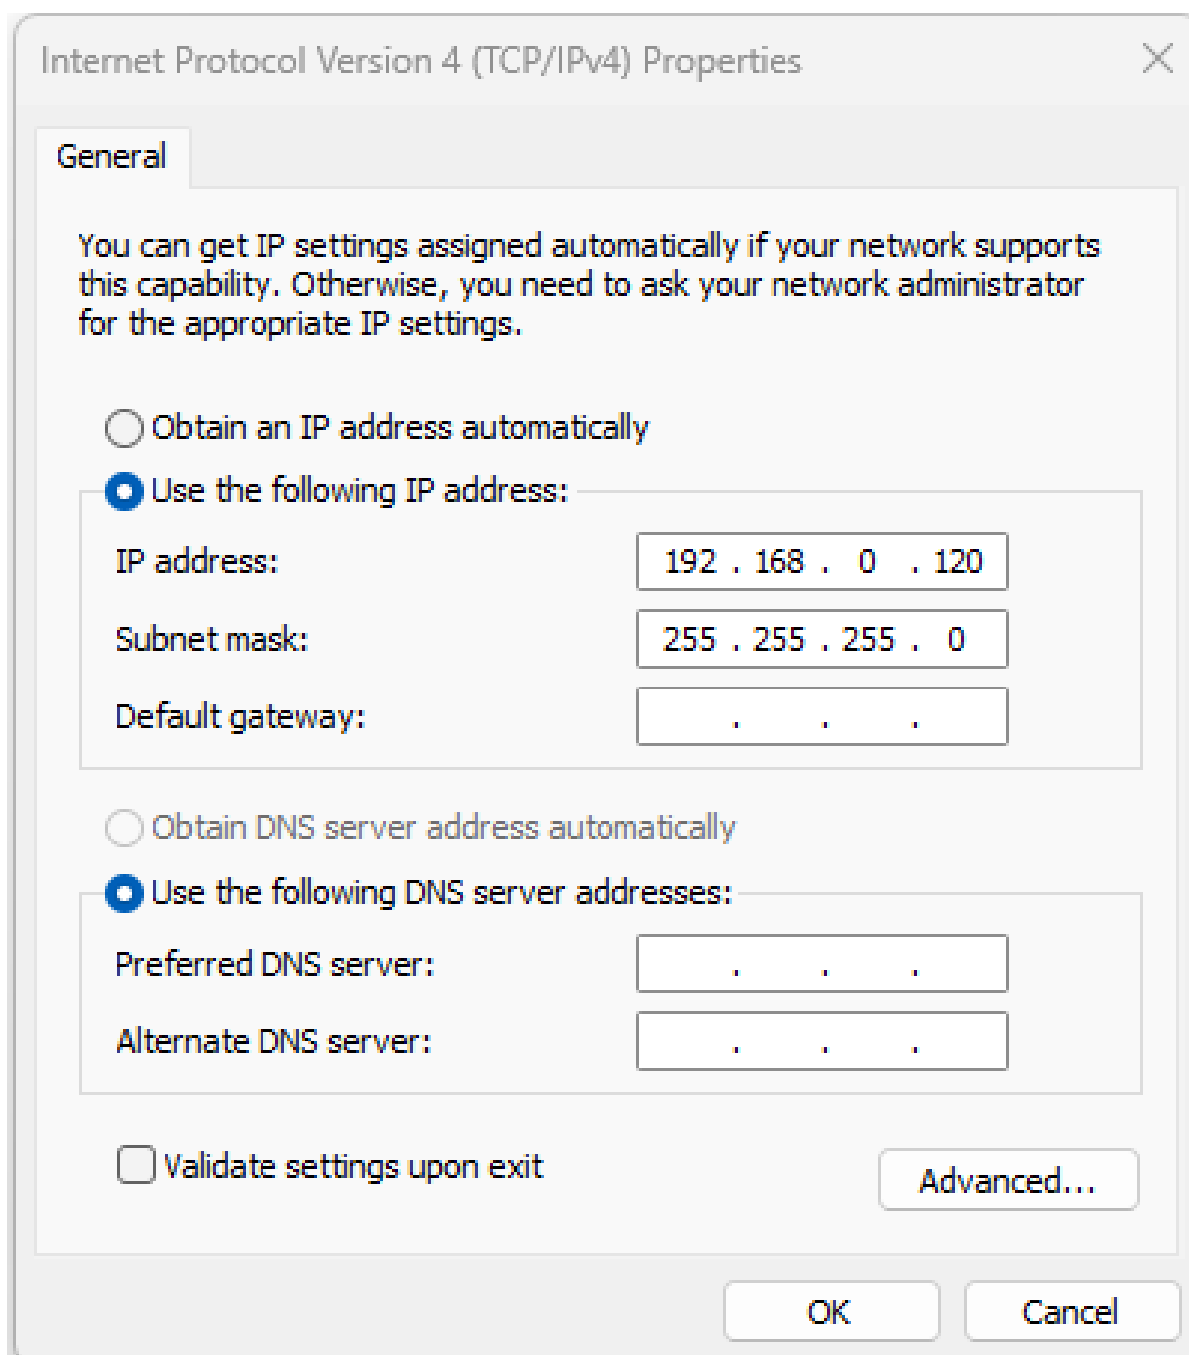


3. Under IP addresses, click **Add** to add the link-local address. You can use any unused IP address in the range 169.254.0.0/16, with the exception of 169.254.0.0 and 169.254.255.255.

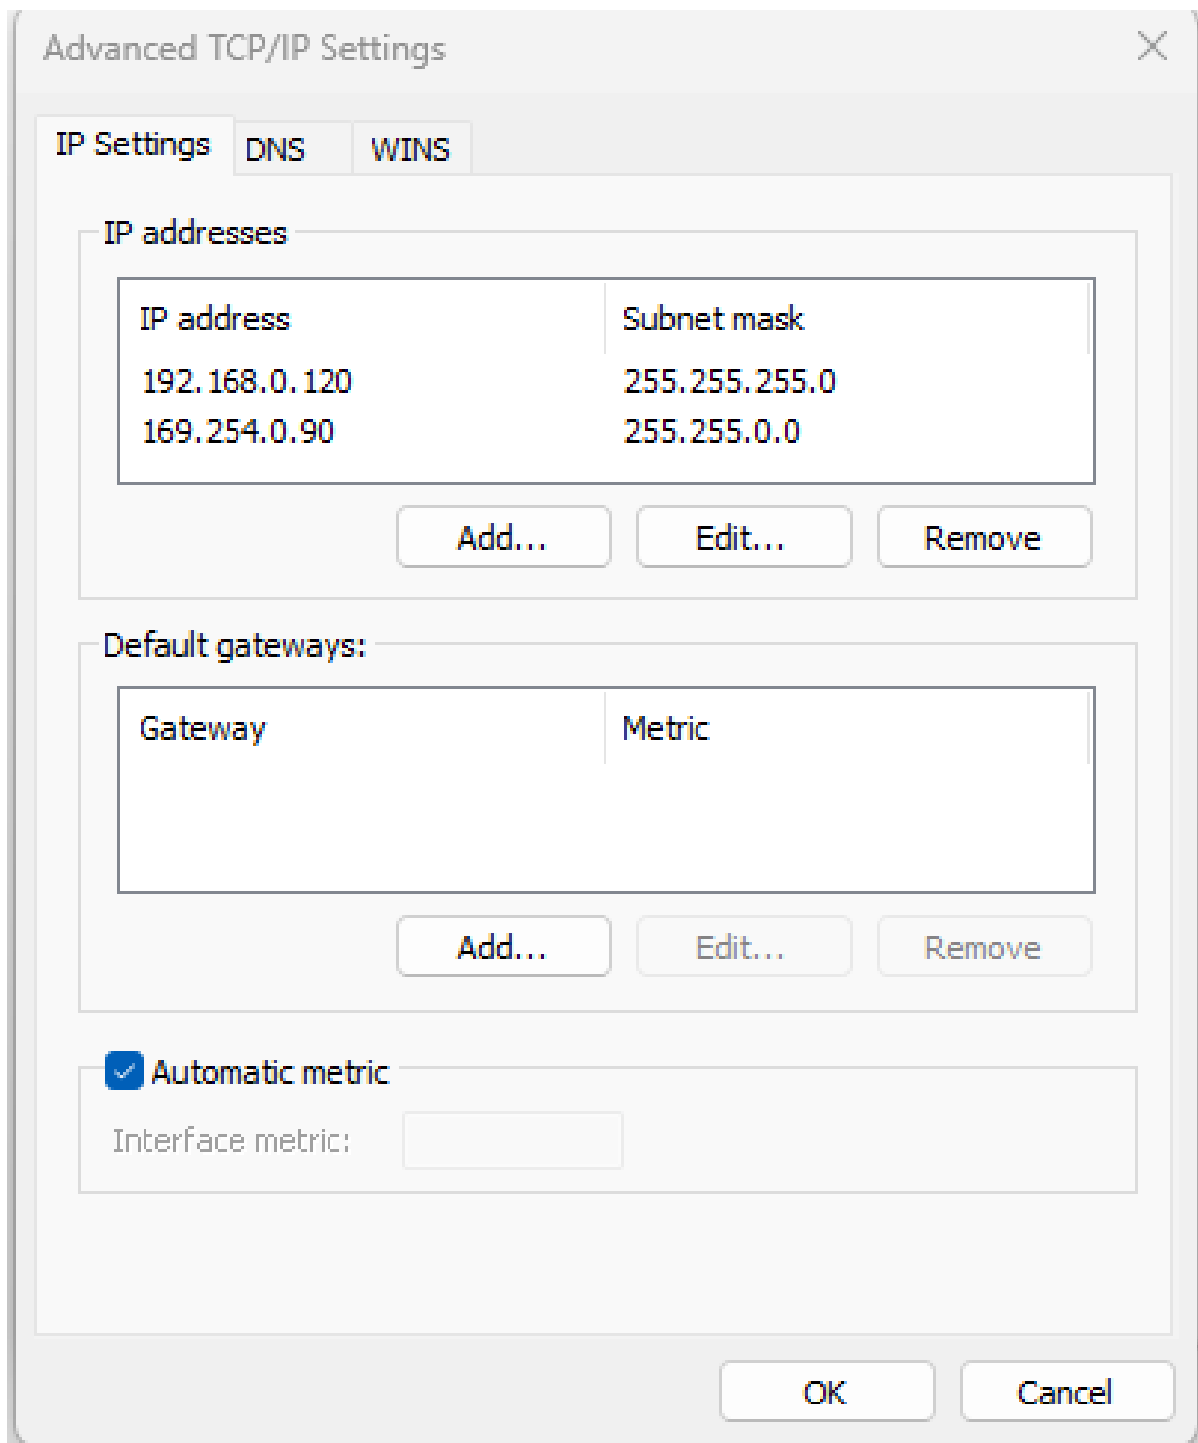

- The network interface card should now have two IP addresses configured.

```
Ethernet adapter Ethernet:
Connection-specific DNS Suffix . :
Link-local IPv6 Address . . . . . : fe80::bdb2:adb3:cf5:ad76%22
IPv4 Address. . . . . : 192.168.0.120
Subnet Mask . . . . . : 255.255.255.0
IPv4 Address. . . . . : 169.254.0.90
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . :
```

- IP Utility can now discover devices that have fallen back to a link-local address.

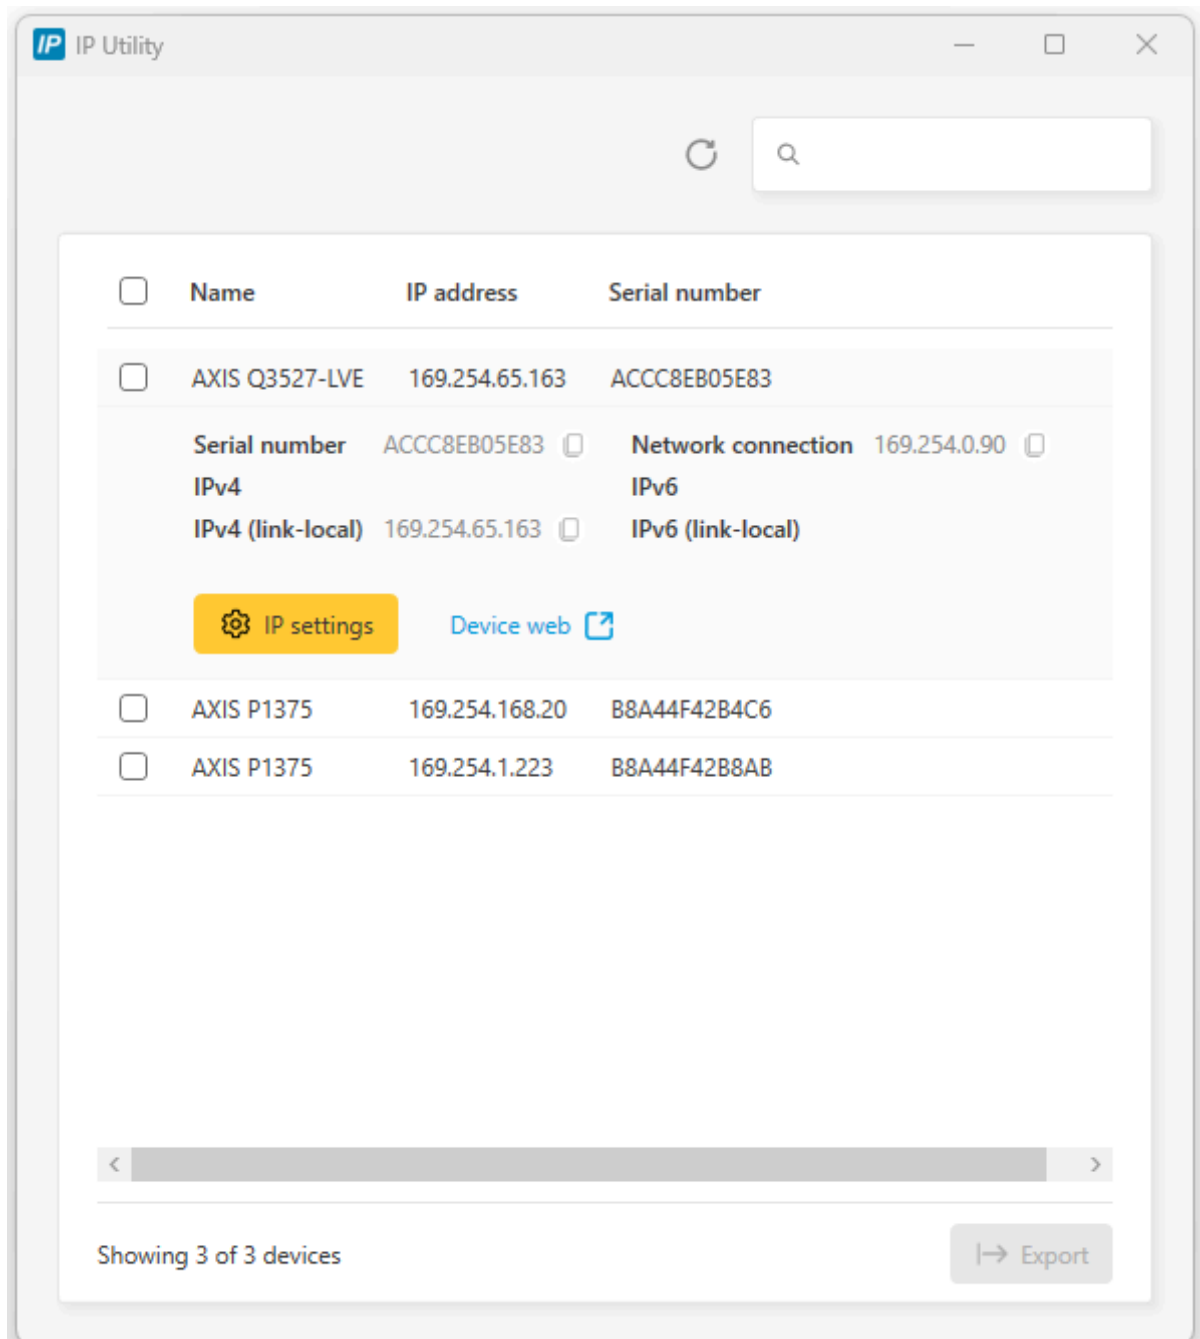

O3C (one-click cloud connection)

O3C (one-click cloud connection) is a protocol that allows an Axis device to connect via secure connection to a cloud video management system, such as Genetec Stratocast. In order to connect an Axis device, you need the so-called OAK (owner authentication key) which you need in order to verify ownership when you register the device with an O3C-based service.

The OAK is included on a printed paper with each Axis device. Keep this document in a safe place – it should not be discarded or disclosed to third parties. If you have lost your OAK, you can retrieve it by logging in to the device as an admin user. Follow one of the paths below, depending on the AXIS OS version of your device.

Note

This requires that the device runs AXIS OS 5.51.7, 6.50.5.2, 8.40.4, 9.80.2, 10.0.0 or higher. Please upgrade if your device is running a lower version. Axis cannot assist in retrieving the OAK for you. For the external retrieval, an outgoing HTTPS (TCP port 443) connection to "oakcgi.o3c.axis.com" needs to be available.

AXIS OS 5.51 & LTS 216 (AXIS OS 6.50)
 Go to Setup > Options > Support > System Overview.

- ▶ **Basic Setup**
- ▶ **Video**
- ▶ **Live View Config**
- ▶ **PTZ**
- ▶ **Detectors**
- ▶ **Applications**
- ▶ **Events**
- ▶ **Recordings**
- Languages**
- ▼ **System Options**
 - ▶ Security
 - ▶ Date & Time
 - ▶ Network
 - ▶ Storage
 - ▶ Ports & Devices
 - ▶ Maintenance
 - ▼ Support
 - Support Overview
 - System Overview**
 - ▶ Logs & Reports
 - ▶ Advanced
- About**

System Overview

Firmware version: [REDACTED] Serial number: [REDACTED]
 OAK: [REDACTED]

[IP address](#): [REDACTED] [Date & Time](#) 2022-01-24 07:55:31

[Connected clients](#): 0 Video ([View log](#)) Uptime: 242 days, 23:36

Recently used bandwidth: 0.05 Mbit/s Time mode: NTP

Security

Defined users: 2 Anonymous access: Disabled HTTPS: No IP address filter: Off

Optional Network Services

Service	Enabled	Protocol	Server port
FTP	Yes	TCP	21
RTSP	Yes	TCP	554
Bonjour	Yes	UDP	5353
HTTPS	No	TCP	443
SNMP	No	UDP	161
UPnP™	Yes	UDP	1900
		TCP	49152 (auto)
ARP/Ping IP address setting	Yes	-	-
Link-local address	Yes	-	-
NAT traversal	No	-	-
SOCKS	No	-	-
AXIS Internet Dynamic DNS	No	-	-
IP address filter	No	-	-

Event Settings

Rules defined: 3 Rules enabled: 1

Image Settings

	Res.	Comp.	Rot.	Color	Overlay	Source
Camera	4CIF	30	0	Yes	None	PAL

LTS 2018 (AXIS OS 8.40) & LTS 2020 (AXIS OS 9.80)
 Go to System > AVHS and click on Get key.

AVHS

Allow AVHS
One-click

Proxy settings

Host Port

Login

Password


Authentication method
Basic

[Save](#)

Owner authentication key (OAK)

[Get key](#)

Make sure the device is connected to the internet without a firewall or proxy.

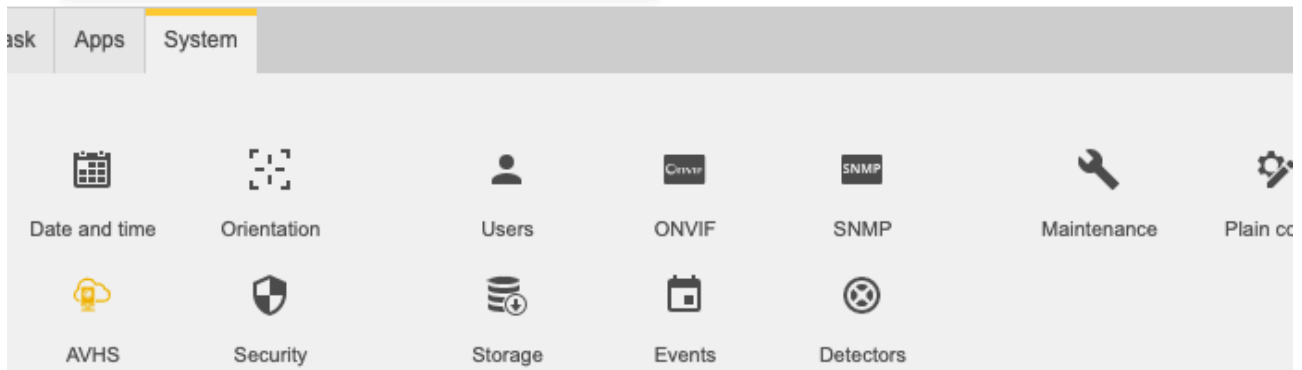

AXIS OS 10.0 or higher

Go to System > O3C and click on Get key.

One-click cloud connect

Allow O3C
 One-click

Proxy settings
 Host Port
 3128

Login

Password


Authentication method
 Basic

Save

Owner authentication key (OAK)


Get key

Make sure the device is connected to the internet without a firewall or proxy.

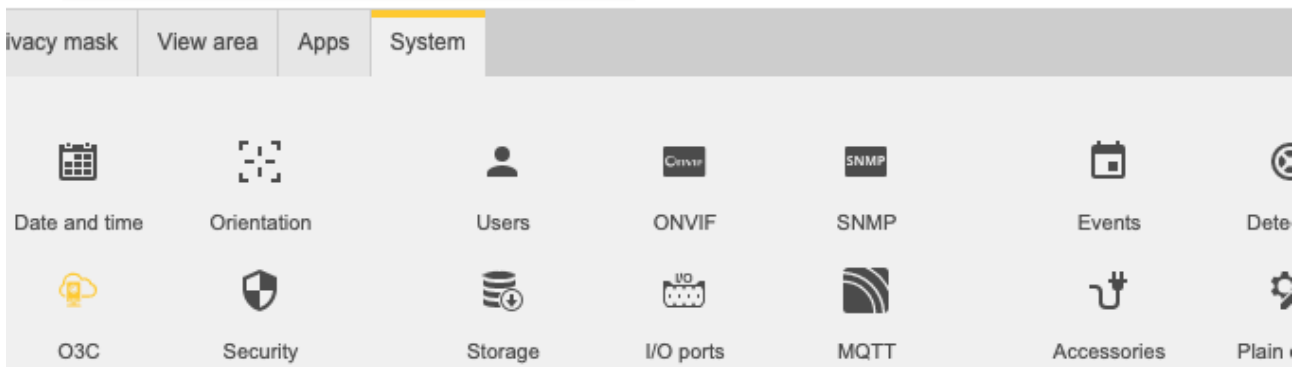

AXIS OS 10.9 or higher

Go to **System > Network** and click on **Get key**. Note that this applies to devices with support for the web interface introduced in AXIS OS 10.9. For products that don't support this web interface, follow the instructions above for **AXIS OS 10.0**.

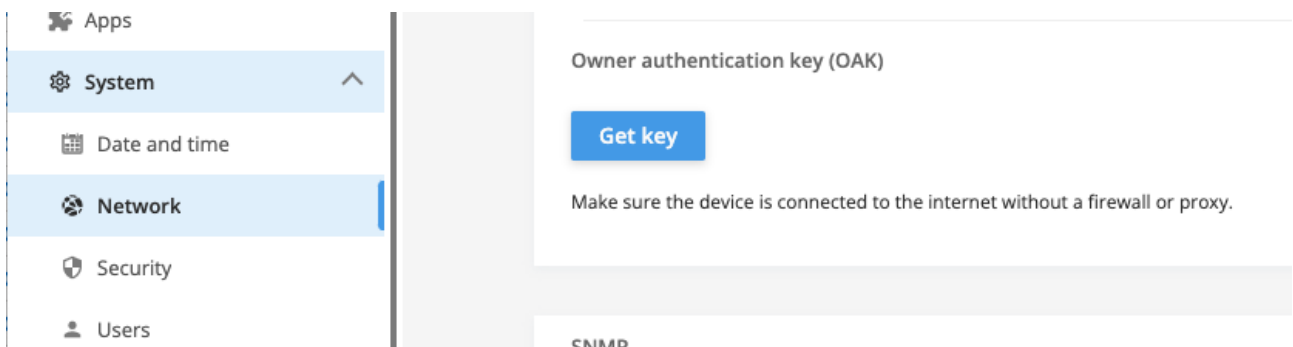

EST (Enrollment over Secure Transport)

Digital certificates are critical for securing devices and networks, but managing them can be complex and time-consuming. Certificates expire and must be renewed regularly. Without automation, this process is repetitive and manual, especially in large deployments or environments with mixed device types.

Device management tools can assist with semi-automated workflows, reducing some of the effort. However, even with such tools, IT teams still need to coordinate processes and perform individual per-device configuration through web interfaces or APIs. Management tasks including initial setup, ongoing maintenance, and monitoring can be time-consuming and the lack of centralized visibility often limits operational efficiency.

What is EST?

AXIS OS 12.9 introduces support for Enrollment over Secure Transport (EST), which is a protocol for securely provisioning certificates to devices. Defined in RFC 7030, EST is a standards-based solution designed to simplify and automate the full certificate lifecycle, including:

- Enrollment – securely issuing new certificates to devices
- Renewal – automatically replacing expiring certificates
- Re-enrollment – updating certificates based on IT policies

EST supports IT-defined policies for certificate attributes, such as validity period, key type (RSA/ECC) or the key size, and it uses HTTPS exclusively.


As EST centralizes certificate management, it gives IT teams improved visibility, monitoring and control over the device certificate lifecycle. Its standard-based design allows integration with a variety of EST servers, including HPE Aruba ClearPass OnBoard, Cisco Identity Services Engine (ISE), Key factor EJBCA and others. This makes EST particularly suitable for IoT/IT environments, enterprise networks, and large-scale device management scenarios, where secure, scalable, and automated onboarding is essential.

Key Benefits of EST

- IT-policy managed automated certificate enrollment, renewal, and re-enrollment removing entirely the need for manual, time-consuming configuration.
- State-of-the-art secure communication via HTTPS-only TLS 1.2/1.3.
- Centralized visibility/monitoring for IT teams.
- Standard-based (RFC 7030) and integrates with IT-infrastructure.
- Scalable solution for IoT, enterprise networks, and device management.

How EST works

The following is a high-level overview of the steps in an automated certificate enrollment using EST.

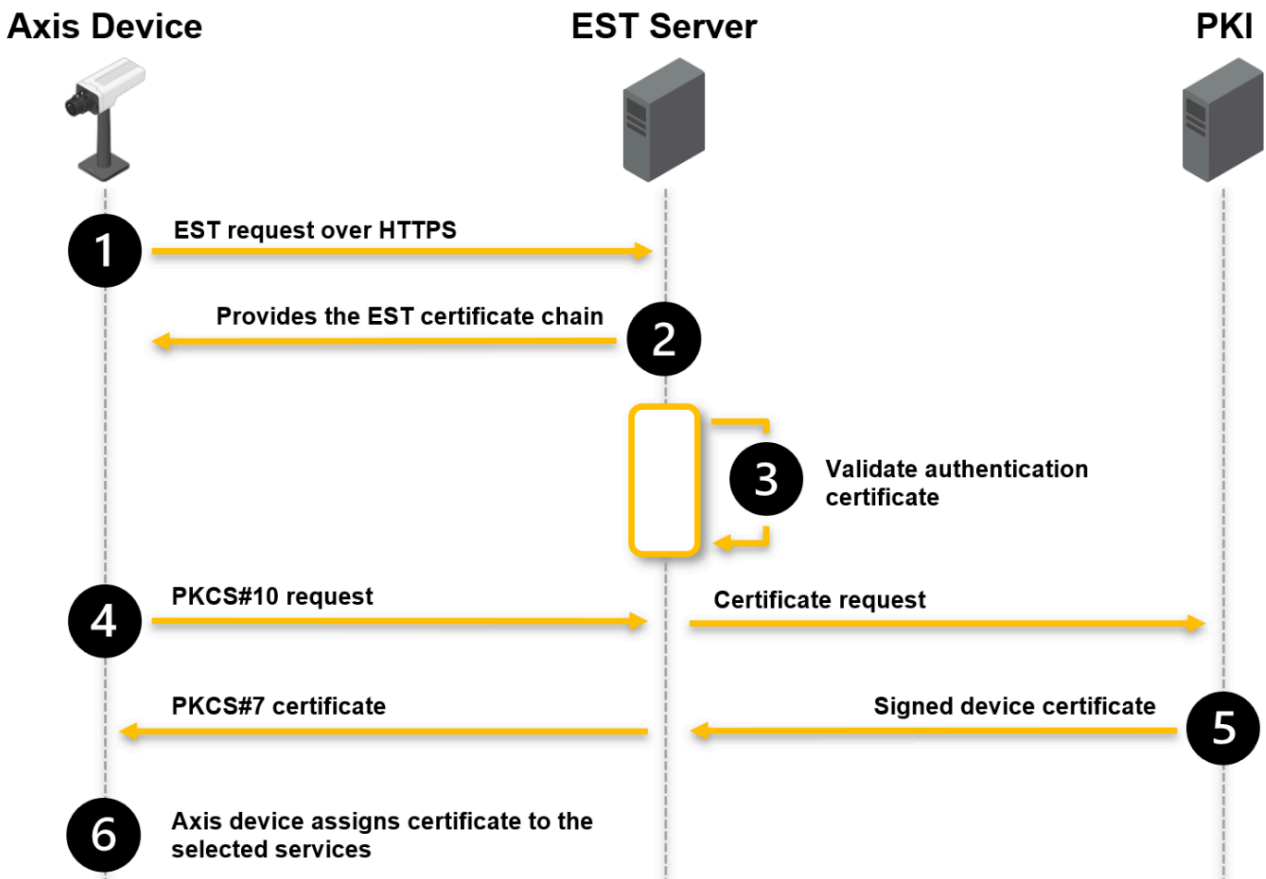

1 *Secure connection:* the device sends an EST request over HTTPS to the EST server and establishes a secure encrypted channel. For this, the device must trust the server's HTTPS certificate.

2 *Certificate chain provisioning:* the EST server provides the EST certificate chain. This is only done in case the EST certificate chain is not present yet on the device.

3 *Device authentication:* the EST server validates the device's authentication certificate.


4 *Certificate request/issuance:* the device generates a PKCS#10 certificate signing request and sends it to the EST server. The EST server forwards the request to the PKI, which issues the device certificate based on the configured policy.

Certificate delivery: the EST server delivers the issued certificate back to the device using PKCS#7 format.

6 *Server assignment:* the device assigns the issued certificate automatically to services such as HTTPS, 802.1x, MQTT and others.

Note that in some implementations, the EST server and the PKI functions may be combined for simplicity.

Axis device configuration

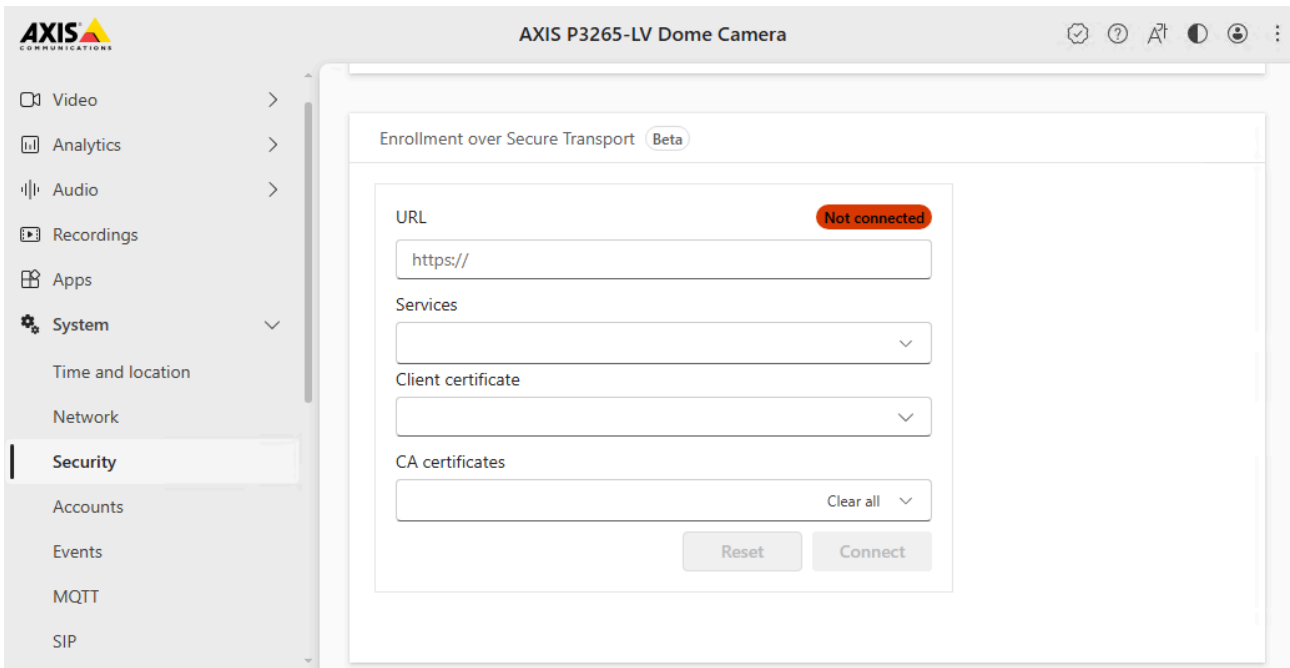

To use EST on your device, go to **System > Security** and configure the following:

Parameter	Value
URL	<p>The server URL is defined using a well-known URI:</p> <p><code>https://<est-server>/ .well-known/est/ <profile>/<operation></code></p> <ul style="list-style-type: none"> • HTTPS is mandatory and the Axis device needs to trust the client-server certificate from the EST server. • <est-server> is the IP address/DNS name of the EST server. • / .well-known/est is the fixed well-known path. • <profile> is optional and depends on the EST server configuration. Profiles can distinguish between different PKIs or CAs, enrollment policies, certificate types and other properties. • <operation> is one of the standard EST endpoints (cacerts, simpleenroll, etc.). This part is automatically added in the background.
Services	Select the services that should automatically be configured with the enrolled certificate.
Client certificate	Select a client certificate for the authentication to the EST server. The EST server needs to trust this certificate for certificate enrollment.
CA certificates	Select the CA certificates from the EST server HTTPS endpoint so the Axis device trusts the configured EST server.

Certificate renewal

The Axis device will attempt to renew the certificate halfway through its period of validity. This early renewal reduces the risk of service disruption if a renewal attempt fails. The device retries the renewal once per day until it succeeds.

EST configuration status

- **Not connected:** The EST configuration has not been done or the Axis device was not able to reach or trust the configured EST server.
- **Connected:** The Axis device was able to reach the configured EST server and has downloaded the EST certificate chain.
- **Enrolled:** A certificate has successfully been enrolled and assigned to the selected services. In the future, the certificate will be automatically renewed according to the configured policy on the EST server.

Web interface

Browser support

AXIS OS 7.10 and higher

Video products with AXIS OS 7.10 or higher include the new web interface, which comes with an overall improved and simplified graphical user interface and focuses on camera installation, configuration, and troubleshooting. The web interface is tested and optimized for chromium browsers. It is platform-independent and works with Windows® (versions 7 and up) as well as Linux® and macOS®. If you use other browsers, you could experience limitations in functionality and support. You can find more information about the latest AXIS OS version of your Axis product [here](#).

You can use the device with the following browsers:

	Chrome™	Edge™	Firefox®	Safari®
Windows®	✓	✓	*	*
macOS®	✓	✓	*	*
Linux®	✓	✓	*	*
Other operating systems	*	*	*	*

✓: Recommended

*: Supported with limitations

To find out more about how to use the device, see the user manual available at axis.com.

Known limitations

- No support for H.264 video streaming in Apple mobile (iOS) devices.
- Audio: No support for sending audio to the camera through the browser (i.e. through a computer microphone).
- Video: Some browser plugins are known to cause problems with live streaming. Try uninstalling plugins if the video does not play as it should.
- Video: H.265 video streaming is currently not supported in any browser.
- Firefox: You might experience issues streaming live video with audio enabled. Refresh the stream if it freezes.
- Safari (macOS): You might experience issues with H.264 streaming. Refresh the stream if it freezes.
- AV1 support is limited to certain products.
- Depending on your macOS or iOS version, you might encounter additional login prompts when using the web interface on AXIS OS versions earlier than 10.12.
- On some Linux systems, you might experience flickering when you use MJPEG. To resolve this, turn off hardware acceleration in your browser.

AXIS OS 6.5X or lower

Video products with AXIS OS 6.5X or lower are tested and optimized for the latest version of Internet Explorer*, Windows, and AXIS Media Control (AMC). Although you can use other browsers, versions and operating systems, you might experience limitations in functionality and support. You can find more information about the latest AXIS OS version of your Axis product [here](#).

Highlights

- Recommended browser: Internet Explorer* with AXIS Media Control
- Recommended for Windows operating system

Known limitations

- QuickTime player introduces a 3-second video delay when streaming
- Java applet-based clients only support one-way audio, and the audio quality, as well as the frame rate, might be reduced
- When using video products with AXIS OS 5.50 or lower and IE10, compatibility mode is recommended

Video streaming

AXIS Media Control and Internet Explorer* is required for video streaming H.264 over HTTP/RTSP/RTP. MJPEG video streaming is supported by Chrome, Firefox and Safari.

* Read more about Internet Explorer limitations in *Internet Explorer mode in Edge*.


Internet Explorer mode in Edge

Internet Explorer was previously used to view H.264 using AXIS Media Control and to configure the legacy embedded Video Motion Detection. Since Internet Explorer is outdated and unsupported, Microsoft Edge can be used for this purpose instead if set to Internet Explorer mode. Simply follow the steps below.



Note

If using Windows 11 and the error message "Internet Explorer can't be found. you need to re-install or re-enable Internet Explorer" appears, first follow the steps in *this guide*.

- Go to **Settings > Default browser**.
- Set **Allow sites to be reloaded in Internet Explorer mode** to "Allow".
- Click "Add" next to **Internet Explorer mode pages** and enter the IP address of the Axis device.

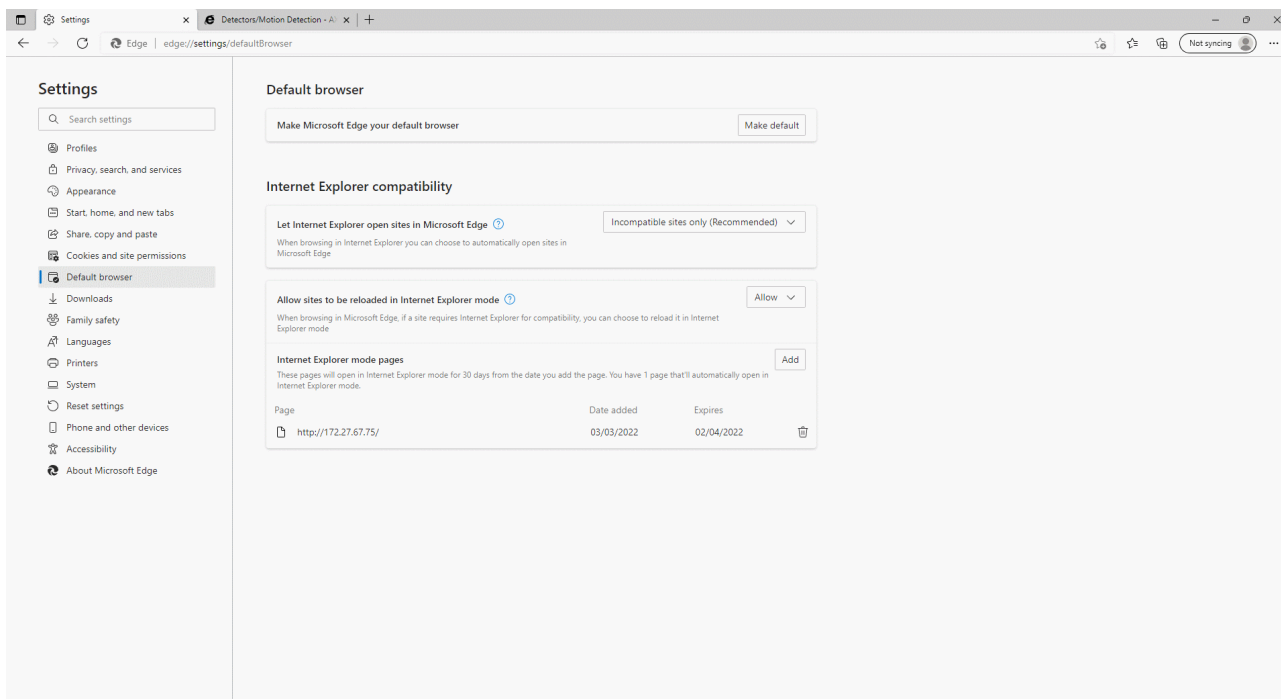

When done, Edge will work the same way as Internet Explorer for that particular device.

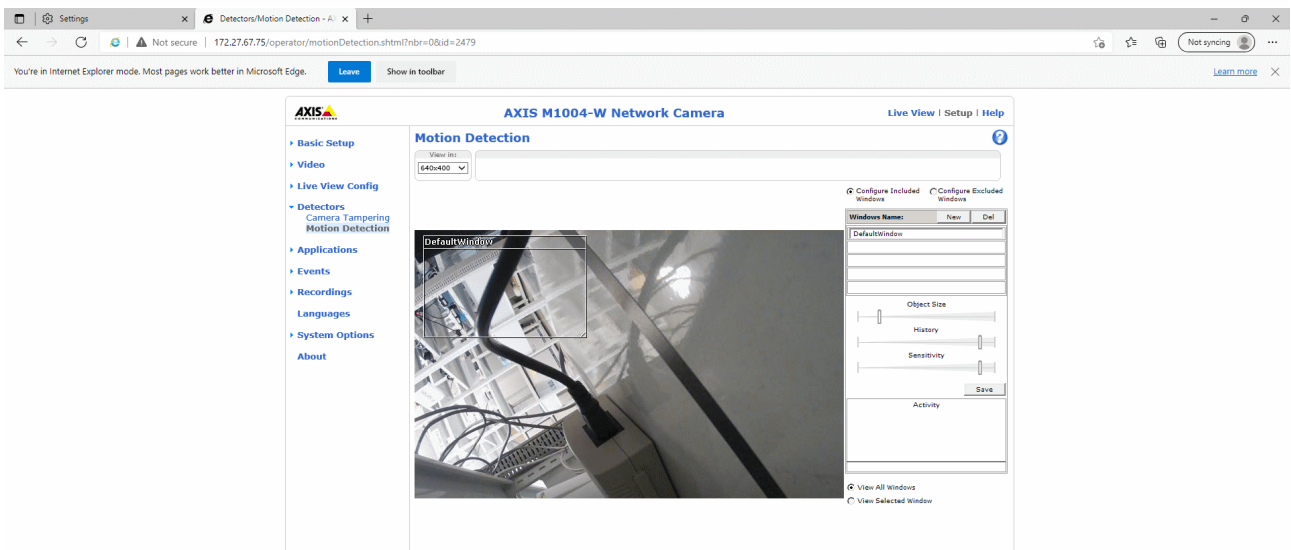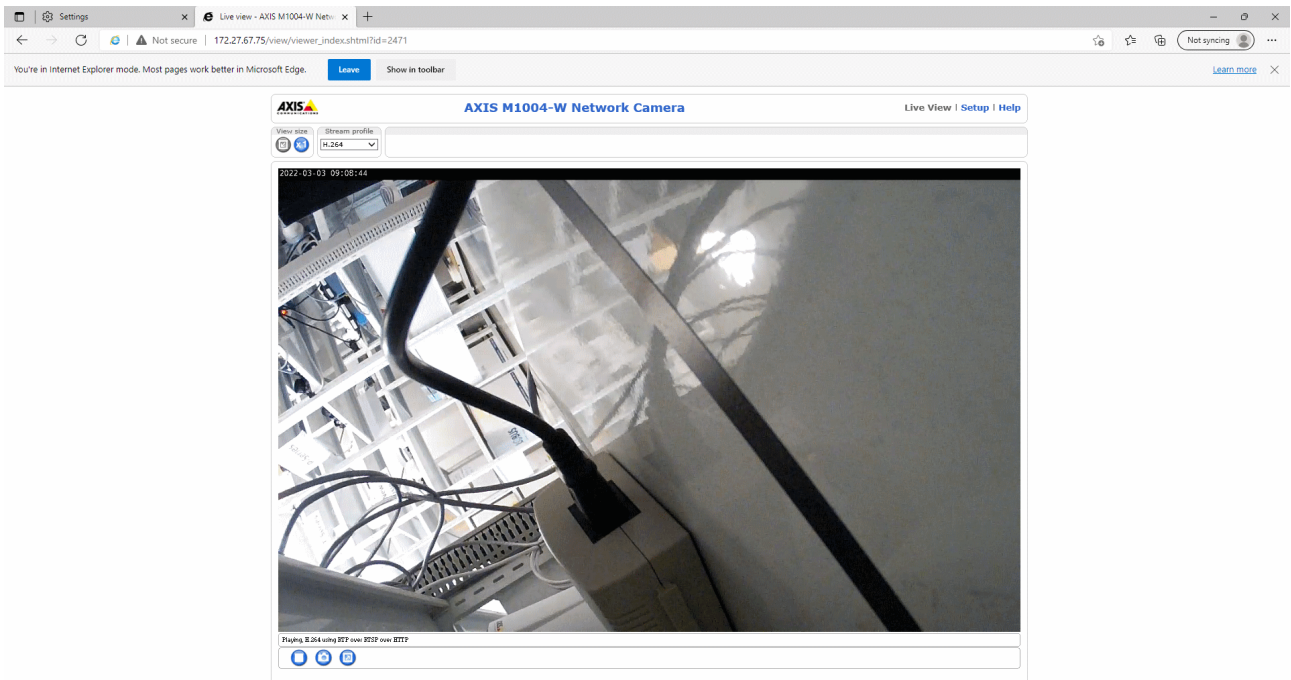

Configuration tips

<i>How to use HTTP POST notifications in action rules</i>
<i>How to publish an MQTT message with an event rule action</i>
<i>How to add MQTT subscriptions</i>
<i>How to set SD card wear level</i>
<i>Automatic rollback verification</i>
<i>How to add polygon privacy masks</i>
<i>How to set privacy mask properties</i>


<i>How to perform a rollback</i>
<i>How to display live view stream statistics</i>
<i>Password security confirmation check</i>
<i>How to enable SD card encryption</i>
<i>How to enable Opus audio codecs</i>

Web user interface versions

When discussing various features and problems, it can sometimes be important to clarify which version of the web user interface is used. Axis devices have had several different user interfaces throughout the years.

Axis released the first network camera, AXIS Neteye 200, in 1996. The web interface in may seem quite rudimentary by today's standards but was very much on par with everything else on the world wide web back then. (It can be noted that NCSA Mosaic, one of the first widely available and popular web browsers was released only three years prior, so Axis was in the game very early on.)

AXIS 200:

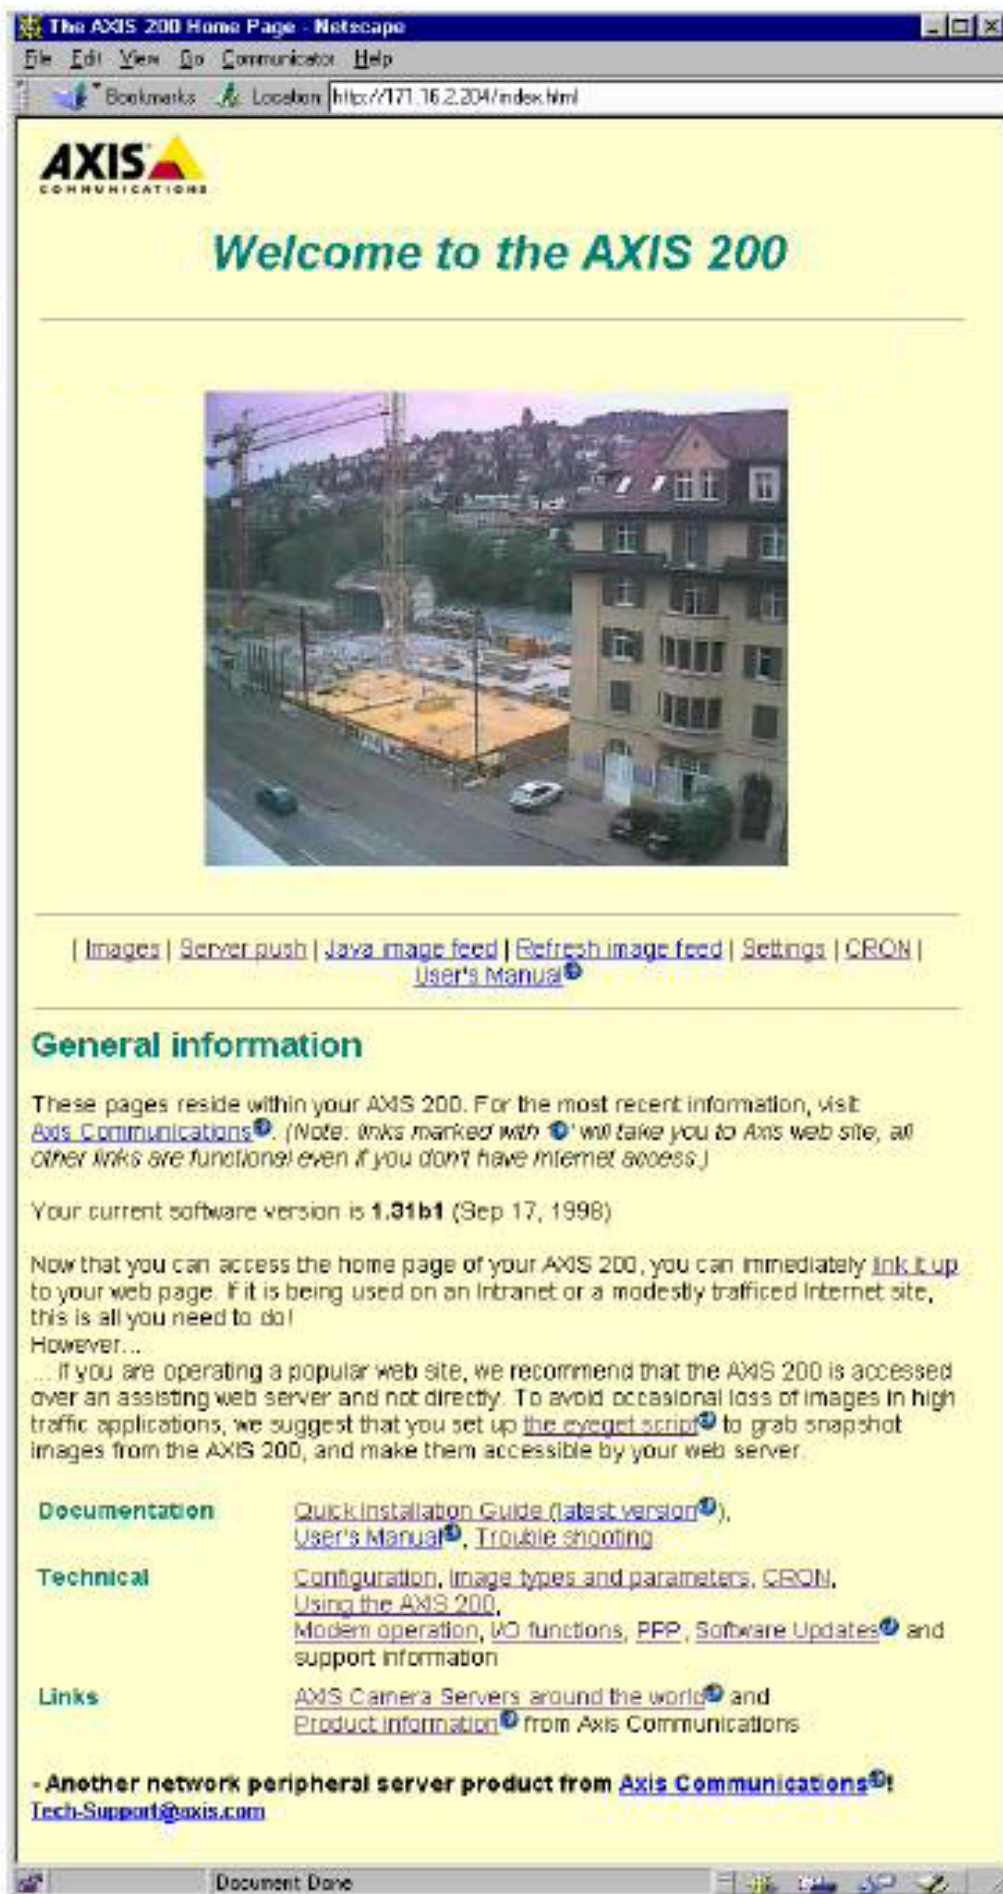

Only a couple of years later, Axis released their first encoders, or "video servers" as they were called back then; Axis 2400/2401. The web interface in these products had graphical representations of what was connected. It was also possible to control Pan-Tilt-Zoom on connected cameras directly from this web interface.


AXIS 2400:





In 1999, Axis released the first Linux based network camera, AXIS 2100. And with that, once again a brand new web interface. Unlike the gray interface in AXIS 2400/2410 that was intended for the conservative surveillance market, this interface targeted the younger web generation and thus was brighter and shinier.

AXIS 2100:

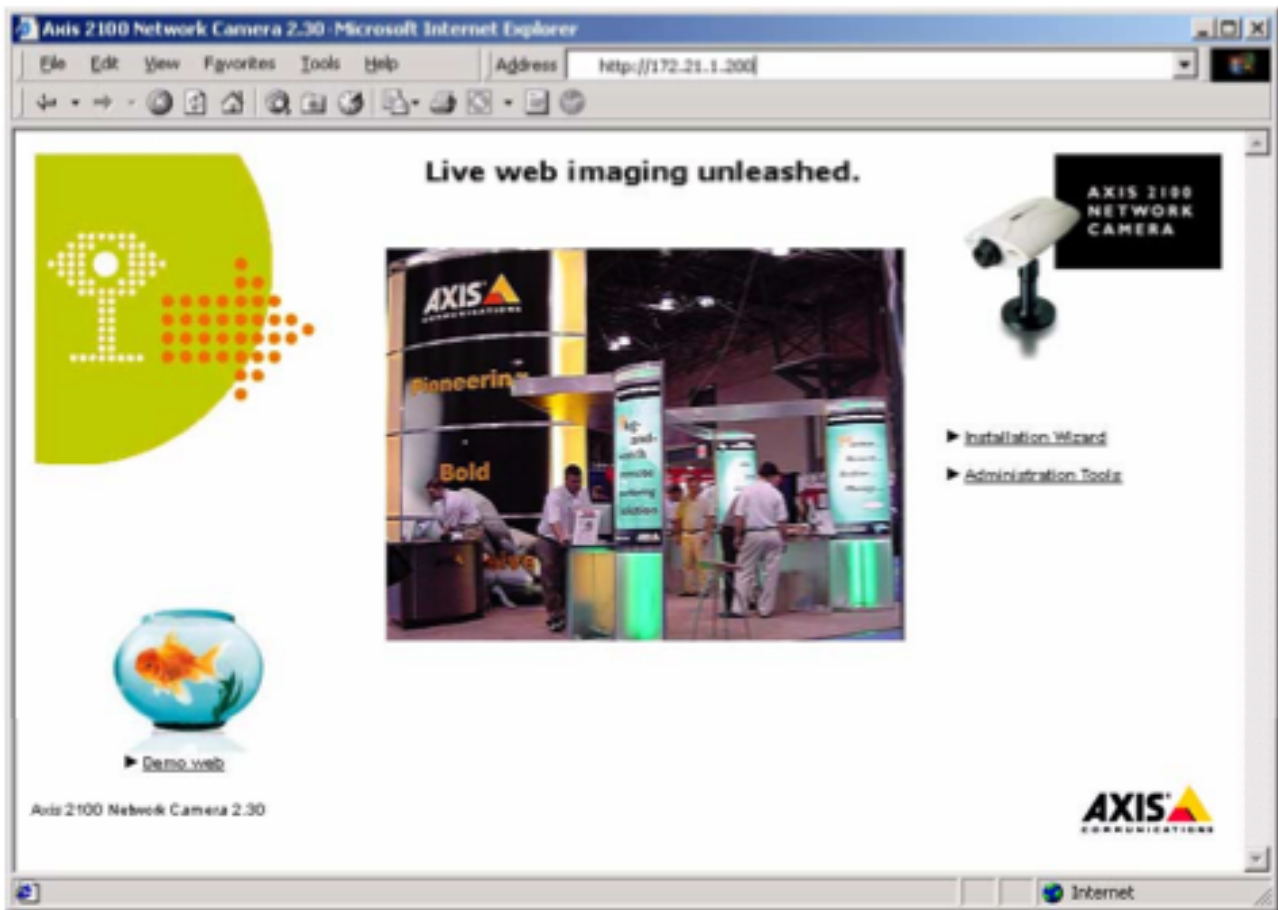

The two separate web interfaces for encoders and cameras lived side by side for a few years, but by 2003, the time had come to introduce a web interface that worked for both cameras and encoders. This interface version lived on all the way until 2016 (in different iterations) and has become what we sometime refer to as "Classic". We will continue to refer to it as "AXIS OS web version A (Classic)".

AXIS OS web version A (Classic)

The first version of AXIS OS web version A (Classic) was introduced in AXIS OS 4.0, but is now only supported in LTS 2016 (6.50). With the introduction of AXIS OS 7.10, this version was no longer the default interface, but it was still available via the URL <http://camera-ip/index.shtml> up until AXIS OS 9.20, after which it was completely removed.



AXIS P1353 Network Camera

[Live View](#) | [Setup](#) | [Help](#)

Stream profile

Motion JPEG ▾

Snapshot




The screenshot displays the web interface for an AXIS P1353 Network Camera. The top navigation bar includes the AXIS logo, the camera model name, and links for Live View, Setup, and Help. A left-hand sidebar contains a menu with categories like Basic Setup, Video & Audio, Live View Config, Detectors, Applications, Events, Recordings, Languages, System Options, and About. The main content area is titled 'Video Stream Settings' and features a tabbed interface with 'Image', 'Audio', 'H.264', and 'MJPEG' tabs. The 'Image' tab is active, showing settings for 'Image Appearance' (Resolution: 800x600 (4:3) pixels, Compression: 30) and 'Video Stream' (Maximum frame rate: Unlimited). Below these are 'Overlay Settings' for including images, dates, times, and text, with options for text size, color, and background. A 'Preview' section at the bottom allows viewing the image stream while configuring, with a video format dropdown set to MJPEG and buttons for Save and Reset.

While AXIS OS web version A (Classic) lasted for 13 years, the rest of the world wide web moved on. In 2017, it was finally time to introduce AXIS OS web version B.

AXIS OS web version B

AXIS OS web version B had a more modern look than the previous version, and also supported a much wider range of browsers (including native support for H.264 streaming). Here, focus was on the video stream, and a key feature was the possibility to actually see the video while fine tuning image settings.

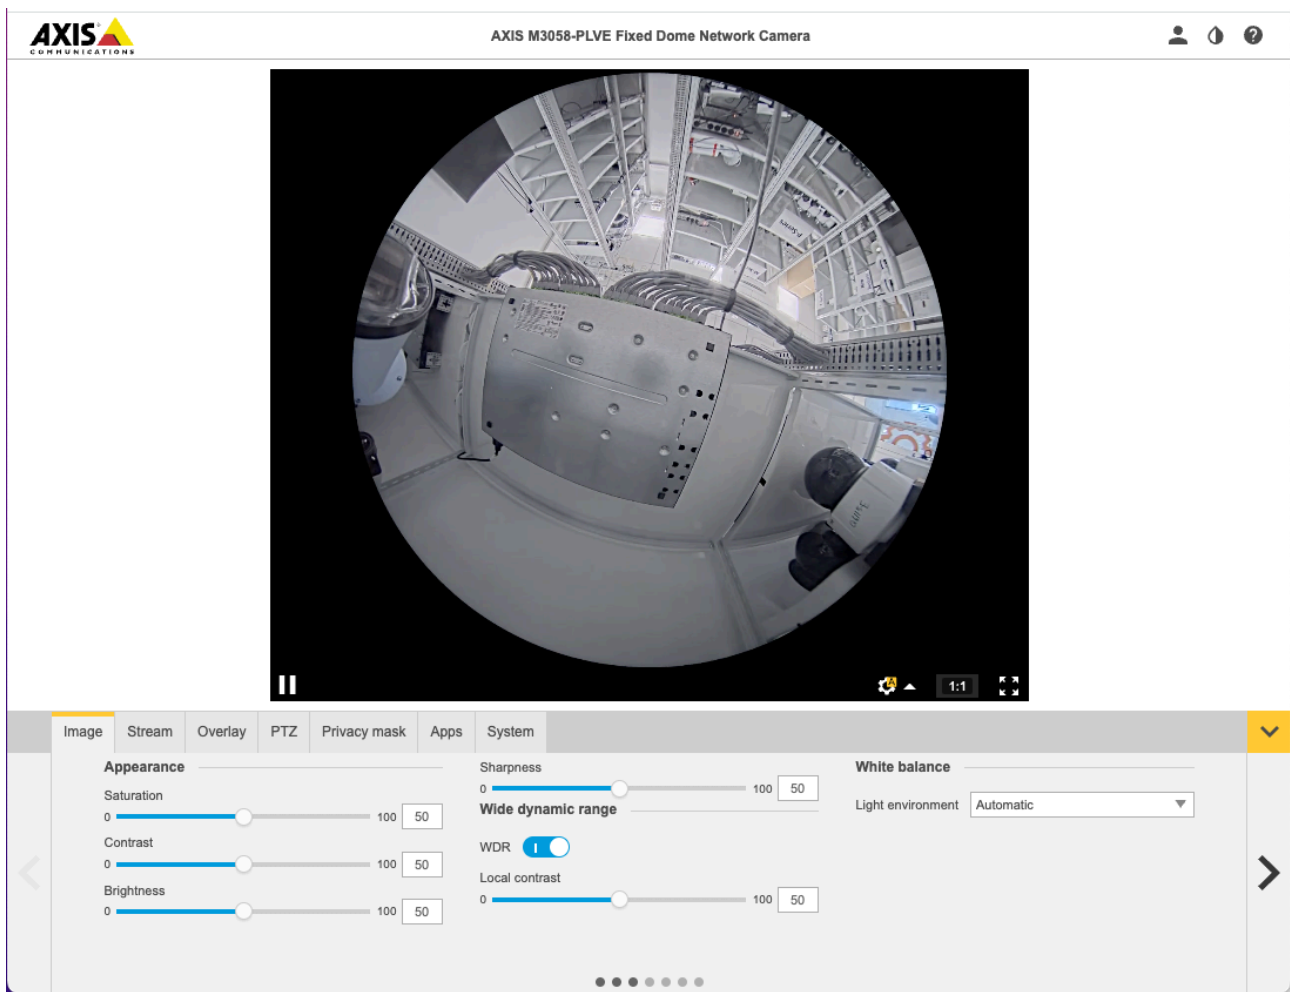

This interface was officially introduced with Axis OS 7.10, but a preview version could be seen already in AXIS OS 6.50 via the URL <http://camera-ip/index.html>. LTS 2018 (8.40) and LTS 2020 (9.80) both use this interface. Note that it is only intended to be used with video products.

Axis product portfolio has been growing over time and now includes many more product types than just video products. Since AXIS OS web version B only supported video products, it soon became important to create a user interface that would work for all types of products. So, in 2020, AXIS OS web version C was introduced.

AXIS OS web version C

AXIS S3008 Recorder was the first product to officially get AXIS OS web version C, which was introduced with AXIS OS 10.0.0.

AXIS S3008 Recorder

Storage

Onboard storage

Hard drive 1 (3.4 TB)

Free:	100%
Status:	Mounted
File system:	ext4
Encrypted:	No
Temperature:	45 °C (113 °F)
Overall health test:	Passed

Write protect ⓘ

Tools

Check Repair

Format Encrypt

Decrypt Change password

Use tool

Most video products had to wait some time before officially getting AXIS OS web version C, but it could be reached through <http://camera-ip/preview/index.html> already in 10.0 on a selected number of products (ARTPEC-7).

AXIS P1448-LE Network Camera

Stream

Expand all

General

Resolution: 3840x2160 (16:9)

Frame rate: 0 [0..25] (0 = ∞) fps

Compression: 30

H.264 encoding

Orientation

Audio

API

VAPIX

VAPIX® Network Video API is a set of Application Programming Interfaces (API) for configuration and management of Axis network video products. For more information, visit the *VAPIX Library*.

You can use tools like Postman or cURL to interact with the VAPIX API. cURL offers a command-line alternative for sending API requests and retrieving data, while Postman provides a user-friendly interface for sending HTTP requests and viewing responses, making it ideal for testing and exploring the VAPIX API. Both tools enable you to experiment with API calls, troubleshoot issues, and develop custom integrations.

For examples on how to use cURL, see the *VAPIX Library*. To learn more about VAPIX and Postman, click [here](#).

New APIs for configuring AXIS OS devices

AXIS has released new APIs for AXIS OS configuration. These APIs were introduced in AXIS OS 11.11, and more device configuration APIs will be added on an ongoing basis. See AXIS OS demonstration video [here](#).

Available APIs can be seen on the device itself by typing: `http://IP-address/config/discover`

```

Pretty-print 
{
  "apis": {
    "best-snapshot": {
      "v1": {
        "doc": "/config/discover/apis/best-snapshot/v1/doc.md",
        "doc_html": "/config/web-ui/cu-doc.html?md-doc-loc=/config/discover/apis/best-snapshot/v1/doc.md",
        "model": "/config/discover/apis/best-snapshot/v1/model.json",
        "rest_api": "/config/rest/best-snapshot/v1beta",
        "rest_openapi": "/config/discover/apis/best-snapshot/v1/openapi.json",
        "rest_ui": "/config/web-ui/swagger-ui?url=/config/discover/apis/best-snapshot/v1/openapi.json",
        "state": "beta",
        "version": "1.0.0-beta.1"
      }
    },
    "cert": {
      "v1": {
        "doc": "/config/discover/apis/cert/v1/doc.md",
        "doc_html": "/config/web-ui/cu-doc.html?md-doc-loc=/config/discover/apis/cert/v1/doc.md",
        "model": "/config/discover/apis/cert/v1/model.json",
        "rest_api": "/config/rest/cert/v1beta",
        "rest_openapi": "/config/discover/apis/cert/v1/openapi.json",
        "rest_ui": "/config/web-ui/swagger-ui?url=/config/discover/apis/cert/v1/openapi.json",
        "state": "beta",
        "version": "1.0.0-beta.1"
      }
    },
    "firewall": {
      "v1": {
        "doc": "/config/discover/apis/firewall/v1/doc.md",
        "doc_html": "/config/web-ui/cu-doc.html?md-doc-loc=/config/discover/apis/firewall/v1/doc.md",
        "model": "/config/discover/apis/firewall/v1/model.json",
        "rest_api": "/config/rest/firewall/v1alpha",
        "rest_openapi": "/config/discover/apis/firewall/v1/openapi.json",
        "rest_ui": "/config/web-ui/swagger-ui?url=/config/discover/apis/firewall/v1/openapi.json",
        "state": "alpha",
        "version": "1.0.0-alpha.2"
      }
    },
    "log": {
      "v1": {
        "doc": "/config/discover/apis/log/v1/doc.md",
        "doc_html": "/config/web-ui/cu-doc.html?md-doc-loc=/config/discover/apis/log/v1/doc.md",
        "model": "/config/discover/apis/log/v1/model.json",
        "rest_api": "/config/rest/log/v1alpha"
      }
    }
  }
}

```

The API documentation in the VAPIX library will be delayed, but it can be found on the device itself. To see API documentation on the device write: `http://IP-address /config/web-ui/cu-doc.html?md-doc-loc=/config/discover/apis/best-snapshot/v1/doc.md`

Best Snapshot Configuration (Version 1.0.0-beta.1)

Overview

- Short Description: Configuration API for Best Snapshot feature
- ID: best-snapshot
- Version: 1.0.0-beta.1
- State: Beta

WARNING: This API is in **BETA** stage. The API is provided for testing purposes and is subject to backward-incompatible changes, including modifications to functionality, behavior, and availability. Please don't use in production environment.

Structure

```
best-snapshot.v1 (Root Entity) (Get, Set)
  ├── enabled (Property) (Get, Set)
  └── margin (Property) (Get, Set)
```

Objects

best-snapshot.v1 (Entity)

▼ Details

- **Description:** Configuration root object
- **Notification:** false | **Deprecated:** false

Now you get the responses from the device:

It is also possible to test the APIs through the Swagger GUI. To do this, go to the Swagger URL for the selected API, e.g. `/config/web-ui/swagger-ui/?url=/config/discover/apis/best-snapshot/v1/openapi.json`

AXIS COMMUNICATIONS [Explore](#)

best-snapshot 1.0.0-beta.1 OAS3

</config/discover/apis/best-snapshot/v1/openapi.json>

Configuration API for Best Snapshot feature

Servers
/config/rest

best-snapshot.v1beta

GET /best-snapshot/v1beta

Use this operation to get the value of 'best-snapshot.v1'

[Try it out](#)

Name	Description
traceparent string (header)	This options sets the traceparent used for tracing request

Responses

Code	Description	Links
------	-------------	-------

Click on Try it out button and fill in the values. Then click on the Execute button.

Now you get the responses from the device:

Responses

Curl

```
curl -X 'PATCH' \
'http://172.25.155.86/config/rest/best-snapshot/v1beta?strict=true' \
-H 'accept: application/json' \
-H 'Content-Type: application/json' \
-d '{
  "data": {
    "enabled": true,
    "margin": true
  }
}'
```

Request URL

```
http://172.25.155.86/config/rest/best-snapshot/v1beta?strict=true
```

Server response

Code	Details
200	<p>Response body</p> <pre>{ "status": "success" }</pre> <p>Download</p> <p>Response headers</p> <pre>connection: Keep-Alive content-length: 25</pre>

Now you can copy the code and place it to your application.

Storage & recording

Edge storage support

SD card support

The following are supported filesystems and encryptions for SD cards.

- Supported filesystems: ext4 (recommended), vFAT
- Supported filesystem size:
 - Up to 2 TB for devices with SDXC slot support and AXIS OS 5.60 and higher
 - Up to 64 GB for devices with SDXC slot support and AXIS OS prior to 5.60
- Supported speed classes: class 10 or higher
- Supported encryptions:
 - AES-CBC 128-bit for all devices with AXIS OS 5.80.1 and higher
 - AES-CBC 256-bit for all devices with AXIS OS 8.40.1 and higher
 - AES-XTS-Plain64 (AES-XTS-512 256-bit) for newer devices with AXIS OS 8.30.1

Network share support

The following are supported storage network protocols and authentication modes for external storage media.

- Supported protocols:
 - CIFS/SMB 1.0 + NTLM authentication mode for devices with AXIS OS 5.90 and lower
 - CIFS/SMB 1.0, 2.0, 2.1, 3.0 and 3.02 + NTLM authentication mode for devices with AXIS OS 6.10 and higher
 - CIFS/SMB 3.1.1 + NTLM authentication mode with AXIS OS 10.12 or higher and Linux Kernel 4.17 or higher.
- Supported filesystem size: 8 ZB with AXIS OS 5.70 and higher, and 2 TB with AXIS OS 5.65 and lower

Basics


Video retention

AXIS OS 6.40 and higher

There are two types of disk clean-up operations for deleting old recordings; one is user-controllable, and one is performed automatically by the Axis device.

The first operation removes recordings older than a certain time in days. This can be configured by the user in the storage configuration in the web interface. For instance, when the user selects one week (i.e. 7 days), the clean-up operation will remove all recordings older than 7 days. It's important to note that this operation runs once per hour (i.e. every 60 minutes).

AXIS P3248-LVE Network Camera

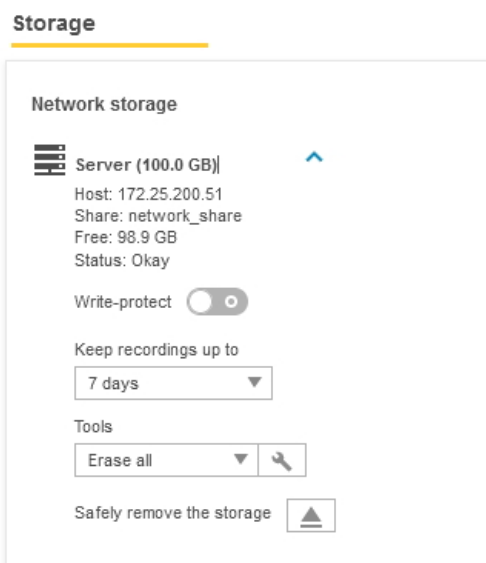

The second operation is an automatic clean-up that is always enabled and cannot be disabled by the user. This operation runs every second and checks that the network share or SD card has enough space for recording. The clean-up level is defined as an amount of free space. For locally attached storage, like SD cards, the clean-up level is defined as 5% of the total size of the SD card unless those 5% are less than 750 MB. When that is the case, 750 MB will be the clean-up level. For network shares, the clean-up level is fixed when max 750 MB remains. So for a 64 GB SD card, the clean-up level is 3.2 GB, while for an 8 TB NAS the clean-up level is 750 MB.

If there is less free space on the disk than what's defined in the clean-up level, the automatic clean-up operation will detect this and remove the oldest recordings (actually blocks) based on the needed space. Note that at least 1 GB will be removed in order to bring the free space size above the clean-up level. For instance, if the free space is 50 MB below the clean-up level, the operation will remove at least 1 GB, thus making 950 MB free above clean-up level.

If the disk is full, i.e. if the clean-up operation was not successful in removing the data on time, another level of 75 MB free space is defined. This is called the full level. If the full level is reached, the disk is declared full and the recordings should stop. At the same time, the clean-up operation continues until the free space is above the clean-up level. Once there is space above the clean-up level, recording will start again.

AXIS OS 5.50 – AXIS 6.30

In addition to the configuration that can be performed in AXIS OS 5.40 and lower, the clean-up of old recordings will start when there is less than 750 MB of storage space available. This is an additional algorithm that has been implemented to prevent exceeding the network share or SD card storage space.

AXIS OS 5.40 and lower

In AXIS OS 5.40 and lower, there are two user-controlled clean-up parameters that defines when the Axis device should be performing a clean-up of the storage. The first parameter is used to configure number of days until recordings should be overwritten, and the second parameter is a clean-up policy in percentage. Old recordings are deleted if either one or both of the conditions in these parameters are met.

It's recommended to set the clean-up policy to 80 for AXIS OS 5.20 and 90 for AXIS OS 5.40. As an example, a clean-up value of 90 corresponds to 72% usable storage, and the Axis device would then have 72 GB writable recording space when connected to a 100 GB network share. The clean-up level can be configured from **Plain Config > Storage**.

Storage Select group

Storage
 Mount dir:

Storage S0:
 Auto repair:
 Cleanup level: [0..99]
 Cleanup max age: [0..7000]
 Cleanup policy active:
 Device node:
 Disk ID:
 Extra mount options:
 File system:
 Friendly name:
 Locked:
 Mount on boot:
 Required file system:

Storage S1:
 Auto repair:
 Cleanup level: [0..99]
 Cleanup max age: [0..7000]
 Cleanup policy active:
 Device node:
 Disk ID:
 Extra mount options:
 File system:
 Friendly name:
 Locked:
 Mount on boot:
 Required file system:

Save page changes:

Recording file split duration

For performance reasons and optimal read/write cycles to the edge storage medium, video is recorded in chunks of five minutes. This is defined in DefaultSplitDuration = "300", where "300" refers to 300 seconds, which in turn corresponds to five minutes. Note that it's not recommended to change the value since this could affect the memory buffers. It could also affect performance since a split duration that is too short could cause a high amount of files. If the value is changed, make sure it's tested accordingly. In AXIS Companion, it's possible to download a part of the video merged into one file in asf format, which is the recommended way to solve this issue. From AXIS OS 5.60 and onwards, the video export feature has been improved so that it's possible to export a recording from several 5 minute segments into one recording.

ONVIF and VAPIX recordings

ONVIF and VAPIX recordings are completely separated. For example, recordings that are created via VAPIX through the web interface or VAPIX API are not visible or usable for ONVIF clients. In return, ONVIF recordings are not visible or usable for the user and are not showing in the recording section of the web interface. ONVIF clients have to create recordings through the ONVIF API separately to make use of recordings.

Metadata events

It's possible to listen to storage-related metadata events via the RTSP stream. Essentially there are two events available, both indicating a storage connection failure either for an SD card or a network share. These two events are called:

- Device/HardwareFailure/StorageFailure
- Storage/Disruption

If for example the network share is disconnected due to the NAS no longer being available in the network, both events would be active.

Edge storage folder structure

When performing an edge recording on an Axis device, the below folder structure is being used*. This folder structure can not be modified.

Example recording path: *\\axis-ACCC8E9C6BE7\20211214\11\20211214_110037_AAF2_ACCC8E9C6BE7\20211214_11


Network share	SD card	Example	Format	Contains
✓		axis- ACCC8E9C6BE7	axis-ZZZZZZZZZZZZ	The Axis device serial number
✓	✓	20211214	YYYYMMDD	Date**
✓	✓	11	HH	Hours**
✓	✓	20211214_ 110037_AAF2_ ACCC8E9C6BE7	YYYYMMDD_ HHMMSS_XXXX_ ZZZZZZZZZZZZ	Date and time**, a random identifier, the Axis device serial number
✓	✓	20211214_11	YYYYMMDD_HH	Date and hours**

* The "Send video" and "Send images" event options may use a different folder structure based on the configured recipient.

** The date and time reference is in the Axis device's local time and refers to the date and time when the recording was created.

Password-encrypted export of edge recordings

As of AXIS OS 10.10, Axis devices support the password-encrypted export of edge recordings (SD cards, network shares), as well as recordings made on AXIS OS-based recorders. This means it's possible to export a recording that is password-encrypted, so you can securely share sensitive video data without having to manually encrypt recordings.

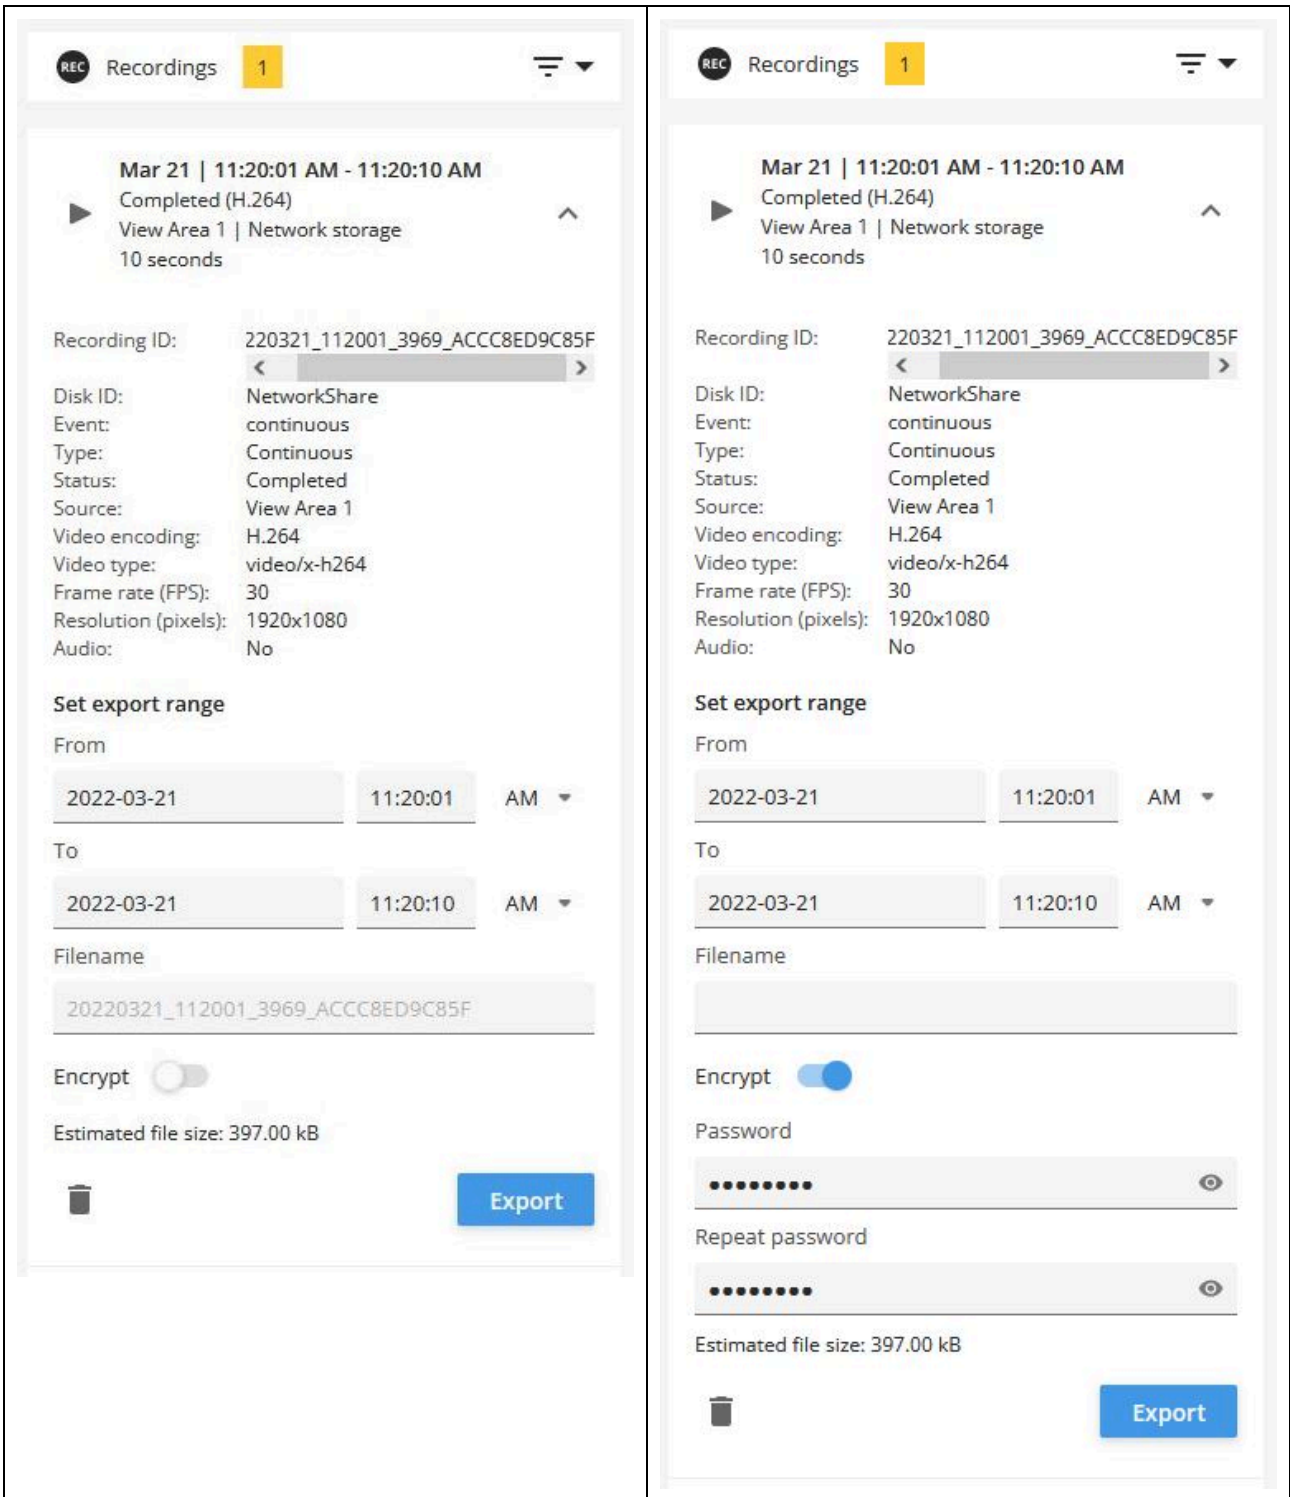

Password encrypted recordings

- Supported file format: *.zip
- Supported password length: maximum 128 bytes (128 characters). In the legacy web interface the maximum is 64 characters.
- Supported encryption: AES-256. Note that some operating systems do not have native support for this encryption. In those cases open-source tools such as 7-zip can be used to open password encrypted recordings.

Export file name

The file name of regular recording exports may contain sensitive information such as the date and time or the camera name. When doing a password encrypted export of a recording, leave the file name field empty and the file name of both the downloaded *.zip file and content names will get anonymized.

Example of a regular recording export	20220321_112001_3969_ACCC8ED9C85F.zip
Example of a password encrypted export	FBHY6A.zip

SD card

Disabling the SD card

The SD card and its slot can be disabled completely. This is done from **Plain Config > Storage > Storage.S0.Disabled**. When the SD card slot is disabled, the Axis device will not recognize any SD card inserted.

Storage

Mount dir
/var/spool/storage

S0

Auto repair
yes

Cleanup level
90 [0..99]

Cleanup max age
7 [0..7000]

Cleanup policy active
FIFO ▼

Device node
/dev/mmcblk0p1

Disk ID
SD_DISK


Enabled

SD card health monitoring

From AXIS OS 6.20, Axis devices support health statistics for AXIS Surveillance Cards. This means it's possible to get an estimated wear out level for the SD card being used, which can help determine when to replace it.

Note

Only available for AXIS Surveillance Cards, not for similar cards from the same manufacturer.

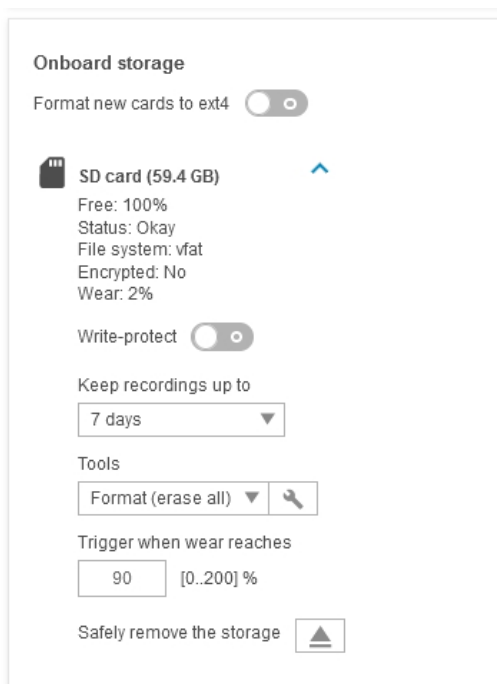

From AXIS OS 10.3, it's possible to create an event based on the wear level of the SD card so that you can get notifications when a certain wear level is reached. More information is available in this video:



Decrypting Axis SD cards

We will now take a look at how an encrypted SD card operated in an Axis device can be decrypted or re-used again.

Note

The original passphrase (password) that was used to encrypt the SD card must be known in order to proceed with any of the guidelines below.


Axis device



An SD card that was encrypted and previously used in an Axis device can be inserted and used in another Axis device again. This could e.g. happen when an Axis device gets replaced during an RMA process.



Windows


To decrypt an SD card on a Windows computer, an open-source disk encryption tool like *LibreCrypt* can be used.

If the SD card is formatted to VFAT, follow the screenshot guide below. If EXT4 is used, you need to install a third-party driver like Ext2Fsd first in order for the Windows computer to recognize the filesystem on the card.

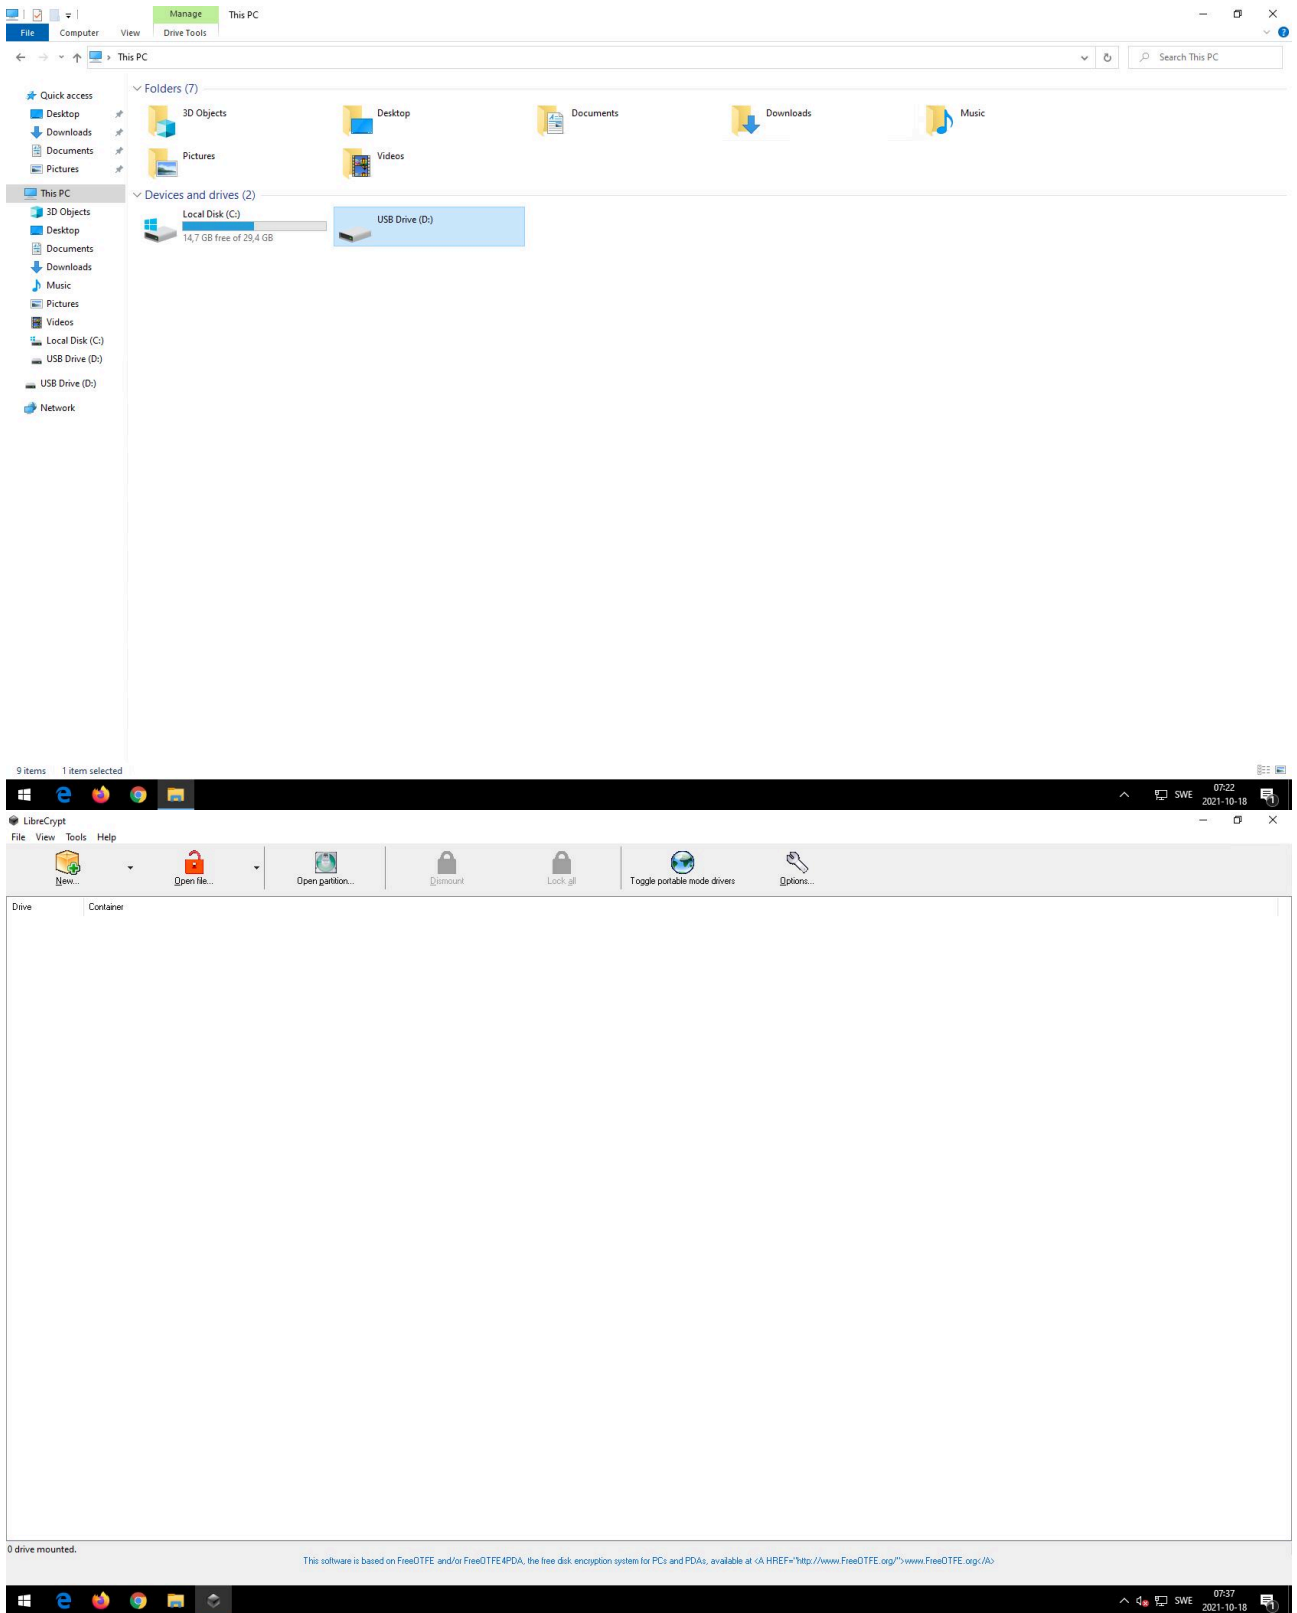

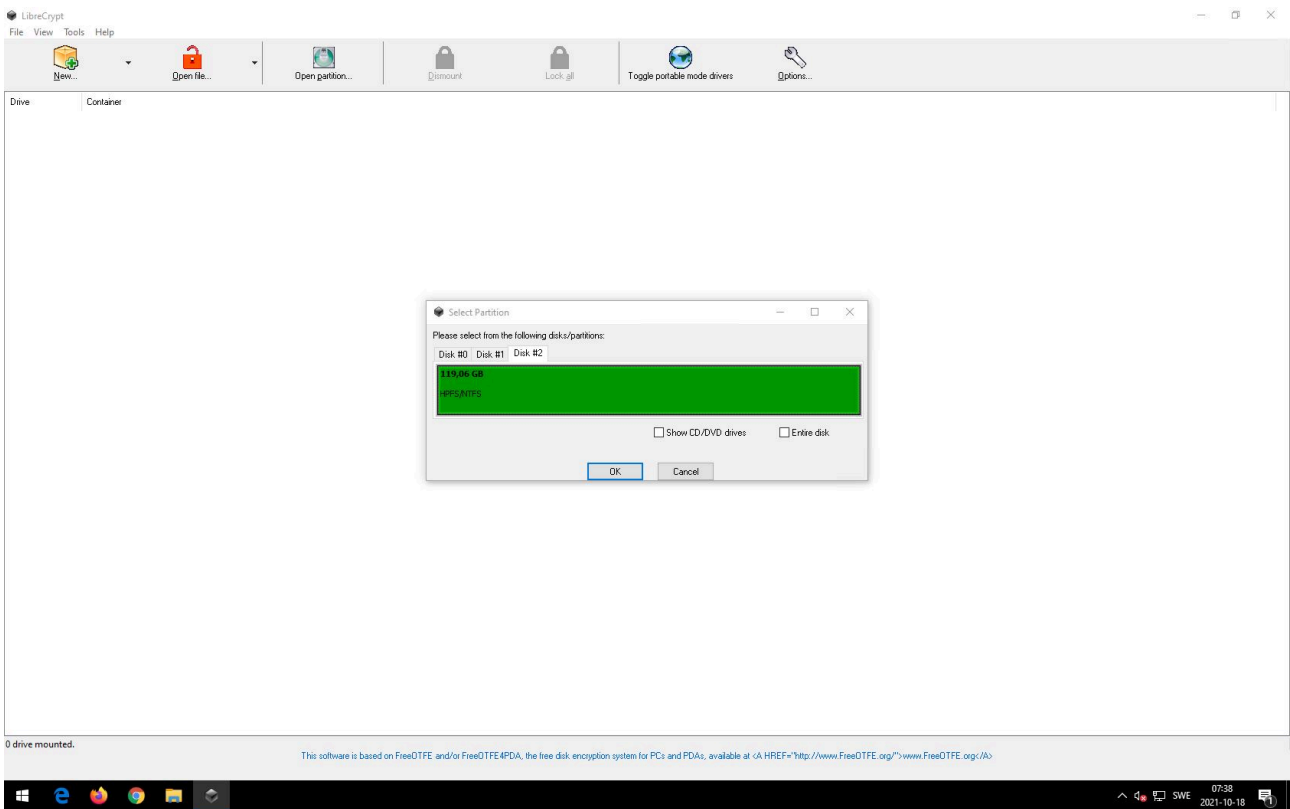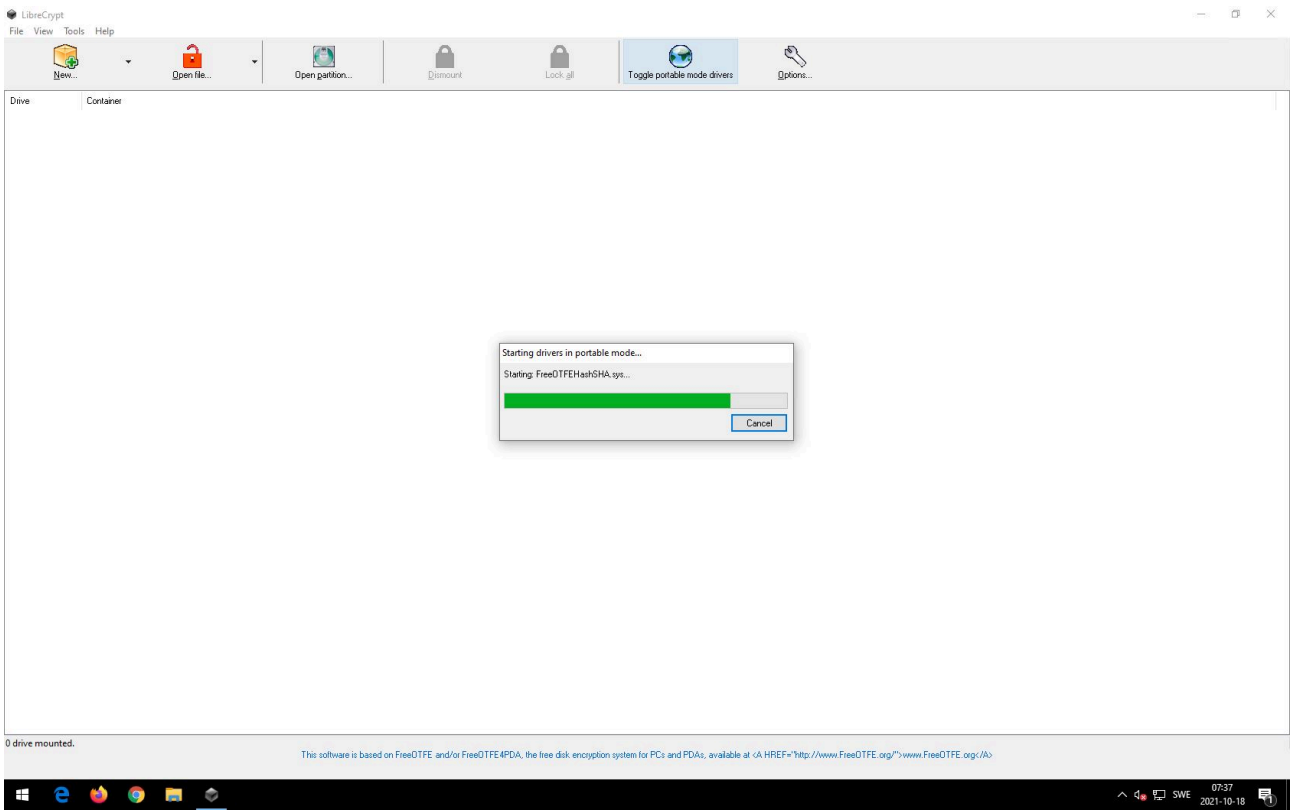

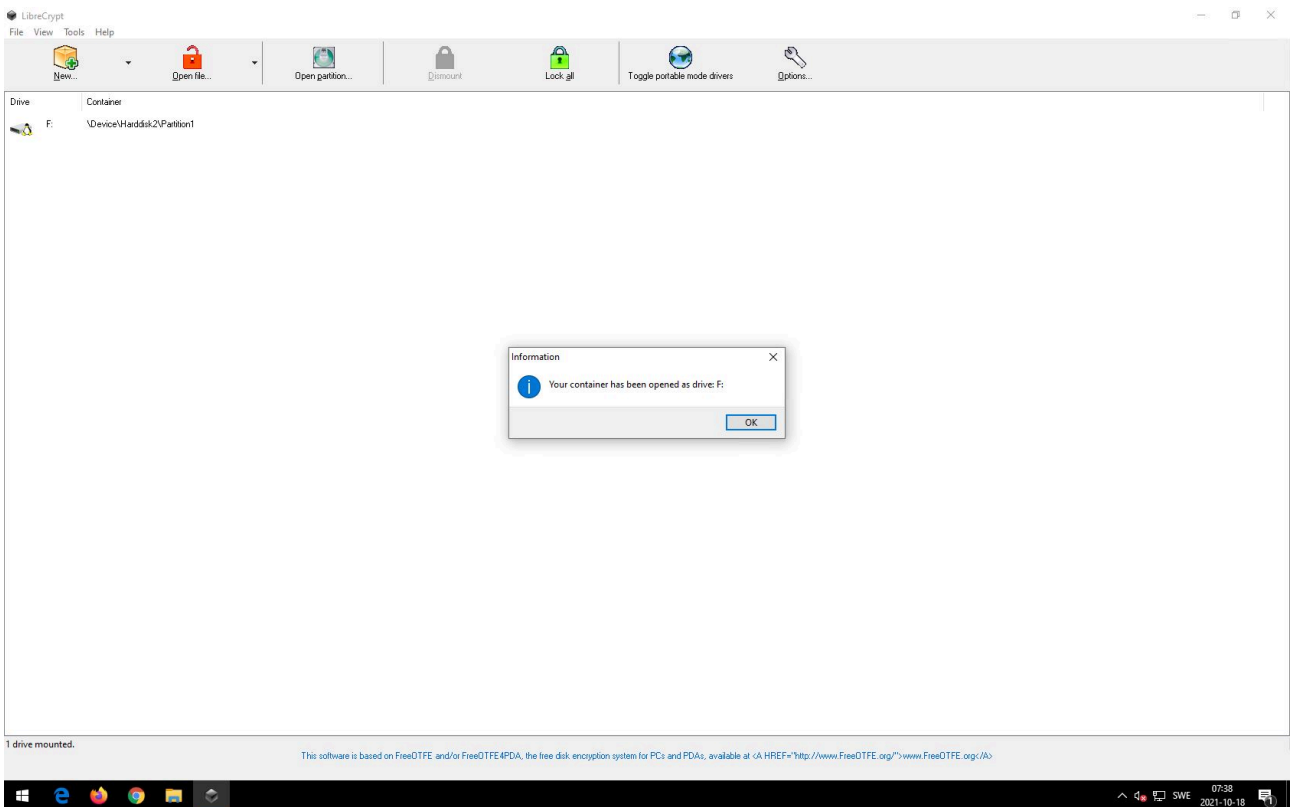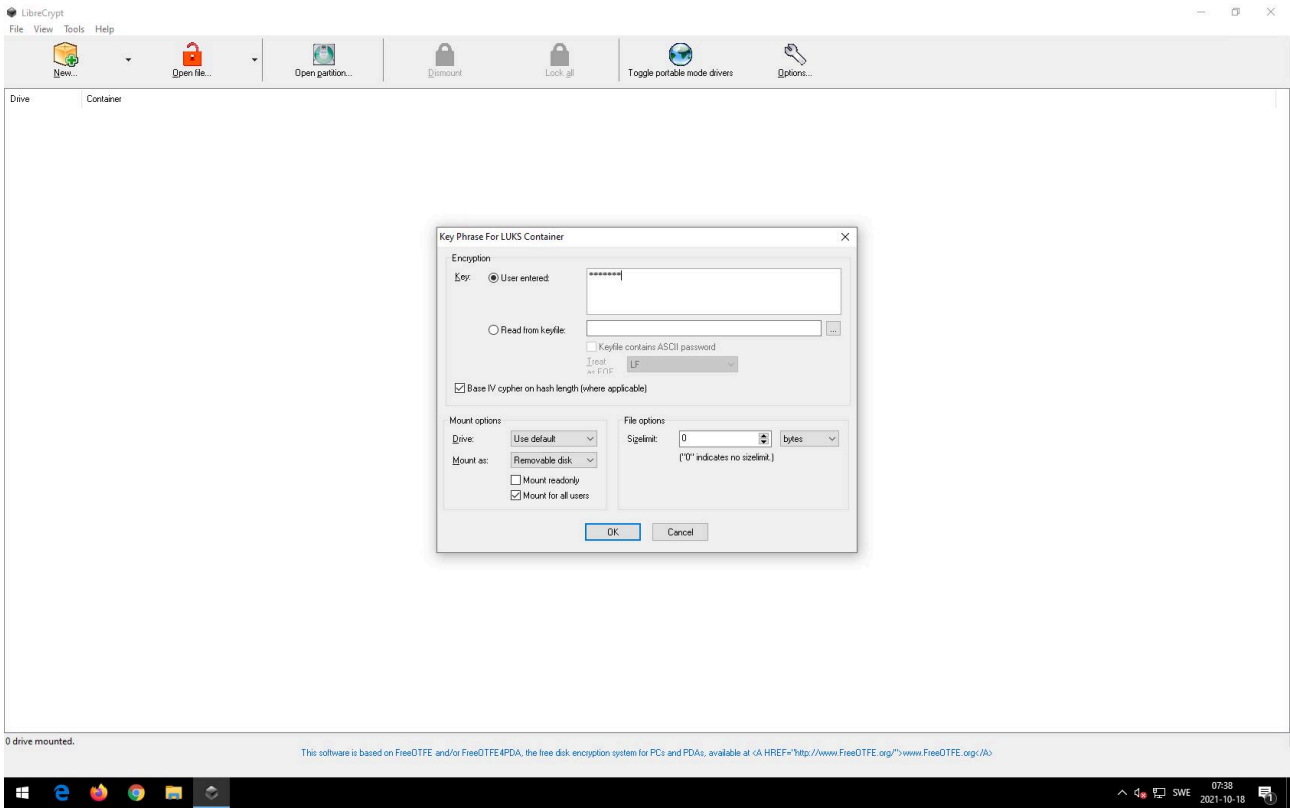

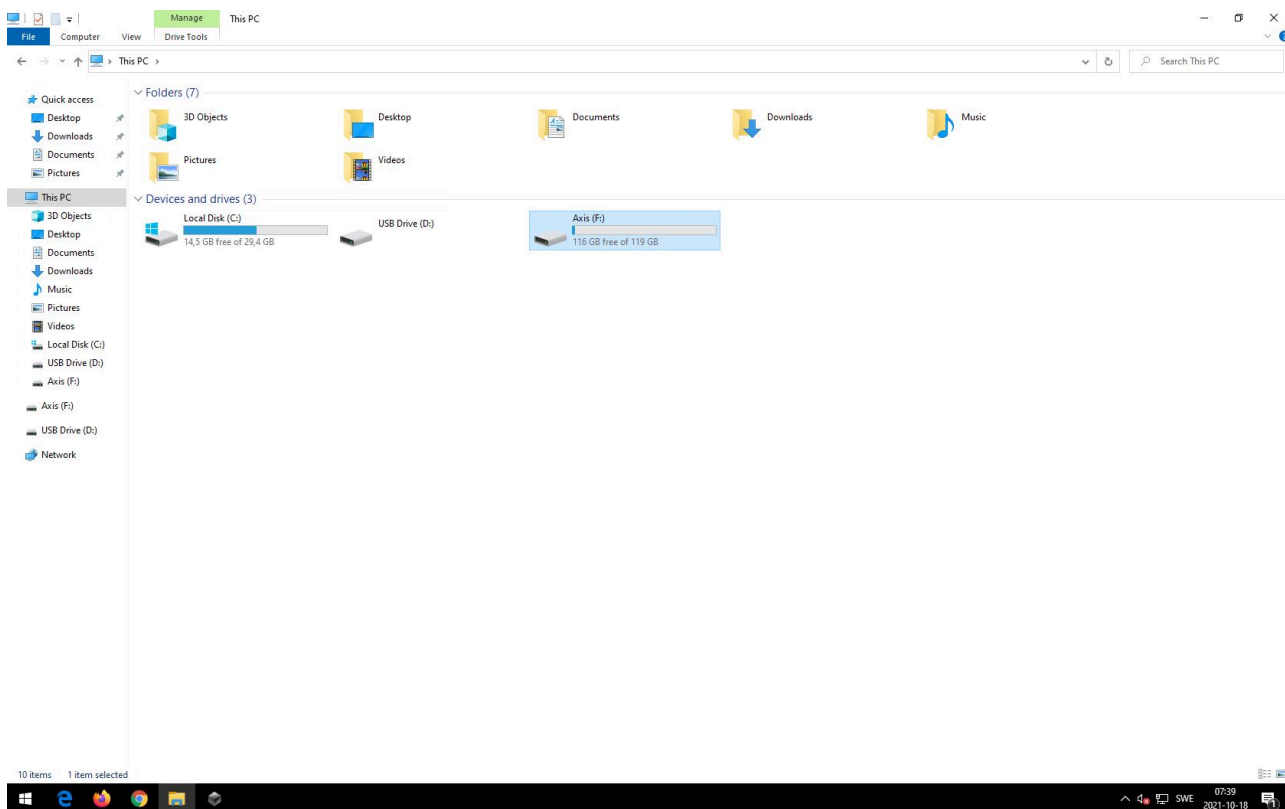

Linux

In Linux operating systems, the SD card can be decrypted directly using the command line and the following commands:

```
sudo cryptsetup open /dev/sdf1 qqq Enter passphrase for /dev/sdf1: mkdir /tmp/qq ~ sudo mount /dev/mapper/qqq /tmp/qq sudo su cd /tmp/qq root@mycomputer:/tmp/qq# ls 20160929 index.db lost +found root@mycomputer:/tmp/qq# exit sudo umount /tmp/qq sudo cryptsetup close qqq
```

Formatting Axis SD cards

Formatting the SD card will only rewrite the parts of the SD card necessary to create the filesystem. This could be a couple of hundred MBs on a 64 GB SD card. Any of the old data, such as older recordings, will not be accessible via the new filesystem. However, a major part of the SD card data will be unmodified after formatting and may thus be accessible on a low level (i.e., it may be possible to extract the data if the card is inserted in a computer).

There are various methods to erase sensitive data on SD cards and they usually require writing the entire card with different patterns multiple times. Axis products do not have support for erasing data in such a way.

Network share

SMB/CIFS handshake

Here we'll take a closer look at the differences and negotiations in the SMB/CIFS protocol. The network traces in the table illustrate the process of negotiating a specific SMB version between an Axis device and a NAS and the corresponding session setup in order to mount a network share successfully. After the negotiating process is completed, we can observe some regular SMB protocol communication about listing, deleting and writing files to the network share.

Example network trace	SMB version	SMB dialect	NAS IP address	Axis device IP address
<i>Axis_SMB_Handshake_SMB_1.0.pcapng</i>	1.0	NT LM 0.12	172.25.200.50	172.25.201.100
<i>Axis_SMB_Handshake_SMB_2.0.pcapng</i>	2.0	SMB 2.02 (0x0202)	172.25.200.50	172.25.201.100
<i>Axis_SMB_Handshake_SMB_2.1.pcapng</i>	2.1	SMB 2.1 (0x0210)	172.25.200.50	172.25.201.100
<i>Axis_SMB_Handshake_SMB_3.0.pcapng</i>	3.0	SMB 3.0 (0x0300)	172.25.200.50	172.25.201.100
<i>Axis_SMB_Handshake_SMB_3.02.pcapng</i>	3.02	SMB 3.0.2 (0x0302)	172.25.200.50	172.25.201.100
<i>Axis_SMB_Handshake_SMB_Auto.pcapng</i>	Auto-negotiated	N/A	172.25.200.50	172.25.201.100

About CIFS/SMB support

SMB support in Axis devices

AXIS OS version	12.00 and higher	8.30 – 11.90	6.10 – 8.20	5.90 and lower
Enabled	SMB 2.1, 3.0, 3.02, 3.1.1	SMB 2.1, 3.0, 3.02, 3.1.1	SMB 1.0	SMB 1.0
Supported	SMB 2.1, 3.0, 3.02, 3.1.1	SMB 1.0, 2.0 2.1, 3.0, 3.02, 3.1.1	SMB 1.0, 2.0 2.1, 3.0, 3.02, 3.1.1	SMB 1.0
Auto-negotiation	Yes	Yes	N/A	N/A

AXIS OS 8.30 and higher

In Axis devices with AXIS OS 8.30 to 11.9, the insecure versions SMB 1.0 and SMB 2.0 are disabled per default in order to increase the overall minimum cybersecurity level of the device. Devices with AXIS OS 12 and higher only support secure versions of the SMB protocol.

It's possible for the device to auto-negotiate its SMB version with the NAS or edge storage device starting with SMB 2.1, or with higher SMB versions such as SMB 3.0, SMB 3.02 and SMB 3.1.1.

AXIS OS 8.20 and lower

In Axis devices with AXIS OS 8.20.1 and lower, SMB 1.0 is enabled per default while all other supported SMB versions (SMB 2.0, 2.1, 3.0, 3.02) need to be set in **Plain config** as described below.

Setting SMB version in Plain config

If SMB 1.0 or SMB 2.0 is required due to compatibility issues, we recommend setting the **extra mount options** parameter in **Settings > System > Plain config > Storage** to a specific version, e.g. `vers=1.0` or `vers=2.0` for a network share. Note that there are two storage groups per mounted network share (normally Storage S1 and Storage S2), and both need to have the correct version set in extra mount options. If the setup also includes a network share recipient, then this recipient would be included in the S3 or S4 storage group and would also need modification. See the following example of how the configuration should look like when the NAS storage only supports SMB 1.0:

`http://ip-address/axis-cgi/admin/param.cgi?action=update&root.Storage.S1.ExtraMountOptions=vers=1.0`

`http://ip-address/axis-cgi/admin/param.cgi?action=update&root.Storage.S2.ExtraMountOptions=vers=1.0`

Extra mount options

Below you will find three configuration examples describing how the device is handling the **extra mount options** parameter. As you can see, the device will only consider the latter of the two SMB versions entered. Preferably only a single SMB version should be entered.

- `vers=1.0`: device tries to connect via SMB 1.0
- `vers=1.0,vers=2.0`: device tries to connect via SMB 2.0
- `vers=1.0,vers=2.0,sec=ntlm`: device tries to connect via 2.0 SMB with NTLM only
- `seal,sec=ntlmsspi`: Highest security, password hashing encapsulated in Raw NTLMSSP message, force packet signing and encryption

Automatic reconnection

In case the NAS is disconnected from the network, the Axis device will try to automatically remount a network share. A prerequisite for trying to remount a network share is that the NAS is online/available on the network, e.g. via PING. The first attempt to remount the network share will be executed after 2 seconds, and every failed attempt will double the time between new intervals:

- First try: executed after 2 seconds
- Second try: executed after 4 seconds
- Third try: executed after 8 seconds

This will continue until the last try, which will be executed after 600 seconds (10 minutes).

Network share in Plain Config

In the storage section in Plain Config, the complete storage configuration can be obtained from an Axis device. The storage section is splitted into S0-S2 storage groups, where S0 corresponds to the SD card configuration, and S1 and S2 are the network share configuration equivalents.

When mounting a network share on the Axis device, two storage groups - S1 and S2 - are created. S1 is the physical network share and its disk, while S2 is the network share recipient that e.g. could be used in the event system of the Axis device.

Cloud storage

Here's how to set up recording to cloud platforms like AWS S3 and Azure Blob Storage:

Note

Available in AXIS OS 11.11 and later.

1. Set up your S3 or Azure server and create a bucket for the recordings. Then, create a destination on your device by providing the required parameters:
 - `id` (the ID of the destination, which isn't part of the S3 or Azure parameters)
 - `accessKeyId`
 - `bucket`
 - `secretAccessKey`
 - `sessionToken` (optional)
 - `url` (the URL to the S3 or Azure server)

Here's an example of what the data might look like:

```
{ "id": "my_s3_dest", "s3": { "accessKeyId": "minioadmin", "bucket": "test-bucket",
"secretAccessKey": "minioadmin", "sessionToken": "session_token", "url": "http://
172.27.140.1:9000" } }
```

2. Create a recording group using the new recording group API. You'll need to provide the destination ID as a required parameter. You can do this by sending a request to: `http://<target_ip>/config/rest/recording-group/v2/recordingGroups`
3. Start a recording using the same group.

If you need help finding the APIs, you can use the discover feature: `http://<camera_IP>/config/discover`.

You can also use the Swagger UI pages for the APIs to set up your destination and group quickly. You can find these at `http://<camera_IP>/config/web-ui/swagger-ui/?url=/config/discover/apis/remote-object-storage/v1/openapi.json` and `http://<camera_IP>/config/web-ui/swagger-ui/?url=/config/discover/apis/recording-group/v2/openapi.json`.

Best practices

Below you'll find some guidelines for setting up edge recording on your Axis device.

- Use H.264 to reduce bandwidth and avoid MJPEG streams.
- Use only one recording at a time when recording to an SD card to avoid shortening the SD card's lifespan and minimizing its wear level.
- When configuring your recordings, add at least 30 seconds of post-buffer recording to each event triggered recording in order to avoid many small recording segments
- Configure the Axis device properly with the correct date & time prior to starting a recording. Date & time can either be configured manually or automatically via the NTP server.
- Check with the NAS-vendor if the amount of (video) data can be processed by the NAS in order to avoid performance issues.
- Keep the bitrate of the video stream below 10 Mbit/s when recording to the SD card in order to avoid missing frames/recordings.
- On Axis devices with a legacy version, set the clean-up level (i.e. the limit when older recordings are erased) to max 80% on AXIS OS 5.20 and 90% on AXIS OS 5.40.

Timelapse recordings

There are several ways to configure timelapse recordings in Axis products. Below you will find more information and examples of different configuration setups.

Note

A workaround previously described as saving images to the SD card using FTP and the IP address of the device itself is not supported by Axis. The configuration in question has been made unavailable in later AXIS OS versions. It's recommended to use one of the following alternatives instead.

Recording to SD card using third-party ACAP solutions

Axis recommends third-party solutions such as **Timelapse Server** and **Timelapse video** developed by Pandos Development (<https://pandosme.github.io/>). Some of the features these solutions offer include:

- Timelapse recordings to SD card or network share
- Ability to download the AVI-video directly from the ACAP with user-selectable frame rate and playback rate
- Several different timelapse recordings supported simultaneously
- Alert notification in case a timelapse recording has issues


Note

Depending on your Axis device and architecture, the Timelapse Me ACAP comes in three different application filetypes (mips, armv7hf or aarch64). Use the following VAPIX request `http://ip-address/axis-cgi/param.cgi?action=list&group=Properties.System.Architecture` to find out which architecture is supported by your Axis device, and select the correct application filetype and upload it to your Axis device.

Recording to remote host using FTP server

Use FTP properly as it is a standard network protocol to transfer files from one host to another over the internet. Upload to a remote host, e.g., another computer or server on the network with a static path.

Example configuration in web interface in AXIS OS 6.53 and lower

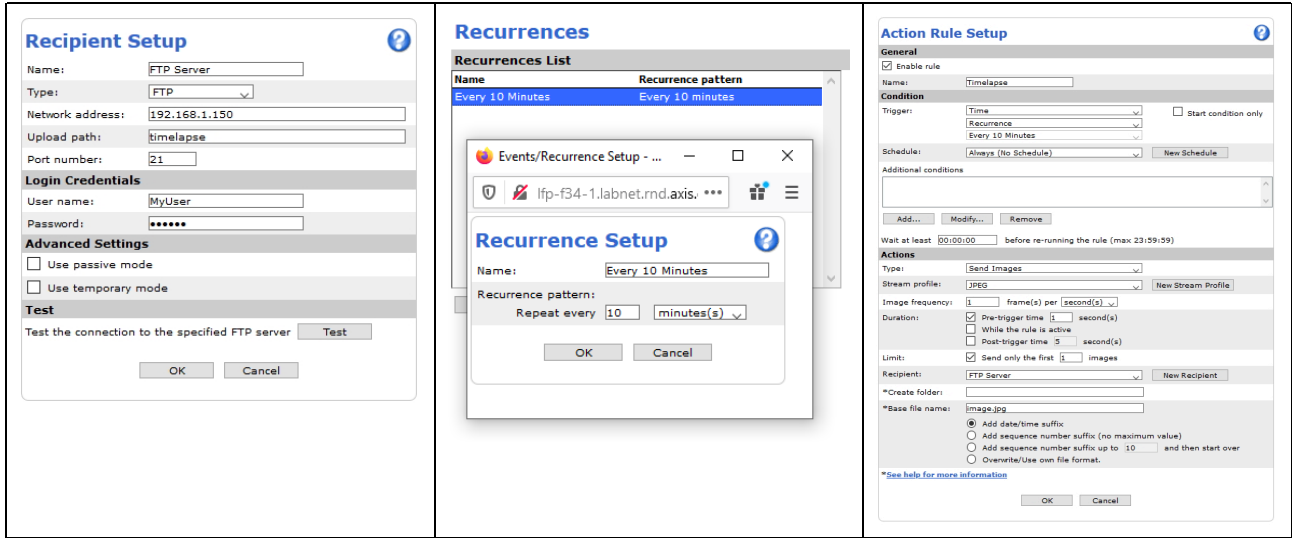

Example configuration in web interface in AXIS OS 9.30 and higher

Rules Schedules **Recipients** Manual triggers

New recipient

Name
FTP Server

Type
FTP

Host
192.168.1.150

Port
21

Folder
timelapse

Username
MyUser

Password

Use temporary file names

Use passive FTP

Test

Cancel Save

Rules **Schedules** Recipients Manual triggers

After Hours
Schedule | Daily

Office Hours
Schedule | Daily

Weekdays
Schedule | Weekly

Weekends
Schedule | Weekly

Every 10 Minutes
Pulse | Every 10 minutes

Name
Every 10 Minutes

Repeat every
10 Minutes

Save

Rules **Schedules** Recipients Manual triggers

Timelapse
Pulse | Send images through FTP

Use this rule

Name
Timelapse

Wait between actions (max 23:59:59)
00:00:00

Condition
Pulse

Use this condition as a trigger

Pulse
Every 10 minutes

+

Action
Send images through FTP

Recipient
FTP Server

There's no stream profile for images. To send images, create an MJPEG profile

Custom image frequency

Image frequency
1 frames per Second

Prebuffer (seconds)
01

Postbuffer (mm:ss)
00:00

Maximum images (0 = ∞)
1

Create folder


Filename
image%-y-%m-%d_%H-%M-%S-%f_#.jpg

Maximum sequence number (0 = ∞)
0

Save

Recording to remote host using network share

Example configuration in web interface in AXIS OS 6.53 and lower

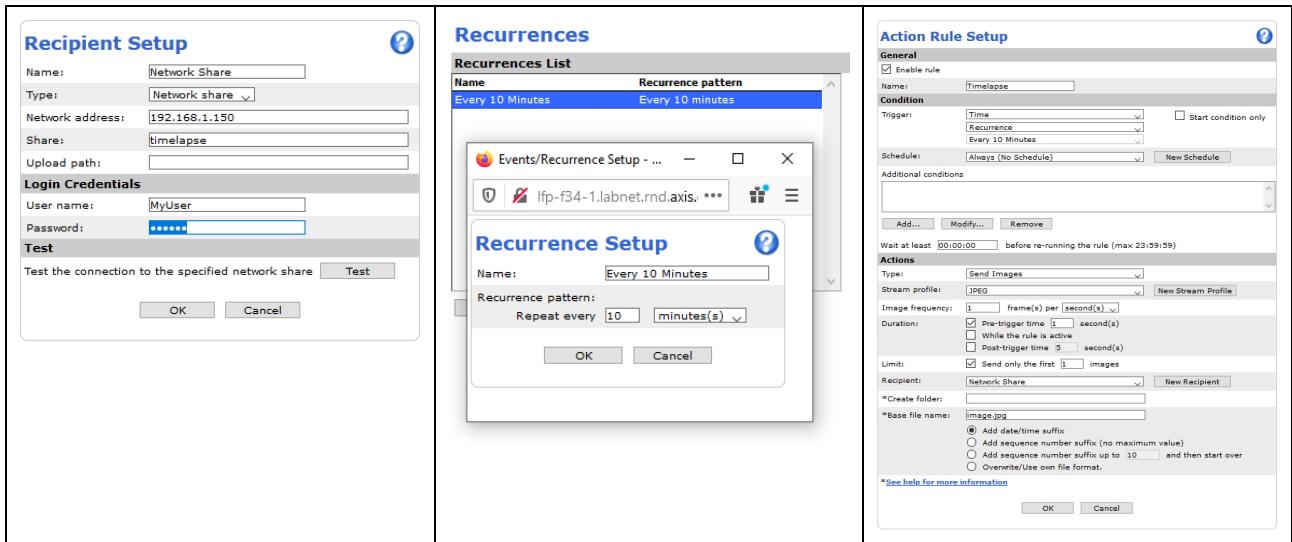

Example configuration in web interface in AXIS OS 9.30 and higher

Rules Schedules **Recipients** Manual triggers

New recipient

Name
Network Share

Type
Network storage

Host
192.168.1.150

Share
timelapse

Folder

Username
MyUser

Password

Test

Cancel Save

Rules **Schedules** Recipients Manual triggers

After Hours
Schedule | Daily

Office Hours
Schedule | Daily

Weekdays
Schedule | Weekly

Weekends
Schedule | Weekly

Every 10 Minutes
Pulse | Every 10 minutes

Name
Every 10 Minutes

Repeat every
10 Minutes

Test Save

Rules Schedules Recipients **Manual triggers**

Timelapse
Pulse | Send images through FTP

Use this rule

Name
Timelapse

Wait between actions (max 23:59:59)
00:00:00

Condition

Pulse

Use this condition as a trigger

Pulse
Every 10 minutes

Action

Send images to network share

Recipient
Network Share

There's no stream profile for images. To send images, create an MJPEG profile

Custom image frequency

Image frequency
1 frames per Second

Prebuffer (seconds)
01

Postbuffer (mm:ss)
00:00

Maximum images (0 = ∞)
1

Create folder


Filename
image%-y-%m-%d_%H-%M-%S-%f_#.jpg

Maximum sequence number (0 = ∞)
0

Cancel Save

Recording to remote host using mail

Example configuration in web interface in AXIS OS 6.53 and lower

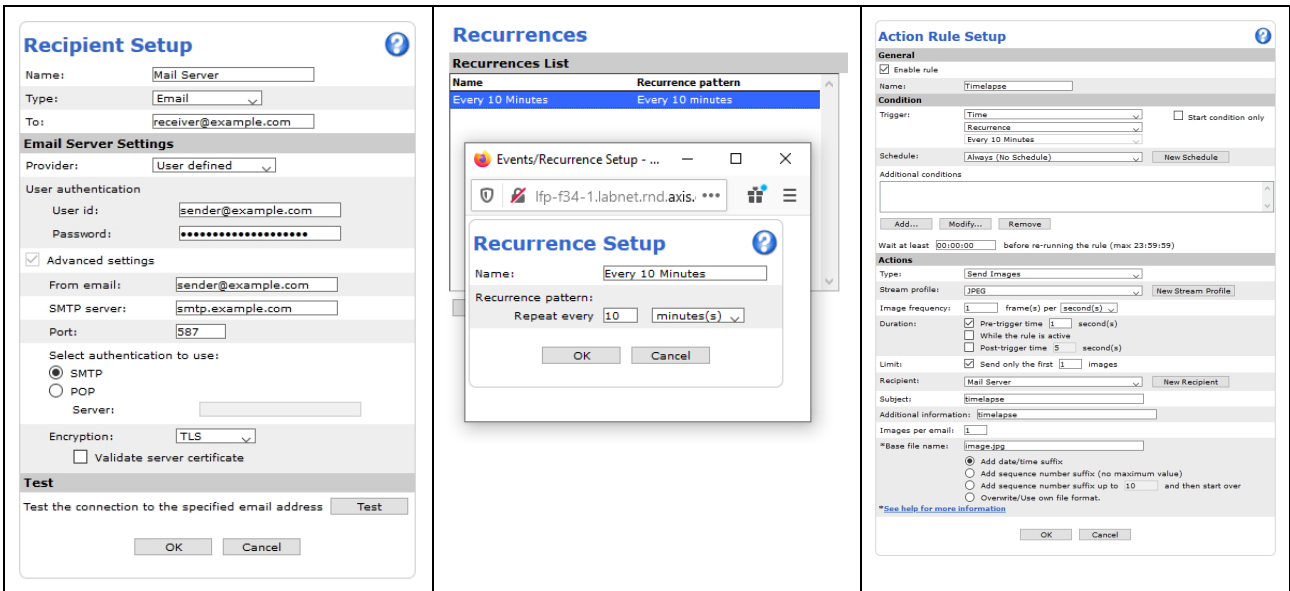

Example configuration in web interface in AXIS OS 9.30 and higher

Rules Schedules **Recipients** Manual trigger

New recipient

Name
Mail Server

Type
Email

Send email to
receiver@example.com

Send email from
sender@example.com

Username
sender@example.com

Password
.....

Email server (SMTP)
smtp.example.com

Port
587

Encryption
TLS

Validate server certificate

POP authentication

Test

Cancel Save

Rules Schedules Recipients Manual triggers

After Hours
Schedule | Daily

Office Hours
Schedule | Daily

Weekdays
Schedule | Weekly

Weekends
Schedule | Weekly

Every 10 Minutes
Pulse | Every 10 minutes

Name
Every 10 Minutes

Repeat every
10 Minutes

Save

Rules Schedules Recipients Manual triggers

Timelapse
Pulse | Send images through FTP

Use this rule

Name
Timelapse

Wait between actions (max 23:59:59)
00:00:00

Condition
Pulse

Use this condition as a trigger

Pulse
Every 10 minutes

+

Action
Send images to email

Recipient
Mail Server

There's no stream profile for images. To send images, create an MJPEG profile

Custom image frequency

Image frequency
1 frames per Second

Prebuffer (seconds)
01

Postbuffer (mm:ss)
00:00

Maximum images (0 = ∞)
1

Subject

Message

Send up to this many images per email
1

Filename
image%y-%m-%d_%H-%M-%S-%f_#s.jpg

Maximum sequence number (0 = ∞)
0

Cancel Save

Troubleshooting & maintenance

Export-import device configuration

In AXIS OS 12.4 we introduced the export-import device configuration feature in AXIS OS-based devices.

This feature significantly streamlines the process of configuring multiple devices. By initially logging in to a single device and performing the necessary configurations, you can then export these settings to a JSON file. This file can then be modified to create a standardized configuration template, which can be seamlessly imported via the web interface to configure the other devices.

This feature provides great benefits for various use cases, including:

- **Multi-device configuration:** When deploying multiple devices, export-import configuration saves time and ensures consistency across all devices.
- **Configuration template creation:** Exporting configurations allows administrators to create standardized templates for the same device types, or to combine common settings for different devices in a single template.
- **Backup:** Configuration backups provide a record of changes made to devices after each AXIS OS upgrade.
- **Device replacement after RMA:** When replacing a faulty device, restoring the previous configuration ensures minimal disruption to operations and maintains existing settings.
- **Troubleshooting:** Restoring a previous configuration can help troubleshoot issues by reverting to a known working state.

This feature is still in the beta stage in AXIS OS 12.4 and is not activated by default. To use it, go to **System > Plain config > Feature flags** and enable **DeCAF export import**.

Feature flags



These are experimental features not ready for use in production. No support is provided for issues at this stage.

Name	Description	Enabled
Selected metadata rtsp producer	Add analytics metadata producer for selected metadata.	<input type="checkbox"/>
Selected metadata events	Send selected metadata as events.	<input type="checkbox"/>
Selected metadata	Enable selected metadata configuration API.	<input type="checkbox"/>
Object storage recording to edge	Enable OSR recording to edge storage devices such as SD cards.	<input type="checkbox"/>
Metadata fusion experimental classes	Enable experimental classes in metadata fusion	<input type="checkbox"/>
Decaf export import	Expose export/import functionality in DeCAF	<input checked="" type="checkbox"/>
Mdnssd legacy disable	Disable mDNS legacy services	<input type="checkbox"/>

Then go to **Maintenance > Device settings**. Refresh the page if it doesn't appear.

Device settings

Export the devices settings into a file or import a file and apply settings.

Export

Import

The **Export** feature lets you download the current device configurations to a JSON file with a single click of a button. You can edit this file with a text editor, add new configuration values, remove existing ones, or alter the existing settings as required. The **Import** feature enables the efficient deployment of customized settings by parsing the JSON configuration file, thus simplifying the implementation of desired configurations and enhancing overall system administration.

Below are the APIs supported in this feature, based on the AXIS OS versions:

AXIS OS version	APIs
12.4	param.cgi New Time API under device configuration
12.7	Action rules and recipients
12.8	Schedules

When exporting the configuration, **ALL** the readable parameters associated with the aforementioned APIs are exported. After the file is exported, you can make modifications to it by editing it directly. When importing the configuration file, the device verifies it before applying it. Any parameters incompatible with the device are automatically ignored and excluded from the import process, ensuring a seamless and error-free configuration update. Also, some APIs may require a set of valid parameters in order to apply a proper configuration. The legacy param.cgi parameters don't have this control functionality.

This feature is based on the device configuration framework. In the future, all newly introduced APIs will be implemented under the same framework and will have export-import functionality. The current implementation does not include the Events and ACAP configurations.

How to upgrade

Axis offers product AXIS OS management according to the active track or the long-term support (LTS) tracks. Regardless of the track chosen, it's recommended to upgrade regularly in order to get the latest security updates. Upgraded can be done by using AXIS Device Manager, AXIS Camera Station, AXIS Companion or HTTP.

Note

- **AXIS A1001 in cluster mode:** If using AXIS A1001 in cluster mode, make sure to upgrade all controllers. Either all at a time using AXIS Device Manager or straight after each other using the web interface or FTP. The entire cluster should always be on the same version.
- **Mandatory upgrade path (10.9):** The following Axis devices require an upgrade via the latest available LTS 2018 (8.40) prior to upgrading to AXIS OS 10.9 or later: AXIS D2050-VE, AXIS FA54, AXIS M3057-PLVE, AXIS M3058-PLVE, AXIS P1367/-E, AXIS P1368-E, AXIS P1445-LE, AXIS P1445-LE-3, AXIS P1447-LE, AXIS P1448-LE, AXIS P3227-LV/-LVE, AXIS P3228-LV/-LVE, AXIS P3807-PVE, AXIS Q1645/-LE, AXIS Q1647/-LE, AXIS Q1659, AXIS Q3515-LV/-LVE, AXIS Q3517-LV/-LVE/-SLVE, D101-A XF P3807, ExCam XF P1367, ExCam XF Q1645 and F101-A XF P1367.
- **Axis Edge Vault (10.11):** From AXIS OS 10.11 and onwards, Axis Edge Vault will be upgraded automatically during an upgrade of the Axis device. The upgrade functionality introduces a non-

backward compatible change to the behavior of Axis Edge Vault. The upgrade process is not reversible: once Axis Edge Vault has been upgraded, it cannot be downgraded. Installing an older release of AXIS OS on a device where Axis Edge Vault has been upgraded is highly discouraged. Core functionality such as HTTPS, 802.1x, and applications that are configured through the certificate management system will not work correctly. It is recommended to first upgrade through AXIS OS 10.10 and then to newer AXIS OS versions. This way, if the upgrade process fails or a rollback is triggered, the device will still be left with an AXIS OS system that is compatible with an upgraded Axis Edge Vault.

AXIS Device Manager or AXIS Camera Station

1. Go to the **Device Manager Tab** in Axis Device Manager or **Configuration Tab > Devices – Management** in AXIS Camera Station.
2. Select all devices that should be upgraded.
3. Right click and select **Upgrade Firmware**, which will open a dialog with a list of device models and the current firmware version installed in each device.
4. In the **Upgrade Firmware** dialog there are two options:
 - **Check for Updates** which requires internet access.
 - **Browse** to locate the file e.g. on hard drive or memory stick.
5. Check for updates:
 - Select **Check for Updates** to download a list of all versions available for all device models.
6. Browse:
 - Select **browse** to locate the files and import them. It is possible to select and import several files at the same time.
7. Each device model will show a dropdown containing all available versions for a model, sorted by "Long Term Support" (LTS) and "Active" software tracks.
8. Select the version to install for each device model.
9. Click **OK** to start upgrading the devices.

Note

By default, upgrade is done for all the selected devices at the same time. The upgrade order can be changed in **Configuration > Connected services > Firmware upgrade settings**. Once an update has been started, the devices will be unavailable until the installation and restart of the devices has completed successfully.

For more information, see the help in AXIS Device Manager/AXIS Camera Station.

HTTP

Upgrade instructions when using the old web interface

1. Download the upgrade file to a directory that is accessible from your local computer.
2. Open the product's start page (e.g. `http://192.168.0.90`) in a web browser.
3. Click the **Setup** link and log in as "root" (or any other user with administrator privileges). You must be logged in as an administrator to upgrade the unit.
4. Click **System Options** in the menu to the left.
5. Click **Maintenance**.
6. Click the **Browse** button in the **Upgrade Server** section.
7. Select the upgrade file you downloaded (and maybe decompressed) from our site. This file is typically named after the product and AXIS OS version.
8. Click the **Open** button.
9. Click the **Upgrade** button in the **Upgrade Server** section.

10. Wait for the flash load to complete, which may take 1-10 minutes. The upgrade procedure occurs in four steps:
 - Step 1: Shut down. Running applications are shut down and active connections are terminated.
 - Step 2: Uploading. The old version will be erased and the new will be saved. During this step, the power LED will blink green/amber. After a while the progress of the upgrade will be displayed in the web browser.
 - Step 3: Reboot. The system restarts automatically.
 - Step 4: Reconfiguration. The new versions settings are configured to match the previous settings. The color of the status LED will be amber during this step.
11. After the upgrade has completed, the unit will automatically initiate the system, during which the status LED blinks amber. When initiation is complete and the system is ready for use, the status LED will be green.

Upgrade instructions when using the new web interface

1. Download the upgrade file to a directory that is accessible from your local computer.
2. Open the product's start page (e.g. <http://192.168.0.90>) in a web browser.
3. Log in as "root" (or any other user with administrator privileges).
4. Click **Settings** to the right.
5. Click **System**-tab.
6. Click **Maintenance**.
7. Select the upgrade file you downloaded (and maybe decompressed) from our site. This file is typically named after the product and AXIS OS version.
8. Click the **Open** button.
9. Click the **Upgrade** button in the **Upgrade Server** section.
10. Wait for the flash load to complete, which may take 1-10 minutes. The upgrade procedure occurs in four steps:
 - Step 1: Shut down. Running applications are shut down and active connections are terminated.
 - Step 2: Uploading. The old version will be erased and the new will be saved. During this step, the power LED will blink green/amber. After a while the progress of the upgrade will be displayed in the web browser.
 - Step 3: Reboot. The system restarts automatically.
 - Step 4: Reconfiguration. The new versions settings are configured to match the previous settings. The color of the status LED will be amber during this step.
11. After the upgrade has completed, the unit will automatically initiate the system, during which the status LED blinks amber. When initiation is complete and the system is ready for use, the status LED will be green.

FTP

Note

- Only applicable for AXIS OS versions 11.0 and below. With AXIS OS 11.1 and later, the FTP options has been removed to increase overall minimum cybersecurity level. For more information, visit *SSH access*, on page 342.
 - With AXIS OS 7.30.1 - 11.0, the FTP server is disabled by default. In order to use the instructions below it first needs to be enabled via the web interface:
Settings > System > Plain config > Network > NetworkFTP
 - This section is not applicable for AXIS Companion Line cameras.
1. You must be at the command prompt and in the directory that contains the upgrade file.

Example: `C:\Axis\Product\Firmware`

2. From the command prompt, open an FTP connection to the unit you wish to upgrade. (Do not use a Windows based FTP program to do this, use command line FTP programs only.)
3. Log in as "root". You must be logged in as the root user to upgrade the unit.
4. Change to binary transfer mode by typing "bin" and press enter.
5. Type "hash" and press enter. This will allow you to see how the upgrade progresses.
6. Type the command "put XXX.bin flash" where XXX.bin is the name of the upgrade file you downloaded (and maybe decompressed) from our site. This file is typically named after the product and AXIS OS version.
7. Wait for the flash load to complete, which may take 1-10 minutes. The upgrade procedure occurs in four steps:
 - Step 1: Shut down. Running applications are shut down and active connections are terminated.
 - Step 2: Uploading. The old version will be erased and the new will be saved. During this step, the power LED will blink green/amber. After a while, the progress of the upgrade will be displayed in the command prompt.
 - Step 3: Reboot. The FTP session terminates and the system starts automatically.
 - Step 4: Reconfiguration. The new versions settings are configured to match the previous settings. The color of the status LED will be amber during this step.
8. After the upgrade has completed, the unit will automatically initiate the system, during which the status LED blinks amber. When initiation is complete and the system is ready for use, the color of the status LED will be green.

How to downgrade

Downgrading an Axis product might be necessary in order to establish compatibility with the third party systems which do not support higher AXIS OS versions. The downgrade is performed in the same way as an upgrade. Instructions are available in *How to upgrade, on page 335*.

If you have a device that has received a new hardware id (HWID), check the *Hardware changes, on page 368* section to see the minimum compatible AXIS OS active and LTS versions for the product.

Note

Downgrading to a lower version could cause implications on a system's health and stability. It is only recommended to downgrade an Axis product using the standard upgrade process if performed in combination with a factory default of the product. The factory default can be performed simultaneously during the downgrade, or manually by the user afterwards.

As of AXIS OS version 10.1, a factory default is mandatory when downgrading.

How to rollback

When upgrading an Axis product, a restore point of the previous state of the product and its entire configuration is made before the upgrade. This restore point is available to go back to after the upgrade has been performed in case of an unexpected issue. This feature is called **Rollback**.

The rollback feature can be found in the Axis product's web interface under **Settings > System > Maintenance**. A video clip with instructions can also be found in *Configuration tips, on page 301*. The feature was introduced in AXIS OS version 7.40, which means that the Axis product must have been upgraded to 7.40 or later in order to be able to perform a rollback.

It is recommended to use the rollback function to re-establish system functionality and to contact Axis Technical Support for further instructions and troubleshooting techniques. No restore point is available when the product is in a factory defaulted state.

Factory default and restore

When troubleshooting or preparing your device for redeployment, you may need to reset it to a previous state. Axis devices offer two options: **Factory default** and **Restore**. While both options reset the device, they differ in the extent of the reset and the settings that are preserved.

Factory default resets the device to its original state, removing all custom configurations, including network settings and user accounts. The device will return to its out-of-the-box condition. You can perform a factory default from the **Maintenance** page in the web interface or by using the hardware button on the device. For instructions on using the hardware button, see the user manual for your specific product.

Restore is similar to factory default, but keeps some network settings intact. You can perform a restore from the **Maintenance** page in the web interface. The settings kept after a restore varies slightly between products, but typically the device will retain the following settings:

- Boot protocol (DHCP or static)
- Static IP address
- Default router
- Subnet mask
- Broadcast IP address
- IEEE 802.1X settings
- O3C settings
- DNS server IP address
- System time

Important

After performing a factory default or restore, you won't be able to roll back to previous settings. Additionally, all installed ACAP applications and certificates not originally included with the device will be deleted.

Basic troubleshooting

AXIS OS supports a variety of troubleshooting tools and commands that can be used to identify, analyze and solve issues experienced by a user. The list below contains some tools and methods. Support and instructions can also be provided by *Axis Technical Services*.

Purpose / Action	HTTP(S) URL command	Additional information
Download server report	<code>https://172.25.201.191/axis-cgi/serverreport.cgi?mode=zip_with_image</code>	Downloads a server report from the Axis device.
Download crash report	<code>https://172.25.201.191/axis-cgi/debug/debug.tgz</code>	Downloads a crash report from the Axis device. This may take several minutes to complete.
Download network trace	<code>https://172.25.201.191/axis-cgi/debug/debug.tgz?cmd=pcapdump&duration=30&interface=eth0</code>	Downloads a network trace from the Axis device. This can also be done via the web interface in newer AXIS OS versions in Settings > System > Maintenance . When the direct URL is used; <ul style="list-style-type: none"> • a custom time in seconds can be specified in the duration= parameter. • the interface that should be captured can be specified in the interface=

		<p>parameter. Without the interface parameter, all interfaces are included. When specifying multiple interfaces, use the following format: "&interface=eth0,eth1.1,eth1.2". The interface parameter is available from AXIS OS 10.10 and onwards.</p>
Ping test IP address	<code>https://172.25.201.191/axis-cgi/pingtest.cgi?ip=172.25.201.10</code>	The ping test is always issued from a source device, in this case the Axis device at 172.25.201.191 followed by the parameter that determines the target IP address or hostname.
Ping test hostname	<code>https://172.25.201.191/axis-cgi/pingtest.cgi?ip=computer.lab.net</code>	The ping test is always issued from a source device, in this case the Axis device at 172.25.201.191 followed by the parameter that determines the target IP address or hostname.
Port open test	<code>https://172.25.201.191/axis-cgi/tcpctest.cgi?address=172.25.201.102&port=80</code>	The port test is always issued from a source device, in this case the Axis device at 172.25.201.191 followed by the parameter that determines the target IP address and port that should be checked for availability.
Collect core dump	<code>http://172.25.201.191/axis-cgi/debug/debug.tgz?listen</code>	Starts listening to available core dumps on the Axis device. It's recommended to use Google Chrome or Mozilla Firefox. Note that the web browser might time out, in this case the command has to be sent again.
Collect core dump wget -TO -O core	<code>"http://root:mypassword@172.25.201.191/axis-cgi/debug/debug.tgz?listen"</code>	Starts listening to available core dumps on the Axis device from the <i>WGET console</i> that is installed as an application on a computer in the same network. Open the Windows command prompt in administrator mode and change the directory with the <code>cd</code> command to where wget is installed, e.g. <code>C:\Program Files (x86)\GnuWin32\bin</code> . To go to this file location you would type e.g. <code>"cd C:\Program Files (x86)\GnuWin32\bin"</code> and then execute the HTTP(S) URL command as seen, for instance <code>wget -TO -O core "http://root:mypassword@172.25.201.191/axis-cgi/debug/debug.tgz?listen"</code>

Disabling VOD on Axis devices

The video object detection (VOD) engine on Axis devices can be disabled, which you might want to do to free up the deep learning processing unit (DLPU) for demanding third-party analytics applications. Before doing so you should understand the crucial impacts this action will have.

On devices with a DLPU, Axis native analytics applications such as AXIS Object Analytics (AOA), AXIS Live Privacy Shield (ALPS), AXIS Scene Metadata, PTZ Autotracker, and others, all rely on the VOD engine, which utilizes the DLPU. When VOD is disabled, the following effects occur:

- **DLPU availability:**
 - The primary effect is that the DLPU becomes available for other processes. Native Axis analytics will no longer use the DLPU, allowing its full capacity to be dedicated to a third-party application. This is the intended purpose of disabling VOD.
- **Impact on native applications:**
 - When the VOD engine is disabled, Axis applications that depend on it (i.e. AOA, ALPS, AXIS Scene Metadata, PTZ Autotracker) will continue to run but will enter an idle state, and be unable to process data because their core dependency (the VOD engine on the DLPU) is unavailable.
 - UI Mismatch: The device's web interface will not reflect this change immediately. The UI for applications such as AOA or ALPS might still indicate they are actively running, even though they are effectively be prevented from performing their processing tasks. The correct status might only appear after a device restart.
 - External Applications: As Axis scene metadata will be in an idle state and unable to process data, applications outside the device, such as smart search, will no longer receive metadata from the device in which VOD is disabled. This can impact searching and event analysis capabilities in these external systems.
- **Memory (RAM) usage:**
 - Disabling VOD does **not** automatically free up significant amounts of RAM. While dependent applications are prevented from processing, they may still occupy memory space as they remain in an idle running state.
 - To make both the DLPU and RAM available, dependent applications (e.g., AOA, ALPS) must also be explicitly stopped/disabled through the device's application management interface.
- **Unaffected services (MOTE / VMD):**
 - The motion detection engine (MOTE) is not affected by the disabling of VOD.
 - Consequently, standard Axis video motion detection (VMD) will continue to function as expected, even when VOD is disabled, as it relies on MOTTE, not VOD.

Telnet access

Note

The below documentation should only be used according to the instructions given by Axis Technical Services in maintenance and troubleshooting situations.

Telnet is supported by Axis devices with version 5.50 and lower. Follow the instructions below in order to use Telnet on the device:

1. Access `http://ip-address/admin-bin/editcgi.cgi?file=/etc/inittab`
2. Remove the hash from the below line in the configuration file: `#tnet:35:once:/usr/sbin/telnetd`
3. After removing the hash, the line should look like this: `tnet:35:once:/usr/sbin/telnetd`
4. Save the file and restart the Axis device

SSH access

Note

The below documentation should only be used according to the instructions given by Axis Technical Services in maintenance and troubleshooting situations.

Accessing the Axis device using SSH for maintenance purposes only is recommended due to the connection being encrypted and sensitive information being transferred securely. SSH access can be achieved using the plain Linux command console or Microsoft Windows power shell. Note that administrator privileges may be required for this and/or firewall and security settings of the computer need to be adjusted in order to allow SSH connections.

SSH in AXIS OS 5.50 – 5.55

Follow the instructions below in order to use SSH on devices with AXIS OS 5.51 and lower:

1. Access the SSH file by using this link: <http://ip-address/admin-bin/editcgi.cgi?file=/etc/conf.d/ssh>
2. Enable SSH by setting `SSHD_ENABLED="yes"`
3. Save the SSH file.
4. Restart the Axis device.

SSH in AXIS OS 5.60 – 11.4

Follow the instructions below in order to use SSH on devices with AXIS OS 5.60 and AXIS OS 11.4:

1. Enable SSH from **Plain Config > Network > SSH**.
2. Save the settings. The Axis device is now reachable via SSH, no restart is needed.

Alternatively SSH can be enabled/disabled using the direct VAPIX API calls:

- <https://ip-address/axis-cgi/param.cgi?action=update&Network.SSH.Enabled=Yes>
- <https://ip-address/axis-cgi/param.cgi?action=update&Network.SSH.Enabled=No>

SSH in AXIS OS 11.5 and higher

To increase the overall system security of AXIS OS, the system-wide root privileges are changed to prevent information leakage and compromised integrity. With AXIS OS 11.5, VAPIX users and SSH users are handled separately. Please see additional information about these change [here](#).


For clarification:

- "VAPIX user" is the user used to for example log into the web interface of the Axis device.
- "SSH user" is the user used to log into the Axis device through SSH.

AXIS OS	Additional information
Factory defaulted AXIS OS 11.4 or earlier	The initial password set during first boot for the root user is valid for VAPIX access.
Upgrading from AXIS 11.4. or earlier to AXIS OS 11.5.	Upgrading to AXIS OS 11.5 will migrate all existing users to become SSH user. If the VAPIX user password is changed, a separate SSH password.
Factory defaulted AXIS OS 11.5.	The initial password set during first boot for the root user is valid for SSH access. If the VAPIX user password is changed, a separate SSH user password change is required.

Above changes do not change the (default) state of the SSH service. The SSH service is still disabled by default and is separated from SSH user creation. It is possible to enable SSH without creating SSH users and vice versa.

It is possible to create/use the same username for VAPIX users and SSH users. User created SSH users do not have root privileges. Existing SSH users (AXIS OS 11.5 or higher) on the Axis device, can be found in the web-interface using **Settings > System > Users > SSH users**.

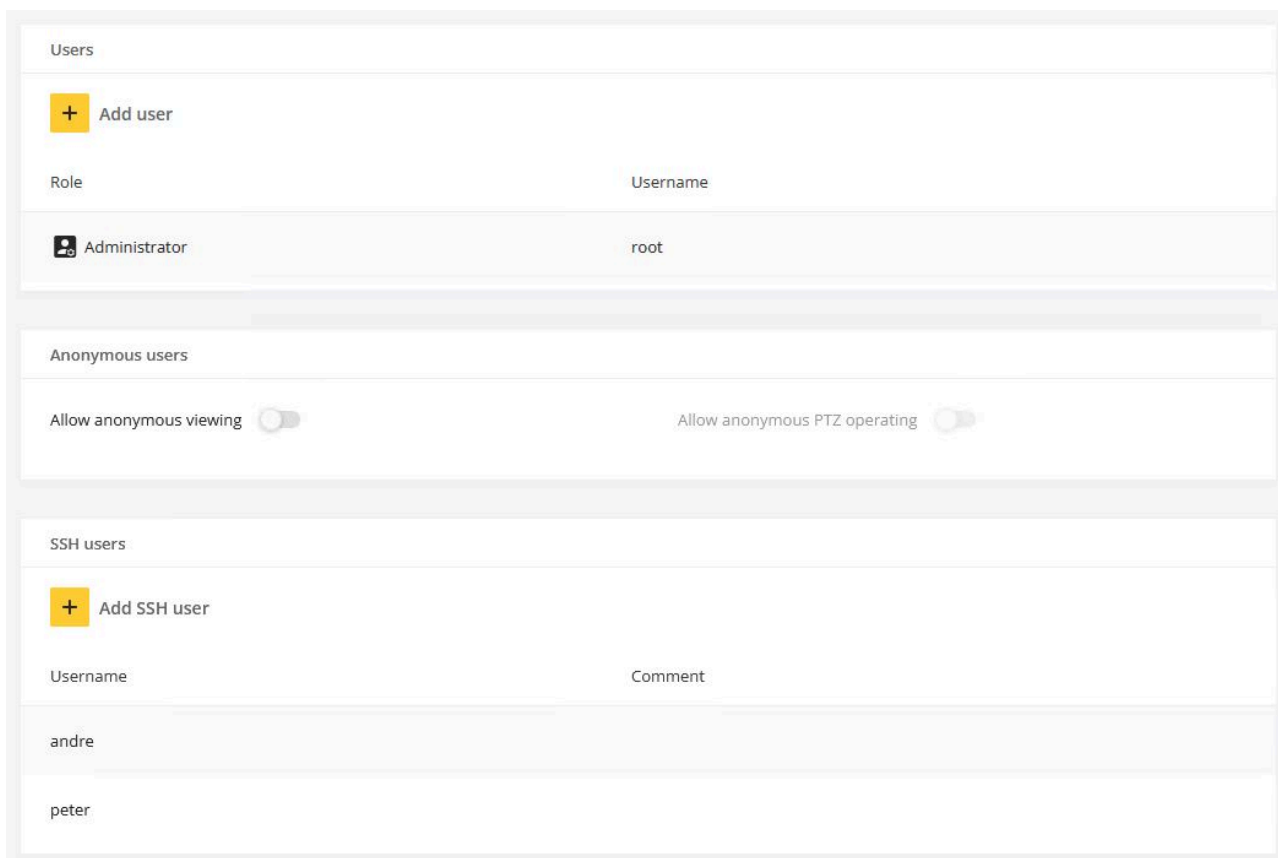

Command overview

The following main commands are available and supported when logged in via SSH to the Axis device. Make sure you are using the commands according to the instructions given by Axis Technical Services.

Action / Purpose	Windows OS command line	Linux OS command line
Connect & login	ssh root@192.168.0.90	ssh root@192.168.0.90
Disconnect & logout	exit	exit
Restart	reboot	reboot
Download crash report	ssh root@192.168.0.90 /usr/sbin/dbox debugar.cgi -d > debug.tgz	ssh root@192.168.0.90 /usr/sbin/dbox debugar.cgi -d > debug.tgz
Upload AXIS OS*	scp C:\Users\psadmin\Downloads\P1375_9_80_2_4.bin root@172.25.201.191:/var/tmp	
Update AXIS OS	upgrade -f /var/tmp/P1375_9_80_2_4.bin	cat P1375_9_80_2_4.bin ssh root@172.25.201.191 upgrade
Update AXIS OS & perform a factory default	upgrade -d -f /var/tmp/P1375_9_80_2_4.bin	cat P1375_9_80_2_4.bin ssh root@172.25.201.191 upgrade -d
Perform a factory restore and keep IP settings	fwmgr factorydefault soft	fwmgr factorydefault soft
Perform a factory default	fwmgr factorydefault hard	fwmgr factorydefault hard

*Uploading AXIS OS to the Axis device is only needed when the user is trying to update the device using the Windows OS command line. This step is not needed when using the Linux OS command line.

The commands below are illustrated using the Windows OS command lines from the table.

Connect & login

```

C:\WINDOWS\system32>ssh root@172.25.201.191
root@172.25.201.191's password:
root@axis-acc8ed910b9:~#
    
```

Disconnect & logout

```

C:\WINDOWS\system32>ssh root@172.25.201.191
root@172.25.201.191's password:
root@axis-acc8ed910b9:~# exit
Connection to 172.25.201.191 closed.

C:\WINDOWS\system32>
    
```

Download Crash Report

```

C:\WINDOWS\system32>ssh root@172.25.201.191 /usr/sbin/dbox debugar.cgi -d > debug.tgz
root@172.25.201.191's password:
/proc/sysrq-trigger: Input/output error
/proc/sys/net/ipv4/route/flush: Bad file descriptor
/proc/sys/net/ipv6/route/flush: Bad file descriptor
/proc/sys/vm/compact_memory: Bad file descriptor
/proc/sysrq-trigger: Input/output error
/proc/sys/net/ipv4/route/flush: Bad file descriptor
/proc/sys/net/ipv6/route/flush: Bad file descriptor
/proc/sys/vm/compact_memory: Bad file descriptor
C:\WINDOWS\system32>
    
```

Restart

```

C:\WINDOWS\system32>ssh root@172.25.201.191
root@172.25.201.191's password:
root@axis-acc8ed910b9:~# reboot
root@axis-acc8ed910b9:~#
    
```

AXIS OS update

```
Administrator: Command Prompt
C:\WINDOWS\system32>scp C:\Users\psadmin\Downloads\P1375_9_80_2_4.bin ssh root@172.25.201.191:/var/tmp
root@172.25.201.191's password:
P1375_9_80_2_4.bin          100%  58MB  19.2MB/s   00:03
ssh: No such file or directory

C:\WINDOWS\system32>
```

```
Administrator: Command Prompt
C:\WINDOWS\system32>ssh root@172.25.201.191
root@172.25.201.191's password:
root@axis-acc8ed910b9:~# upgrade -f /var/tmp/P1375_9_80_2_4.bin
Input data is compressed with gzip.
Current release: 9.80.2.4
Image release: 9.80.2.4
Image build: 42
Image HWIDs: 795:7C2
Firmware partition usage: 465 MiB (3844 blocks) total, 296 MiB (2449 blocks) free, 4 bad blocks.
New firmware will use 158 MiB (1313 blocks) of firmware partition.
Creating volume kernel-new with id 5 and size 2.75 MiB (23 blocks).
Creating volume dtb-new with id 17 and size 63 KiB (1 block).
Creating volume secmon-new with id 29 and size 2 KiB (1 block).
Creating volume rootfs-new with id 11 and size 55.1 MiB (456 blocks).
Image is signed for camera group 'axis-release-artpec-7'.
Signature verification of image successful.
SHA256 of image: 2931581d76063af95869752e172c83a409622c9d8beb295949b8ad3e216ce4ba
Checking if bootloader upgrade is needed on /dev/part/boot.
Bootloader upgrade was not needed.
The system upgrade completed successfully.
root@axis-acc8ed910b9:~# Connection to 172.25.201.191 closed by remote host.
Connection to 172.25.201.191 closed.

C:\WINDOWS\system32>
```

AXIS OS update & factory default

```
Administrator: Command Prompt
C:\WINDOWS\system32>scp C:\Users\psadmin\Downloads\P1375_9_80_2_4.bin ssh root@172.25.201.191:/var/tmp
root@172.25.201.191's password:
P1375_9_80_2_4.bin          100%  58MB  19.2MB/s   00:03
ssh: No such file or directory

C:\WINDOWS\system32>
```

Administrator: Command Prompt

```
C:\WINDOWS\system32>ssh root@172.25.201.191
root@172.25.201.191's password:
root@axis-acc8ed910b9:~# upgrade -d -f /var/tmp/P1375_9_80_2_4.bin
Input data is compressed with gzip.
Current release: 9.80.2.4
Image release: 9.80.2.4
Image build: 42
Image HWIDs: 795:7C2
Deleting volume 'kernel-old' (4).
Deleting volume 'rootfs-old' (10).
Deleting volume 'dtb-old' (16).
Deleting volume 'rwfs-old' (20).
Deleting volume 'secmon-old' (28).
Firmware partition usage: 465 MiB (3844 blocks) total, 296 MiB (2449 blocks) free, 4 bad blocks.
New firmware will use 158 MiB (1313 blocks) of firmware partition.
Creating volume kernel-new with id 4 and size 2.75 MiB (23 blocks).
Creating volume dtb-new with id 16 and size 63 KiB (1 block).
Creating volume secmon-new with id 28 and size 2 KiB (1 block).
Creating volume rootfs-new with id 10 and size 55.1 MiB (456 blocks).
Image is signed for camera group 'axis-release-artpec-7'.
Signature verification of image successful.
SHA256 of image: 2931581d76063af95869752e172c83a409622c9d88beb295949b8ad3e216ce4ba
Checking if bootloader upgrade is needed on /dev/part/boot.
Bootloader upgrade was not needed.
The system upgrade completed successfully.
root@axis-acc8ed910b9:~# Connection to 172.25.201.191 closed by remote host.
Connection to 172.25.201.191 closed.

C:\WINDOWS\system32>
```

FTP access

Note

- Only applicable for AXIS OS versions 11.0 and below. With AXIS OS 11.1 and later, the FTP options has been removed to increase overall minimum cybersecurity level. For more information, visit [SSH access, on page 342](#)
- The below documentation should only be used according to the instructions given by Axis Technical Services in maintenance and troubleshooting situations.

Accessing the Axis device using FTP for maintenance purposes only is not recommended due to the connection being unencrypted and sensitive information being transferred in plain text readable. Therefore, SSH access is recommended. FTP access can be achieved using the plain Linux command console or Microsoft Windows power shell. Note that administrator privileges may be required for this and/or firewall and security settings of the computer need to be adjusted in order to allow FTP connections. FTP can be enabled in the Axis device via **Plain config > Network > FTP**. Alternatively FTP can be enabled/disabled using the direct VAPIX API calls:

- `https://ip-address/axis-cgi/param.cgi?action=update&Network.FTP.Enabled=Yes`
- `https://ip-address/axis-cgi/param.cgi?action=update&Network.FTP.Enabled=No`

Command overview

The following main commands are available and supported when logged in via FTP to the Axis device. Make sure you are using the commands according to the instructions given by Axis Technical Services.

Action / Purpose	Windows OS command line
Connect & login	ftp 192.168.0.90
Disconnect & logout	bye
Restart	quote site reboot
Download crash report*	get debug.tgz

Update AXIS OS*	put P1375_9_80_2_4.bin flash
Update AXIS OS & factory default*	put P1375_9_80_2_4.bin flash_all

*The hash command followed by the bin command can be used to enable verbose logging prior to executing the selected commands.

Connect & login

```
Administrator: Command Prompt - ftp 172.25.201.191
Microsoft Windows [Version 10.0.17763.1697]
(c) 2018 Microsoft Corporation. All rights reserved.

C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> _
```

Disconnect & logout

```
Administrator: Command Prompt
C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> bye
221 Goodbye.

C:\WINDOWS\system32>_
```

Download Crash Report

```

Administrator: Command Prompt - ftp 172.25.201.191
Microsoft Windows [Version 10.0.17763.1697]
(c) 2018 Microsoft Corporation. All rights reserved.

C:\WINDOWS\system32>ftp 172.25.201.19
^C
C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> get debug.tgz
200 Command okay.
150 Opening data connection.
226 Transfer complete.
ftp: 25459061 bytes received in 68.37Seconds 372.37Kbytes/sec.
ftp>
    
```

Restart

```

Administrator: Command Prompt - ftp 172.25.201.191
Microsoft Windows [Version 10.0.17763.1697]
(c) 2018 Microsoft Corporation. All rights reserved.

C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> quote site reboot
200 Command okay.
ftp>
    
```

AXIS OS update

Command Prompt - ftp 172.25.201.191

```
C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> put C:\Users\psadmin\Downloads\P1375_9_80_2_4.bin flash
200 Command okay.
150-Shutting down processes.
150 Opening data connection.
214-Virtual target execution.
Input data is compressed with gzip.
Current release: 9.80.2.4
Image release: 9.80.2.4
Image build: 42
Image HwIDs: 795:7C2
Firmware partition usage: 465 MiB (3844 blocks) total, 296 MiB (2449 blocks) free, 4 bad blocks.
New firmware will use 158 MiB (1313 blocks) of firmware partition.
Creating volume kernel-new with id 5 and size 2.75 MiB (23 blocks).
Creating volume dtb-new with id 17 and size 63 KiB (1 block).
Creating volume secmon-new with id 29 and size 2 KiB (1 block).
Creating volume rootfs-new with id 11 and size 55.1 MiB (456 blocks).
Image is signed for camera group 'axis-release-artpec-7'.
Signature verification of image successful.
SHA256 of image: 2931581d76063af95869752e172c83a409622c9d8beb295949b8ad3e216ce4ba
Checking if bootloader upgrade is needed on /dev/part/boot.
Bootloader upgrade was not needed.
The system upgrade completed successfully.
214 Virtual target exit.
221 Goodbye.
Connection closed by remote host.
ftp>
```

AXIS OS update & factory default


Command Prompt - ftp 172.25.201.191

```
C:\WINDOWS\system32>ftp 172.25.201.191
Connected to 172.25.201.191.
220 AXIS P1375 Network Camera 9.80.2.4 (2020) ready.
503 Bad sequence of commands.
User (172.25.201.191:(none)): root
331 User name okay, need password.
Password:
230 User logged in, proceed.
ftp> put C:\Users\psadmin\Downloads\P1375_9_80_2_4.bin flash_all
200 Command okay.
150-Shutting down processes.
150 Opening data connection.
214-Virtual target execution.
Input data is compressed with gzip.
Current release: 9.80.2.4
Image release: 9.80.2.4
Image build: 42
Image HWIDs: 795:7C2
Deleting volume 'kernel-old' (4).
Deleting volume 'rootfs-old' (10).
Deleting volume 'dtb-old' (16).
Deleting volume 'rwfs-old' (20).
Deleting volume 'secmon-old' (28).
Firmware partition usage: 465 MiB (3844 blocks) total, 296 MiB (2449 blocks) free, 4 bad blocks.
New firmware will use 158 MiB (1313 blocks) of firmware partition.
Creating volume kernel-new with id 4 and size 2.75 MiB (23 blocks).
Creating volume dtb-new with id 16 and size 63 KiB (1 block).
Creating volume secmon-new with id 28 and size 2 KiB (1 block).
Creating volume rootfs-new with id 10 and size 55.1 MiB (456 blocks).
Image is signed for camera group 'axis-release-artpec-7'.
Signature verification of image successful.
SHA256 of image: 2931581d76063af95869752e172c83a409622c9d88beb295949b8ad3e216ce4ba
Checking if bootloader upgrade is needed on /dev/part/boot.
Bootloader upgrade was not needed.
The system upgrade completed successfully.
214 Virtual target exit.
221 Goodbye.
Connection closed by remote host.
ftp>
```

Network traffic shaping

Axis devices can transmit video using the Transmission Control Protocol (TCP) or the User Datagram Protocol (UDP). TCP has a control mechanism, so in the event a packet is being lost or corrupt, it will be resent. The UDP protocol doesn't have a mechanism to ensure that all transmitted packets have been received. So, if a packet is discarded or corrupt, its retransmission is not requested. UDP is commonly used in multicast networks. The discarded packets associated with a video stream will result in unsatisfactory video performance as the associated pixels will not be displayed within the end users' video. Packet drops are caused by different things, e. g. the incorrect specification of the network infrastructure, a network that had alterations over time (more traffic added), or a network that becomes congested at peak times. Network switches with insufficient processing power and memory capabilities will cause packet drops when faced with unexpected or inconsistent peaks of incoming data.

Axis devices will by default transmit their data as fast as possible and due to the nature of H.264 video, we encounter peaks or bursts of network traffic that is sent out by the Axis device into the network. The bursts or peaks of data are associated with the I-frames contained within the video stream, where the whole video frame is updated. In between the I-frames are the P-frames, which are much smaller in data size. This can cause issues when there is insufficient capacity on the network hardware and when using the UDP method of transmission.

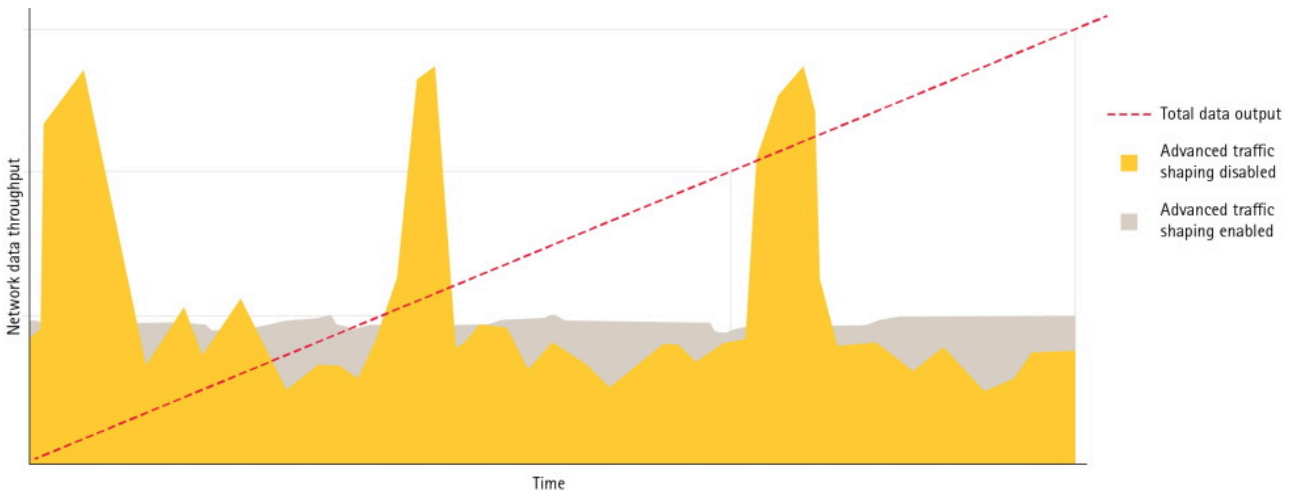

Network bottlenecks and throughput

Even though the network infrastructure through its switches and routers gets increased capabilities and become more powerful in dealing with network spikes and bursts, and even though it's trying to overcome the temporal bottleneck by buffering the incoming data, this might eventually still fail depending on the setup.

Below are a couple of possible scenarios where traffic shaping is a recommended technique for avoiding network related issues. The use cases illustrate how to plan and manage network related traffic by understanding possible bottleneck positions within the network. This is done by simply computing the uplink speed of the network infrastructure and potential incoming data from e.g. Axis devices or other network equipment that coexists and contributes to data traffic in the network.



But it's not only the uplink speed that is important. In some use cases the network equipment is simply not performant enough to cope with the amount of network traffic or spikes that might be generated. It's also possible that the accumulative number of devices connected to the same network switch eventually will overwhelm it and cause it to drop network packets. Proactive planning of the expected network traffic and use case is key in avoiding potential issues.



Basic traffic shaping


There are several techniques for controlling the data output from an Axis device. The first step is to always use a suitable compression level to optimize the device's output. H.264 compression is the industry standard method of compression due to its efficiency, but a suitable compression level must still be applied (this reduces the amount of data whilst maintaining picture quality). Axis Zipstream is an even more efficient compression

algorithm, which increases the compression further whilst still maintaining picture quality when compared to H.264. H.264 and Zipstream algorithms are based on the movement or non-movement within a scene, and as such it's quite difficult to predict the actual output of the camera. Maximum bitrate (MBR), variable bitrate (VBR) as well as average bitrate (ABR) are techniques to limit the output of a camera, and can be used to contain the transmitted data within a certain average perimeter. However this doesn't restrict the actual peaks or bursts. Learn more about the different bit rate controls in the white paper *Bitrate control for IP video*.

A completely different example of applying basic traffic shaping is the simple decision between having two video streams per Axis device, one each for live view and recording versus using the same streaming and network parameters for reusing a single video stream for both live view and recording. Using only one video stream instead of two is reducing the amount of network throughput generated by the Axis device by 50%. This may even be enough to avoid network-related bottlenecks in an aggregated scenario of, let's say, having many Axis devices being connected to a fully utilized 48-port network PoE switch.

Advanced traffic shaping

In case basic traffic shaping mechanics are not suitable, more advanced techniques can be applied on the network layer of the Axis device. To control peaks or bursts of data being transmitted from an Axis device, the **bandwidth limit** parameter in **Plain Config > Bandwidth** can be used. The bandwidth parameter was introduced in AXIS OS 6.20 and makes use of the hierarchical token bucket (HTB) and token bucket filter (TBF). TBF controls the transmitted output by controlling the data by the use of a token. When a token is available – data can be sent. The bandwidth limit is not the capped data rate but what HTB/TBF uses to organize the data output in a controlled manner.

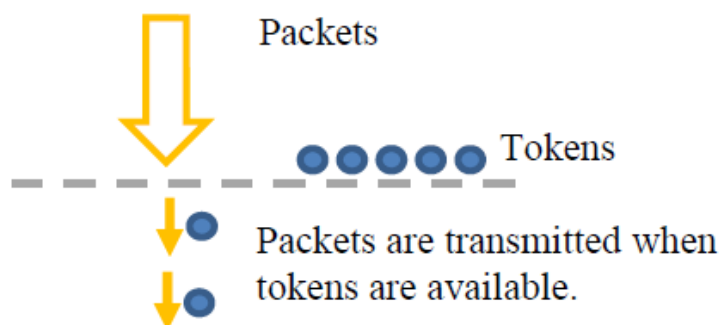

TBF is a queuing method that acts as a timing mechanism which effectively spreads peaks of data over a longer period. More information about HTB and TBF can be found via the following links:

- <http://luxik.cdi.cz/~devik/qos/htb/manual/userg.htm>
- <http://www.lartc.org/howto/lartc.qdisc.classless.html#AEN690>

Configuration in AXIS OS

The bandwidth parameter can be found in **Plain Config > Bandwidth**. When limiting the traffic you need to set a bandwidth limit value that matches your total bandwidth needs from your Axis device. It's recommended to gather statistics from the network switch that the Axis device is connected to in order to learn the usual bandwidth usage. As an example, an Axis device under operation is a multisensor device with four image sensors and a combined quad view that sends out two streams each per channel for recording and live view. These 10 parallel video streams generate an average network bandwidth consumption of 70–80 Mbit/s. To include some margin, the bandwidth parameter should be configured to 100mbit or 125mbit.

Important

The Axis device will drop packets if the bandwidth parameter is configured unreasonably, i.e. lower or very close to the actual network bandwidth consumption. Applying good margin above the actual network bandwidth consumption is always recommended. The bandwidth limit is not the capped data rate but what HTB/TBF uses to organize the data output in a controlled manner.

Example 1: Default configuration, 0 means no traffic shaping is applied.

Plain config

To see the effect of your changes, you might have to refresh the webpage or restart the camera.

API
Audio
AudioSource
Bandwidth >

Bandwidth

Limit

Example 2: Traffic shaping is enabled, and the maximum output is capped at 100 mbit/s.

Plain config

To see the effect of your changes, you might have to refresh the webpage or restart the camera.

API
Audio
AudioSource
Bandwidth >

Bandwidth

Limit

Example 3: Traffic shaping is enabled, and the maximum output is capped at 10000 kbit/s (=10 mbit/s).

Plain config

To see the effect of your changes, you might have to refresh the webpage or restart the camera.

API
Audio
AudioSource
Bandwidth >

Bandwidth

Limit

Wireshark network analysis

Filters and macros

This is a list of common basic operators as well as network and video streaming related filters that are useful when troubleshooting network traffic between an Axis device, the network infrastructure and third party video management systems and other applications.

Basic operators	Description
==	Equal
!=	Not equal
>	Greater than
<	Less than
≥	Greater than or equal to
≤	Less than or equal to
&&	And
!	Not
	Or

Network display filter	Description
ip.addr ≥ 224.0.0.0	Filter for network traffic with IP-Multicast addresses
ip.addr == 172.25.201.0/24	Filter for network traffic with IP-address sub net
ip.addr == 10.0.0.1	Filter for network traffic with IP-address 10.0.0.1
ip.addr ==10.0.0.1 && ip.addr ==10.0.0.2	Filter for network traffic with IP-address 10.0.0.1 and 10.0.0.2
ipv6.addr == 2019:db8:abcd:a:3cf5:6c7e:f780:1085	Filter for network traffic with IPv6 address 2019:db8:abcd:a:3cf5:6c7e:f780:1085
!(ip.addr == 172.25.154.7)	Filter for network traffic excluding this specific IP-address
ip.dst == 10.0.0.1	Filter for network traffic with a specific IP-address 10.0.0.1 as destination
ip.src == 10.0.0.1	Filter for network traffic with a specific IP-address as source
eth.dst == 00:00:cd:37:00:c0	Filter for network traffic with a specific destination MAC address
eth.src == ac:cc:8e:c2:22:7b	Filter for network traffic with a specific source MAC address
icmp	Filter for ICMP traffic (ping)
! icmp.resp_in and icmp.type==8	Filter for ICMP traffic (ping) that did not respond/ failed
dns	Filter for DNS traffic

ntp	Filter for NTP traffic
igmp	Filter for IGMP traffic
eap eapol	Filter for 802.1x traffic
snmp	Filter for SNMP traffic
http	Filter for HTTP traffic
http.request	Filter for HTTP GET requests
http.request.full_uri contains "onvif"	Filter for HTTP Get Requests containing ONVIF related information
http.request.full_uri contains "action=update"	Filter for HTTP Get Requests where a VAPIX param.cgi parameter is changed
http.time > 2	Filter for HTTP responses that were sent longer than 2 seconds after the request.
!(arp or icmp or dns)	Exclude network traffic related to ARP, ICMP and DNS protocol
udp contains 33:27:58	Sets a filter for the HEX values of 0x33 0x27 0x58 at any offset
tcp contains traffic	Filter for TCP packets that contain the word 'traffic' in their payload
tcp.flags.reset == 1	Filter for TCP resets
tcp.analysis.retransmission	Filter for TCP retransmissions
tcp.analysis.out_of_order	Filter for multiple paths between source and destination
tcp.analysis.window_full	Filter for TCP Window Buffer Full Condition
tcp.analysis.zero_window	Filter for TCP Window Buffer Full Condition
frame.time_delta > 0.04	Filter for network traffic that are send with 40ms or more latency compared to the previous packet
tcp.port == 80	Filter for network traffic with TCP port 80
udp.port == 64000	Filter for network traffic with UDP port 64000
udp.srcport==50000	Filter for network traffic with UDP source port 50000
udp.dstport==50001	Filter for network traffic with UDP destination port 50001
smb2 smb	Filter for SMB network protocol traffic
p.dsfield.dscp == 0x0b	Filter for Quality of Service DSCP values, a Hex converter is needed to convert the 0x00 values
macc.opcode == pause	Filter for Ethernet Pause-Frames

Video streaming display filter	Description
rtsp.request	Filter for RTSP requests such as Options, Get Parameter, Play, Setup etc..

rtsp contains "backchannel"	Filter for RTSP streams using ONVIF backchannel
rtsp contains "onvif"	Filter for RTSP streams using the onvif protocol
rtsp h264	Filter for RTSP and H.264 decoded RTP streams
rtp.ssrc == 0x76747D52	Filter for RTP streams with specific source ID
rtp contains "VirtualInput"	Filter for RTP streams containing specific keywords to identify metadata such as the Virtual Input
(ip.src==10.25.195.92 && udp.srcport==50000 && ip.dst==10.25.185.75 && udp.dstport==31018 && rtp.ssrc==0x9c37fd6)	Filter for RTP stream with a number of specific details
h264.nal_unit_type == 1	Filter for P-Frames only
h264.nal_unit_type == 5	Filter for I-Frames only
h264.start.bit == 1 && h264.slice_type == 2	Filter for I-Frame start packages only
h264.start.bit == 1 && h264.slice_type == 0	Filter for P-Frame start packages only
h264.nal_unit_hdr == 6	Filter for SEI Frames (UserData needs to be enabled in the Axis device)
h264.nal_unit_hdr == 7	Filter for SPS Frames
h264.nal_unit_hdr == 8	Filter for PPS Frames
rtp.ext eq 1	Filter for SRTP (RTSPS) streams
rtp.ext.rfc5285.id eq 14	Filter for SRTP (RTSPS) streams

Coloring and column preferences

In Wireshark, you can set coloring rules and select and organize columns to get a better overview of the network traffic. In the following screenshots you will see how this can be configured.

With coloring rules it's possible to highlight certain types of network traffic - e.g. RTSP/RTP - in a certain color, which makes it easier to identify for the user. Configuring coloring rules works in the same way as setting display filters in Wireshark, and you can actually use the same filters.

The image displays two screenshots of the Wireshark network traffic analysis tool. The top screenshot shows a packet capture of RTSP traffic. The packet list pane shows several packets, with packet 17 selected. The packet details pane shows the structure of the RTSP packet, including the 'RTP' section. The packet bytes pane shows the raw data of the packet. The bottom screenshot shows the same capture with a 'Wireshark: Coloring Rules Default' dialog box open, allowing the user to filter and color-code packets based on various criteria like protocol, port, and IP address.

Columns can be selected and organized to make the network traffic analysis more logical and the information more easily accessible, e.g. when following traffic from two network devices in the network.


The screenshot shows the Wireshark network protocol analyzer interface. The main pane displays a list of captured packets. Packet 11 is selected, and its details pane shows Ethernet II, Internet Protocol Version 4, and Unescaped RSP Data (2 bytes). A 'Wireshark - Preferences' dialog box is open, showing the 'Display' tab with various fields checked for display. The 'Columns' section includes fields like No., Time, Package Delta, Source MAC, Source, Source Port, Destination MAC, Destination, Destination Port, Protocol, Length, Type, Info, and TCP Window Size. The 'Fields' section includes fields like h264_nal_unit_hdr, tcp_time_delta, and tcp_window_size. The 'Font and Colors' section is also visible.


Decode RTP/UDP traffic

In order to analyze H.264 network related traffic successfully, it's essential that you configure Wireshark to decode video streaming related traffic. With this in place, more useful display filters can be used too. The

following screenshots illustrate the correct configuration (i.e. H.264 dynamic payload types set to "96") to decode RTP network traffic transported via UDP since H.264 needs to be in place for that.

This network trace can be used for testing the steps below.

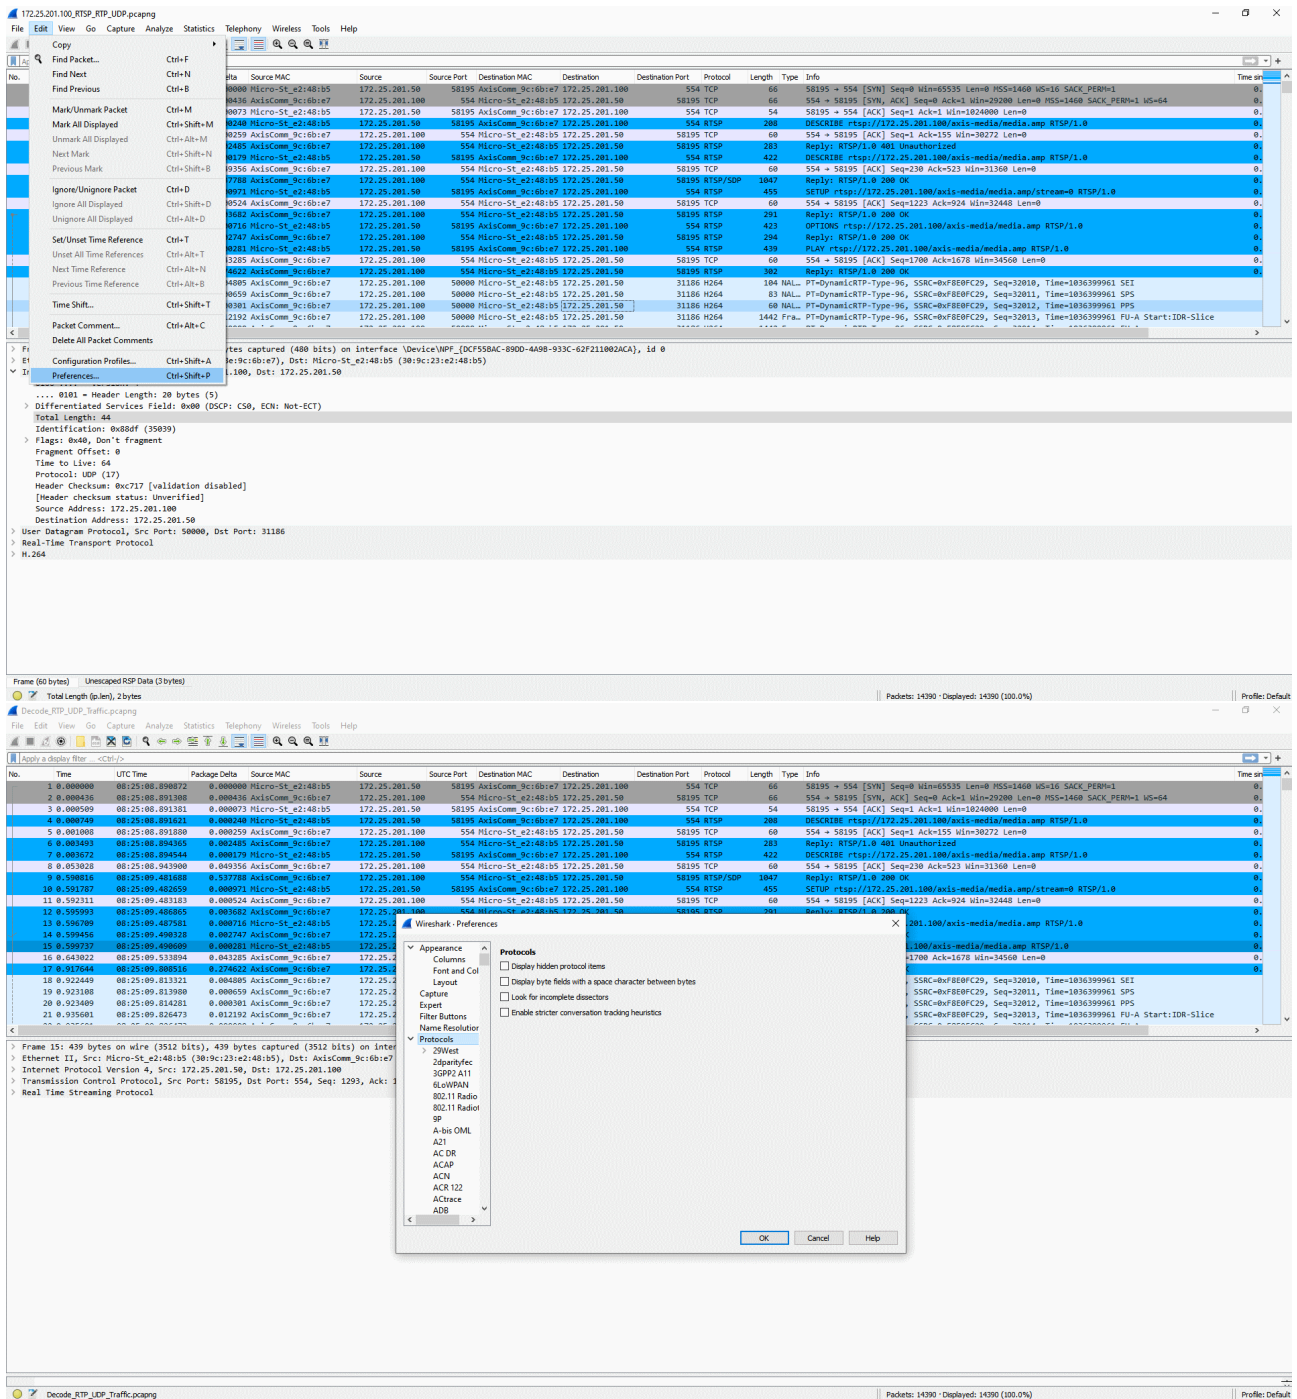



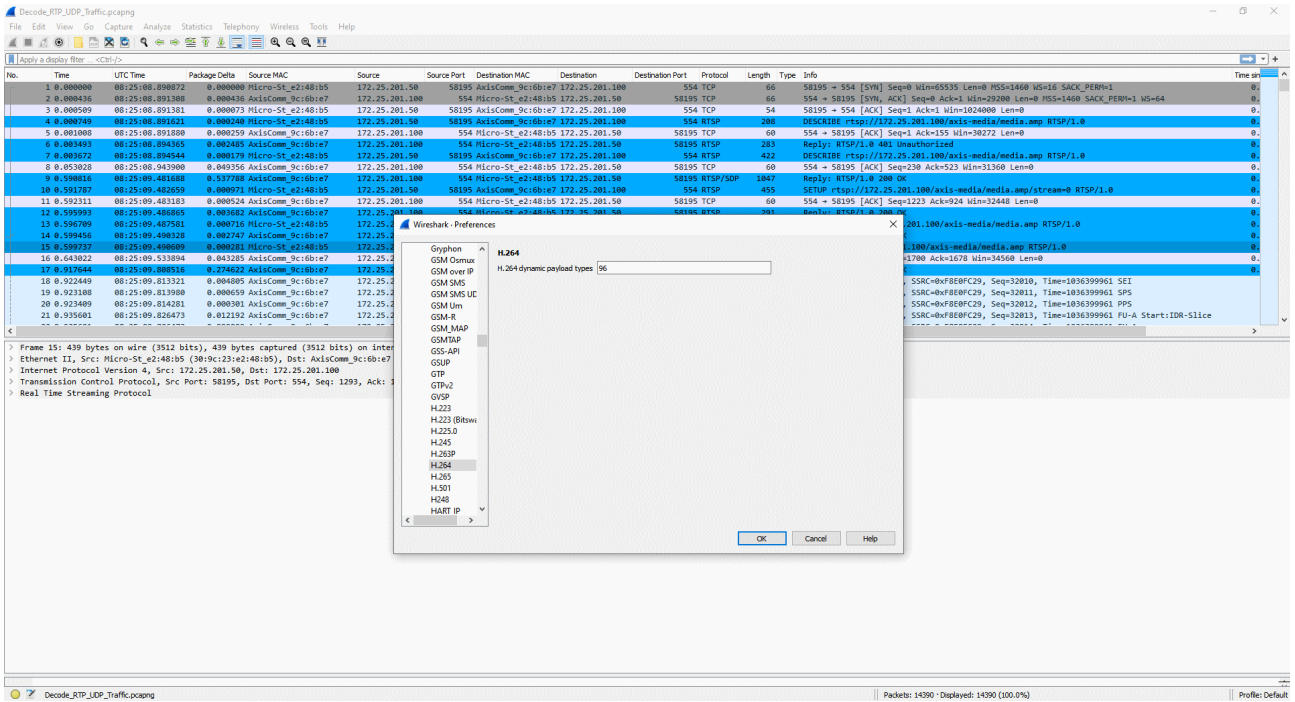



Decode RTP/TCP traffic

In order to analyze H.264 network related traffic successfully, it's essential that you configure Wireshark to decode video streaming related traffic. With this in place, more useful display filters can be used too. The following screenshots illustrate the correct configuration (RTP over RTSP encapsulated) to decode RT(S)P network traffic transported via TCP since H.264 needs to be in place for that.


This network trace can be used for testing the steps below.

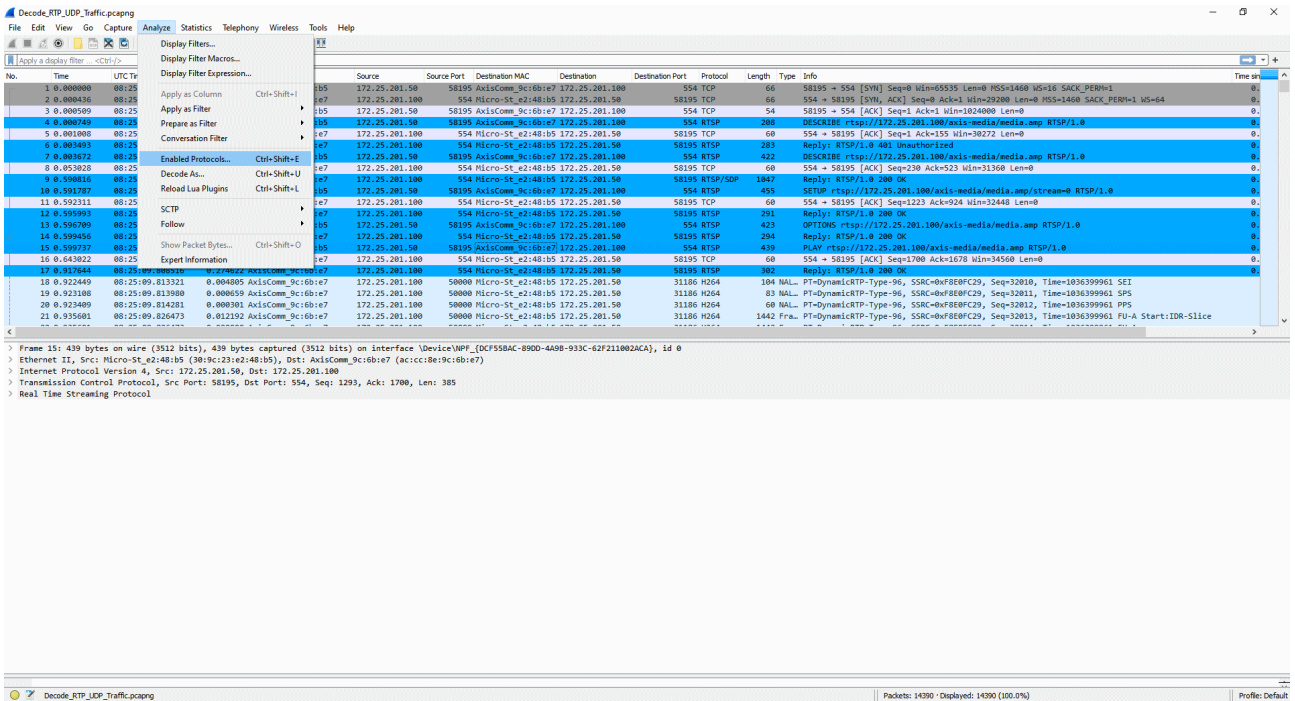


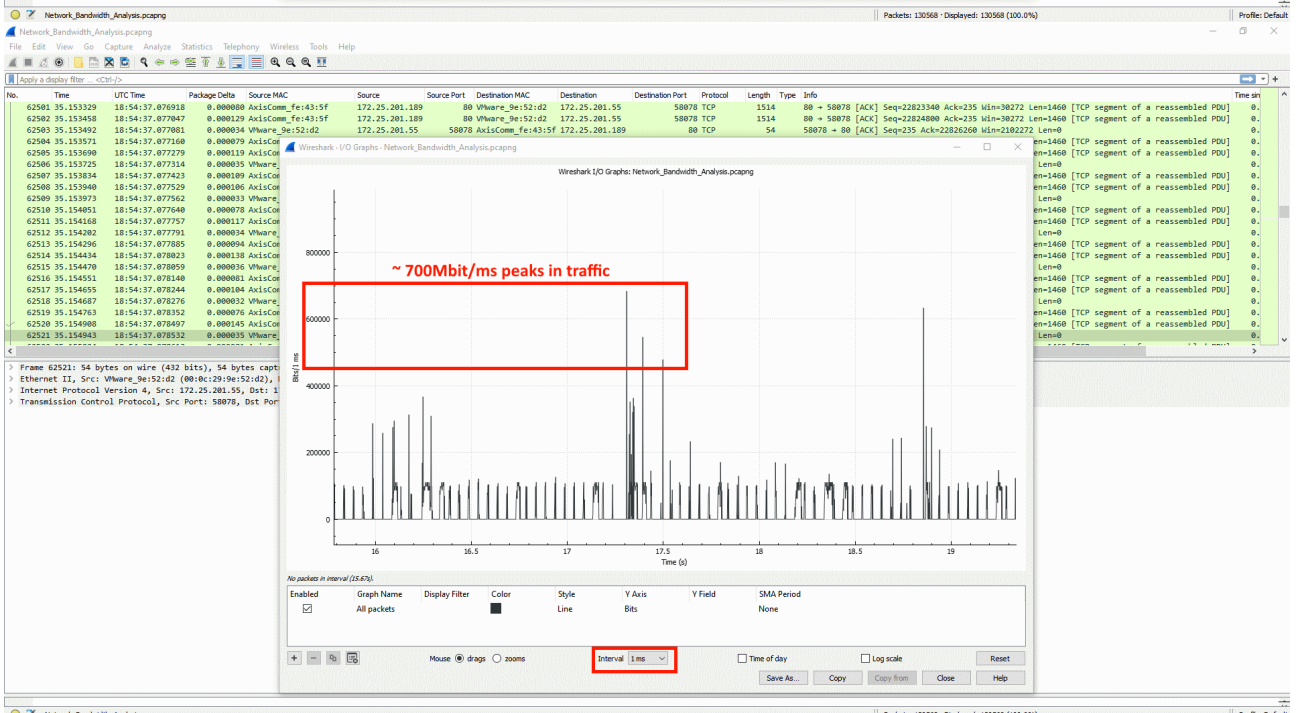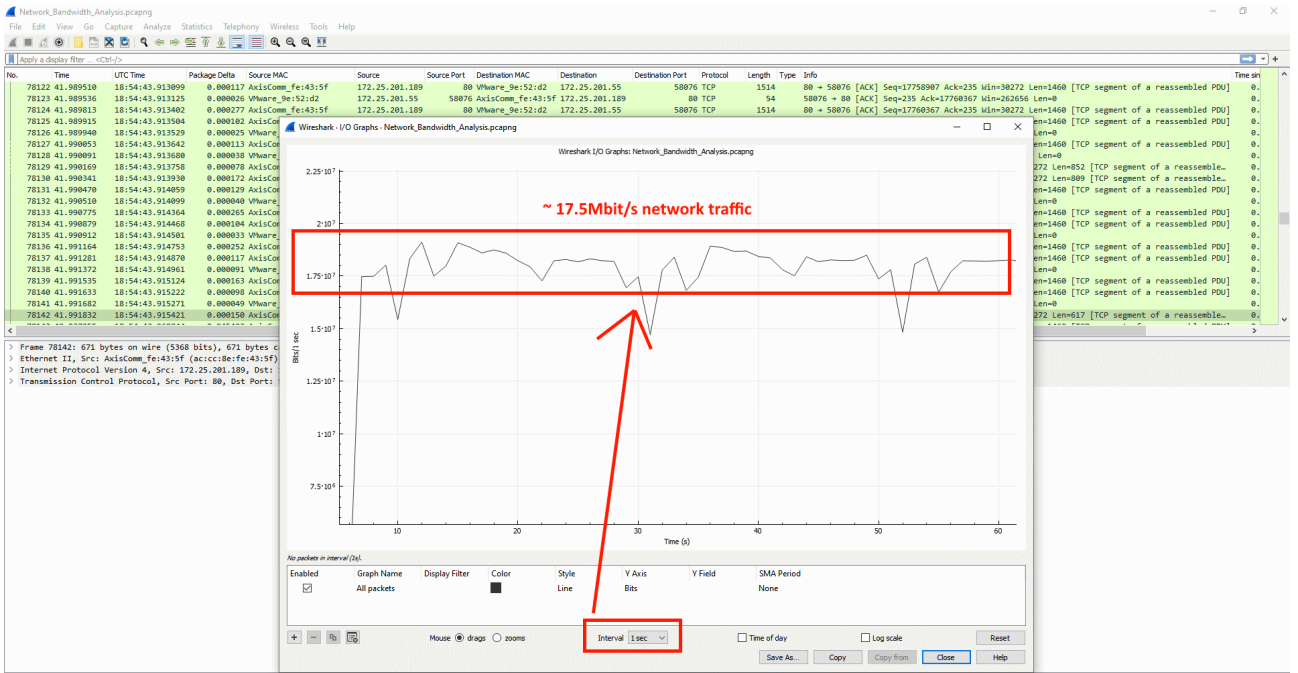

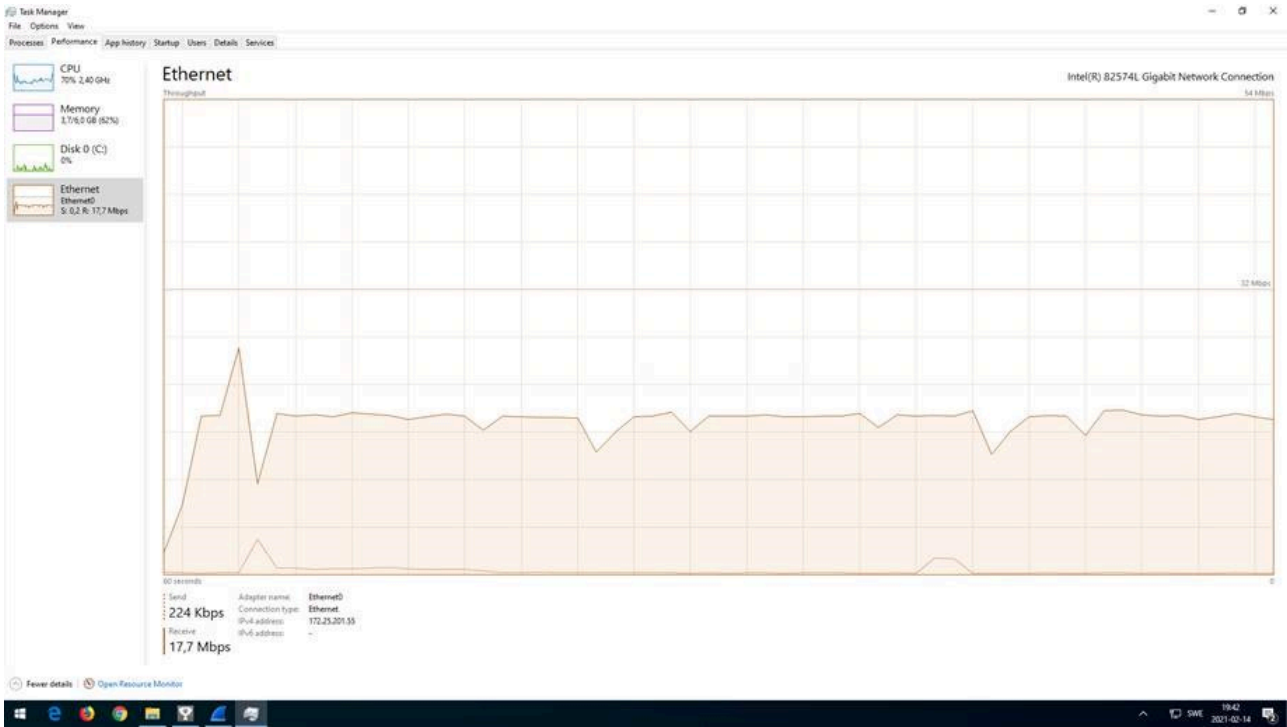

Useful information can also be found in the capture statistics of the network trace file.

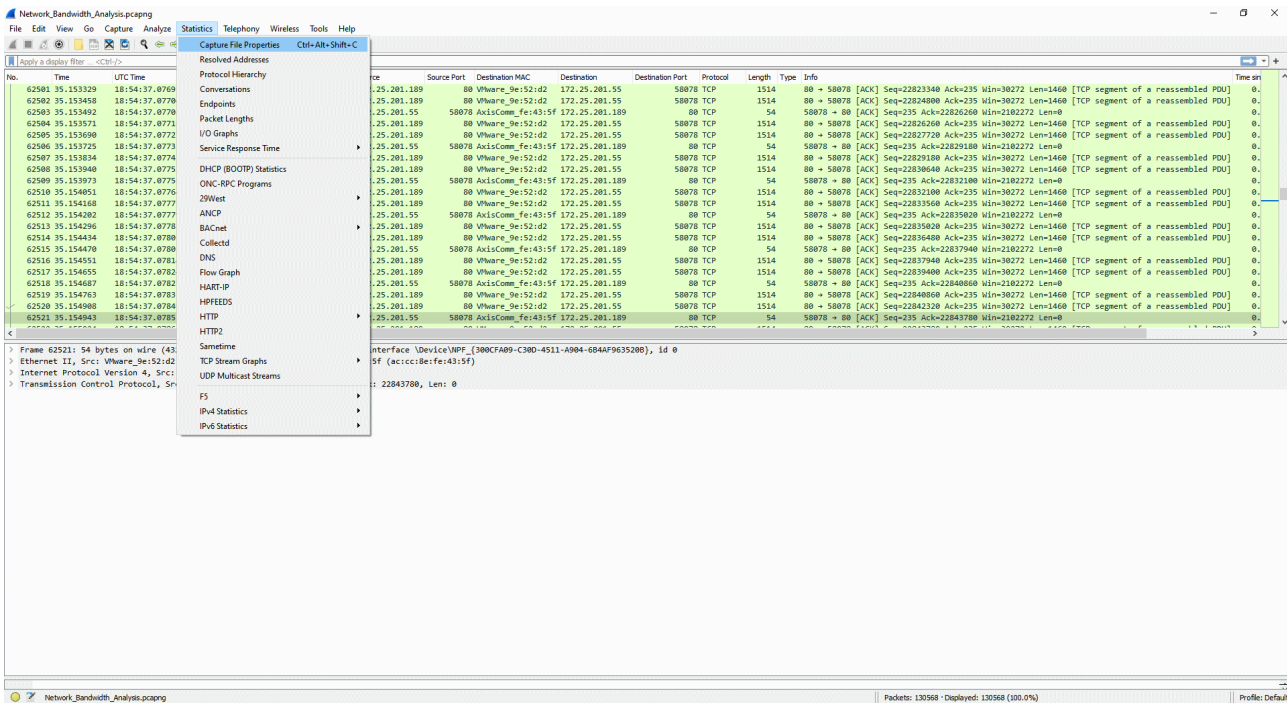

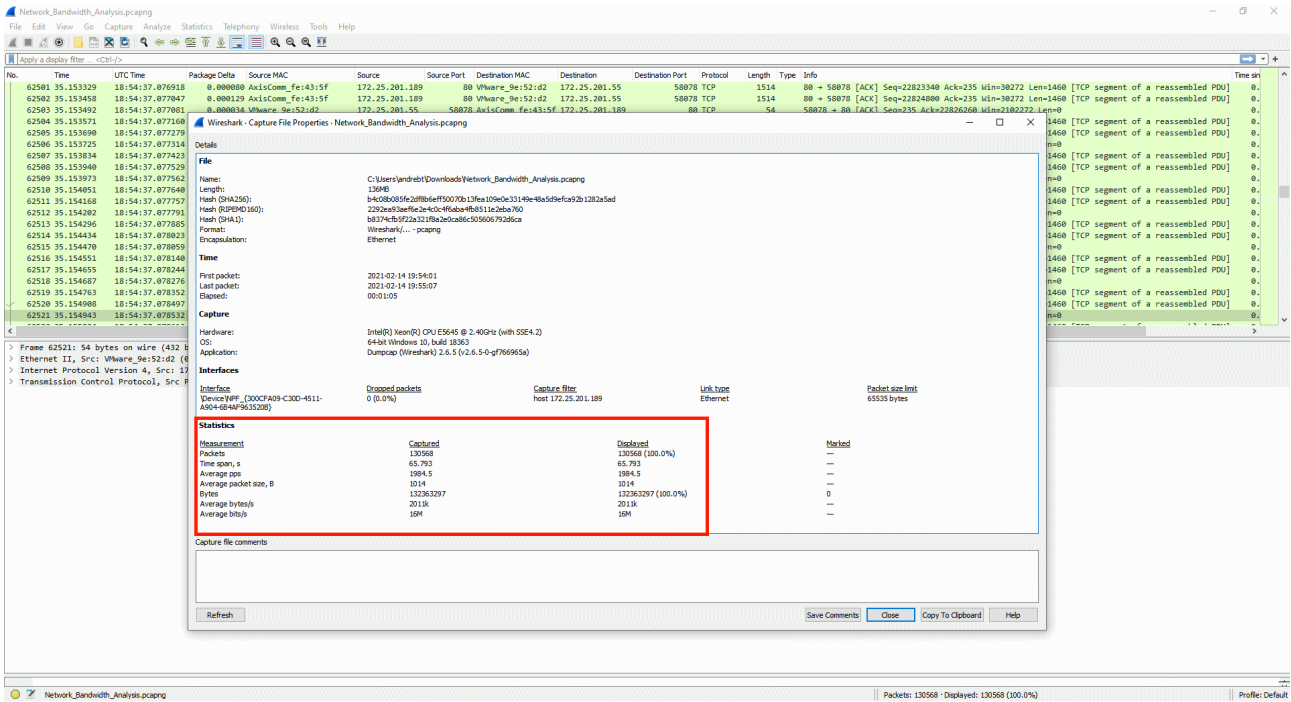

Limit network captures

During troubleshooting it's sometimes required to take Wireshark captures over a longer period of time since it's uncertain when a problem appears. As this typically requires a lot of disk space, it's recommended to limit the Wireshark capture. This can be done by using the options below and *dumppcap*, which is part of Wireshark. The default installation path for dumppcap is: C:\Program Files\Wireshark\

Command line option	Description
-D	Find interface number.
-i	The interface number the capture should be done on.
-q	Quiet mode, eliminates displaying packet count.
-b filesize:n	The file size to create in KB per capture file.
-b duration:n	The amount of time in seconds to run per capture file.
-b files:n	The maximum number of files to create. Once the maximum number of files have been saved, the oldest file is deleted and a new empty file is created in its place.
-f	The capture filter. For more information, see this page .
-w <path>.pcap	The location to write the output files. The path specified must exist.

When using the "-b files:n" option the contents of the specified traces folder would contain files with a sequence number and timestamp as follows: mytrace_00001_20220626164602.pcap . . . mytrace_00024_20220627154602.pcap.


Variable	Description
mytrace	Name of the trace.
00001	File sequence number.
2022	Year.
0626	Month/day.
164202	Hour/min/sec in 24 h format. The time indicates when the file capture was "started".

Example use cases:

Example	Output
<code>dumpcap -i 3 -q -b duration:3600 -b files:10 -w c:\traces\mytrace.pcap</code>	10 capture files x 1 hour long.
<code>dumpcap -i 3 -q -b duration:3600 -b files:10 -f "host 192.168.0.90" -w c:\traces\mytrace.pcap</code>	10 capture files x 1 hour long + a capture filter to only capture traffic for the IP "192.168.0.90".
<code>dumpcap -i 3 -q -b filesize:200000 -b files:10 -w c:\traces\mytrace.pcap</code>	10 capture files x 200 MB.

Server report

The server report includes actual, and to some extent historical, information about health-monitoring, general system and configuration information, as well as valuable log files. Information that will help Axis Technical Support to analyze your device. Always include a server report when contacting AXIS Support.

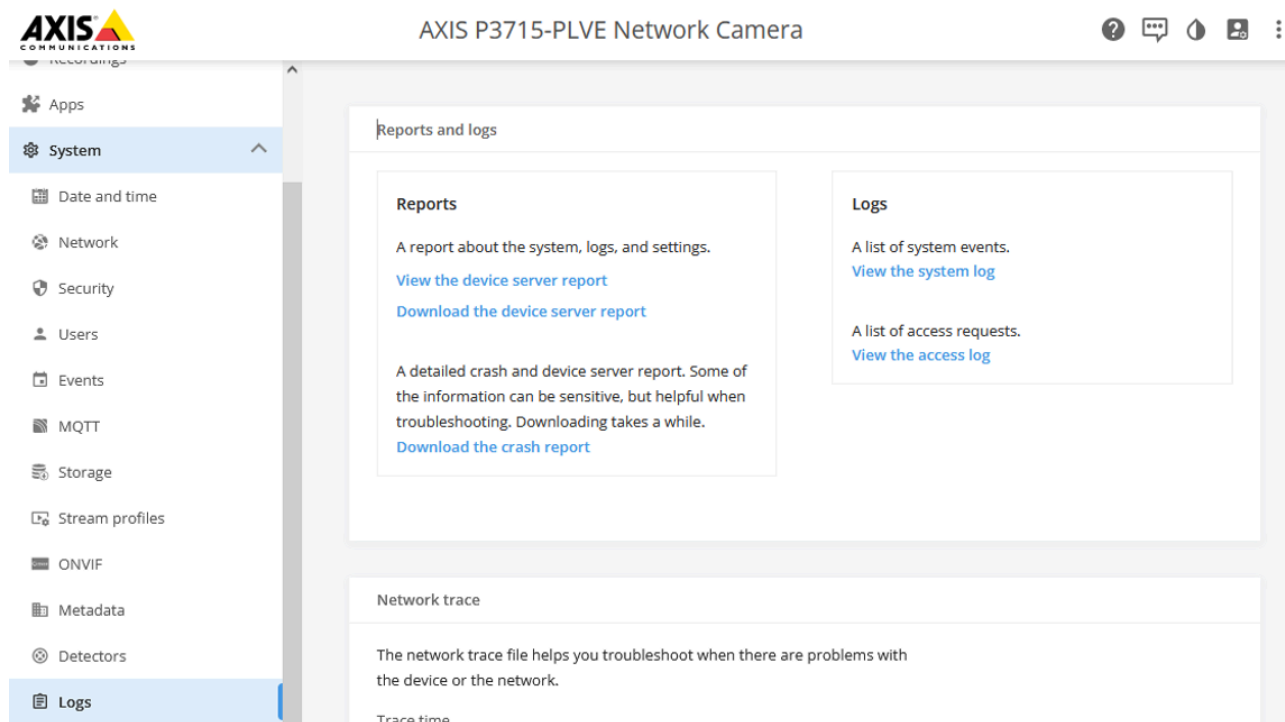

The server report can be downloaded as a .zip file.

AXIS OS version	Web interface download instructions
< 7.10	Setup > System Options > Support > Logs & Reports > Download Server Report
≥ 7.10	Settings > System > Maintenance > Download Server Report
≥ 10.9	System > Logs > Download the device server report

AXIS Server Report Viewer

AXIS Server Report Viewer is a web based, graphical user interface that makes it possible to upload and visualize the data of the server report. The tool is developed by Axis and greatly enhances the speed and efficiency of analyzing the data in the server report.

You can access AXIS Server Report Viewer after logging in to www.axis.com with your MyAxis account.

The screenshot displays the AXIS Server Report Viewer interface for an AXIS P3715-PLVE Network Camera. The page title is "AXIS P3715-PLVE Network Camera" with a sub-header "Axis_SR_20220723_170003_B8A44F03F3B1.zip". The interface includes a navigation bar with "Upload report", "About SRV", and "Feedback". Below the title, there are controls for "Download original", "Open unformatted", "Expand all sections", "Collapse all sections", and "Recent reports". The main content area is titled "Product Overview" and is divided into three sections:

- Product Status:**
 - Product: AXIS P3715-PLVE Network Camera (ID: B8A44F03F3B1)
 - Firmware: 10.11.65
 - Load: 0.42, 0.52, 0.49
 - Memory: 360 MB available / 492 MB total
- Firmware Status:**
 - Installed Firmware: 10.11.65
 - Rollback Firmware: None
- Product Lifetime Statistics:**
 - Current Uptime: 12 days 4 h 15 mins
 - Boot-up counter: 36
 - Total Uptime: 596 days
 - Restart counter: 13

The **Feature Status** section lists various features with their current status (Enabled/Disabled) and a toggle icon:

- O3C: Disabled
- SSH Server: Disabled
- HTTPS (Digest): Enabled
- SNMP: Disabled
- Audio: Disabled
- Dynamic GOP: Disabled
- User Data: Disabled
- UPnP: Disabled
- S RTP: Disabled
- Replay Attack Protection: Enabled
- Continuous Recording: Disabled
- FTP Server: Disabled
- IP Address Filter: Enabled
- IEEE 802.1x: Enabled
- Zipstream (Low): Enabled
- Dynamic FPS: Disabled
- Always Multicast: Disabled
- Bonjour: Disabled
- Brute Force Delay Protection: Enabled

Watch the introduction video to learn more about AXIS Server Report Viewer.



AXIS VAPIX® Test Tool

The purpose of this tool is to aid in the troubleshooting of the Axis VAPIX® library requests when used in conjunction with the device event system as described in the *Get started with rules for events* section of the Axis documentation.

You can download the tool here: [AXIS VAPIX® Test Tool](#).



Product specific information

Hardware changes

When Axis makes hardware changes to an existing model that are not backwards-compatible, the device is assigned a new hardware ID. This is because updated components may require adjustments in how AXIS OS interacts with the hardware.

All Axis models have a hardware ID that is used to identify their specific hardware configuration, which may lead to older units of a model may having one hardware ID, while newer units of the same model may have a different one.

Axis aims to minimize changes to hardware IDs for existing models whenever possible. Historically, such changes have been rare, but in recent years, global component shortages have led to updates in some products already on the market, resulting in new hardware IDs.

All AXIS OS versions have a reference to the hardware ID that it supports. When a device gets a new hardware ID, it is released on the latest available versions of the Active and LTS tracks for that model. This means that if you already have a particular device and you buy a new one of the same model that has had a hardware ID change, it won't be possible to downgrade the new model to an older AXIS OS version that doesn't support the new hardware ID. The same device with the previous hardware ID supports all AXIS OS versions released since that hardware ID was introduced.

To be transparent about the changes made, we have listed all the products affected by hardware ID changes. See the table below to find the minimum OS version you need to use to avoid issues when downgrading.

As always, we recommend using the latest supported OS version on the track you are using, to be sure of having the latest patches and security updates. Read more about the AXIS OS tracks in the *AXIS OS Portal* and follow the updates in each track in the *AXIS OS Release Notes*.

Note

The minimum active is not recommended if there is a later version LTS available, since they no longer are supported and are replaced by the newer LTS.

The minimum LTS 6.50 or 8.40 is not recommended if there is a higher version of LTS available as this is no longer maintained.

Product	Track	Version	Release date
AXIS A8105-E	LTS 2016	1.58.2.2	2017-04-21
AXIS A8207-VE Mk II	Active (legacy)	11.0.89	2022-09-21

Product	Track	Version	Release date
AXIS C1310-E	Active (legacy)	10.12.66.1	2022-07-08
	Active (legacy)	10.10.73.3	2022-05-25

Product	Track	Version	Release date
AXIS Companion 360	Active (legacy)	8.40.1	2018-09-19
	Active (legacy)	7.15.2.2	2017-10-30
AXIS Companion Cube L/ LW	LTS 2020	9.80.1.2	2020-05-20
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1	2017-11-30

AXIS Companion Dome V/ WV	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1	2017-11-30
AXIS Companion Recorder 8CH/4CH	LTS 2020	9.80.1	2020-05-04
	Active (legacy)	1.11.1.3	2017-11-10

Product	Track	Version	Release date
AXIS M1045-LW	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1	2017-11-30
AXIS M1065-L/-LW	LTS 2020	9.80.1.2	2020-05-20
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1	2017-11-30
AXIS M1124/-E AXIS M1125/-E	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	8.15.1	2018-03-18
	LTS 2016	6.50.1.2	2017-06-14
AXIS M1134 AXIS M1135/-E AXIS M1137/-E	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.3.0.1	2021-01-11
	LTS 2020	9.80.3.1	2021-03-03
AXIS M2026-LE Mk II	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.30.1.1	2017-10-16
AXIS M3044-V/-WV AXIS M3045-V/-WV	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1	2017-11-30
AXIS M3046-V	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	6.15.7.2	2017-10-18
AXIS M3047-P	LTS 2018	8.40.1	2018-09-19

AXIS M3048-P			
	Active (legacy)	7.15.2.2	2017-10-30
AXIS M3067-P	LTS 2022	10.12.104	2022-09-05
AXIS M3068-P			
	Active (legacy)	10.11.87	2022-06-16
	LTS 2020	9.80.3.13	2022-07-22
AXIS M3088-V	Active	12.1.60	2024-11-13
	LTS 2024	11.11.127	2024-12-06
AXIS M3106-L/-LVE Mk II	LTS 2020	9.80.1	2020-05-04
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.30.1.1	2017-10-20
AXIS M3115-LVE	LTS 2022	10.12.104	2022-09-05
AXIS M3116-LVE			
	Active (legacy)	10.11.85	2022-06-14
	LTS 2020	9.80.3.13	2022-07-22
AXIS M3128-LVE	Active	12.1.60	2024-11-13
	LTS 2024	11.11.128	2024-12-18
AXIS M4216-V/-LV	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.73	2022-07-13
AXIS M4218-V	Active	12.1.60	2024-11-13
AXIS M4218-LV			
	LTS 2024	11.11.127	2024-12-06
AXIS M5074	Active	12.3.56	2025-02-24
AXIS M5075			
	LTS 2024	11.11.135	2025-02-10
AXIS M5075-G	Active	12.3.64	2025-03-05
	LTS 2024	11.11.135	2025-02-10

Product	Track	Version	Release date
AXIS P1375	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.65	2022-07-01
	LTS 2020	9.80.28	2023-04-21
AXIS P1375-E	Active (legacy)	11.2.53	2022-12-22
	LTS 2022	10.12.135	2022-12-09
AXIS P1377	Active (legacy)	11.0.89	2022-09-21

ExCam XF P1377 F101-A XF P1377 AXIS P1378			
	Active (legacy)	10.12.65	2022-07-01
	LTS 2020	9.80.3.13	2022-07-22
AXIS P1377-LE AXIS P1378-LE	Active (legacy)	11.2.53	2022-12-22
	LTS 2022	10.12.135	2022-12-09
	LTS 2020	9.80.28	2023-04-21
AXIS P1385 AXIS P1385-B AXIS P1385-BE AXIS P1385-E	Active	12.0.91	2024-09-30
	LTS 2024	11.11.124	2024-11-25
AXIS P1387 AXIS P1387-B AXIS P1387-BE AXIS P1387-LE	Active	12.2.61	2025-01-22
	LTS 2024	11.11.124	2024-11-25
AXIS P1388 AXIS P1388-B AXIS P1388-BE AXIS P1388-LE	Active	12.2.61	2025-01-22
	LTS 2024	11.11.124	2024-11-25
AXIS P1447-LE AXIS P1448-LE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.3.0.1	2021-01-11
	LTS 2020	9.80.3.1	2021-03-03
AXIS P1455-LE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.8.3	2021-11-30
AXIS P1465-LE AXIS P1465-LE-3	Active	12.1.60	2024-11-13
	LTS 2024	11.11.124	2024-11-25

AXIS P3224-LV/-V Mk II	LTS 2020	9.80.1	2020-05-04
AXIS P3225-LV/-LVE/-V/-VE Mk II			
	LTS 2018	8.40.1	2018-09-19
	Active (legacy)	7.40.1.1	2018-01-31
AXIS P3245/-LV/-LVE/-V/-VE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.11.85	2022-06-14
	LTS 2020	9.80.3.13	2022-07-22
AXIS P3245-LVE 22mm	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.4.3	2021-03-10
AXIS P3247-LV/-LVE	LTS 2022	10.12.104	2022-09-06
	Active (legacy)	10.11.89	2022-06-20
	LTS 2020	9.80.3.13	2022-07-22
AXIS P3248-LV/-LVE	LTS 2022	10.12.104	2022-09-06
	Active (legacy)	10.11.89	2022-06-2
	LTS 2020	9.80.3.13	2022-07-22
AXIS P3267-LV/-LVE	Active (legacy)	11.0.89	2022-09-21
AXIS P3268-LV/-LVE			
	Active (legacy)	10.12.55	2022-06-16
AXIS P3727-PLE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.7.8	2021-10-29
AXIS P3738-PLE	Active	12.1.60	2024-11-13
AXIS P3925-LRE	Active (legacy)	11.0.89	2022-09-21
	LTS 2022	10.12.104	2022-09-05
	LTS 2020	9.80.3.14	2022-09-07
AXIS P3925-R	Active (legacy)	11.0.93	2022-09-30
	LTS 2022	10.12.104	2022-09-05
	LTS 2020	9.80.3.14	2022-09-07
AXIS P3935-LR	Active (legacy)	11.0.95	2022-10-04
	LTS 2022	10.12.104	2022-09-05
	LTS 2020	9.80.3.14	2022-09-07
AXIS P4708-PLVE	Active	12.1.60	2024-11-13

Product	Track	Version	Release date
AXIS Q1615/-LE Mk III	Active (legacy)	11.0.89	2022-09-21

	Active (legacy)	10.12.65	2022-07-01
AXIS Q1715	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.55	2022-06-16
AXIS Q1798-LE	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.65	2022-07-01
	LTS 2020	9.80.3.13	2022-07-22
AXIS Q1805-LE	Active	12.0.91	2024-09-30
	LTS 2024	11.11.124	2024-11-25
AXIS Q1806-LE	Active	12.2.61	2025-01-22
	LTS 2024	11.11.141	2025-03-17
AXIS Q3538/-LVE/-SLVE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.9.6	2022-02-09
AXIS Q3819-PVE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.11.85	2022-06-14
AXIS Q6010-E	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.73	2022-07-13
	LTS 2020	9.80.10	2022-11-18
AXIS Q6074/-E AXIS Q6075/-E/-SE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.11.87	2022-06-16
	LTS 2020	9.80.3.13	2022-07-22
AXIS Q6100-E	Active (legacy)	11.0.89	2022-09-21
	Active (legacy)	10.12.73	2022-07-13
AXIS Q6215-LE	Active (legacy)	11.2.53	2022-12-22
	LTS 2022	10.12.130	2022-11-25
	LTS 2020	9.80.10	2022-11-18
AXIS Q6315-LE	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.9.1	2022-12-22
AXIS Q9216-SLV	LTS 2022	10.12.104	2022-09-05
	Active (legacy)	10.11.55	2022-04-21
	LTS 2020	9.80.3.11	2022-05-06
Product	Track	Version	Release date
AXIS S3016	Active (legacy)	11.10.65	2024-03-11

Overlay image support

Overlay images are part of a device specific feature set since the images that can be used depend on the device's image sensor size, resolution and other parameters. In general, the following needs to be considered when uploading an overlay image to an Axis device:

- Supported files:
 - 24-bit BMP file support in AXIS OS 9.80 LTS and lower.
 - 24-bit BMP, jpeg, png & svg+xml file support from AXIS OS 10.7 and onwards*.
- The height and width of the overlay image cannot exceed the resolution of the Axis device. For example, if the resolution of the Axis device is set to 1280x720, the overlay image cannot be larger than that.
- Max 256 colors supported. It's recommended to use 250 colors to spare the remaining colors for transparency and configuration purposes.
- Depending on AXIS OS version, some Axis devices support a maximum number of pixels (width by height) that is capped either to 109920 (older versions) or 64000 pixels (newer versions). Width and height needs to be dividable by 32.
- The maximum resolution for the overlay image is 1920x1080 pixels for ARTPEC-based devices. For Ambarella-based devices, see the table below.

*Also supported by AXIS P1375/-E, AXIS P1377/-LE, AXIS P1378/-LE, AXIS P5654-E, AXIS P5655-E, AXIS M1134, AXIS M1135/-E, AXIS M1137/-E, AXIS M3064-V, AXIS M3065-V, AXIS M3066-V, AXIS M3115-LVE, AXIS P3245-V/-VE/-LV/-LVE, AXIS P3247-LV/-LVE, AXIS P3248-LV/-LVE, AXIS P3715-PLVE, AXIS P3717-PLE, AXIS P3719-PLE, AXIS P3925-R/-LRE, AXIS P3935-LR, AXIS Q6074/-E, AXIS Q6075/-E/-S/-SE and AXIS Q6078-E in AXIS OS 9.80 LTS


Maximum resolution for overlay images			
System-on-chip	Max width (pixels)	Max height (pixels)	Max number of pixels
Ambarella S2L	1920	1080	64000
Ambarella S3L	1920	1080	64000
Ambarella S5L	1920	1080	92160
Ambarella S5	1920	1080	92160
Ambarella CV25	1920	1080	138240
Ambarella S6Lm	1504	1080	138240

Image overlay transparency support	
BMP 8-bit + 24-bit	Yes, through assigning one color for the transparency. Other bit depths are not supported.
JPEG	Not supported
PNG	Native support*
SVG+XML	Native support*

* Support for transparency through the image format. This means you can import the image which already contains the transparent information.

Set image size in GIMP


The screenshot below illustrates how to set the correct image size of an image in GIMP.

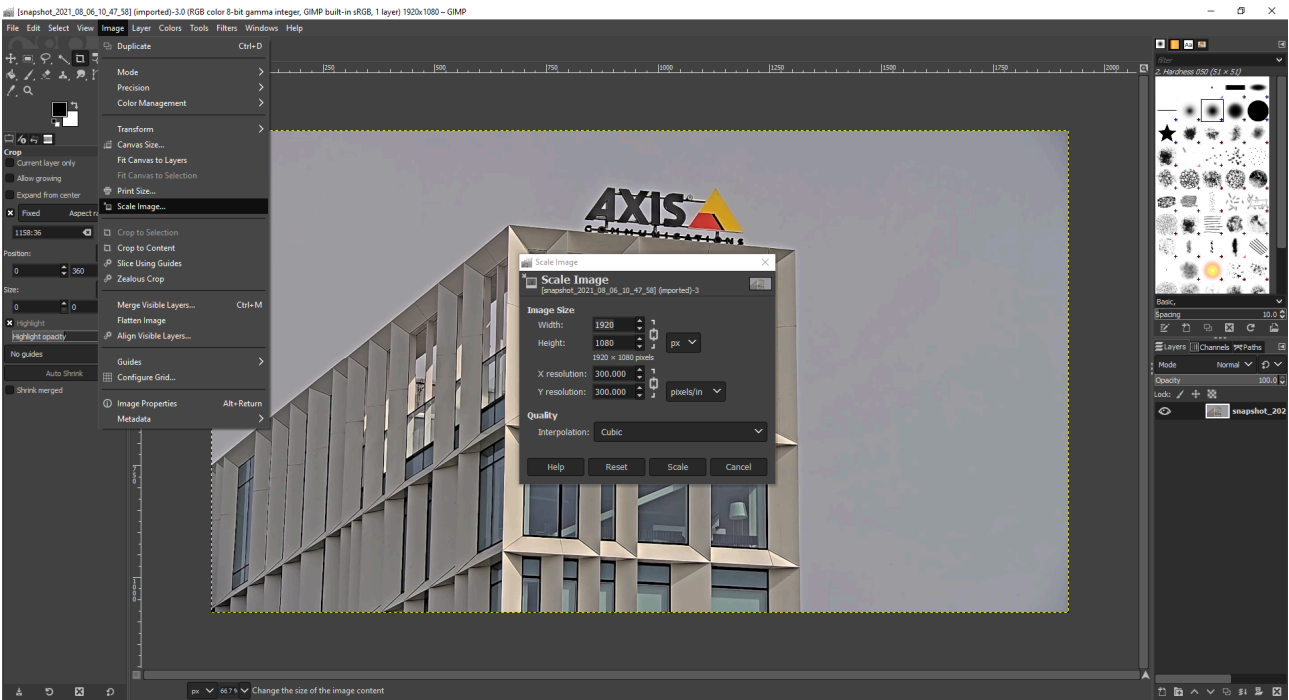


Set max colors in GIMP

The screenshots below illustrate how to set max color in an image using GIMP. Note that the amount of colors has to be set in Image > Mode > Indexed. When done, switch back to Image > Mode > RGB.


Note: If transparency is to be used, make sure to use the pipette tool to check which color the transparent part has after max colors have been set.

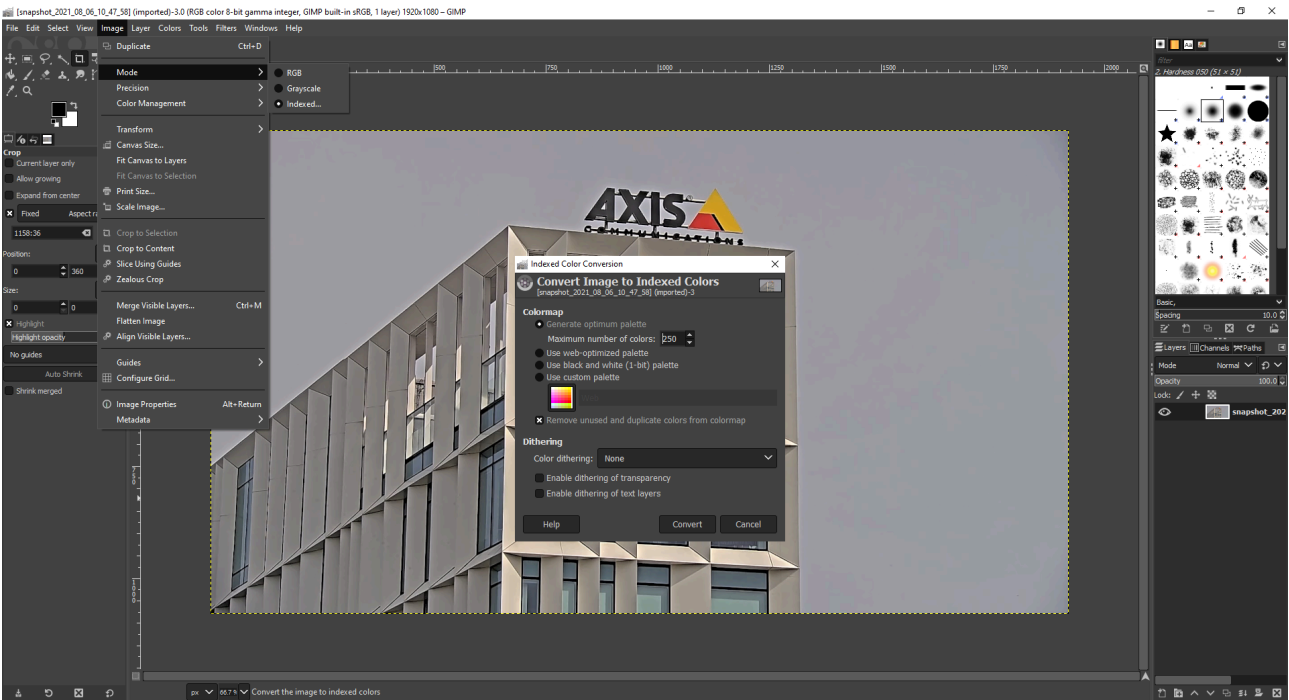


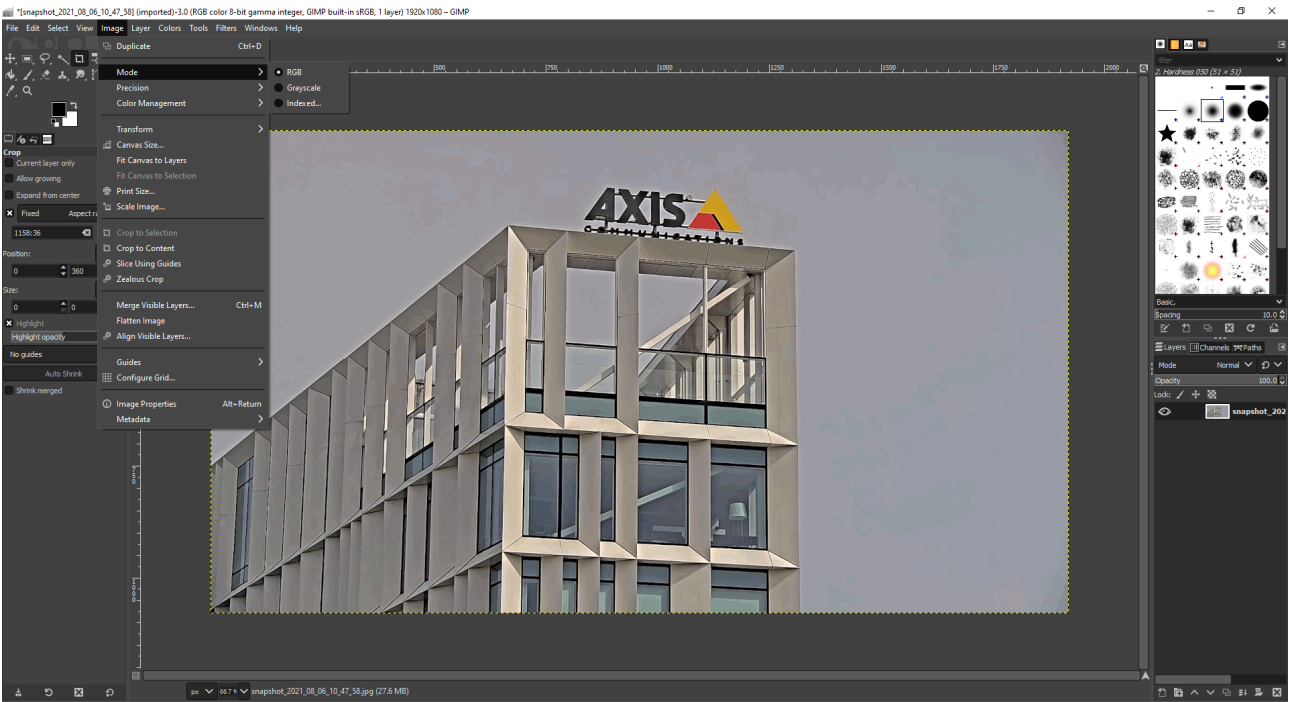

Export 24-bit bmp file in GIMP

The screenshots below illustrate how to export an image as a 24-bit bitmap image.

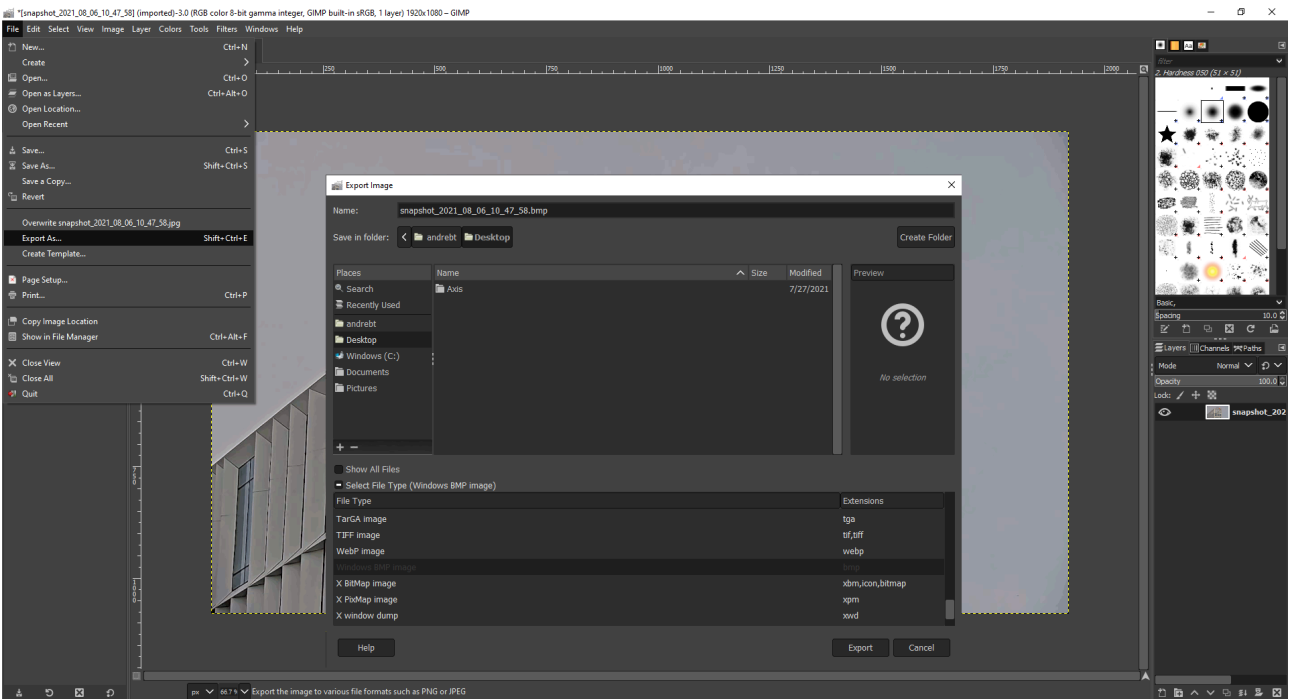

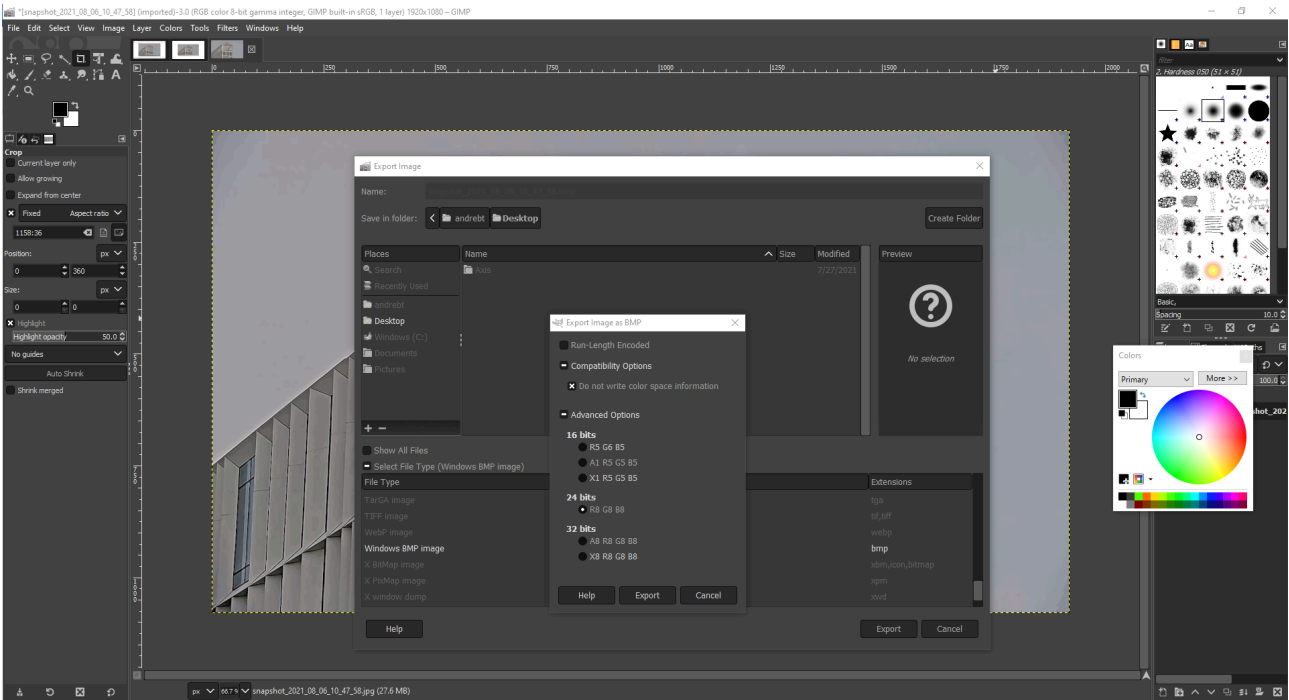

Send mail

AXIS OS devices support sending mail to various mail services through the built-in event system. While you can customize the settings, some public mail server choices are pre-configured. When using public mail services such as Gmail, Yahoo etc. you are limited to the requirements of their services. From May 30, 2022, Google (and thus the Gmail mailing service) will *no longer support* the use of third-party apps or devices which ask you to sign in to your Google account using only your username and password. This means that AXIS OS devices will not be able to send mail using a Gmail address as sender without using *a Google App Password*. Using a Gmail address as a receiver will still work after this date without additional configuration. Further more, Microsoft will no longer support *Basic authentication* from Dec 30, 2022. This means Hotmail, Outlook etc will stop to work if using basic authentication. Microsoft don't have their own solution for this.

(C) 2022 Axis Communications AB. AXIS COMMUNICATIONS, AXIS, ARTPEC and VAPIX are registered trademarks of Axis AB in various jurisdictions. All other trademarks are the property of their respective owners.

T10202039

2026-04 (M43.2)

© 2023 – 2026 Axis Communications AB